


HP 436A POWER METER

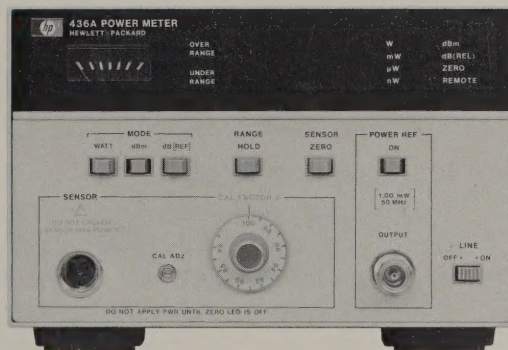

HEWLETT
PACKARD

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

HP 436A

POWER METER

(Including Options 003, 004 and 022)

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 2410A and 2410U.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 1447A, 1448A, 1451A, 1501A, 1503A, 1504A, 1505A, 1538A, 1550A, 1606A, 1611A, 1629A, 1713A, 1725A, 1746A, 1803A, 1908A, 1911A, 1917A, 1918A, 1930A, 2008A, 2016A, 2101A, 2236A, 2330A, 2347A and 2347U.

For additional important information about serial numbers, see INSTRUMENTS COVERED BY MANUAL in Section I.



HEWLETT
PACKARD

© Copyright HEWLETT-PACKARD COMPANY 1975, 1977, 1980, 1984
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

MANUAL PART NO. 00436-90034

Microfiche Part No. 00436-90035

Operating Information Supplement Part No. 00436-90036

Printed: JULY 1984

INTRODUCTION

This manual contains the operating and maintenance instructions for the Model 1000. It is intended for use by the operator and maintenance personnel. The operator should read this manual before operating the machine. The maintenance personnel should read this manual before performing any maintenance work on the machine.

WEIGHT

POWER ROLLER

The power roller is the main component of the machine. It is used to roll the material. The weight of the power roller is 1000 lbs.

The power roller is made of heavy-duty steel. It is designed to withstand the weight of the material being rolled. The power roller is mounted on a frame. The frame is made of heavy-duty steel. It is designed to support the weight of the power roller and the material being rolled.

The power roller is driven by a motor. The motor is mounted on the frame. It is designed to provide the power needed to roll the material. The motor is rated at 1000 watts.

The power roller is controlled by a switch. The switch is mounted on the frame. It is designed to start and stop the motor. The switch is rated at 1000 watts.

The power roller is used to roll the material. The material is placed on the power roller. The power roller rolls the material. The material is then removed from the power roller.

The power roller is used to roll the material. The material is placed on the power roller. The power roller rolls the material. The material is then removed from the power roller.

The power roller is used to roll the material. The material is placed on the power roller. The power roller rolls the material. The material is then removed from the power roller.

The power roller is used to roll the material. The material is placed on the power roller. The power roller rolls the material. The material is then removed from the power roller.

The power roller is used to roll the material. The material is placed on the power roller. The power roller rolls the material. The material is then removed from the power roller.

OPERATING INSTRUCTIONS

1. Before operating the machine, read the operating instructions. 2. Make sure the machine is properly grounded. 3. Make sure the material is properly placed on the power roller.

4. Turn on the motor. 5. The power roller will roll the material. 6. Remove the material from the power roller.

7. Turn off the motor. 8. The machine is now ready for use. 9. The machine should be used in a well-ventilated area. 10. The machine should be used in a dry area.

11. The machine should be used in a clean area. 12. The machine should be used in a safe area. 13. The machine should be used in a secure area. 14. The machine should be used in a controlled area.

CONTENTS

Section	Page	Section	Page
I GENERAL INFORMATION	1-1	3-52. Sending the Required Service Message	3-23
1-1. Introduction	1-1	3-54. Sending the Status Byte Message	3-23
1-6. Specifications	1-1	3-56. Sending the Status Bit Message	3-23
1-8. Instruments Covered by Manual	1-1	3-58. Receiving the Abort Message	3-23
1-14. Description	1-1	3-60. Test of HP-IB Operation	3-23
1-18. Options	1-3	3-62. Power Measurement Accuracy	3-23
1-19. Input-Output Options	1-3	3-64. Sources of Error and Measurement Uncertainty	3-30
1-22. Remote Control Options	1-3	3-70. Corrections for Error	3-30
1-25. Accessories Supplied	1-4	3-75. Calculating Total Uncertainty	3-30
1-27. Equipment Required but not Supplied	1-4		
1-29. Equipment Available	1-4	IV PERFORMANCE TESTS	4-1
1-33. Recommended Test Equipment	1-4	4-1. Introduction	4-1
1-35. Safety Considerations	1-4	4-3. Equipment Required	4-1
		4-5. Test Record	4-1
II INSTALLATION	2-1	4-7. Performance Tests	4-1
2-1. Introduction	2-1	4-10. Zero Carryover Test	4-2
2-3. Initial Inspection	2-1	4-11. Instrument Accuracy Test	4-3
2-5. Preparation for Use	2-1	4-12. Calibration Factor Test	4-6
2-6. Power Requirements	2-1	4-13. Power Reference Level Test	4-7
2-8. Line Voltage and Fuse Selection	2-1		
2-10. Power Cable	2-2	V ADJUSTMENTS	5-1
2-12. Address Selection	2-2	5-1. Introduction	5-1
2-13. Circuit Options	2-2	5-4. Safety Considerations	5-1
2-15. Interconnections	2-2	5-10. Equipment Required	5-1
2-18. Mating Connectors	2-3	5-12. Factory Selected Components	5-1
2-21. Operating Environment	2-3	5-14. Adjustment Locations	5-1
2-23. Bench Operation	2-3	5-16. DC Offset Adjustment	5-3
2-25. Rack Mounting	2-3	5-17. Auto Zero Offset Adjustment	5-3
2-28. Storage and Shipment	2-3	5-18. Spike Balance Adjustment	5-4
2-29. Environment	2-3	5-19. Multivibrator Adjustment	5-6
2-31. Packaging	2-3	5-20. A-D Converter and Linear Meter Adjustment	5-7
		5-21. Power Reference Oscillator Frequency Adjustment	5-8
III OPERATION	3-1	5-22. Power Reference Oscillator Level Adjustment	5-10
3-1. Introduction	3-1	5-23. Power Supply Adjustments	5-13
3-4. Panel Features	3-1		
3-6. Operator's Maintenance	3-1	VI REPLACEABLE PARTS	6-1
3-8. Operator's Checks	3-1	6-1. Introduction	6-1
3-10. Local Operating Instructions	3-1	6-3. Abbreviations	6-1
3-12. Hewlett-Packard Interface Bus Remote Operation	3-14	6-5. Replaceable Parts List	6-1
3-14. Compatibility	3-14	6-7. Ordering Information	6-1
3-18. Data Messages	3-14	6-10. Parts Provisioning	6-1
3-21. Receiving Data Messages	3-14	6-12. Direct Mail Order System	6-1
3-32. Sending Data Messages from the Power Meter	3-18		
3-40. Receiving the Trigger Message	3-23	VII MANUAL CHANGES	7-1
3-42. Receiving the Clear Message	3-23	7-1. Introduction	7-1
3-44. Receiving the Remote Message	3-23	7-3. Manual Changes	7-1
3-46. Receiving the Local Message	3-23	7-6. Manual Change Instructions	7-3
3-48. Receiving the Local Lockout and Clear Lockout Set Local Messages	3-23		
3-50. Receiving the Pass Control Message	3-23		

CONTENTS (cont'd)

Section	Page	Section	Page
VIII SERVICE	8-1	8-30. Digital Integrated Circuits and Symbols ..	8-7
8-1. Introduction	8-1	8-55. Troubleshooting	8-16
8-3. Safety Considerations	8-1	8-59. Standard Instrument Checkout	8-16
8-9. Recommended Test Equipment	8-5	8-64. HP-IB Instrument Checkout	8-69
8-11. Service Aids	8-5	8-70. Block Diagram Circuit Descriptions	8-117
8-16. Repair	8-5	8-71. Service Sheet 1	8-117
8-17. Factory Selected Components	8-5	8-75. Service Sheet 2	8-118
8-19. Disassembly and Reassembly		8-87. Service Sheet 3	8-122
Procedures	8-5	8-114. Service Sheet 4	8-144
8-24. Basic Circuit Descriptions	8-7	8-117. Command Mode Operation	8-144
8-25. Linear Integrated Circuits	8-7	8-130. Data Mode Operation	8-147

ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. HP Model 436A Power Meter and Accessories Supplied	1-0	5-6. Power Reference Oscillator Frequency Adjustment Setup	5-8
2-1. Line Voltage and Fuse Selection	2-1	5-7. Power Reference Oscillator Level Adjustment Setup	5-10
2-2. Power Cable and Mains Plug Part Numbers	2-2	6-1. Cabinet Parts	6-19
2-3. Hewlett-Packard Interface Bus Connection ...	2-5		
3-1. Front and Rear Panel Controls, Connectors and Indicators	3-2	8-1. Schematic Diagram Notes	8-2
3-2. Operator's Checks	3-6	8-2. Front Panel Removal	8-6
3-3. Operating Instructions	3-11	8-3. Operational Amplifier Functional Circuits ...	8-8
3-4. Power Meter Response Curve (Settling Time for Analog Circuits)	3-20	8-4. Dual D-Type Flip-Flop	8-9
3-5. Measurement Timing Flow Chart (Settling Time for Digital Circuitry)	3-21	8-5. Four-Bit Bistable Latch	8-9
3-6. Operating Program Simplified Flow Chart	3-22	8-6. Dual J-K Master/Slave Flip-Flop and Gate Pulse Timing	8-10
3-7. Test of HP-IB Operation Flowchart	3-24	8-7. Dual J-K Edge-Triggered Flip-Flop	8-10
3-8. 436A Quick Programming Guide	3-25	8-8. Programmable Counters	8-11
3-9. Calculating Measurement Uncertainties ...	3-32	8-9. 3-Line to 8-Line Decoder	8-12
3-10. The Effect of Power Sensor Mismatch on Measurement Accuracy	3-34	8-10. 8-Input Data Selector (Multiplexer)	8-13
3-11. Calculating Measurement Uncertainty (Uncertainty in dB Known)	3-35	8-11. LED Display Driver	8-14
4-1. Zero Carryover Test Setup	4-2	8-12. Numeric Display	8-15
4-2. Instrument Accuracy Test Setup	4-4	8-13. MOS and TTL ROMs	8-15
4-3. Calibration Factor Test Setup	4-6	8-14. Power Meter Operating Cycle	8-17
4-4. Power Reference Level Test Setup	4-8	8-15. Operating Program Flow Chart	8-25
5-1. DC Offset Adjustment Setup	5-3	8-16. HP-IB Verification Program (HP 9830A Calculator)	8-70
5-2. Auto Zero Offset Adjustment Setup	5-4	8-17. HP-IB Verification Program (HP 9820A Calculator)	8-95
5-3. Spike Balance Adjustment Setup	5-5	8-18. Analog-to-Digital Converter Simplified Diagram and Waveforms	8-120
5-4. Multivibrator Adjustment Setup	5-6	8-19. HP-IB Listen Handshake Timing	8-145
5-5. A-D Converter and Linear Meter Adjustment Setup	5-7	8-20. Data Valid Status Generator Timing	8-154
		8-21. Overall Block Diagram	8-159
		8-22. AC Gain, A-D Converter and Display Circuits Block Diagram	8-161
		8-23. Controller and Counters Block Diagram ...	8-163
		8-24. HP-IB (Opt. 022) Circuit Block Diagram ...	8-165

ILLUSTRATIONS (cont'd)

Figure	Page	Figure	Page
8-26. A1A1 Display Assembly Component Locations	8-169	8-38. A6 HP-IB (Option 022) Control Assembly Component and Test Point Locations	8-178
8-27. A1A2 Pushbutton Assembly Component Locations	8-169	8-39. HP-IB (Option 022) Control Assembly Schematic Diagram	8-179
8-28. Front Panel Assembly Schematic Diagram	8-169	8-40. A7 HP-IB (Option 022) Input/Output Assembly Component and Test Point Locations	8-181
8-29. A2 AC Gain Assembly Component, Test Point, and Adjustment Locations	8-171	8-41. HP-IB (Option 022) Input/Output Assembly Schematic Diagram	8-181
8-30. AC Gain Assembly Schematic Diagram ...	8-171	8-44. A8 Power Reference Oscillator Assembly Component, Test Point, and Adjustment Locations	8-187
8-31. A1A3 CAL FACTOR % Switch Assembly Component Locations	8-173	8-45. Power Reference Oscillator Assembly Schematic Diagram	8-187
8-32. A3 A-D Converter Assembly Components, Test Point, and Adjustment Locations	8-173	8-46. A9 Power Supply Rectifier and Regulator Assembly Component and Test Point Locations	8-189
8-33. A-D Converter Assembly Schematic Diagram	8-173	8-47. Rear Panel Mounted Power Supply Component Locations	8-189
8-34. A4 Counter Relative Assembly Component and Test Point Locations	8-175	8-48. Power Supply Rectifier and Regulator Assembly Schematic Diagram	8-189
8-35. Counter Relative Assembly Schematic Diagram	8-175	8-49. Rear View of Front Panel (Removed)	8-191
8-36. A5 Controller Assembly Component and Test Point Locations	8-177	8-50. Top Internal View Standard Instrument ...	8-191
8-37. Controller Assembly Schematic Diagram	8-177	8-51. Top Internal View HP-IB	8-191

TABLES

Table	Page	Table	Page
1-1. Specifications	1-2	4-5. Performance Test Record	4-10
1-2. Recommended Test Equipment	1-5	5-1. Factory Selected Components	5-2
2-1. Line Fuse Ratings and Part Numbers	2-2	6-1. Reference Designators and Abbreviations	6-2
2-2. Circuit Options	2-4	6-2. Replaceable Parts	6-4
2-3. USA Standard Code for Information Interchange (ASCII)	2-4	6-3. Code List of Manufacturers	6-21
3-1. Message Reference Table	3-15	7-1. Manual Changes by Serial Number	7-1
3-2. Measurement Sequence	3-16	7-2. Summary of Manual Changes by Page Number	7-2
3-3. Hewlett-Packard Interface Bus Input Program Codes	3-17	8-1. Logic Levels and Power Requirements	8-9
3-4. Hewlett-Packard Interface Bus Output Data String	3-19	8-2. Program Mnemonic Descriptions	8-20
3-5. Power Meter Remote Access Time to First Output Data Character	3-20	8-3. Standard Instrument Checkout	8-52
4-1. Zero Carryover Autorange Digital Readout Results	4-3	8-4. HP-IB Circuit Troubleshooting	8-99
4-2. Instrument Accuracy Test Results	4-5	8-6. Operating Program Description	8-124
4-3. Instrument Accuracy Test Results for dB [REF] Mode	4-5	8-7. Up/Down Count Control Logic Steering ...	8-139
4-4. Calibration Factor Test Results	4-7	8-8. Function Decoder Clock Selection	8-149
		8-9. Programming Command Logic Operating Summary	8-149
		8-10. Power Meter Talk HP-IB Output Data Format	8-155

SERVICE SHEETS

Service Sheet	Page	Service Sheet	Page
1 Overall Block Diagram	8-159	8 A-D Converter Assembly (A1A3, A3)	8-173
2 AC Gain, A-D Converter, and Display Circuits Block Diagram (A1A1, A2, A3) ...	8-161	9 Counter Relative Assembly (A4)	8-175
3 Controller and Counters Block Diagram (A1A2, A4, A5)	8-163	10 Controller Assembly (A5)	8-177
4 HP-IB (Option 022) Circuit Block Diagram (A6, A7)	8-165	11 HP-IB (Option 022) Control Assembly (A6) ...	8-179
6 Front Panel Assembly (A1A1, A1A2)	8-169	12 HP-IB (Option 022) Input/Output Assembly (A7)	8-181
7 AC Gain Assembly (A2)	8-171	14 Power Reference Oscillator Assembly (A8) ...	8-187
		15 Power Supply Rectifier and Regulator Assembly (A9, A10)	8-189

SAFETY CONSIDERATIONS

GENERAL

This product and related documentation must be reviewed for familiarization with safety markings and instructions before operation.

This product is a Safety Class I instrument (provided with a protective earth terminal).

BEFORE APPLYING POWER

Verify that the product is set to match the available line voltage and the correct fuse is installed.

SAFETY EARTH GROUND

An uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set.

WARNINGS

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal will cause a potential shock hazard that could result in personal injury. (Grounding one conductor of a two conductor outlet is not sufficient protection.) In addition, verify that a common ground exists between the unit under test and this instrument prior to energizing either unit.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an auto-transformer (for voltage reduction) make sure the common terminal is connected to neutral (that is, the grounded side of the mains supply).

Servicing instructions are for use by service-trained personnel only. To avoid dangerous electric shock, do not perform any servicing unless qualified to do so.

Adjustments described in the manual are performed with power supplied to the instrument

while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

For continued protection against fire hazard, replace the line fuse(s) only with 250V fuse(s) of the same current rating and type (for example, normal blow, time delay, etc.). Do not use repaired fuses or short circuited fuseholders.

SAFETY SYMBOLS



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual (see Table of Contents for page references).



Indicates hazardous voltages.





Indicates earth (ground) terminal.

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

CAUTION

The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

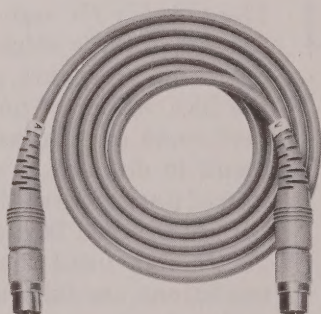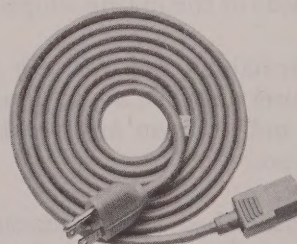**POWER METER****TUNING TOOL****POWER SENSOR CABLE****POWER CABLE****Figure 1-1. HP Model 436A Power Meter and Accessories Supplied**

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This manual provides information pertaining to the installation, operation, testing, adjustment and maintenance of the HP Model 436A Power Meter.

1-3. Figure 1-1 shows the Power Meter with accessories supplied.

1-4. Packaged with this manual is an Operating Information Supplement. This is simply a copy of the first three sections of this manual. This supplement should be kept with the instrument for use by the operator. Additional copies of the Operating Information Supplement may be ordered through your nearest Hewlett-Packard office. The part numbers are listed on the title page of this manual.

1-5. On the title page of this manual, below the manual part number, is a "Microfiche" part number. This number may be used to order 4x6-inch microfilm transparencies of the manual. The microfiche package also includes the latest Manual Changes supplement as well as all pertinent Service Notes.

1-6. SPECIFICATIONS

1-7. Instrument specifications are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument may be tested.

1-8. INSTRUMENTS COVERED BY MANUAL

1-9. Power Meter Options 003, 004, and 022 are documented in this manual. The differences are noted in the appropriate location such as OPTIONS in Section I, the Replaceable Parts List, and the schematic diagrams.

1-10. This instrument has a two-part serial number. The first four digits and the letter comprise the serial number prefix. The last five digits form the sequential suffix that is unique to each instrument. The contents of this manual apply directly to instruments having the same serial

number prefix(es) as listed under SERIAL NUMBERS on the title page.

1-11. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. This unlisted serial prefix indicates that the instrument is different from those documented in this manual. The manual for this instrument is supplied with a yellow Manual Changes supplement that contains change information that documents the differences.

1-12. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is keyed to the manual's print date and part number, both of which appear on the title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-13. For information concerning a serial number prefix not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

1-14. DESCRIPTION

1-15. The Power Meter is a precision digital-readout instrument capable of automatic and manual measurement of RF and Microwave power levels. It is designed for interconnection with a compatible Power Sensor (refer to Table 1-1, Specifications) to form a complete power measurement system. The frequency and power range of the system are determined by the particular Power Sensor selected for use. With the Power Sensors available, the overall frequency range of the system is 100 kHz to 18 GHz, and the overall power range is -70 to +35 dBm.

1-16. Significant operating features of the Power Meter are as follows:

- **Digital Display:** The display is a four-digit, seven-segment LED, plus a sign when in the dBm or dB (REL) mode. It also has under- and

Table 1-1. Specifications

SPECIFICATIONS

Frequency Range:

100 kHz to 26.5 GHz (depending on power sensor used).

Power Range:

(display calibrated in watts, dBm, and dB relative to reference power level).

With 8481A, 8482A, or 8483A sensors: 50 dB with 5 full scale ranges of -20, -10, 0, 10, and 20 dBm (10 μ W to 100 mW).

With 8481B or 8482B sensors: HP 8481B is 44 dB (1 mW to 25W) at 0 to 35°C and HP 8482B is 43 dB (1 mW to 20W) at 35°C to 55°C with 5 ranges of 10, 20, 30, 40 and 43 or 44 dBm.

With 8481H or 8482H sensors: 45 dB with 5 ranges of 0, 10, 20, 30 and 35 dBm (1 mW to 3W).

With 8484A sensor: 50 dB with 5 full scale ranges of -60, -50, -40, -30, and -20 dBm (1 nW to 10 μ W).

Accuracy:**Instrumentation¹:**

Watt mode: $\pm 0.5\%$.

dBm mode: ± 0.02 dB ± 0.001 dB/°C.

dB [REL] mode²: ± 0.02 dB ± 0.001 dB/°C.

Zero: Automatic, operated by front panel switch.

Zero set: $\pm 0.5\%$ of full scale on most sensitive range. typical, ± 1 count on other ranges.

Zero carry over: $\pm 0.2\%$ of full scale when zeroed on the most sensitive range.

Noise (typical, at constant temperature, peak change over any one-minute interval): 20 pW (8484A); 40 nW (8481A, 8482A, 8483A); 4 μ W (8481H, 8482H).

Drift (1 hour, typical, at constant temperature after 24-hour warm-up): 20 pW (8484A); 10 nW (8481A, 8482A, 8483A); 1.0 μ W (8481H, 8482H).

Power Reference: Internal 50 MHz oscillator with Type N Female connector on front panel (or rear panel, Option 003 only).

Power output: 1.00 mW.

Factory set to $\pm 0.7\%$, traceable to the National Bureau of Standards.

Accuracy: $\pm 1.2\%$ worst case ($\pm 0.9\%$ rss) for one year (0°C to 55°C).

Response Time:

(0 to 99% of reading, five time constants)

Range 1 (most sensitive) <10 seconds.

Range 2 <1 second

Range 3-5 <100 milliseconds.

(Typical, measured at recorder output).

Cal Factor:

16-position switch normalizes meter reading to account for calibration factor or effective efficiency. Range 85% to 100% in 1% steps.

Cal Adjustment:

Front panel adjustment provides capability to adjust gain of meter to match power sensor in use.

Recorder Output:

Proportional to indicated power with 1 volt corresponding to full scale and 0.316 volts to -5 dB; 1 k Ω output impedance, BNC connector.

RF Blanking Output:

Open collector TTL; low corresponds to blanking when auto-zero mode is engaged.

Display:

Digital display with four digits, 20% over-range capability on all ranges. Also, uncalibrated analog peaking meter to see fast changes.

Power Consumption:

100V $\pm 10\%$, 48 to 66 Hz and 360 to 440 Hz.

120V $+5\%$, -10% , 48 to 66 Hz and 360 to 440 Hz.

220 or 240V $+5\%$, -10% 48 to 66 Hz.

Typically less than 24 watts (<25 watts for Opt. 022), 60 V·A maximum.

Dimensions:

134 mm High (5-1/4 inches).

213 mm Wide (8-3/8 inches).

279 mm Deep (11 inches).

Net Weight: 4.5 kg (10 lbs).

¹Includes sensor non-linearity. Add $+2$, -4% on top range when using the 8481A, 8482A, or 8483A power sensors.

²Specifications are for within range measurements. For range-to-range accuracy add the range uncertainties.

DESCRIPTION (cont'd)

overrange indicators. There is a 20 percent overrange capability in all ranges. Large 10 mm (0.375 inch) digits are easy to see even in a high glare environment.

- **Auxiliary Meter:** Complements the digital display by showing fast changes in power level. Ideal for "peaking" transmitter output or other variable power devices.
- **Choice of Display in Watts, dBm or dB:** Absolute power can be read out in watts or dBm. Relative power measurements are made possible with the dB [REF] switch. Pressing this switch zeros the display for any applied input power and any deviation from this reference is shown in dB with a resolution of ± 0.01 dB. This capability is particularly useful in frequency response testing.
- **Power Units and Mode Annunciator:** The units annunciator provides error-free display interpretation by indicating appropriate power units in the watt mode. The mode annunciator indicates the mode of operation: dBm, dB (REL), ZERO or REMOTE.
- **Completely Autoranging:** The Power Meter automatically switches through its 5 ranges to provide completely "hands off" operation. The RANGE HOLD switch locks the Power Meter in one of its ranges when autoranging is not desired.
- **Automatic Sensor Recognition:** The Power Meter continually decodes the sensitivity of the Power Sensor to which it is connected. This information is then used to automatically control the digital display decimal point location and, when WATT MODE operation is selected, to light the appropriate power units annunciator.
- **Auto Zero:** Zeroing the meter is accomplished by merely depressing the SENSOR ZERO switch and waiting until the display shows all zeros before releasing it. The meter is ready to make measurements as soon as the zero light in the mode annunciator goes off.
- **RF Blanking Output:** Open collector TTL; low corresponds to blanking when the sensor zero is engaged. May be used to remove the RF input signal connected to the power sensor.
- **Calibration Accuracy:** A 1.00 mW, 50 MHz reference output is available at the front panel

for calibrating the Power Meter and the Power Sensor as a system. Calibration is accomplished using the CAL ADJ and CAL FACTOR % controls. The CAL ADJ control compensates for slight differences in sensitivity associated with a particular type of Power Sensor and the CAL FACTOR % control compensates for mismatch losses and effective efficiency over the frequency range of the Power Sensor.

- **Recorder Output:** Provides a linear output with respect to the input power level. For each range, a +1.00 Vdc output corresponds to a full scale input power level. Refer to Table 1-1, Specifications, for the full-scale range values associated with the various types of Power Sensors available.

1-17. The Hewlett-Packard Interface Bus (HP-IB) Option 022 allows full remote control operation of all the power meter functions (CAL FACTOR can be programmed to either 100% or the CAL FACTOR which has been manually set on the front panel). This option may be added by the user at a later time as his requirements grow.

1-18. OPTIONS**1-19. Input-Output Options**

1-20. **Option 003.** A rear panel POWER REF OUTPUT connector replaces the standard front panel connector.

1-21. **Option 004.** The 1.5 metre (5 ft.) power sensor cable is not shipped with the power meter.

1-22. Remote Control Options

1-23. Option 022 adds remote interface capability to the Power Meter. Option 022 is compatible with the Hewlett-Packard Interface Bus (AH1, C0, DC2, DT1, L2, LE0, PP0, RL2, SH1, SR0, T3, TE0).

1-24. Option 022 may be ordered in kit form under HP part number 00436-60035. The kit contains a control assembly printed-circuit board, an input/output assembly printed circuit board, and a data cable for interconnection.

1-25. ACCESSORIES SUPPLIED

1-26. The accessories supplied with the Power Meter are shown in Figure 1-1.

a. The 1.5 metre (5 ft.) Power Sensor Cable, HP 11730A, is used to couple the Power Sensor to the Power Meter. Order option 004 to delete the standard 1.5 metre cable.

b. The line power cable may be supplied in one of four configurations. Refer to the paragraph entitled Power Cables in Section II.

c. An alignment tool for adjusting the CAL ADJ front panel control (HP Part No. 8710-0630).

1-27. EQUIPMENT REQUIRED BUT NOT SUPPLIED

1-28. To form a complete RF power measurement system, a Power Sensor such as the HP Model 8481A must be connected to the Power Meter via the Power Sensor cable.

1-29. EQUIPMENT AVAILABLE

1-30. The HP Model 11683A Range Calibrator is recommended for performance testing, adjusting, and troubleshooting the Power Meter. The Power Meter's range-to-range accuracy and auto-zero operation can easily be verified with the Calibrator. It also has the capability of supplying a full-scale test signal for each range.

1-31. Two extender boards (HP Part Numbers 5060-0258, and 5060-0630; 24 and 44 pins respectively) enable the Power Meter printed circuit assemblies to be accessed for service.

Rubber bumpers (HP Part No. 0403-0015) should be installed on the extender boards to prevent the boards from touching.

1-32. The following table lists the cable accessories and their lengths that are available for use with the Power Meter. Order option 004 if the standard 1.5 metre cable is not desired with a cable accessory.

Cable Accessory	Cable Length
HP 11730B	3.0 m (10 ft)
HP 11730C	6.1 m (20 ft)
HP 11730D	15.2 m (50 ft)
HP 11730E	30.5 m (100 ft)
HP 11730F	61.0 m (200 ft)

1-33 RECOMMENDED TEST EQUIPMENT

1-34. The test equipment shown in Table 1-2 is recommended for use during performance testing, adjustments, and troubleshooting. To ensure optimum performance of the Power Meter, the specifications of a substitute instrument must equal or exceed the critical specifications shown in the table.

1-35 SAFETY CONSIDERATIONS

1-36. The Power Meter is a Safety Class I instrument. This instrument has been designed according to international safety standards.

1-37. This operating and service manual contains information, cautions, and warnings which must be followed by the user to ensure safe operation and to retain the instrument in safe condition.

Table 1-2. Recommended Test Equipment

Instrument Type	Critical Specifications	Suggested Model	Use *
Range Calibrator	Chopped dc output for each range referenced to 1 mW range	HP 11683A	P,A,T
Digital Voltmeter	Function: DC, resistance Range Resistance: 200 ohms Vdc: 100 mVdc, 1000 mVdc, 10 Vdc, 100 Vdc 10M Ω input impedance 6-digit resolution ($\pm 0.05\%$ of reading, $\pm 0.02\%$ of range)	HP 3456A	P,A,T
Power Meter	Range: 1 mW Transfer Accuracy (input -to-output): 0.2%	HP 432A	P, A
Thermistor Mount	SWR: 1.05, 50 MHz Accuracy: $\pm 0.5\%$ at 50 MHz	HP 478A-H75** or HP 478A-H76***	P, A
Counter	Frequency Range: 220 Hz, 50 MHz Sensitivity: 100 mVrms Accuracy: 0.01%	HP 5315A	A
Oscilloscope	Bandwidth: dc to 50 MHz Vertical Sensitivity: 0.2V/division Horizontal Sensitivity: 1 ms/division	HP 180C/ 1801A/1821A	T
Logic Analyzer	Clock Input: 60 kHz Trigger Word: 8 Bits Bit Input: TTL Display Word: 8 Bits	HP 1600A	T
<p>*P = Performance Tests; A = Adjustments; T = Troubleshooting</p> <p>**HP 478A-H75 must be calibrated at the National Bureau of Standards (NBS) for this accuracy.</p> <p>***HP 478A-H76 includes HP standards lab calibration to $\pm 0.58\%$ at 50 MHz (traceable to NBS).</p>			

HP 436A

Herstellerbescheinigung

Hiermit wird bescheinigt, dass dieses Gerät/System in Übereinstimmung mit den Bestimmungen von Postverfügung 1046/84 funkenstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes/Systems angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Zusatzinformation für Mess- und Testgeräte:

Werden Mess- und Testgeräte mit ungeschirmten Kabeln und/oder in offenen Messaufbauten verwendet, so ist vom Betreiber sicherzustellen, dass die Funk-Entstörbestimmungen unter Betriebsbedingungen an seiner Grundstücksgrenze eingehalten werden.

Manufacturer's Declaration

This is to certify that this product meets the radio frequency interference requirements of Directive FTZ 1046/1984. The German Bundespost has been notified that this equipment was put into circulation and has been granted the right to check the product type for compliance with these requirements.

Note: If test and measurement equipment is operated with unshielded cables and/or used for measurements on open set-ups, the user must insure that under these operating conditions, the radio frequency interference limits are met at the border of his premises.

POWER METER

MANUAL IDENTIFICATION

Model Number: HP 436A
Date Printed: July 1984
Part Number: 00436-90034

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement:

Make all ERRATA corrections

Make all appropriate serial number related changes indicated in the tables below.

Serial Prefix or Number	Make Manual Changes	Serial Prefix or Number	Make Manual Changes
2432A, 2432U	1		
2446A, 2446U	1, 2		
2512A, 2512U	1—3		
2539A, 2539U	1—4		
►2604A, 2604U	1—5		

► NEW ITEM

ERRATA

Page 1-5, Table 1-2:

In the "Suggested Model" column for the "Thermistor Mount" delete one asterisk (*) next to "HP 478A-H76".

At the bottom of the table replace the two notes with the following note:

**For maximum accuracy the 478A-H75 should be calibrated by the National Bureau of Standards. The 478A-H76, which includes HP Standards Laboratory calibration, may be used with a measurement system accuracy of 0.58% instead of 0.5%.

Page 2-3, paragraph 2-26:

Add "OPTION 908" after "a." of item a.

Change "5061-0077" to "5061-9677".

Add "OPTION 913" after "b." of item b.

Change "5061-2071" to "5061-9771".

Page 2-3, paragraph 2-27:

Add "OPTION 907" before "In".

Change "5061-0089" to "5061-9689".

Page 5-13, paragraph 5-23:

Step 2. Change the RANGE setting to "1 mW".

Step 4. Add the following steps:

e. Adjust CAL ADJ for 1.00 mW.

f. Set the Range Calibrator RANGE switch to 10 mW.

NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

ERRATA (cont'd)

Page 5-14, paragraph 5-23:

Step 8. Change step 8 to the following:

Measure the dc voltage at A9TP4 (+15V). This voltage should be between +14.5 and +15.5 volts dc.

Page 6-4, Table 6-2:

A1A1. The recommended replacement for A1A1, if it fails, is found in **CHANGE 1**. (When replacing the 00436-60007 Display Board Assembly with the 00436-60062 Display Board Assembly, be sure to change A2R71-A2R73 to the value listed in **CHANGE 1**.)

Page 6-7, Table 6-2:

A2R81. The recommended replacement for A2R81, if it fails, is found in **CHANGE 4**.

Page 6-16, Table 6-2:

A8A1R4. The recommended replacement for A8A1R4, if it fails, is found in **CHANGE 2**. (A8A1R5 must be replaced if A8A1R4 is being replaced).

A8A1R5. The recommended replacement for A8A1R5, if it fails, is found in **CHANGE 2**. (A8A1R4 must be replaced if A8A1R5 is being replaced).

►Page 6-17, Table 6-2:

A11. The recommended replacement for A11, if it fails, is found in **Change 5**. If A11 is being replaced, S1C2, also found in **Change 5**, must be replaced. Refer to the partial schematic in **Change 5** for S1C2 placement.

►Page 6-18, Table 6-2:

MP22. The recommended replacement for MP22, if it needs to be replaced, is found in **Change 5**.

Page 6-20, Table 6-2:

► **S1.** The recommended replacement for S1, if it needs to be replaced, is found in **Change 5**.

► **T1.** The recommended replacement for T1, if it fails, is found in **Change 5**.

U1. Add the following part number and description below U1:

1200-0041 CD6 SOCKET-XSTR 2-CONT TO-3 SLDR-EYE.

W10. The recommended replacement for W10, if it needs to be replaced, is found in **CHANGE 1**.

Service Sheets (Block diagrams and schematics):

Delete any reference to Service Sheets 5 and 13.

Service Sheet 7 (schematic):

Add the following note to the waveform below U8 (right side of schematic):

“The sinewave is centered around 0 Vdc.”

Service Sheet 10 (schematic):

Delete the “6” associated with YRR1, YRR2 and YRR3 at the bottom of the A10 assembly (left side of schematic).

Service Sheet 15, Figure 8-46:

Change “C1” to “C2”.

Change “C2” to “C1”.

Change “CR3” to “CR5”.

Change “CR5” to “CR3”.

Service Sheet 15 (schematic):

Change the termination of the junction of A9C3 and A9C4 (center of schematic) to the line connected to “pin 5”.

CHANGE 1

Page 6-4, Table 6-2:

A1A1. Change the part number for the A1A1 assembly to the following: 00436-60062 CD2.**A1A1DS11.** Add A1A1DS11 using the following part number and description:
1990-1008 CD0 DISPLAY-NUM-SEG 5-CHAR .3-H RED.**A1A1DS11.** Add the following part number and description below A1A1DS11:1400-1292 CD5 QTY 10 MOUNT LED 0.120 \pm 0.005 IN ID; 0.187 (These parts are placed between the LEDs [A1A1DS1—A1A1DS10] and the printed circuit board.)**A1A1R1.** Change the part number for A1A1R1 to the following: 1810-0603 CD9.**A1A1R3.** Change the part number and description for A1A1R3 to the following:0757-0416 CD7 RESISTOR 511 1% .125W F TC=0 \pm 100.**A1A1R8—A1A1R11:** Add A1A1R8—A1A1R11 using the following part number and description:0757-0442 CD9 RESISTOR 10K 1% .125W F TC=0 \pm 100.**A1A1U1—A1A1U4.** Change the part numbers for A1A1U1—A1A1U4 to the following: 1820-3395 CD3.**A1A1U6—A1A1U10.** Delete A1A1U6—A1A1U10.

Page 6-7, Table 6-2:

A2R71—A2R73. Change the part numbers and descriptions for A2R71—A2R73 to the following:0757-0416 CD7 RESISTOR 511 1% .125W F TC=0 \pm 100.

Page 6-20, Table 6-2:

W10. Change the part number for W10 to the following: 00436-60029 CD1.

Service Sheet 6:

Replace Figure 8-26 with the figure contained in this change sheet.

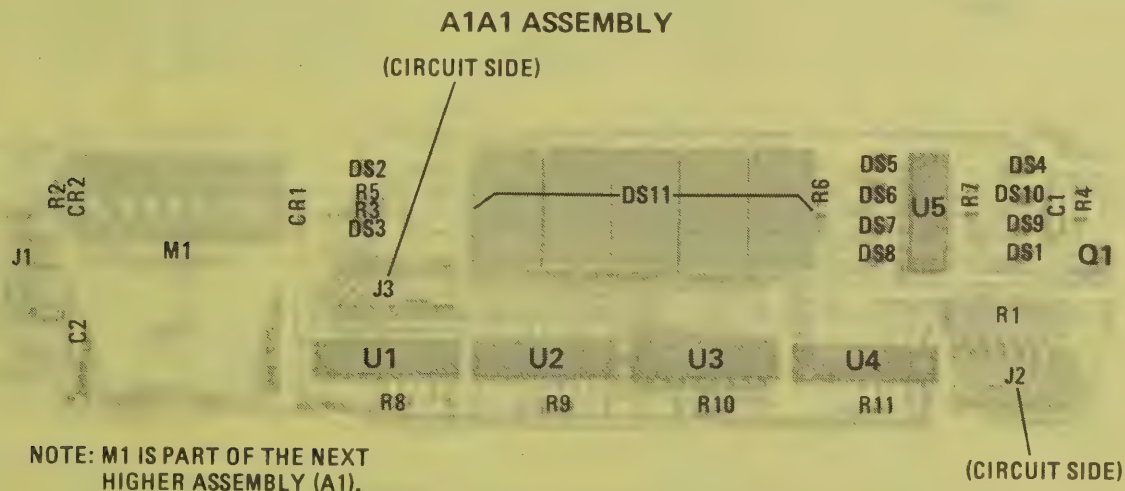


Figure 8-26. A1A1 Display Assembly Component Locations (P/O Change 1)

Replace the portion of Figure 8-28 with the figure contained in this change sheet.

On the upper left side and upper right side of the schematic, change the part number of the A1A1 assembly to 00436-60062.

On the schematic (upper right side) change the value of R3 to 511.

On the display (upper right side) delete the designator U6.

Above the display (upper right side) add "P/O DS11".

In the Transistor and Integrated Circuit Part Numbers table (right side of schematic) make the following changes:

Change A1U1—A1U4 to A1A1U1—A1A1U4 with the part number of 1820-3395.

Delete A1U6—A1U10.


Add DS11 with a part number of 1990-1008.

CHANGE 1 (cont'd)

In the Integrated Circuit Voltage and Ground Connections table (right side of schematic) make the following changes:

Change A1U1–A1U4 to A1A1U1–A1A1U4.

For A1A1U1—A1A1U4 change the pin number for +5VF to 18 and change the pin number for ground to 9 and 10. Delete A1U6—A1U10.

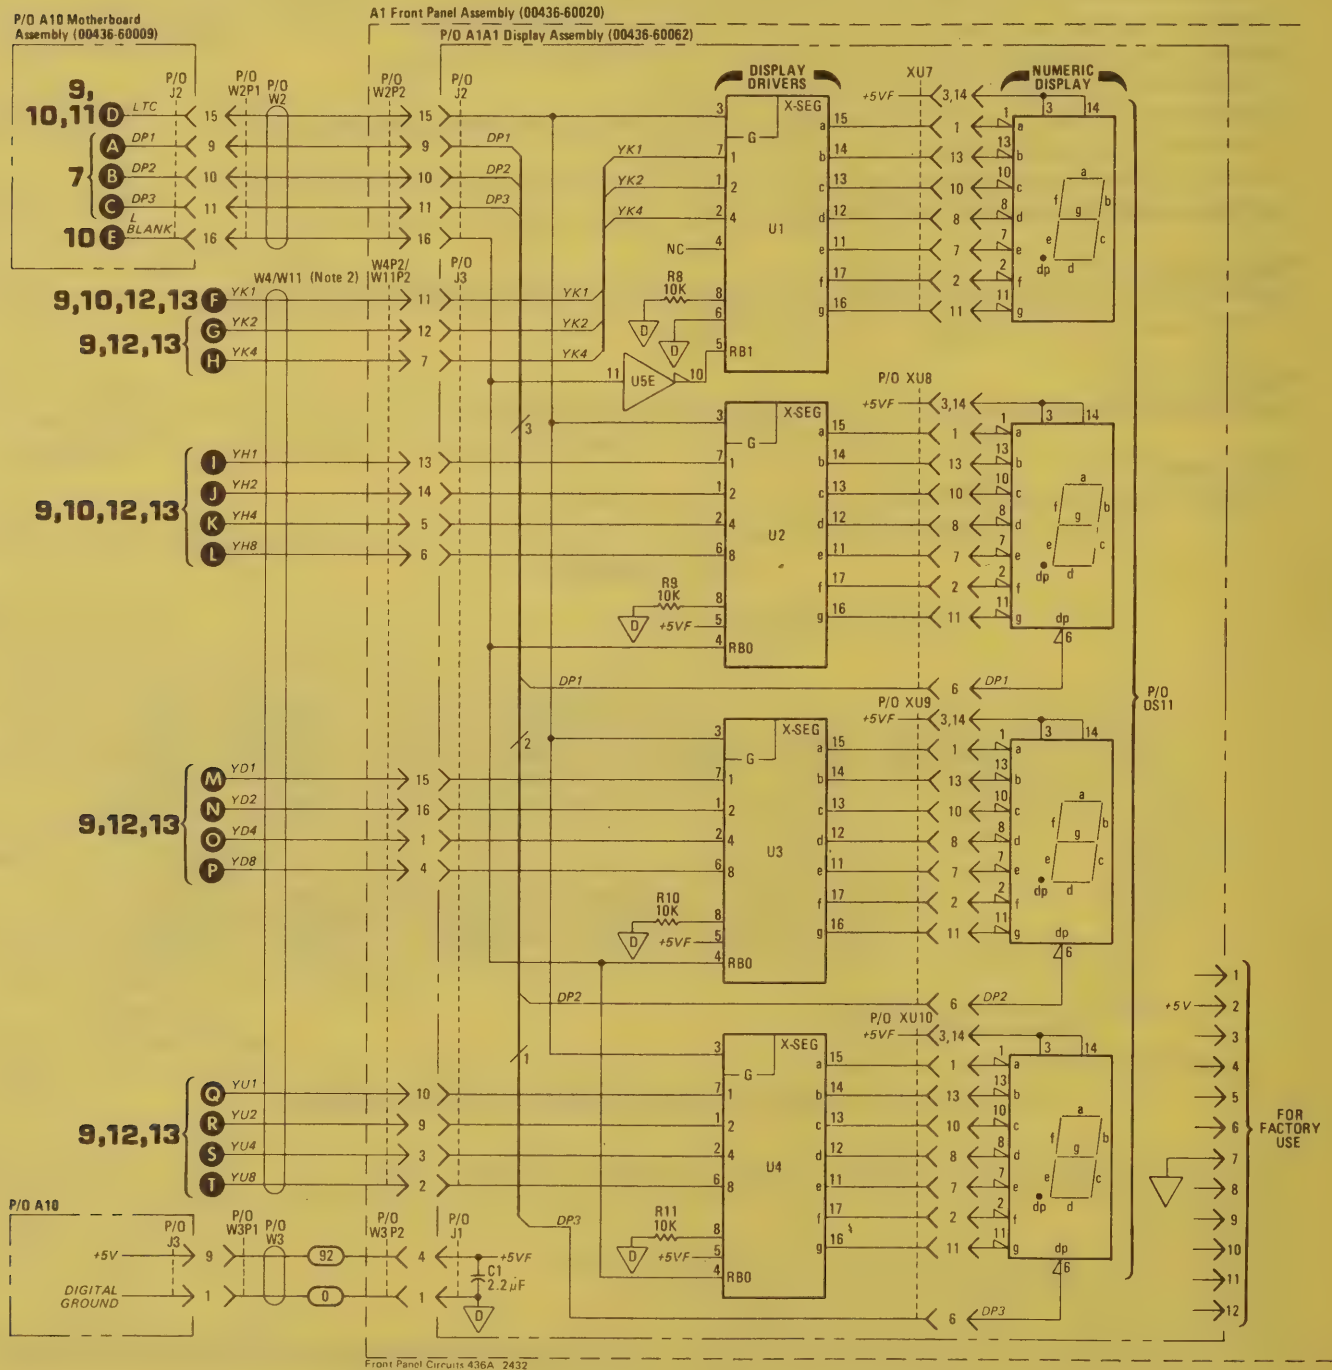

P/O Figure 8-28. Front Panel Assembly Schematic Diagram (P/O Change 1)

CHANGE 1 (cont'd)

Service Sheet 7 (schematic):

Change the value of A2R71—A2R73 (right side of schematic) to 511.

CHANGE 2

Page 6-16, Table 6-2:

A8A1R4. Change the part number and description for A8A1R4 to the following:

2100-3109 CD2 RESISTOR-TRMR 2k 10% C SIDE-ADJ 17 TRN.

A8A1R5. Change the part number and description for A8A1R5 to the following:

0811-3682 CD1 RESISTOR 6.8k 1% .05W PWW TC=0±10.

Service Sheet 14 (schematic):

Change the value of R4 (lower left side of schematic) to 2k.

Change the value of R5 (lower left side of schematic) to 6.8k.

CHANGE 3

Page 2-3, Paragraph 2-26:

In the second sentence change "5061-0057" to "5061-9657".

Page 6-18, Table 6-2:

MP6. Change the part number and description for MP6 to the following:

0515-1331 CD5 SCREW-METRIC SPECIALTY M4 X 0.7 THD; 6

MP10. Change the part number for MP10 to the following: 5021-5815 CD6

MP11. Change the part number for MP11 to the following: 5021-5879 CD2

MP14. Change the part number for MP14 to the following: 5061-9571 CD3

MP18. Change the part number for MP18 to the following: 00436-00035 CD3

MP19. Change the part number for MP19 to the following: 5021-5816 CD7

CHANGE 4

Page 6-4, Table 6-2:

A1A1R8 through A1A1R11. Change the part numbers and descriptions for A1A1R8 through A1A1R11 to the following:

0698-3155 CD1 RESISTOR 4.64k 1% .125W F TC=0±100.

Page 6-7, Table 6-2:

A2R71 through A2R73. Change the part numbers and descriptions for A2R71 through A2R73 to the following:

0698-3446 CD3 RESISTOR 383 1% .125W F TC=0±100.

A2R81. Change the part number and description for A2R81 to the following:

0698-3158 CD4 RESISTOR 23.7k 1% .125W F TC=0±100.

Service Sheet 6 (schematic):

On the A1A1 assembly (left side of schematic) change the value of R8 through R11 to 4.64k.

Service Sheet 7 (schematic):

On the A2 assembly (left side of the schematic) change the value of R81 to 23.7k.

On the A2 assembly (right side of schematic) change the value of R71 through R73 to 383.

►CHANGE 5

Page 6-17, Table 6-2:

A11. Change the part number and description for A11 to the following: 0960-0443 CD1 LINE MODULE-FILTERED (A11 is part of S1. A11 does not include S1C2; when A11 is being replaced, replace S1C2.)

Page 6-18, Table 6-2:

MP22. Change the part number for MP22 to the following:

7100-1282 CD3

CHANGE 5 (cont'd)

Page 6-20, Table 6-2:

S1. Change the part number and description for S1 to the following: 00436-60065 CD5 LINE SWITCH ASSEMBLY (S1 includes A11, S1C1 and S1C2.)

S1C1. Add the following part number and description:

S1C1 0160-4065 CD5 CAPACITOR-FXD .1UF $\pm 20\%$ 250 VAC(RMS)

(S1C1 is part of S1.)

S1C2. Add the following part number and description:

S1C2 0160-4065 CD5 CAPACITOR-FXD .1UF $\pm 20\%$ 250 VAC(RMS)

(S1C2 is not part of A11. S1C2 is part of S1.)

S1C6. Delete S1C6.

T1. Change the part number for T1 to the following: 9100-4480 CD1

TB1. Delete TB1

Service Sheet 14, Figure 8-44:

Replace Figure 8-44 with Figure 8-44 in **Change 5**.

Service Sheet 15, Figure 8-48:

Replace the portion of Figure 8-48 with the partial schematic found in **Change 5**.

A8A1 ASSEMBLY




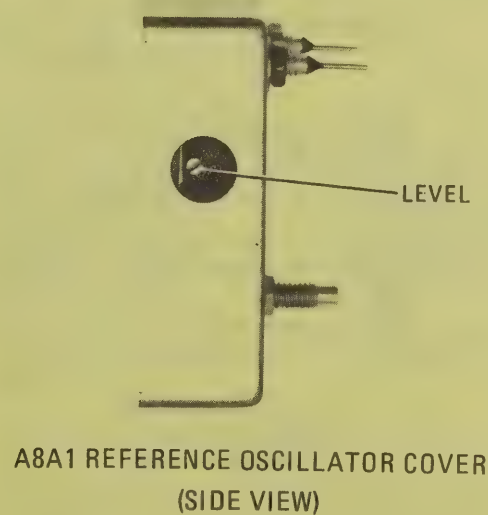


Figure 8-44. A8A1 Power Reference Oscillator Board Assembly Component, Test Point and Adjustment Locations (P/O Change 5)

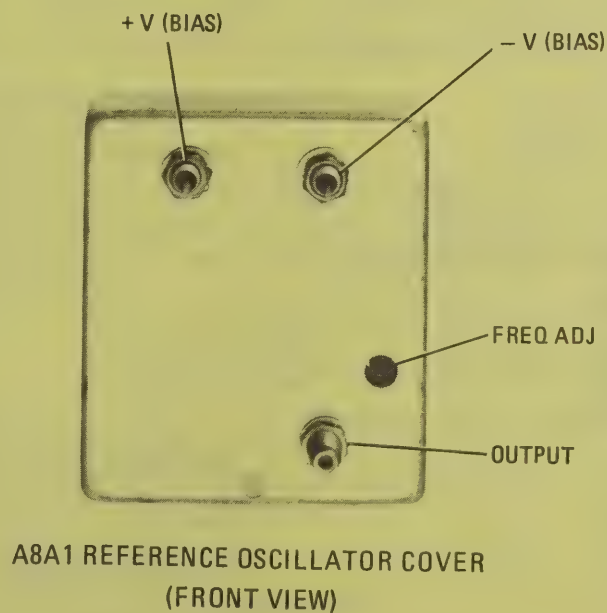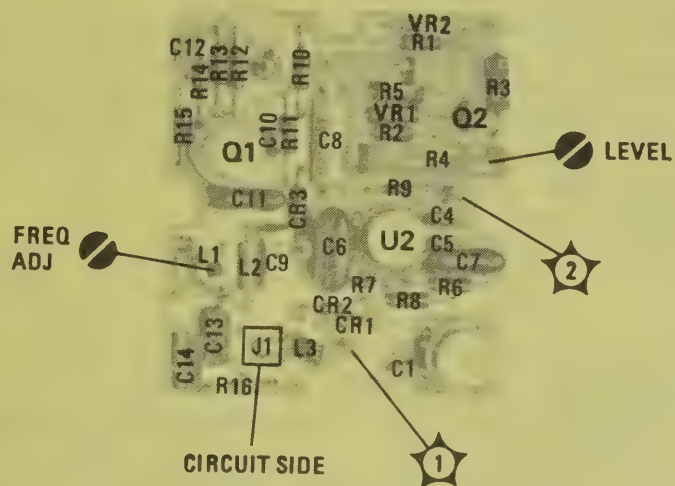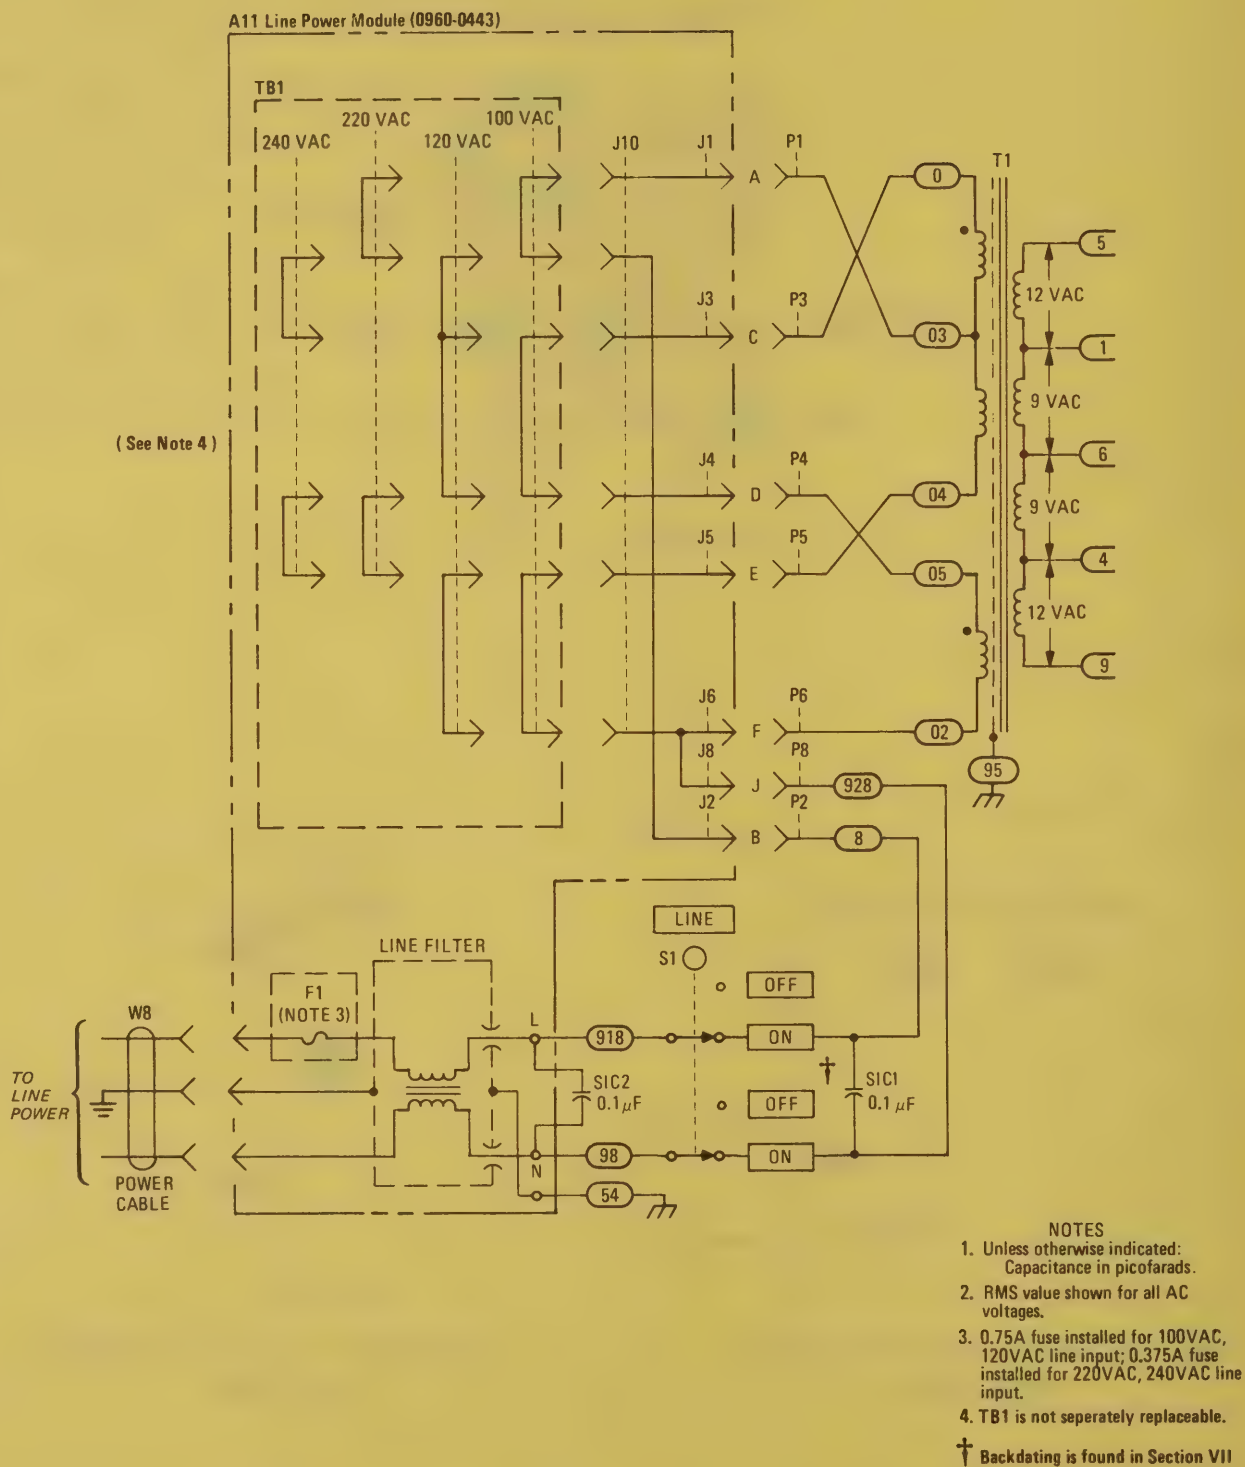

P/O Figure 8-48. Power Supply Rectifier and Regulator Assembly Schematic Diagram (P/O Change 5)

SECTION II INSTALLATION

2-1. INTRODUCTION

2-2. This section provides all information necessary to install the Power Meter. Covered in the section are initial inspection, power requirements, line voltage selection, interconnection, circuit options, mounting, storage, and repackaging for shipment.

2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for the carrier's inspection.

2-5. PREPARATION FOR USE

2-6. Power Requirements

2-7. The Power Meter requires a power source of 100, 120, 220, or 240 Vac, +5%, -10%, 48 to 440 Hz single phase. Power consumption is approximately 20 watts.

WARNING

If this instrument is to be energized via an autotransformer for voltage reduction, make sure the common terminal is connected to the earthed pole of the power source.

2-8. Line Voltage and Fuse Selection

CAUTION

BEFORE PLUGGING THIS INSTRUMENT into the Mains (line) voltage, be sure the correct voltage and fuse have been selected.

2-9. A rear panel, line power module permits operation from 100, 120, 220, or 240 Vac. The number visible in the window (located on the module) indicates the nominal line voltage to which the instrument must be connected. Verify that the line voltage selection card and the fuse are matched to the power source. Refer to Figure 2-1, Line Voltage and Fuse Selection. Table 2-1 lists the ratings and HP part numbers for the replaceable fuses.

WARNING

For protection against fire hazard, the line fuse for 220/240V operation should only be a 250V slow blow fuse with the correct current rating.

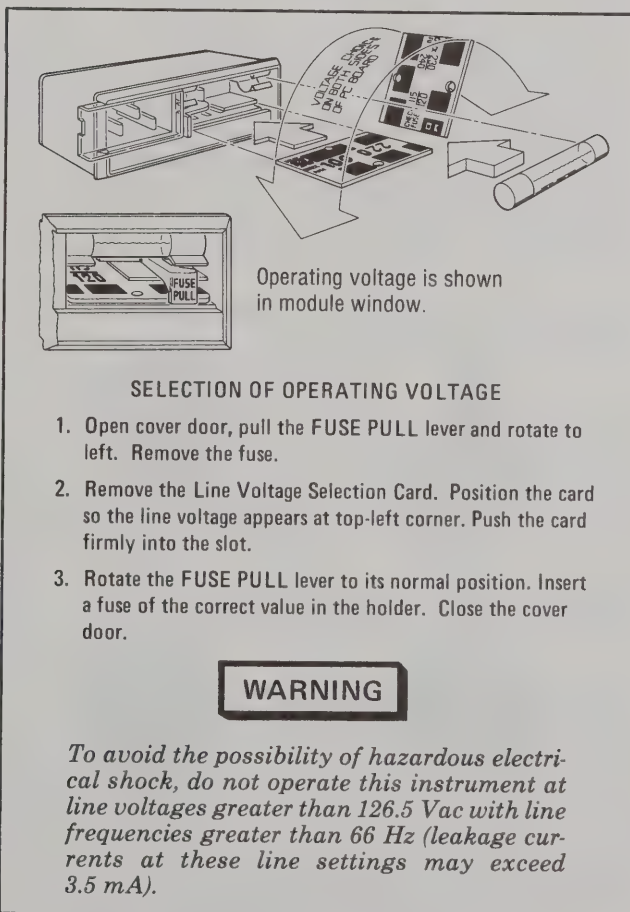


Figure 2-1. Line Voltage and Fuse Selection

Table 2-1. Line Fuse Ratings and Part Numbers

Line Voltage	Rating	Part Number
100/120V	.75A, 250V	2110-0063
220/240V	.375A, 250V, SLO-BLO	2110-0421

2-10. Power Cable

WARNINGS

BEFORE SWITCHING ON THIS INSTRUMENT, the protective earth terminals of this instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding).

2-11. In accordance with international safety standards, this instrument is equipped with a three-wire power cable. When connected to an appropriate ac power receptacle, this cable grounds the instrument cabinet. The type of power cable plug shipped with each instrument depends on the country of destination. Refer to Figure 2-2 for the part numbers of the power cable plugs available.

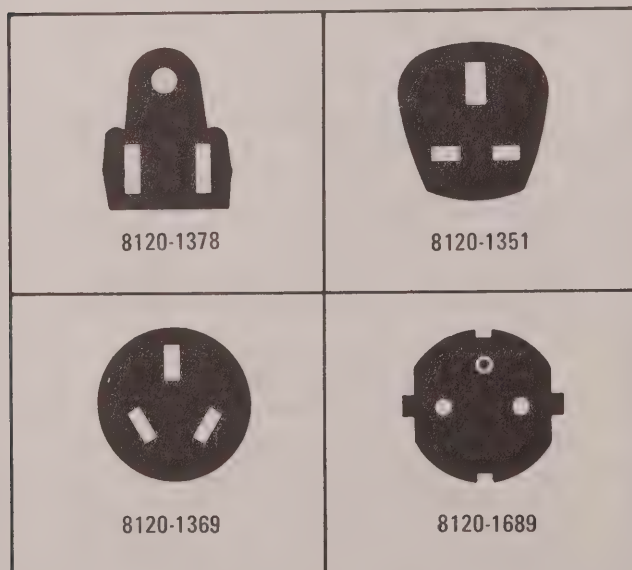


Figure 2-2. Power Cable and Mains Plug Part Numbers


2-12. ADDRESS SELECTION

WARNINGS

This task should be performed only by service trained persons who are aware of the potential shock hazard of working on an instrument with protective covers removed.

To avoid hazardous electrical shock, the line (mains) power cable should be disconnected before attempting to change the HP-IB address.

Look up the address code in Table 2-3. Read the binary equivalent of the code. Set the five least significant bits of the code on the address switch as shown below. (The address switch A6S1, is on the HP-IB Control Assembly.)

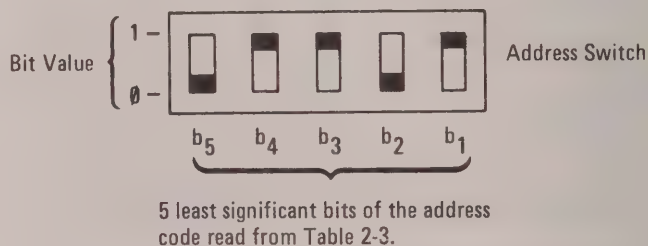

The switch is shown set for Talk address "M" (1001101) and Listen address "—" (0101101).

2-13. Circuit Options

2-14. A jumper option is available for selecting a filtered or unfiltered dc RECORDER OUTPUT. Table 2-2 lists the factory installed jumper connections and indicates how they may be reconnected to select the option.

2-15. Interconnections

2-16. **Power Sensor.** For proper system operation, the Power Sensor must be connected to the Power Meter using either the Power Sensor cable supplied with the Power Meter or any of the optional Power Sensor cables specified in Section I. Each of these cables employs a sensitivity line to enable the Power Meter to determine the operating range of the Power Sensor and thus, the true value of the input signal. For example, the 8481A and

8481H Power Sensors provide identical full scale outputs in response to input signal levels of 100 milliwatts and 3 watts, respectively. The difference in their sensitivity codes is detected by the Power Meter, however, and the Power Meter digital readout is automatically configured to indicate the appropriate value.

2-17. Hewlett-Packard Interface Bus Option 022. Interconnection data for Hewlett-Packard Interface Bus Option 022 is provided in Figure 2-3. Power Meter programming and output data format is described in Section III, Operation. HP-IB address selection is explained in Table 2-3.

2-18. Mating Connectors

2-19. Interface Connector. The interface mating connector for Option 022 is indicated in Figure 2-3.

2-20. Coaxial Connectors. Coaxial mating connectors used with the Power Meter should be US MIL-C-39012-compatible type N male or 50-ohm BNC male.

2-21. Operating Environment

2-22. The operating environment should be within the following limitations:

Temperature	0°C to +55°C
Humidity	<95% relative
Altitude	<4570 m (15,000 ft)

2-23. Bench Operation

2-24. The instrument cabinet has plastic feet and a fold-away tilt stand for convenience in bench operation. (The plastic feet are shaped to ensure self-aligning of the instruments when stacked.) The tilt stand raises the front of the instrument for easier viewing of the control panel.

2-25. Rack Mounting

2-26. Instruments that are narrower than full rack width may be rack mounted using Hewlett-Packard sub-module cabinets. If it is desired to rack mount one Power Meter by itself, order half-module kit, HP Part Number 5061-0057. If it is desired to rack mount two Power Meters side by side, order the following items:

a. Rack Mounting Flange Kit—(For instruments without handles) HP Part Number 5061-0077.

b. Rack Mounting Flange Kit—(For instruments with handles) HP Part Number 5061-2071.

c. Lock Link Kit—Kit consists of lock hardware and screws for joining instrument cabinets in several different configurations. Enough horizontal links (12 front, 6 rear) for three side-by-side joints (up to 4 instruments), and enough vertical links (4 front, 4 rear) to form two over/under joints (up to 3 instruments) HP Part Number 5061-0094.

2-27. In addition to the rack mounting hardware, a front handle assembly (two provided) is also available for the Power Meter. The part number is HP 5061-0089.

2-28. STORAGE AND SHIPMENT

2-29. Environment

2-30. The instrument should be stored in a clean dry environment. The following environmental limitations apply to both storage and shipment:

Temperature	−40°C to +75°C
Humidity	<95% relative
Altitude	<7620 m (25,000 ft)

2-31. Packaging

2-32. Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also mark the container FRAGILE to assure careful handling. In any correspondence refer to the instrument by model number and full serial number.

2-33. Other Packaging. The following general instructions should be used for re-packaging with commercially available materials:

a. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard office or service center, attach a tag indicating the service required, return address, model number, and full serial number.)

b. Use a strong shipping container. A double-wall carton made of 275-lb test material is adequate.

c. Use enough shock-absorbing material (3 to 4-inch layer) around all sides of instrument to provide firm cushion and prevent movement in the container. Protect the control panel with cardboard.

d. Seal the shipping container securely.

e. Mark the shipping container FRAGILE to assure careful handling.

Table 2-2. Circuit Options

Assembly	Service Sheet	Jumper Functions
A-D Converter Assembly A3	8	The factory-installed jumpers provide a filtered dc RECORDER OUTPUT which corresponds to the average power input to the Power Sensor. If external filtering is desired, reconnect the jumpers to provide the optional un-filtered dc RECORDER OUTPUT as shown on Service Sheet 8.

Table 2-3. USA Standard Code for Information Interchange (ASCII)

<div><div>b7b6b5</div><div>BITS</div></div>						0 ₀₀	0 ₀₁	0 ₁₀	0 ₁₁	1 ₀₀	1 ₀₁	1 ₁₀	1 ₁₁	NOTE 3
b ₄ ↓	b ₃ ↓	b ₂ ↓	b ₁ ↓	Column→	0	1	2	3	4	5	6	7		
Row↓														
0	0	0	0	0	0	NUL	DLE	SP	0	@	P	`	p	
0	0	0	1	1	1	SOH	DC1	!	1	A	Q	a	q	
0	0	1	0	2	2	STX	DC2	"	2	B	R	b	r	
0	0	1	1	3	3	ETX	DC3	#	3	C	S	c	s	
0	1	0	0	4	4	EOT	DC4	\$	4	D	T	d	t	
0	1	0	1	5	5	ENQ	NAK	%	5	E	U	e	u	
0	1	1	0	6	6	ACK	SYN	&	6	F	V	f	v	
0	1	1	1	7	7	BEL	ETB	'	7	G	W	g	w	
1	0	0	0	8	8	BS	CAN	(8	H	X	h	x	
1	0	0	1	9	9	HT	EM)	9	I	Y	i	y	
1	0	1	0	10	10	LF	SUB	*	:	J	Z	j	z	
1	0	1	1	11	11	VT	ESC	+	;	K	[k	{	
1	1	0	0	12	12	FF	FS	,	<	L	\	l		
1	1	0	1	13	13	CR	GS	—	=	M]	m	}	
1	1	1	0	14	14	SD	RS	.	>	N	^	n	~	
1	1	1	1	15	15	SI	US	/	?	O	—	o	DEL	

NOTE 3


NOTE 1

NOTE 2

NOTE 1: HP-IB valid LISTEN addresses

NOTE 2: HP-IB valid TALK addresses

NOTE 3: Logic 1 = 0V

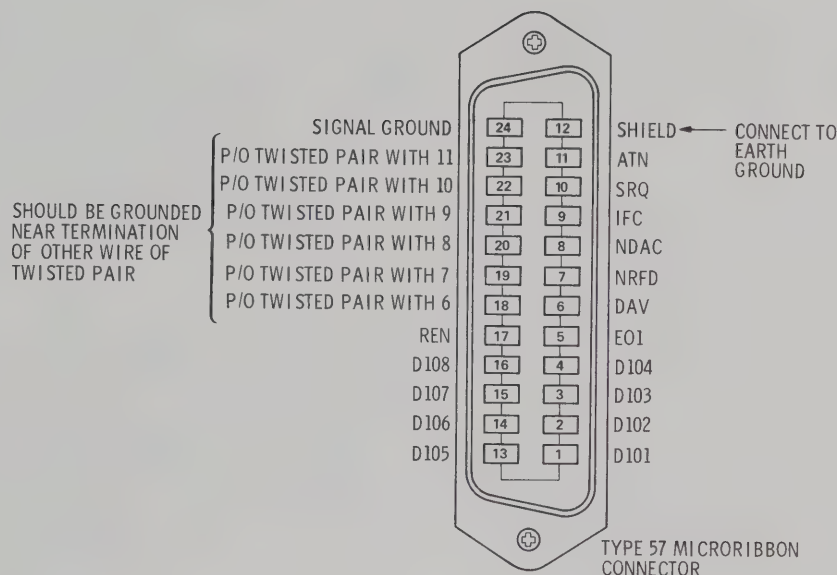

Logic Levels

The Hewlett-Packard Interface Bus logic levels are TTL compatible, i.e., the true (1) state is 0.0 Vdc to 0.4 Vdc and the false (0) state is +2.5 Vdc to +5.0 Vdc.

Programming and Output Data Format

Refer to Section III, Operation.

Mating Connector

HP 1251-0293; Amphenol 57-30240.

Mating Cables Available

HP 10631A, 1.0 metre (3 ft.); HP 10631B, 2.0 metres (6 ft.)

HP 10631C, 4.0 metres (12 ft.); HP 10631D, 0.5 metre (1.5 ft.)

Cabling Restrictions

1. A Hewlett-Packard Interface Bus System may contain no more than 1.8 metres (6 ft.) of connecting cable per instrument.
2. The maximum accumulative length of connecting cable for any Hewlett-Packard Interface Bus System is 20.0 metres (65.6 ft.)

Figure 2-3. Hewlett-Packard Interface Bus Connection

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section provides complete operating information for the Power Meter. Included in the section are a description of all front- and rear-panel controls, connectors, and indicators (panel features), operator's checks, operating instructions, power measurement accuracy considerations, and operator's maintenance.

3-3. Since the power meter can be operated locally as well as remotely via the Hewlett-Packard Interface Bus (Option 022), the information in this section is arranged accordingly. All information unique to a particular operating configuration is designated as such; where no distinction is made, the information is applicable to both standard and optional instrument operation.

3-4. PANEL FEATURES

3-5. Front and rear panel features of the Power Meter are described in Figure 3-1. This figure contains a detailed description of the controls, connectors and indicators.

3-6. OPERATOR'S MAINTENANCE

3-7. The only maintenance the operator should normally perform is replacement of the primary power fuse located within Line Module Assembly A11. For instructions on how to change the fuse, refer to Section II, Line Voltage Selection.

CAUTION

Make sure that only fuses with the required rated current and of the specified

type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse-holders must be avoided.

3-8. OPERATOR'S CHECKS

3-9. A procedure for verifying the major functions of the Power Meter is provided in Figure 3-2. The procedure is divided into two parts: Local Operation and Remote Hewlett-Packard Interface Bus Operation. For a standard instrument it is only necessary to perform the Local Operation procedure. For units equipped with the remote option, the Local Operation procedure should be performed first to establish a reference against which remote operation can be verified. Information covering remote programming of the Power Meter is provided in the following paragraphs, and a Hewlett-Packard Interface Bus Verification Program is provided in Section VIII, Service.

3-10. LOCAL OPERATING INSTRUCTIONS

3-11. Figure 3-3 provides general instructions for operating the Power Meter via the front-panel controls.

WARNING

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal is likely to make this instrument dangerous. Intentional interruption is prohibited.

FRONT AND REAR PANEL FEATURES

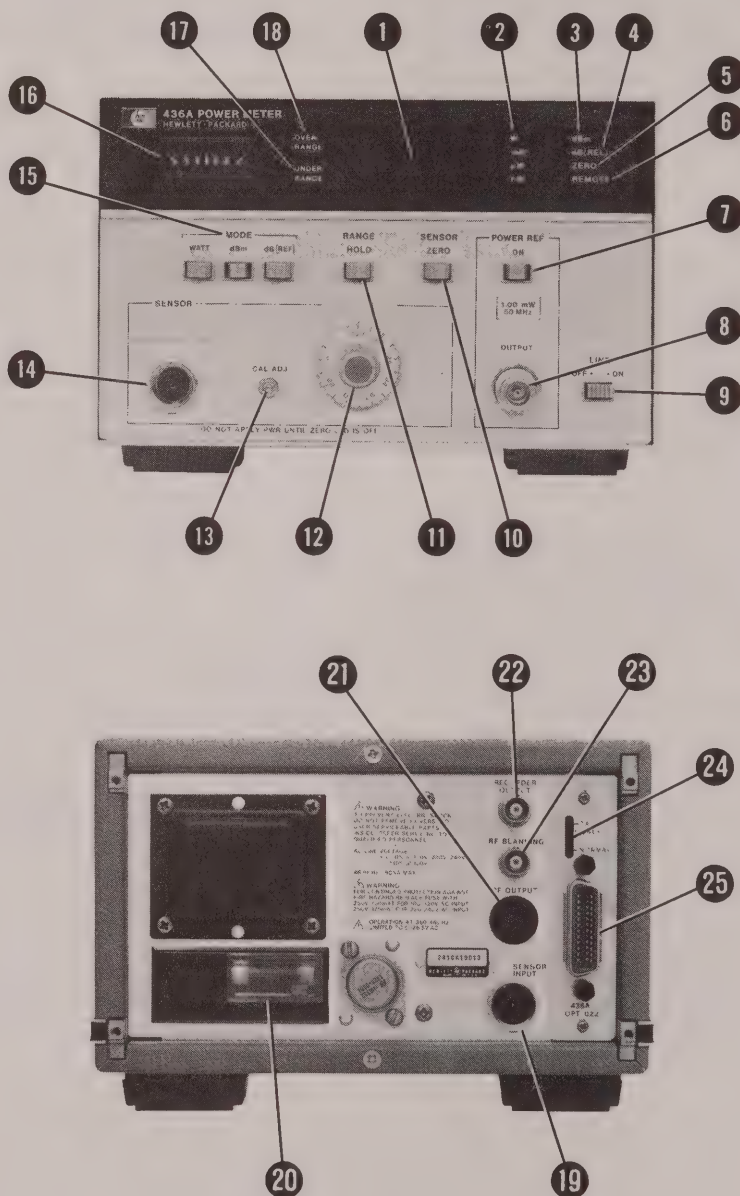


Figure 3-1. Front and Rear Panel Controls, Connectors, and Indicators (1 of 4)

FRONT PANEL FEATURES

- 1 Digital Readout:** Indicates sign and decimal value of RF input power in Watts, dBm, or in dB relative to a stored reference.
- 2 Range Lamps (W, mW, μ W, nW):** Enabled in WATT MODE. Light to indicate level of Digital Readout indication.
- 3 dBm:** Lights to indicate that dBm MODE is selected and Digital Readout indication is in dBm.
- 4 dB (REL):** Lights to indicate that dB RELATIVE MODE is selected and Digital Readout indication is in dB with respect to stored reference level.
- 5 ZERO:** Lights to indicate that power sensor auto-zero circuit is enabled and **23** RF BLANKING output is active.
- 6 REMOTE:** Associated with the Hewlett-Packard Interface Bus Option 022. Lights to indicate that front-panel switches are disabled and power meter operation is being controlled via remote interface.
- 7 POWER REF ON:** Alternate action pushbutton switch. When set to ON (in), enables **8** POWER REF OUTPUT.
- 8 POWER REF OUTPUT:** Enabled when **7** POWER REF switch is set to ON. Provides RF output of $1.00 \text{ mW} \pm 0.70\%$ for system calibration.
- 9 LINE ON-OFF:** Alternate action pushbutton switch. Applies ac line power to Power Meter when set to ON (in).
- 10 SENSOR ZERO:** Spring-loaded pushbutton switch. When pressed, enables Power Sensor auto zero loop for a period of approximately 4 seconds (**5** ZERO lamp remains lit for the duration of this period).
- 11 RANGE HOLD:** Alternate action pushbutton switch. When set to off (out) allows Power Meter to auto-range as required to track changes in RF input power level. When set to on (in), locks Power Meter in last range enabled during autoranging.
- 12 CAL FACTOR %:** Rotary switch which changes the gain of the Power Meter amplifier circuits to compensate for mismatch losses and effective efficiency of the Power Sensor. A chart of CAL FACTOR % versus frequency is printed on each Power Sensor.
- 13 CAL ADJ:** Screwdriver adjustment for calibrating the Power Meter and any Power Sensor to a known standard.
- 14 SENSOR:** Provides input connection for Power Sensor via Power Sensor Cable.
- 15 MODE:** Interlocking pushbutton switches which configure the Power Meter to indicate average RF input power in watts, in dBm, or in dB with respect to a stored reference.

WATT: Alternate action pushbutton switch. When set to on (in), selects WATT Mode. (Power Meter is configured to indicate RF input power in watts, milliwatts, microwatts, or nanowatts.)

dBm: Alternate action pushbutton switch. When set to on (in), selects dBm Mode. (Power Meter is configured to indicate RF input power in dBm.)

dB [REF]: Spring-loaded pushbutton switch. When pressed, selects dB Relative Mode. (RF input power level displayed on **1** Digital Readout is stored as dB reference and **1**, Digital Readout changes to 0. Then Power Meter is configured to indicate changes in RF input level in dB with respect to stored reference.)

NOTE

*In order to auto-zero the Power Sensor, no RF input power may be applied while the **5** ZERO lamp is lit. If any RF input power is applied, it will introduce an offset that will affect all subsequent measurements.*

NOTE

*When the dB relative mode is selected, the WATT Mode or dBm Mode can be selected by pressing the **15** WATT MODE or dBm Mode switch and the power applied to the Sensor is displayed on the **1** Digital*
(continued)

Figure 3-1. Front and Rear Panel Controls, Connectors, and Indicators (2 of 4)

FRONT AND REAR PANEL FEATURES

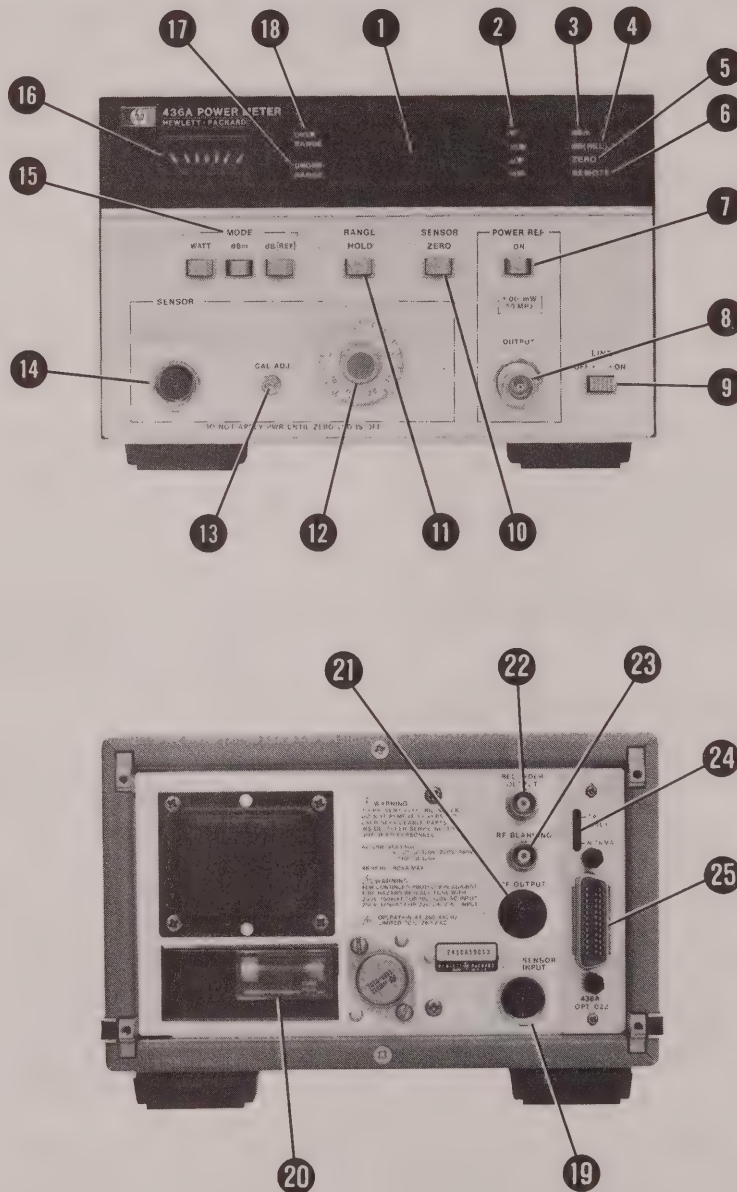


Figure 3-1. Front and Rear Panel Controls, Connectors, and Indicators (3 of 4)

FRONT PANEL FEATURES (cont'd)

(Note cont'd)

Readout. To return to the dB Relative Mode without changing the stored reference, press the 15 WATT MODE or dBm MODE switch just enough to release the previously selected MODE switch. Do not press the 15 dB [REF] MODE switch or a new reference will be entered.

WARNING


Any interruption of the protective (grounding) conductor inside or outside the instrument or disconnecting of the protective earth terminal is likely to make the instrument dangerous. Intentional interruption is prohibited. (See Section II.)

- 16 **Auxiliary Meter:** Provides a linear display with respect to RF input power. For any given range, a full-scale meter indication corresponds to the highest indication that can be obtained on the Digital Display.
- 17 **UNDER RANGE:** Lights to indicate that RF input power level is too small to be measured on selected range (autoranging disabled), or on Power Meter lowest range (autoranging enabled).
- 18 **OVER RANGE:** Lights to indicate that RF input power level is too large to be measured on selected range (autoranging disabled), or on Power Meter highest range (autoranging enabled).
- 19 **REAR PANEL FEATURES**
 - 19 **SENSOR INPUT:** This rear panel input is wired in parallel with the front panel input 14.
 - 20 **Line Power Module:** Permits operation from 100, 120, 220, or 240 Vac. The number visible in window indicates nominal line voltage to which instrument must be connected (see Figure 2-1). Protective grounding conductor connects to the instrument through this module.
- 21 **POWER REF OUTPUT:** Takes the place of the front panel 8 POWER REF OUTPUT connector (Option 003 only).
- 22 **RECORDER OUTPUT:** Provides a linear output with respect to the input power. +1.00 Vdc corresponds to a full scale 1 Digital Readout indication on the range selected (refer to Table 1-1). The minimum load which may be coupled to the output is 1 M Ω .
- 23 **RF BLANKING:** Contact closure to ground when 10 SENSOR ZERO switch is pressed. May be used to remove RF input signal during automatic zeroing operation.
- 24 **TALK ONLY/NORMAL:** Associated with Hewlett-Packard Interface Bus Option 022 only. NORMAL position configures the Power Meter as a basic talker. TALK ONLY position is normally used only when there is no controller connected to the interface bus (e.g., when Power Meter is interconnected with an HP 5150A recorder).
- 25 **Interface Connector:** For Power Meter connection to remote interface Option 022.

Figure 3-1. Front and Rear Panel Controls, Connectors, and Indicators (4 of 4)

OPERATOR'S CHECKS

LOCAL OPERATION

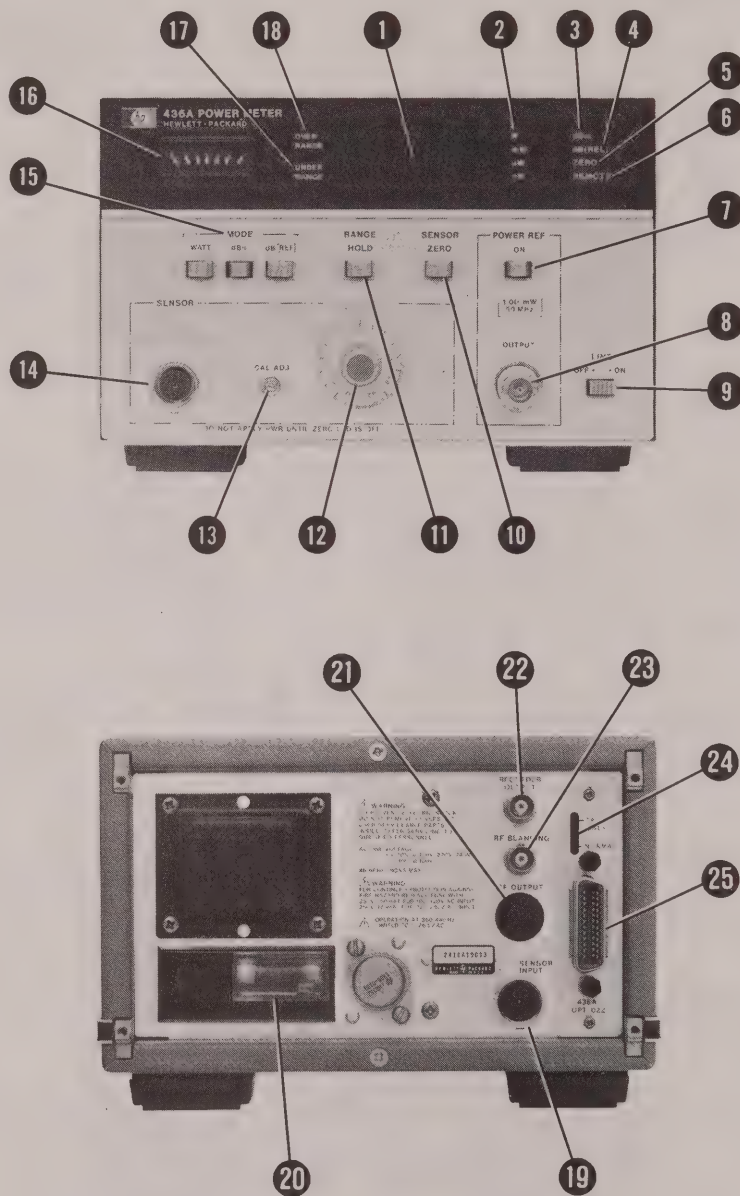**WARNINGS**

BEFORE CONNECTING LINE POWER TO THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

Figure 3-2. Operator's Checks (1 of 5)

OPERATOR'S CHECKS

LOCAL OPERATION (cont'd)

1. BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the power transformer primary is matched to the available line voltage, the correct fuse is installed, and the safety precautions are taken. See Power Requirements, Line Voltage Selection, Power Cables, and associated warnings and cautions in Section II.

NOTE

If Power Meter is equipped with the Hewlett-Packard Interface Bus option, unplug data bus cable from connector J7 on rear panel before performing this procedure. When data bus cable is unplugged, Power Meter is automatically configured for Local operation via front-panel controls.

CAUTION

DO NOT TWIST the body of the power sensor when connecting or disconnecting it to other instruments. Twisting may cause major damage to the power sensor electrical circuits.

2. Connect the Power Sensor to the Power Meter with the Power Sensor Cable.
3. Connect the Power Sensor to the **8** POWER REF OUTPUT connector.
4. Connect the Power Cable to the power outlet and **20** Line Power Module receptacle, and set the **9** LINE switch to ON (in).
5. Set the remaining Power Meter switches as follows:
 - 12** CAL FACTOR% Set to reference calibration factor.
 - 7** POWER REF off (out)
 - 15** MODE WATT
 - 11** RANGE HOLD off (out)

NOTE


Perform steps 6 through 19 only if Power Meter is connected to 8481A, 8482A, or 8483A Power Sensor. If Power Meter is connected to 8481H or 8482H Power Sensor, proceed to step 20.

6. Press and hold the **10** SENSOR ZERO switch until the digital readout stabilizes. While the switch is held depressed, verify that the **5** ZERO lamp is lit and that the **23** RF BLANKING output is 0.0 ± 0.4 V.
7. Release the **10** SENSOR ZERO switch and verify that the **5** ZERO lamp remains lit for approximately four seconds. When the **5** ZERO lamp goes out, verify that the **1** Digital Readout indicates 0.00 ± 0.02 μ W.
8. Set the **11** RANGE HOLD and **7** POWER REF switches to ON (in). Verify that the **18** OVER-RANGE lamp lights and that the **1** Digital Readout blanks (1__ μ W).
9. Set the **11** RANGE HOLD switch to off (out). Verify that the Power Meter autoranges to the 1 mW range and that the **18** OVER RANGE lamp goes out.
10. Adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW. Verify that the pointer on the **16** Auxiliary Meter is aligned between the last two marks, and that the **22** RE-CORDER OUTPUT is approximately 1.000 Vdc.

Figure 3-2. Operator's Checks (2 of 5)

OPERATOR'S CHECKS

LOCAL OPERATION (cont'd)

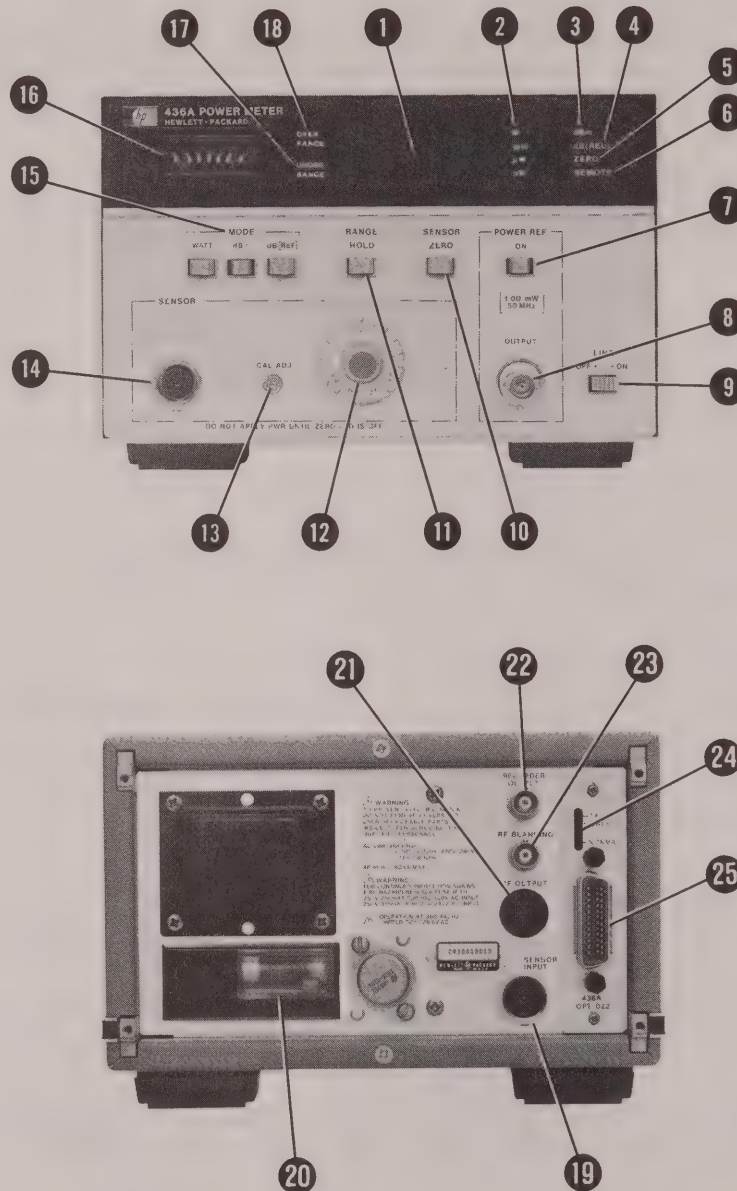

NOTE

Underscore (_) indicates blanked digit.

11. Rotate the **12** CAL FACTOR % switch through its range and verify that the **1** Digital Readout indication increases slightly for each successive step. Then return the **12** CAL FACTOR % switch to 100.

Figure 3-2. Operator's Checks (3 of 5)

OPERATOR'S CHECKS

LOCAL OPERATION (cont'd)

12. Set the **15** dBm MODE switch to on (in) and verify that the **1** Digital Readout indicates -0.0 ± 0.01 dBm.
13. Set the **11** RANGE HOLD switch to on (in) and the **7** POWER REF switch to off (out). Verify that the **17** UNDER RANGE lamp lights and that the **1** Digital Readout blanks ($-1_ _ \text{ dBm}$).
14. Set the **11** RANGE HOLD switch to off (out) and verify that the **1** Digital Readout blanked indication changes to $-3_ _ _$. The new indication verifies that the Power Meter has autoranged to the most sensitive dBm range.
15. Set the **11** RANGE HOLD and **7** POWER REF switches to ON (in). Verify that the **18** OVER RANGE lamp lights and that the **1** Digital Readout blanked indication changes to $-1_ _ _$.
16. Set the **11** RANGE HOLD switch to off (out) and verify that the **1** Digital Readout indicates -0.00 ± 0.01 dBm. This new indication verifies that the Power Meter has autoranged properly.
17. Adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates -1.40 dBm.
18. Press the **15** dB [REF] MODE switch and verify that the **3** dBm lamp goes out, the **4** dB (REL) lamp lights, and the **1** Digital Readout changes to -0.00 . This step verifies that the Power Meter can store a dB reference value and indicate RF input power levels in dB with respect to the stored reference.
19. Set the **15** WATT Mode switch to on (in) and readjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW.

NOTE


Steps 20 through 28 are performed in lieu of steps 6 through 19 when the Power Meter is connected to an 8481H or an 8482H Power Sensor.

20. Press and hold the **10** SENSOR ZERO switch until the **1** Digital Readout stabilizes. While the switch is held pressed, verify that the **5** ZERO lamp is lit and that the **23** RF BLANKING output is 0.0 ± 0.4 V.
21. Release the **10** SENSOR ZERO switch and verify that the **5** ZERO lamp remains lit for approximately four seconds. When the **5** ZERO lamp goes out, verify that the **1** Digital Readout indicates 0.00 ± 0.02 mW.
22. Set the **7** POWER REF switch to ON (in) and adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW. Verify that the pointer on the **16** Auxiliary Meter is aligned between the last two marks, and that the **22** RECORDER OUTPUT is approximately 1.000 Vdc.
23. Rotate the **12** CAL FACTOR % switch through its range and verify that the **1** Digital Readout increases slightly for each successive step. Then return the **12** CAL FACTOR % switch to 100.
24. Set the **15** dBm MODE switch to on (in) and verify that the **1** Digital Readout indicates -0.00 ± 0.01 dBm.
25. Set the **7** POWER REF switch to off (out). Verify that the **17** UNDER RANGE lamp lights and that the **1** Digital Readout blanks ($-1_ _ \text{ dBm}$).

Figure 3-2. Operator's Checks (4 of 5)

OPERATOR'S CHECKS

LOCAL OPERATION (cont'd)

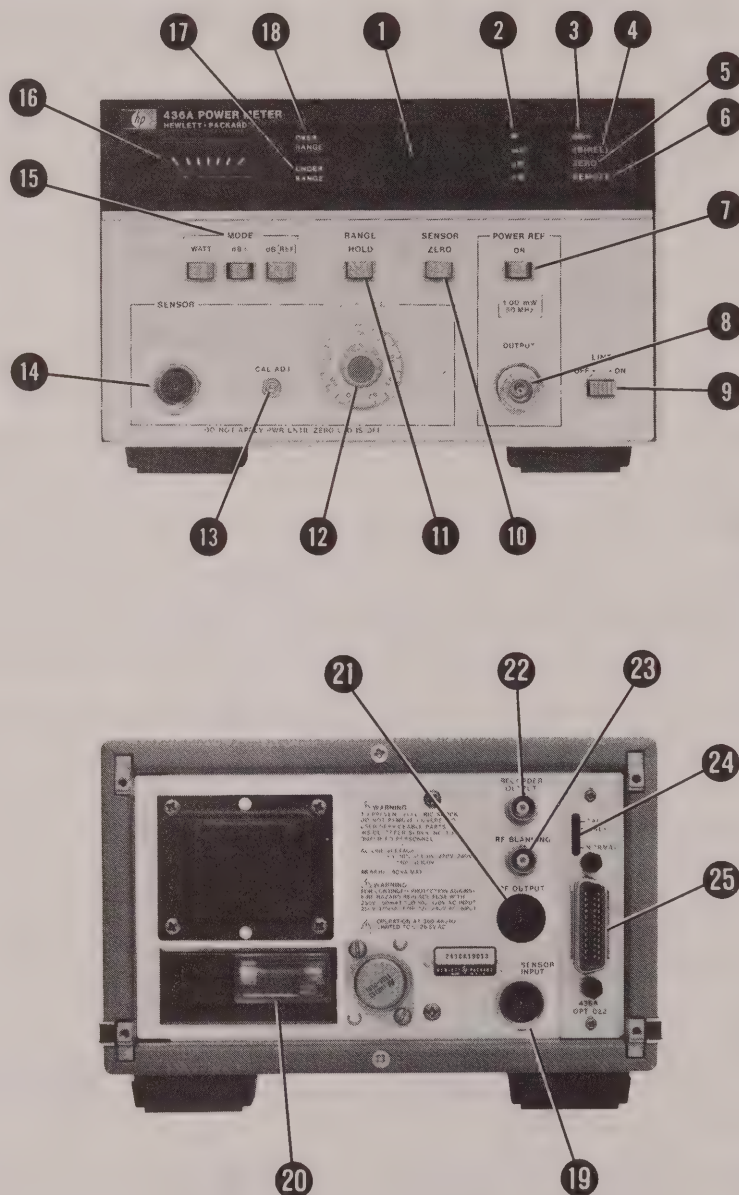

26. Set the **7** POWER REF switch to ON (in) and adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates -2.00 dBm.
27. Press the **15** dB [REF] Mode switch and verify that the **3** dBm lamp goes out, the **4** dB (REL) lamp lights, and the **1** Digital Readout changes to -0.00 . This step verifies that the Power Meter can store a dB reference value and indicate input power levels in dB with respect to the stored reference.
28. Set the **15** WATT Mode switch to on (in) and readjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW.

Figure 3-2. Operator's Checks (5 of 5)

OPERATING INSTRUCTIONS

LOCAL OPERATION

1. BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the power transformer primary is matched to the available line voltage, the correct fuse is installed, and safety precautions are taken. See Power Requirement, Line Voltage Selection, Power Cables, and associated warnings and cautions in Section II.

NOTE

If Power Meter is equipped with the Hewlett-Packard Interface Bus Option, either unplug data bus cable from connector J7 on rear panel or program Power Meter for Local operation as described under Operating Instructions paragraph.

CAUTION

DO NOT TWIST the body of the power sensor when connecting or disconnecting it to other instruments. Twisting may cause major damage to the power sensor's electrical circuits.

2. Connect the Power Sensor to the Power Meter with the Power Sensor Cable.
3. Connect the Power Cable to the power outlet and 20 Line Power Module receptacle and set the 9 LINE ON-OFF switch to ON (in).
4. Set the remaining Power Meter switches as follows:

12	CAL FACTOR %	100
7	POWER REF	off (out)
15	MODE	WATT
11	RANGE HOLD	off (out)
5. Press and hold the 10 SENSOR ZERO switch and wait for the 1 Digital Readout to stabilize. Then verify that the 5 ZERO lamp is lit and that the 1 Digital Readout indicates 0.00 ± 0.02 .

NOTE

When auto-zeroing the Power Sensor, no RF input power may be applied while the ZERO lamp is lit. If any RF input power is applied, it will introduce an offset that will affect subsequent measurements.

6. Release the 10 SENSOR ZERO switch and wait approximately 4 seconds for the 5 ZERO lamp to go out.
7. Connect the Power Sensor to the 8 POWER REF OUTPUT connector and set the 7 POWER REF switch to ON (in). Then adjust the 13 CAL ADJ control so that the 1 Digital Readout indicates 1.000 mW.
8. Set the 7 POWER REF switch to off (out) and disconnect the Power Sensor from the 8 POWER REF OUTPUT connector.
9. Locate the calibration curve on the Power Sensor cover and determine the CAL FACTOR for the measurement frequency; set the Power Meter 12 CAL FACTOR % switch accordingly.

CAUTION


See Operating Precautions in the Power Sensor Operating and Service Manuals for maximum power levels which may be safely coupled to this system. Levels which exceed the limits may damage the Power Sensor, Power Meter or both.

10. Set the 15 MODE and 11 RANGE HOLD switches for desired operation and connect the Power Sensor to the RF source.

Figure 3-3. Operating Instructions (1 of 3)

OPERATING INSTRUCTIONS

HEWLETT-PACKARD INTERFACE BUS (HP-IB) OPERATION

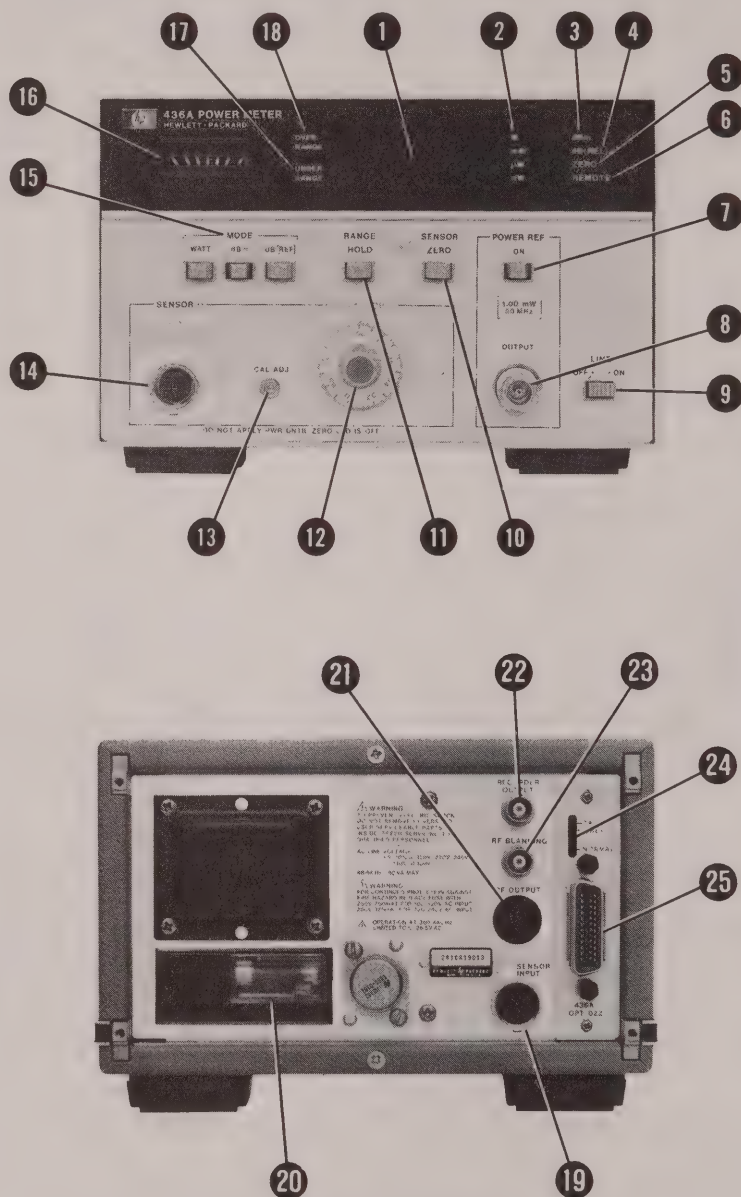

WARNINGS

BEFORE CONNECTING LINE POWER TO THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

Figure 3-3. Operating Instructions (2 of 3)

OPERATING INSTRUCTIONS

HP-IB OPERATION (cont'd)

1. BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the power transformer primary is matched to the available line voltage, the correct fuse is installed, and safety precautions are taken. See Power Requirement, Line Voltage Selection, Power Cables, and associated warnings and cautions in Section II.

CAUTION

DO NOT TWIST the body of the power sensor when connecting or disconnecting it to other instruments. Twisting may cause major damage to the power sensor's electrical circuits.

2. Connect the Power Sensor to the Power Meter with the Power Sensor Cable.
3. Connect the Power Meter to the Remote Interface **25**.
4. Connect the Power Cable to the power outlet and **20** Line Power Module receptacles and set the **9** LINE ON-OFF switch to ON (in).
5. Set the Power Meter **12** CAL FACTOR % switch to 100 and the **7** POWER REF switch to off (out).
6. Set the remote enable input to the Power Meter to logical 1 (0.0 ± 0.4 Vdc) and program the Power Meter as follows:

Mode	WATT
Range	AUTO
10 SENSOR ZERO	ON
12 CAL FACTOR %	enabled

7. Wait for the **1** Digital Readout to stabilize, then verify that the **5** ZERO lamp is lit and that the **1** Digital Readout indicates 0.00 ± 0.02 .

NOTE

*When auto-zeroing the Power Sensor, no RF input power may be applied while the **5** ZERO lamp is lit. If any RF input power is applied, it will introduce an offset that will affect subsequent measurements.*

8. Program the **10** SENSOR ZERO function to off by programming one of the other modes (WATT, dBm or dB Ref) and wait approximately 4 seconds for the **5** ZERO lamp to go out.
9. Connect the Power Sensor to the **8** POWER REF OUTPUT connector and set the **7** POWER REF switch to ON (in). Then adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW.
10. Set the **7** POWER REF switch to off (out) and disconnect the Power Sensor from the **8** POWER REF OUTPUT connector.
11. Locate the calibration curve on the Power Sensor to cover and determine the CAL FACTOR for the measurement frequency; set the Power Meter **12** CAL FACTOR % switch accordingly.

CAUTION

See Operating Precautions in the Power Sensor Operating and Service Manuals for maximum power levels which may be safely coupled to this system. Levels which exceed the limits may damage the Power Sensor, Power Meter or both.

12. Program the Power Meter to the desired Mode and Range, select the triggering most appropriate to the type of measurements anticipated, and connect the Power Sensor to the RF source.

Figure 3-3. Operating Instructions (3 of 3)

3-12. HEWLETT-PACKARD INTERFACE BUS REMOTE OPERATION

NOTE

For a quick and easy programming guide see Figure 3-8; for detailed information study paragraphs 3-12 through 3-61.

3-13. Hewlett-Packard Interface Bus (HP-IB) Option 022 adds remote programming and digital output capability to the Power Meter. For further information about the HP-IB, refer to IEEE Standard 488 and the Hewlett-Packard Catalog. Power Meter compatibility, programming, and data format is described in detail in the paragraphs which follow.

3-14. Compatibility

3-15. The Power Meter controls that can be programmed via the Hewlett-Packard Interface Bus are the MODE and SENSOR ZERO switches. The controls not programmable are the POWER REF and LINE switches. The CAL FACTOR % switch can be enabled and disabled via the interface bus but, when enabled, the calibration factor entered at the front-panel of the Power Meter is used.

3-16. In addition, specific ranges can be set and various triggering options are available to the programmer. This will be described in detail later.

3-17. The programming capability of the Power Meter will be described in terms of the twelve bus messages found in Table 3-1.

3-18. Data Messages

3-19. The Power Meter communicates on the bus primarily through data messages. It receives data messages that tell it what range to use, what mode to use, whether or not cal factor should be enabled, and what the measurement rate should be. It sends data messages that tell the measurement value, the mode and range the value was taken at, and what the instrument's status (see Table 3-4) was when it took the measurement.

3-20. Table 3-2 outlines the key elements involved in making a measurement. Indeed the Power Meter can be programmed to make measurements via the HP-IB by following only the sequence suggested in the table, and briefly referring to Tables 3-3, 3-4, (input and output data), and Fig. 3-8. However, to take advantage of the programming flexibility built into the Power Meter and minimize the time it

takes to make a valid measurement, study the rest of the information in this section.

3-21. Receiving Data Messages

3-22. The Power Meter is configured to listen (receive data) when the controller places the interface bus in the command mode (ATN and REN lines low; IFC line high) and outputs listen address "—" (minus sign). The Power Meter then remains configured to listen (accept programming inputs when the interface bus is in the data mode) until it is unaddressed by the controller. To unaddress the Power Meter, the controller can either send the Abort Message (set the IFC line low) or send the Local Message (set the REN line high), or it can place the interface bus in the command mode and generate a universal unlisten command.

3-23. Data Input Format. The Power Meter does not require any particular data input format. It is capable of responding to each of the programming codes listed in Table 3-3 on an individual basis. Because it responds to these codes in the order it receives them, we recommend that the code for measurement rate be sent last.

3-24. Program Codes. Table 3-3 lists the program codes that the Power Meter responds to and the functions that they enable. In the listen mode, the Power Meter can handshake in 0.5 μ s. The time required for the Power Meter to respond to the programming command, however, depends on where the Power Meter is in the operating program (see Figure 3-6). The overall worst case time for Power Meter response to a programming command is 2.5 seconds, the minimum response time is approximately 100 microseconds.

NOTE

In addition to the program codes listed in Table 3-3, Power Meter operation will be affected by all other program codes shown in columns 2, 3, 4, and 5 of Table 2-2, except (SP!"#\$%&). Thus care should be taken to address the Power Meter to unlisten before sending these programming commands to other instruments on the interface bus.*

3-25. Programming the Range. Remote range programming is slightly different than Local range selection. For Local operation the Power Meter auto-ranges. For Remote operation, the program codes have provision for direct selection of the de-

Table 3-1. Message Reference Table

Message and Identification	Applicable	Command and Title	Response
Data	Yes	T3 Talker, L2 Listener, AH1 Acceptor Handshake SH1 Source Handshake.	Power Meter changes mode, range, measurement rate, and Cal Factor enable or disable. It outputs status and measurement data.
Trigger (DT0)	No	Device Trigger	The Power Meter does not respond to a Group Execute Trigger. However, remote trigger capability is part of the Data message (measurement rate).
Clear (DC2)	Yes	DCL Device Clear	Upon receipt of DCL command, Power Meter functions are set for Watt Mode, Auto Range, Cal Factor Disable and Measurement rate Hold.
	No	SDC Selected Device Clear	
Remote (RL2) ¹	Yes	REN Remote Enable	Power Meter goes to remote when addressed to listen, and REN is true (low).
Local (RL2) ¹	Yes	REN Remote Disable	Power Meter goes to local when REN is false (high). Power Meter does not respond to GTL command.
	No	GTL Go to Local	
Local Lockout (RL2) ¹	No	REN Remote Disable	Power Meter does not respond to LLO command.
Clear Lockout/ Set Local (RL2) ¹	Yes	REN Remote Disable	Returns all devices on bus to local operation.
Pass Control/Take Control (C0)	No	Controller	Power Meter cannot act as bus controller.
Require Service (SR0)	No	SRQ Service Request	Power Meter does not request service.
Status Byte	No	SPE Serial Poll Enable SPD Serial Poll Disable	Power Meter does not respond to a Serial Poll
Status Bit (PP0)	No	PP Parallel Poll	Power Meter does not respond to a parallel poll.
Abort	Yes	IFC Interface Clear	Power Meter stops talking or listening.

¹The 436A does not have complete RL2 capability since it cannot process the Go-To-Local (GTL) message.

NOTE

Complete HP-IB capability as defined in IEEE Std. 488 is AH1, C0, DC2, DT0, LE0, PP0, RL2, SH1, SR0, T3, TE0.

Table 3-2. Measurement Sequence

MEASUREMENT SEQUENCE

- Event 1** {controller talk and Power Meter listen} , {Program Codes}
- See controller manual. Power Meter Listen address factory set to “—” (see Tables 2-1 and 2-2).
e.g., CMD “?U—”, “9D+V”
wrt “pmrd”, “9D+V”
 - Program codes to configure one or more of the following (see Table 3-3):
 1. Range
 2. Remote mode (Watt, dBm, dB [Ref])
 3. Cal Factor
 4. Measurement Rate (and trigger)
- Event 2** Response time for meter’s digital (operating program) circuitry (see Table 3-5 and Figures 3-5 and 3-6).
- Event 3** Meter takes measurement; data available.
- Event 4** Additional delay to allow analog circuits to settle; necessary only if on Range 1 (most sensitive) or if settling time measurement rates are not being used (see Figure 3-4). Here are some suggestions:*
1. Load reading into controller (event five) and check data string for range (look at character number 1 or check measured value).
 2. If Power Meter is on Range 1, wait 10 seconds and take another reading.
 3. If settling time measurement rates are being used and meter is *not* on Range 1, use the first reading.
 4. If settling time measurement rates are *not* being used, determine the range and branch to an appropriate delay: Range 2, one second; Ranges 3-5, 0.1 second.
- Event 5** {universal unlisten, controller listen and Power Meter talk} , {variable name}
- See controller manual. Power Meter Talk address factory set to “M” (see Tables 2-1 and 2-2).

*There are other ways to ensure that readings are not affected by analog circuit settling time. Also, these recommended delays are worst case. A thorough understanding of the material in this section will allow you to optimize measurement time for your particular application. For example, if the power level is not changing, the controller can average at least two consecutive readings to see if the result is still settling.

EXAMPLE PROGRAM SEQUENCE:

- Line 1 {controller talk and power meter listen} , “9D+T”
- Measurement Rate: Trigger with settling time.
 - Cal Factor Disable (100%)
 - dBm Mode
 - Auto Range
- Line 2 {universal unlisten, controller listen and power meter talk} , {variable name}
- Power meter outputs measured value to controller.
- Line 3 { Controller checks value in variable for Range 2 threshold (e.g., < -20 dBm for Model 8482A) Power Sensor). If value is below threshold, program branches to line 4. If value is above threshold, program branches to line 5. }
- Line 4 { wait 10 seconds, then go to line 1 } .
- Line 5 {continue} .

**Table 3-3. Hewlett-Packard Interface Bus
Input Program Codes**

Function	Program Codes	
	ASC II	DECIMAL
Range		
Least sensitive	5	53
	4	52
	3	51
	2	50
Most sensitive	1	49
Auto	9	57
MODE		
Watt	A	65
dB (Rel)	B	66
dB [Ref]	C	67
dBm	D	68
Sensor auto-zero	Z	90
CAL FACTOR		
Disable (100%)	+	43
Enable (front-panel switch setting)	—	45
Measurement Rate		
Hold	H	72
Trigger with settling time	T	84
Trigger, immediate	I	73
Free Run at maximum rate	R	82
Free Run with settling time	V	86

sired range as well as for selection of the autorange function.

3-26. Programming the Mode. Remote mode programming is similar to Local mode selection. The sequence shown in Example 1 is recommended for taking dB (Rel) readings from a dB [Ref] reference.

3-27. Programming Auto-Zero. The Power Meter is remotely zeroed the same way it is zeroed in local. Example 2 shown on the next page outlines the

program steps that should be written. Specific examples are provided later in this Section. (Refer to Tables 3-3 and 3-4 for Power Meter input and output strings. Refer to controller manual for programming syntax.)

3-28. Programming Cal Factor. While the setting of the front panel CAL FACTOR switch cannot be remotely changed, the programmer does have a choice. If CAL FACTOR enable is programmed, then the Power Meter uses the Cal Factor set by the switch. If CAL FACTOR Disable is programmed, then the Power Meter uses a Cal Factor of 100%, but the program can correct for cal factor by computing the corrected reading from the actual reading and the cal factor (a Cal Factor table must be stored in an array).

3-29. Programming Measurement Rate. A feature that is only available via remote programming is selection of standby, triggered, or free running operation of the Power Meter. (During Local operation, the Power Meter is allowed to free run with approximately 133 milliseconds allowed for settling time between measurements.) The specific remote triggering capabilities are:

a. **Hold (H)** — when the power meter is programmed to Hold, it is inhibited from taking measurements and from outputting data. Thus, it is set to a predetermined reference condition from which a measurement can be triggered synchronously to some external event.

b. **Trigger Immediate (I)** — this programming command directs the Power Meter to make one measurement and output the data in the minimum possible time, then to go into Hold until the next triggering command is received. It does not allow settling time prior to the measurement.

c. **Trigger with Delay (T)** — this trigger command is identical to the trigger immediate command except that it causes the Power Meter to execute a settling-time delay subroutine before taking a measurement and outputting data.

EXAMPLE 1 (dB Rel/dB Ref)

1	{controller talk and Power Meter listen}, "CT"	Sets reference at present RF input level.
2	{controller talk and Power Meter listen}, "BT"	Takes first reading relative to set reference
3	{universal unlisten, controller listen and Power Meter talk}, {Variable name}	Power Meter outputs reading to controller
4	{controller talk and Power Meter listen}, "T"	Takes subsequent readings
5	{universal unlisten, controller listen and Power Meter talk}, {Variable name}	Power Meter outputs reading to controller

Receiving Data Messages (cont'd)

d. **Free run at maximum rate (R)** — this programming command is normally used for asynchronous operation of the Power Meter. It directs the Power Meter to continuously take measurements and output data in the minimum possible time. It does not allow settling time prior to each measurement.

e. **Free run with delay (V)** — this programming command is identical to the previous command except that it causes the Power Meter to execute a settling-time delay subroutine prior to each measurement.

3-30. When programming the Power Meter for synchronous triggered operation, there are two factors that the programmer must consider to ensure the validity of the output measurement data. The first factor is the time that it takes the Power Meter to respond to a full scale change in input power level. A typical Power Meter response curve is shown in Figure 3-4. By comparing this curve with the measurement timing cycle shown in Figure 3-5 and summarized in Table 3-5, the validity of the Power Meter output can be tabulated according to operating range and triggering interval versus change in input power level. A general summary of this information is as follows:

a. When the Power Meter is programmed for trigger with settling time operation, sufficient time is provided for the Power Meter to settle to the input power level on all ranges except Range 1 (most sensitive range). On Range 1 approximately 10 seconds (9–10 measurements) are required for the Power Meter to settle to the input power level.

b. When the Power Meter is programmed for trigger immediate operation, the desired amount of settling time can be incorporated into the program.

3-31. Programming the Local to Remote Mode Change. The second factor that must be considered when programming the Power Meter for synchronous triggered operation is whether the first trigger is sent immediately after terminating local operation. As illustrated in Figure 3-6, the Power Meter will not respond to the first trigger following a local to remote transistion until it completes the previously initiated measurement and display cycle. Thus, the first data output of the Power Meter may not be valid. The options available to the programmer are:

1. Send a trigger command (Data Message) and discount the first data output. Upon outputting the data, the Power Meter will go to Hold and operate synchronously starting with the next trigger command.
2. Wait approximately 2.5 seconds after placing the Power Meter in remote and sending the first program trigger command (Data Message).
3. Send a Clear Message (DCL) immediately after placing the Power Meter in remote. This will restart the Power Meter operating program.

3-32. Sending Data Messages from the Power Meter

3-33. The **24** TALK ONLY/NORMAL switch (see Figure 3-3) enables the Power Meter to func-

EXAMPLE 2 (Auto Zero)

- 1 Remove RF power from power sensor (or set it at least 20 dB below the lowest range of the sensor).
- 2 {controller talk and Power Meter listen}, "Z1T" Send zero trigger program codes.
- 3 {universal unlisten, controller listen and Power Meter talk}, {variable name} Read measured value data from meter (characters 4, 5, 6, and 7).
- 4 If absolute value of measured data is not < 2 (0000 ± 0002) then branch to step 2; if it is, then continue. (Although this step averages three seconds, it may take as long as 10 seconds to execute.)
- 5 {controller talk and Power Meter listen}, "9 + DI" Send normal measurement mode program codes.
- 6 {universal unlisten, controller listen and Power Meter talk}, {variable name} Read status character (number 0) from meter's output data string.
- 7 Check status character for an auto zero loop enabled condition (character 0 \geq decimal 84). If loop is enabled then branch to step 5. If not, then continue. (This step takes approximately four seconds to execute.)

Sending Data Messages (cont'd)

tion as a basic talker or in the talk only mode. If the basic talker function is selected, the Power Meter is configured to talk when the controller places the interface bus in the command mode and outputs talk address M. The Power Meter then remains configured to talk (output data when the interface bus is in the data mode), until it is unaddressed to talk by the controller. To unaddress the Power Meter, the controller can either send an Abort Message (generate an interface clear), or it can place the interface bus in the command mode and output a new talk address or a universal untalk command. Examples of addressing and unaddressing the Power Meter to talk are provided in Table 3-2 and Figure 3-8.

3-34. Talk Only Mode. When the Power Meter functions in the Talk Only Mode, it is automatically configured to TALK when the interface bus is in the Data Mode and there is at least one listener. Since there can only be one talker at a time per interface bus, this function is normally selected only when there is no controller connected to the system (e.g., when the Power Meter is interconnected to an HP 5150A recorder).

3-35. Output Data Format. The output data format of the Power Meter is shown and described in Table 3-4.

3-36. The output data is a fourteen character string that is provided once at the end of each measurement cycle. It is a good idea to read at least part of this string into the controller after each measurement cycle, even if it will not be used. This will avoid the possibility of incorrect data being read after some future measurement.

3-37. The string begins with a status character and ends with a carriage return and a line feed. Measured value is formatted as a real constant: plus or minus four digits (leading zeros not suppressed) followed by an exponential multiplier. The decimal point is not provided because it is understood that it follows the four "measured value" digits. The two-digit exponent is always negative.

3-38. Data Output Time. Figure 3-6 provides a simplified flow chart of Power Meter operation. As shown in the figure, the Power Meter operates according to a stored program and can only output

Table 3-4. Hewlett-Packard Interface Bus Output Data String

Definition		Character	
		ASC II	Decimal
S T A T U S	Measured value valid	P	80
	Watts Mode under Range	Q	81
	Over Range	R	82
	Under Range dBm or dB [REL] Mode	S	83
	Power Sensor Auto Zero Loop Enabled; Range 1 Under Range (normal for auto zeroing on Range 1)	T	84
	Power Sensor Auto Zero Loop Enabled; Not Range 1, Under Range (normal for auto zeroing on Range 2-5)	U	85
R A N G E	Power Sensor Auto Zero Loop Enabled; Over Range (error condition — RF power applied to Power Sensor; should not be)	V	86
	Most Sensitive 1	I	73
	2	J	74
	3	K	75
	4	L	76
M O D E	Least Sensitive 5	M	77
	Watt	A	65
	dB REL	B	66
	dB REF (switch pressed)	C	67
S I G N	dBm	D	68
	space (+)	SP	32
D I G I T	— (minus)	—	45
	0	0	48
	1	1	49
	2	2	50
	3	3	51
	4	4	52
	5	5	53
	6	6	54
	7	7	55
	8	8	56
	9	9	57

OUTPUT DATA MESSAGE FORMAT:

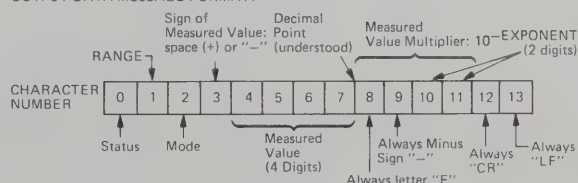


Table 3-5. Power Meter Remote Access Time to First Output Data Character

Measurement Triggering	Mode	Worst Case Access Time to First Output Character			
		Range 1 or 2	Range 3,4 or 5	Auto Range	
Free Run at maximum rate, Trigger immediately	WATT dBm dB (REL) db [REF]	70 ms	70 ms	Compute measurement times from Figure 3-5 and add measurement time of each range that Power Meter steps through to delay time listed below.	
		90 ms	90 ms		
		160 ms	160 ms-		
		160 ms	160 ms		
		From To Delay		From To Delay	
		1 2	1070 ms	3 2	1070 ms
		2 1	1070 ms	4 3,5	133 ms
		2 3	133 ms	5 4	133 ms
		Examples: Starting at block labeled "HOLD" in Figure 3-5, worst case access time for range 1-3, and range 3-1 changes with WATT MODE selected are:			
		Range 1 70 ms Range 3 50 ms (33+17)			
1-2 Delay 1070 ms 3-2 Delay 1070 ms					
Range 2 53 ms Range 2 33 ms					
2-3 Delay 133 ms 2-1 Delay 1070 ms					
Range 3 53 ms Range 1 33 ms					
1379 ms 2256 ms					
Free Run with settling time or Trigger with settling time.	WATT dBm dB (REL) db [REF]	1130 ms	190 ms	Compute worst case Auto Range access times from Figure 3-5.	
		1130 ms	190 ms		
		1200 ms	260 ms		
		160 ms	160 ms		
		Examples: Starting at block labeled "HOLD" in Figure 3-5; worst case access times for range 1-3 and range 3-1 with WATT MODE selected are:			
1 - 3 (1070 + 53, +1070 + 53 + 133 + 53) = 2432 ms					
3-1 (133 + 33 + 1070 + 33 + 1070 + 33) = 2372 ms.					

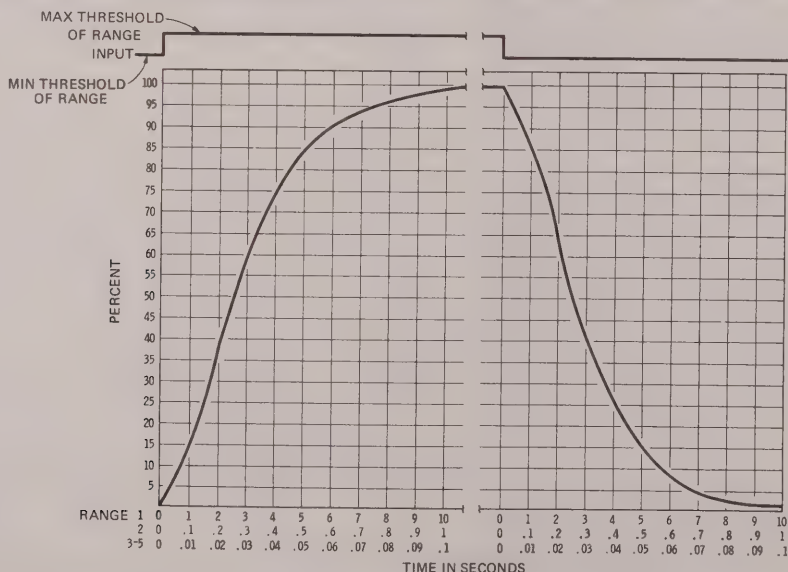


Figure 3-4. Power Meter Response Curve (Settling Time for Analog Circuits)


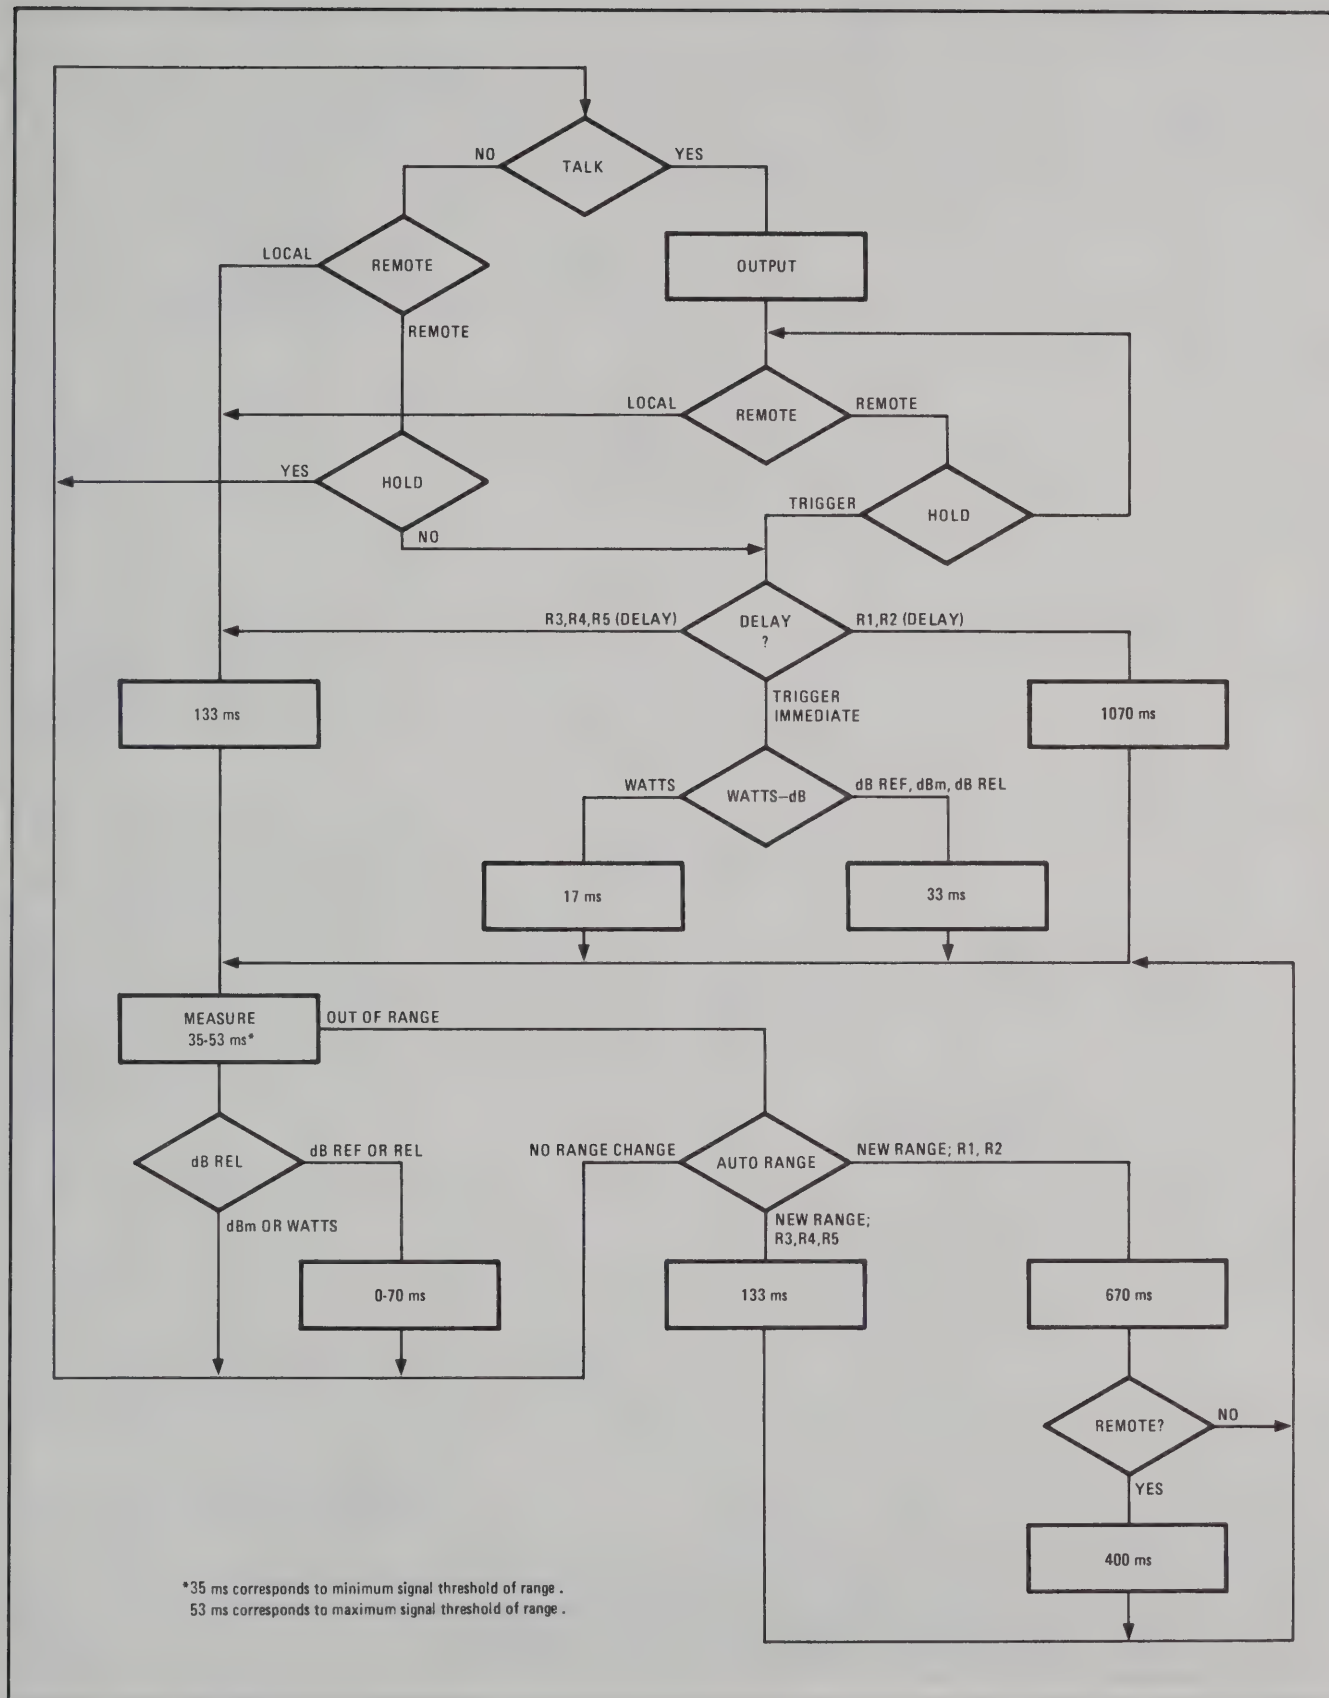


Figure 3-5. Measurement Timing Flow Chart (Settling Time for Digital Circuitry)

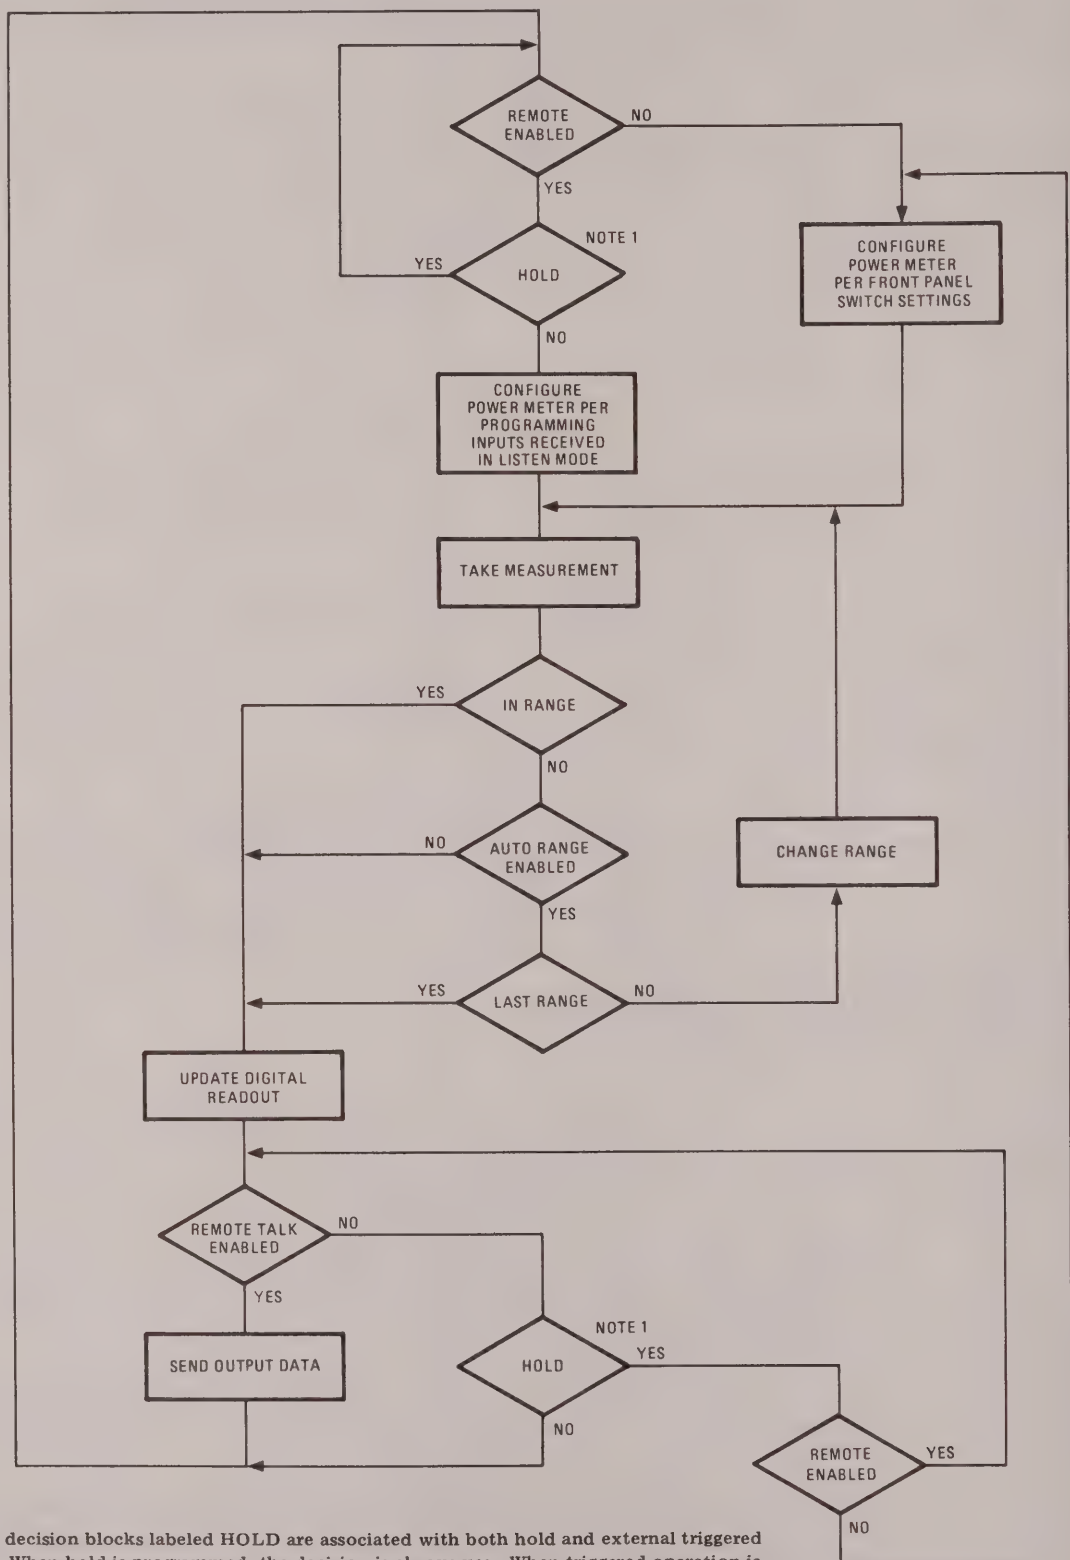

Note: The decision blocks labeled HOLD are associated with both hold and external triggered operation. When hold is programmed, the decision is always yes. When triggered operation is programmed, the decision is no, starting when a trigger is received and continuing until the digital readout is updated. The decision then reverts to yes until receipt of the next trigger. Thus, when the Power Meter is programmed for external triggering, it will provide output data only after receiving a trigger in the listen mode.

Figure 3-6. Operating Program Simplified Flow Chart

Sending Data Messages (cont'd)

data after taking a measurement. Thus, when the interface bus is placed in the data mode after the Power Meter has been addressed to talk, the time required to access the first output data character depends on where the Power Meter is in the operating program, and on how the Power Meter has been previously programmed (see Programming Codes above.) Worst case access times for each of the Power Meter operating configurations are listed in Table 3-5.

3-39. After the first output character is sent, the remaining characters are sent at either a 10-kHz rate (infinitely fast listener) or at the receive rate of the slowest listener.

3-40. Receiving the Trigger Message

3-41. The Power Meter has no provision for responding to a Trigger Message (bus command GET). Power Meter triggering is done with the Data Message (through the Measurement Rate Program Codes).

3-42. Receiving the Clear Message

3-43. The Power Meter has provision for responding to the DCL bus command but not the SDC bus command. Upon receipt of the DCL command, the Power Meter operating program is reset causing the Power Meter to enter the Hold state shown at the top of Figure 3-6, and the HP-IB circuits are configured to provide Watt Mode, Auto Range, and Cal Factor Disable outputs.

3-44. Receiving the Remote Message

3-45. When the Power Meter receives the Remote Message (REN line low) it completes the rest of its current measurement cycle (see Figure 3-6) and then goes to remote. See the Local to Remote Mode Change (paragraph 3-31) for information about how to program the local to remote mode change.

3-46. Receiving the Local Message

3-47. The Power Meter does not respond to the GTL (go to local) bus command. It reverts to local operation when the REN (remote enable) bus line goes false (high).

3-48. Receiving the Local Lockout and Clear Lockout Set Local Messages

3-49. The Power Meter does not respond to the Local Lockout Message (LLO bus command). It responds to the Clear Lockout/Set Local Message in that when the REN bus line goes false, it will revert to local operation.

3-50. Receiving the Pass Control Message

3-51. The Power Meter has no provision for operation as a controller.

3-52. Sending the Required Service Message

3-53. The Power Meter does not have provision for requesting service.

3-54. Sending the Status Byte Message

3-55. The Power Meter does not respond to a Serial Poll.

3-56. Sending the Status Bit Message

3-57. The Power Meter does not respond to a Parallel Poll.

3-58. Receiving the Abort Message

3-59. When the Power Meter receives an Interface Clear command (IFC), it stops talking or listening.

3-60. Test of HP-IB Operation

3-61. Figure 3-7 outlines a quick check of the 436A remote functions. This gives the user two alternatives for testing the power meter: 1, write a program corresponding to Figure 3-7 for a quick check or 2, use the program in Section VIII for complete testing and troubleshooting.

3-62. POWER MEASUREMENT ACCURACY

3-63. A power measurement is never free from error or uncertainty. Any RF system has RF losses, mismatch losses, mismatch uncertainty, instrumentation uncertainty and calibration uncertainty. Measurement errors as high as 50% are not only possible, they are highly likely unless the error sources are understood and, as much as possible, eliminated.


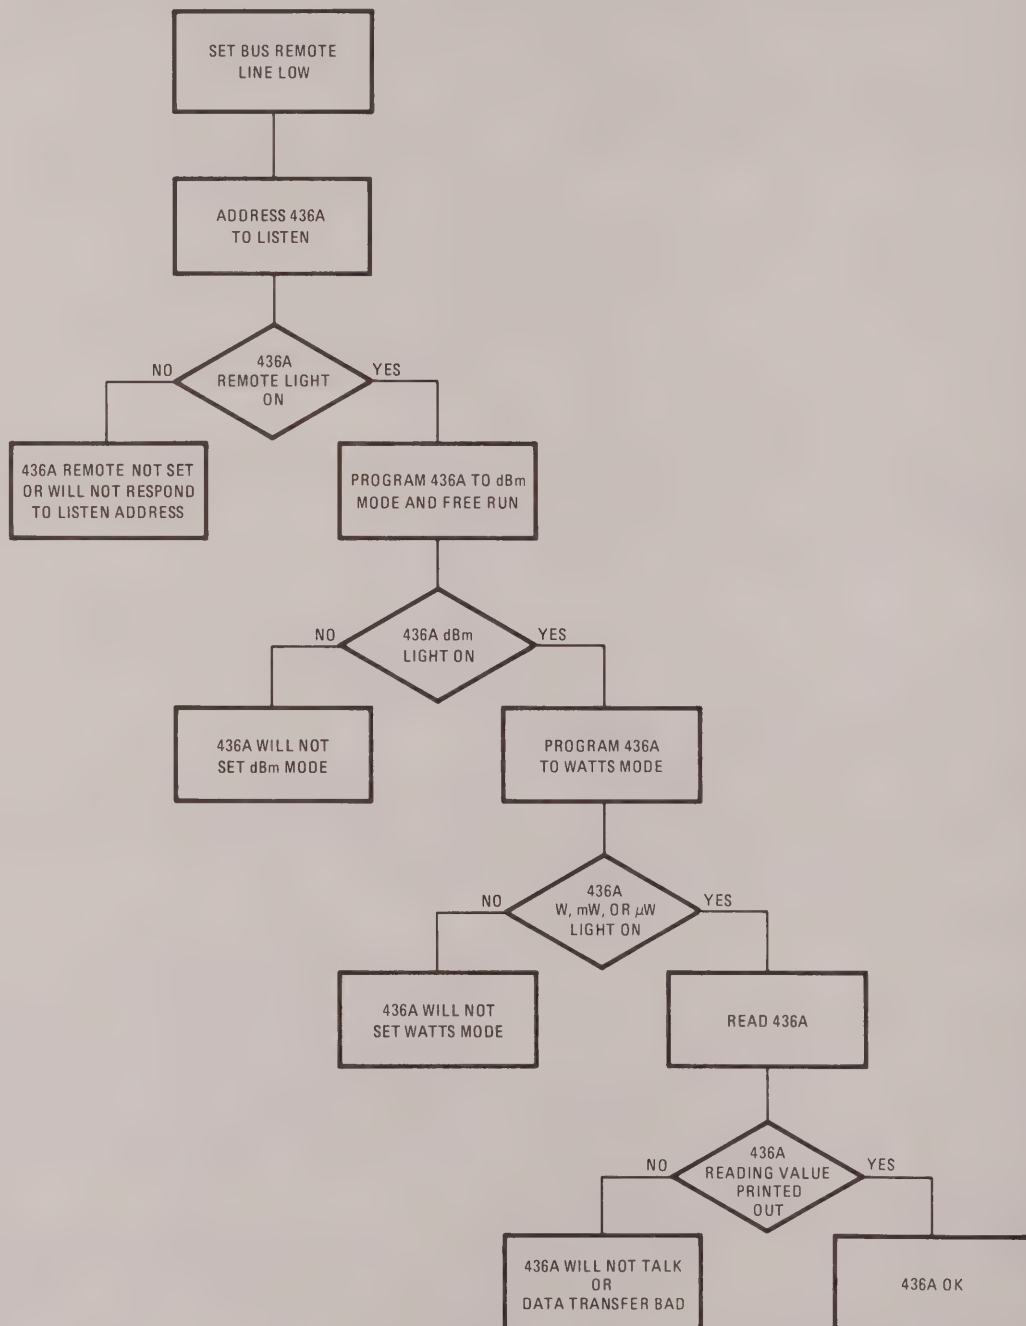


Figure 3-7. Test of HP-IB Operation Flowchart

436A QUICK PROGRAMMING GUIDE

This guide will help set up and program simple HP-IB instrumentation systems, thereby freeing you from making an in-depth study of system design and BASIC or HPL programming languages.

I. THE SYSTEM:

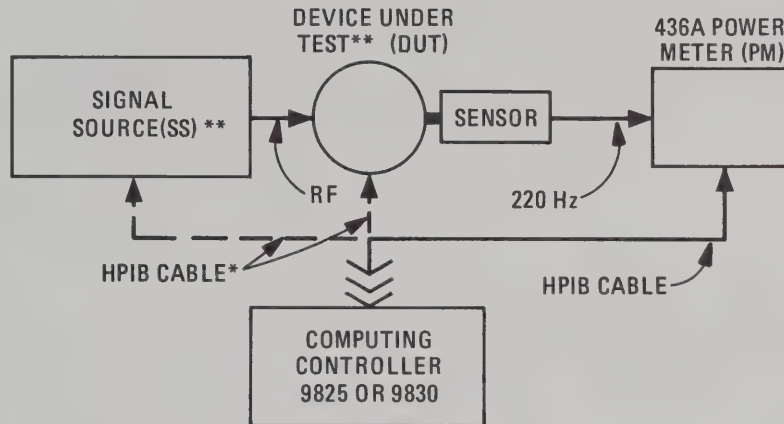

* HP-IB cables shown with dotted lines are used only if the Source and Device under test are programmable.

** Signal Source and Device Under Test may be the same, e.g., checking Sig. Gen. Flatness.

- II. THE PROGRAM: If the power meter is the only part of the system to be programmed, use the program statements in the order given. For more complex systems or programs, include statements derived from the information in the optional (dashed line) flow chart boxes. When it is necessary to write more statements, refer to Table 3-2.

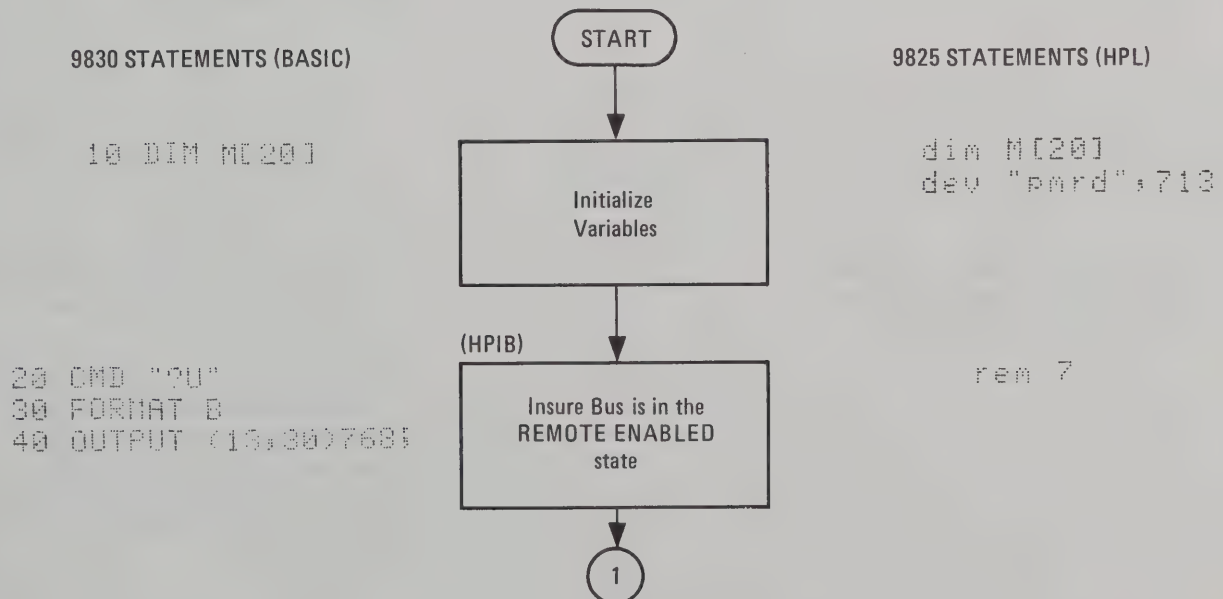


Figure 3-8. 436A Quick Programming Guide (1 of 5)

436A QUICK PROGRAMMING GUIDE (Cont'd)

9830 STATEMENTS (BASIC)

9825 STATEMENTS (HPL)

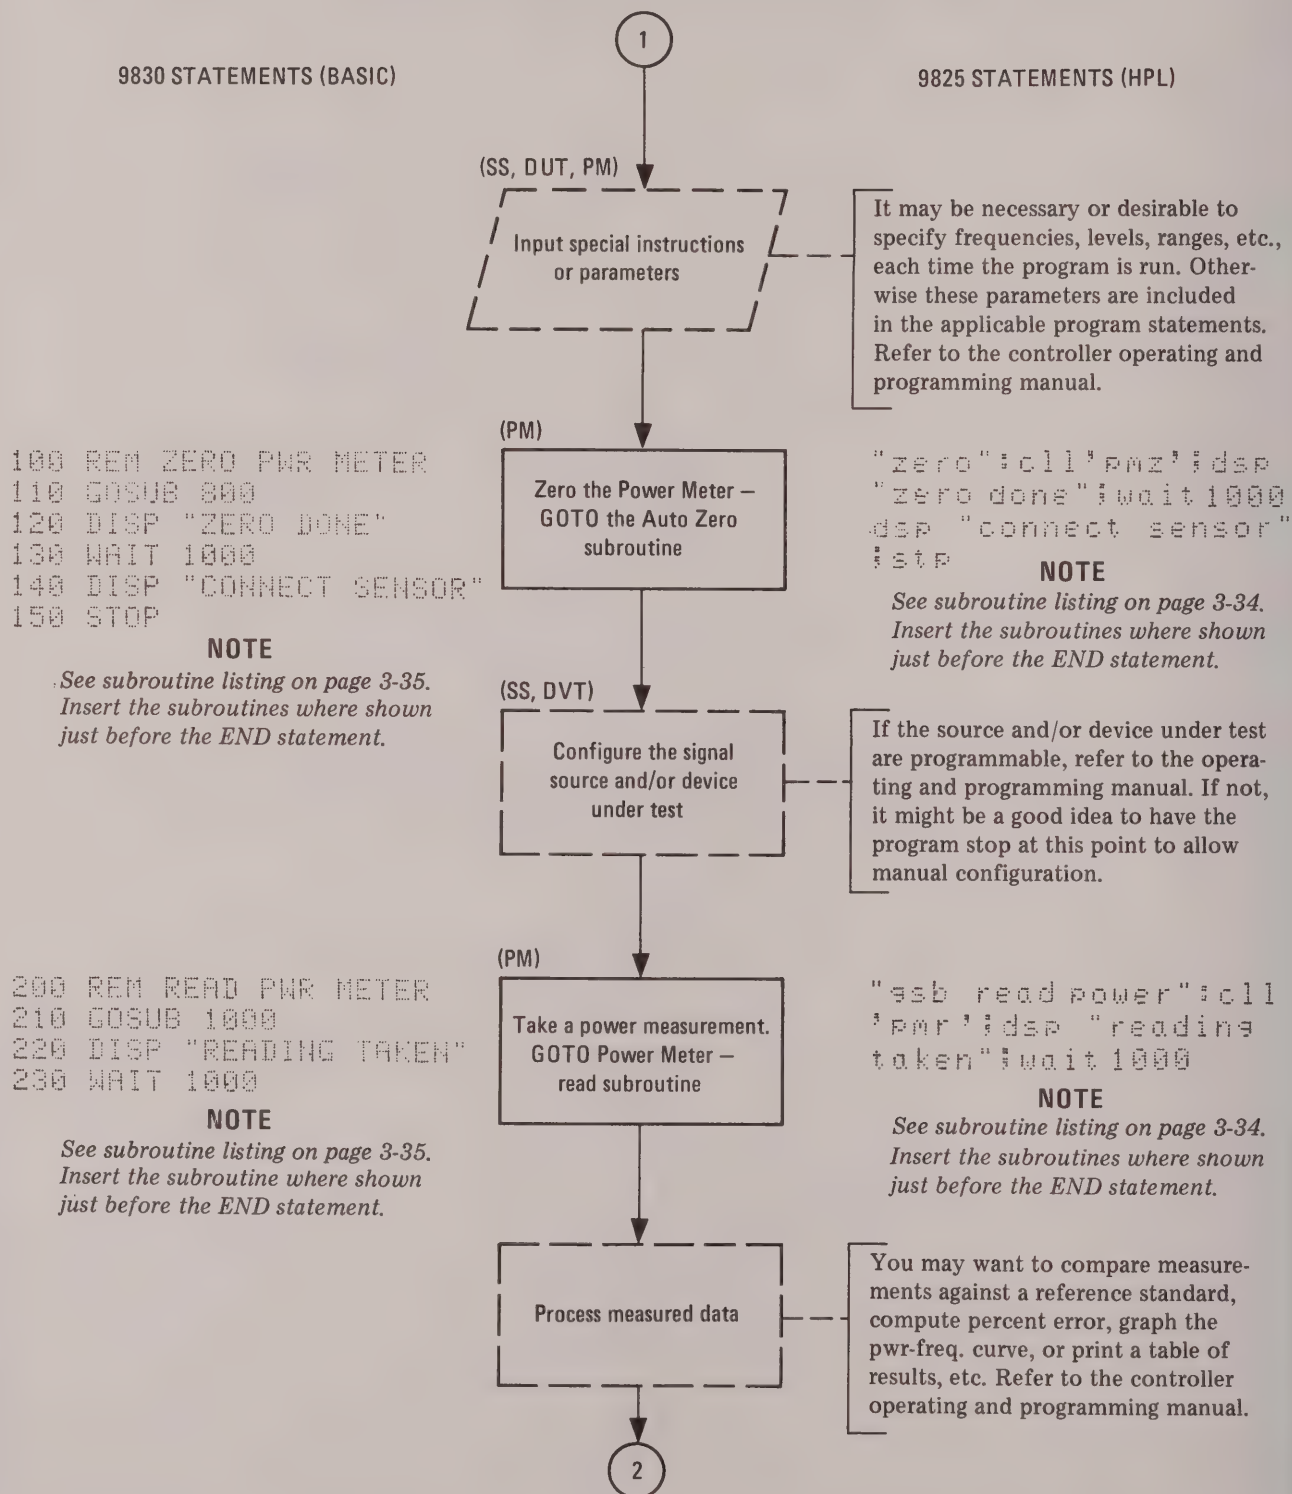


Figure 3-8. 436A Quick Programming Guide (2 of 5)

436A QUICK PROGRAMMING GUIDE (cont'd)

9830 STATEMENTS (BASIC)

300 PRINT M[X] (optional, depends
310 GOTO 9999 on next block)

Zero subroutine
read subroutine


9999 END

9825 STATEMENTS (HPL)

prt M[X] (optional, depends
eto "end" on next block)

Zero subroutine
read subroutine

"end":end

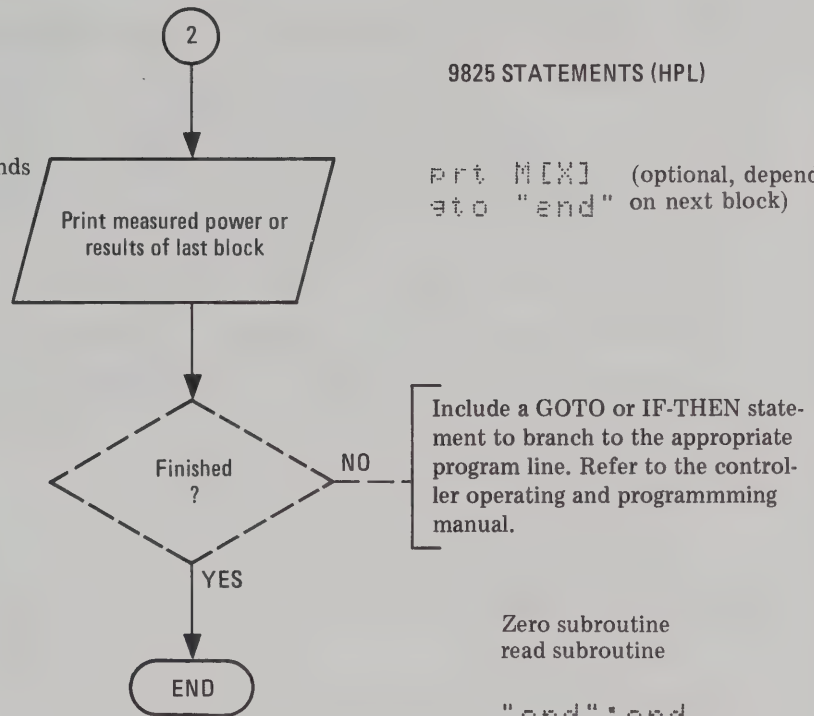**NOTE:**

When running the program press CONT-EXECUTE to restart program execution after a STOP (stp) statement.

Figure 3-8. 436A Quick Programming Guide (3 of 5)

436A QUICK PROGRAMMING GUIDE (cont'd)

Subroutines for 9825 (HPL)

"pmz" — Power meter zero subroutine

```

"pmz":
"remove source":dsp "disconnect sensor from source";stp
wrt "pmrd","Z1T";fmt 2,3x,f5.0;red "pmrd.2",Z
"verify zero":if abs(Z)>2;gto "-1"
"unzero":wrt "pmrd","9+AI";fmt 3,b;red "pmrd.3",Z
"verify unzero": if Z>84;gto "unzero"
"preset/ret":wrt "pmrd","9D+V";ret

```

"pmr" — Power meter read subroutine

```

"pmr":
fmt 1,1x,b,1x,f5.0,1x,f3.0
0→R
for X=1 to 20
wrt "pmrd", "9D+V"
wait (R=73)4000
red "pmrd.1",R,P,E
if X=1;gto "P1"
if abs(P-S)>1;gto "P1"
P10^E→P;ret
"P1":P→S
next X
dsp "power meter not settled"

```

Note: The next statement should be "end":end , or if another subroutine follows then a gto "end" should be used.

Figure 3-8. 436A Quick Programming Guide (4 of 5)

436A QUICK PROGRAMMING GUIDE (cont'd)**Subroutines for 9830 (BASIC)****POWER METER ZERO SUBROUTINE**

```

800 REM POWER METER ZERO SUBROUTINE
805 DISP "DISCONNECT SENSOR FROM SOURCE"
806 STOP
810 REM ZERO POWER METER
820 CMD "?U-","Z1T"
830 FORMAT 3X,F5.0
840 CMD "?M5"
850 ENTER (13,830)Z
860 REM TEST FOR ZERO
870 IF ABS(Z)>2 THEN 810
880 REM UNZERO POWER METER
890 CMD "?U-","9+AI"
900 FORMAT 8
910 CMD "?M5"
920 ENTER (13,900)Z
930 REM TEST FOR UNZERO
940 IF Z >= 84 THEN 890
950 REM PRESET POWER METER
960 CMD "?U-","9D+V"
970 RETURN

```

POWER METER READ SUBROUTINE

```

1000 REM POWER METER READ SUBROUTINE
1010 FORMAT X,B,X,F5.0,X,F3.0
1020 R=0
1030 FOR X=1 TO 20
1040 CMD "?U-","9D+V"
1050 WAIT (R=73)*4000
1060 CMD "?M5"
1070 ENTER (13,1010)R,P,E
1080 IF X=1 THEN 1120
1090 IF ABS(P-P1)>1 THEN 1120
1100 P=P*10+(E)
1110 RETURN
1120 P1=P
1130 NEXT X
1140 DISP "POWER METER NOT SETTLED"

```

Note: The next statement should be **END**, or if another subroutine follows then a **GOTO 9999** should be used.

3-64. Sources of Error and Measurement Uncertainty

3-65. RF Losses. Some of the RF power that enters the Power Sensor is not dissipated in the power sensing elements. This RF loss is caused by dissipation in the walls of waveguide power sensors, in the center conductor of coaxial power sensors, in the dielectric of capacitors, connections within the sensor, and radiation losses.

3-66. Mismatch. The result of mismatched impedances between the device under test and the power sensor is that some of the power fed to the sensor is reflected before it is dissipated in the load. Mismatches affect the measurement in two ways. First, the initial reflection is a simple loss and is called mismatch loss. Second, the power reflected from the sensor mismatch travels back up the transmission line until it reaches the source. There, most of it is dissipated in the source impedance, but some of it is re-reflected by the source mismatch. The re-reflected power returns to the power sensor and adds to, or subtracts from, the incident power. For all practical purposes, the effect the re-reflected power has upon the power measurement is unpredictable. This effect is called mismatch uncertainty.

3-67. Instrumentation Uncertainty. Instrumentation uncertainty describes the ability of the metering circuits to accurately measure the dc output from the Power Sensor's power sensing device. In the Power Meter this error is $\pm 0.5\%$ for Ranges 1 through 5. It is important to realize, however, that these uncertainty specifications do not indicate overall measurement accuracy.

3-68. Power Reference Uncertainty. The output level of the Power Reference Oscillator is factory set to $1 \text{ mW} \pm 0.70\%$ at 50 MHz. This reference is normally used to calibrate the system, and is, therefore, a part of the system's total measurement uncertainty.

3-69. Cal Factor Switch Resolution Error. The resolution of the CAL FACTOR % switch contributes a significant error to the total measurement because the switch has 1% steps. The maximum error possible in each position is $\pm 0.5\%$.

3-70. Corrections for Error

3-71. The two correction factors basic to power meters are calibration factor and effective efficiency. Effective efficiency is the correction

factor for RF losses within the Power Sensor. Calibration factor takes into account the effective efficiency and mismatch losses.

3-72. Calibration factor is expressed as a percentage with 100% meaning the power sensor has no losses. Normally the calibration factor will be 100% at 50 MHz, the operating frequency of the internal reference oscillator.

3-73. The Power Sensors used with the Power Meter have individually calibrated calibration factor curves placed on their covers. To correct for RF and mismatch losses, simply find the Power Sensor's calibration factor at the measurement frequency from the curve or the table that is supplied with the Power Sensor and set the CAL FACTOR % switch to this value. The measurement error due to this error is now minimized.

3-74. The CAL FACTOR % switch resolution error of $\pm 0.5\%$ may be reduced by one of the following methods:

- a. Leave the CAL FACTOR % switch on 100% after calibration, then make the measurement and record the reading. Use the reflection coefficient, magnitude and phase angle from the table supplied with the Power Sensor to calculate the corrected power level.

- b. Set the CAL FACTOR % switch to the nearest position above and below the correction factor given on the table. Interpolating between the power levels measured provides the corrected power level.

3-75. Calculating Total Uncertainty

3-76. Certain errors in calculating the total measurement uncertainty have been ignored in this discussion because they are beyond the scope of this manual. Application Note AN-64, "Microwave Power Measurement", delves deeper into the calculation of power measurement uncertainties. It is available, on request, from your nearest HP office.

3-77. Known Uncertainties. The known uncertainties which account for part of the total power measurement uncertainty are:

- a. Instrumentation uncertainty $\pm 0.5\%$ or $\pm 0.02 \text{ dB}$ (Range 1 through 5).

- b. Power reference uncertainty $\pm 0.7\%$ or $\pm 0.03 \text{ dB}$.

3-77. Known Uncertainties (cont'd)

- c. CAL FACTOR switch resolution $\pm 0.5\%$ or ± 0.02 dB.

The total uncertainty from these sources is $\pm 1.7\%$ or ± 0.07 dB.

3-78 Calculating Mismatch Uncertainty. Mismatch uncertainty is the result of the source mismatch interacting with the Power Sensor mismatch. The magnitude of uncertainty is related to the magnitudes of the source and Power Sensor reflection coefficients, which can be calculated from SWR. Figure 3-9 shows how the calculations are to be made and Figure 3-10 illustrates mismatch uncertainty and total calculated uncertainty for two cases. In the first case, the Power Sensor's SWR =

1.5, and in the second case, the Power Sensor's SWR = 1.26. In both cases the source has a SWR of 2.0. The example shows the effect on power measurement accuracy a poorly matched power sensor will have as compared to one with low mismatch.

3-79. A faster, easier way to find mismatch uncertainty is to use the HP Mismatch Error (uncertainty) Limits/Reflectometer Calculator. The calculator may be obtained, on request, from your nearest Hewlett-Packard office by using HP Part Number 5952-0448.

3-80. The method of calculating measurement uncertainty from the uncertainty in dB is shown by Figure 3-11. This method would be used when the initial uncertainty calculations were made with the Mismatch Error/Reflectometer Calculator.

CALCULATING MEASUREMENT UNCERTAINTY

1. Calculate the reflection coefficient from the given SWR.

$$\rho = \frac{\text{SWR} - 1}{\text{SWR} + 1}$$

Power Sensor #1

$$\rho_1 = \frac{1.5 - 1}{1.5 + 1}$$

$$= \frac{0.5}{2.5}$$

$$= 0.2$$

Power Sensor #2

$$\rho_2 = \frac{1.25 - 1}{1.25 + 1}$$

$$= \frac{0.25}{2.25}$$

$$= 0.111$$

Power Source

$$\rho_s = \frac{2.0 - 1}{2.0 + 1}$$

$$= \frac{1.0}{3.0}$$

$$= 0.333$$

2. Calculate the relative power and percentage power mismatch uncertainties from the reflection coefficients. An initial reference level of 1 is assumed.

Relative Power Uncertainty

$$\text{PU} = [1 \pm (\rho_n \rho_s)]^2 \text{ where } \begin{matrix} P_n = \text{SWR of Power Sensor \# } n \\ P_s = \text{SWR of Power Source} \end{matrix}$$

$$\begin{aligned} \text{PU}_1 &= \left\{ 1 \pm [(0.2)(0.333)] \right\}^2 \\ &= \left\{ 1 \pm 0.067 \right\}^2 \\ &= \left\{ 1.067 \right\}^2 \text{ and } \left\{ 0.933 \right\}^2 \\ &= 1.138 \text{ and } 0.870 \end{aligned}$$

$$\begin{aligned} \text{PU}_2 &= \left\{ 1 \pm [(0.111)(0.333)] \right\}^2 \\ &= \left\{ 1 \pm 0.037 \right\}^2 \\ &= \left\{ 1.037 \right\}^2 \text{ and } \left\{ 0.963 \right\}^2 \\ &= 1.073 \text{ and } 0.938 \end{aligned}$$

Percentage Power Uncertainty

$\% \text{PU} = (\text{PU} - 1) 100\% \text{ for } \text{PU} > 1$ $\% \text{PU}_1 = (1.138 - 1) 100\%$ $= (0.138) 100\%$ $= 13.8\%$ $\% \text{PU}_2 = (1.073 - 1) 100\%$ $= (0.073) 100\%$ $= 7.3\%$	and	$-(1 - \text{PU}) 100\% \text{ for } \text{PU} < 1$ $-(1 - 0.870) 100\%$ $-(0.130) 100\%$ -13.0% $-(1 - 0.928) 100\%$ $-(0.072) 100\%$ -7.2%
--	-----	--

Figure 3-9. Calculating Measurement Uncertainties (1 of 2)

CALCULATING MEASUREMENT UNCERTAINTY

3. Calculate the Measurement Uncertainty in dB.

$$MU = 10 \left[\log_{10} \left(\frac{P_1}{P_0} \right) \right] \text{ dB for } \frac{P_1}{P_0} > 1$$

$$= 10 \left[\log \left(\frac{10P_1}{10P_0} \right) \right] \text{ dB}$$

$$= 10 [\log (10P_1) - \log (10P_0)] \text{ dB for } \frac{P_1}{P_0} < 1$$

$$MU_1 = 10 \left[\log \left(\frac{1.138}{1} \right) \right] \quad \text{and} \quad 10 [\log (10) (0.870) - \log (10) (1)]$$

$$= 10 [0.056] \quad \text{and} \quad 10 [\log (8.70) - \log (10)]$$

$$\text{and} \quad 10 [0.94 - 1]$$

$$\text{and} \quad 10 [-0.060]$$

$$= +0.56 \text{ dB} \quad \text{and} \quad -0.60 \text{ dB}$$

$$MU_2 = 10 \left[\log \left(\frac{1.073}{1} \right) \right] \quad \text{and} \quad 10 [\log (10) (0.928) - \log (10) (1)]$$

$$= 10 [0.031] \quad \text{and} \quad 10 [\log (9.28) - \log (10)]$$

$$\text{and} \quad 10 [0.968 - 1]$$

$$\text{and} \quad 10 [-0.032]$$

$$= +0.31 \text{ dB} \quad \text{and} \quad -0.32 \text{ dB}$$

Figure 3-9. Calculating Measurement Uncertainties (2 of 2)

POWER SENSOR MISMATCH VERSUS MEASUREMENT ACCURACY (50 OHM SYSTEM)

Indicated Power	Instrument Calibration and Resolution Uncertainty	Measurement Uncertainty	Total Uncertainty
			+3.63 dBm
	POWER SENSOR NO. 1 $SWR_1 = 1.5$ POWER SOURCE $SWR_s = 2.0$		2.31 mW
		+0.56 dB +13.8%	
+3.0 dBm	+0.07 dB; +1.7%		ACTUAL LEVEL OF POWER SOURCE MAY BE ANYWHERE IN THIS BAND
2.00 mW	-0.07 dB; -1.7%		
		-0.60 dB -13.0%	
			+2.33 dBm
			1.71 mW
	POWER SENSOR NO. 2 $SWR_2 = 1.25$ POWER SOURCE $SWR_s = 2.0$		+3.38 dBm
		+0.31 dB +7.3%	2.18 mW
+3.0 dBm	+0.07 dB; +1.7%		ACTUAL LEVEL OF POWER SOURCE MAY BE ANYWHERE IN THIS BAND
2.00 mW	-0.07 dB; -1.7%		
		-0.32 dB -7.2%	
			+2.62 dBm
			1.82 mW

Figure 3-10. The Effect of Power Sensor Mismatch on Measurement Accuracy

CALCULATING MEASUREMENT UNCERTAINTY

1. For this example the known values are: source SWR, 2.2 and power sensor SWR, 1.16. From the Mismatch Error Calculator the mismatch uncertainty is found to be +0.24, -0.25 dB.
2. Add the known uncertainties from paragraph 3-73, (± 0.10 dB). Our total measurement uncertainty is +0.34, -0.35 dB.
3. Calculate the relative measurement uncertainty from the following formula:

$$\text{dB} = 10 \log \left(\frac{P_1}{P_0} \right)$$

$$\frac{\text{dB}}{10} = \log \left(\frac{P_1}{P_0} \right)$$

$$\frac{P_1}{P_0} = \log^{-1} \left(\frac{\text{dB}}{10} \right)$$

If dB is positive then:

$P_1 > P_0$; let $P_0 = 1$

$$\begin{aligned} \text{MU} = P_1 &= \log^{-1} \left(\frac{\text{dB}}{10} \right) \\ &= \log^{-1} \left(\frac{0.34}{10} \right) \\ &= 1.081 \end{aligned}$$

If dB is negative then:

$P_1 < P_0$; let $P_1 = 1$

$$\begin{aligned} \text{MU} = P_0 &= \frac{1}{\log^{-1} \left(\frac{\text{dB}}{10} \right)} \\ &= \frac{1}{\log^{-1} \left(\frac{0.35}{10} \right)} \\ &= \frac{1}{1.082} \\ &= 0.923 \end{aligned}$$

4. Calculate the percentage Measurement Uncertainty.

For $P_1 > P_0$

$$\begin{aligned} \% \text{MU} &= (P_1 - P_0) 100 \\ &= (1.081 - 1) 100 \\ &= +8.1\% \end{aligned}$$

For $P_1 < P_0$

$$\begin{aligned} \% \text{MU} &= -(P_1 - P_0) 100 \\ &= -(1 - 0.923) 100 \\ &= -7.7\% \end{aligned}$$

Figure 3-11. Calculating Measurement Uncertainty (Uncertainty in dB Known)

SECTION IV

PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. The procedures in this section test the electrical performance of the Power Meter using the specifications of Table 1-1 as performance standards. All tests can be performed without access to the interior of the instrument. A simpler operational test is included in Section III under Operator's Checks.

4-3. EQUIPMENT REQUIRED

4-4. Equipment required for the performance tests is listed in Table 1-2, Recommended Test Equipment. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model(s).

4-5. TEST RECORD

4-6. Results of the performance tests may be tabulated on the Test Record at the end of the test procedures. The Test Record lists all of the tested specifications and their acceptable limits. Test results recorded at incoming inspection can be used for comparison in periodic maintenance, troubleshooting, and after repairs or adjustments.

4-7. PERFORMANCE TESTS

4-8. The performance tests given in this section are suitable for incoming inspection, troubleshooting, or preventive maintenance. During any performance test, all shields and connecting hardware must be in place. The tests are designed to verify published instrument specifications. Perform the tests in the order given and record the data on the test card and/or in the data spaces provided at the end of each procedure.

NOTE

The Power Meter must have a half-hour warmup and the line voltage must be within +5%, -10% of nominal if the performance tests are to be considered valid.

4-9. Each test is arranged so that the specification is written as it appears in Table 1-1. Next, a description of the test and any special instructions or problem areas are included. Each test that requires test equipment has a setup drawing and a list of the required equipment. The initial steps of each procedure give control settings required for that particular test.

PERFORMANCE TESTS

4-10. ZERO CARRYOVER TEST

SPECIFICATION: $\pm 0.2\%$ of full scale when zeroed on the most sensitive range.

DESCRIPTION: After the Power Meter is initially zeroed on the most sensitive range, the change in the digital readout is monitored as the Power Meter is stepped through its ranges. Thus, this test also takes noise and drift into account because noise, drift, and zero carry-over readings cannot be separated.

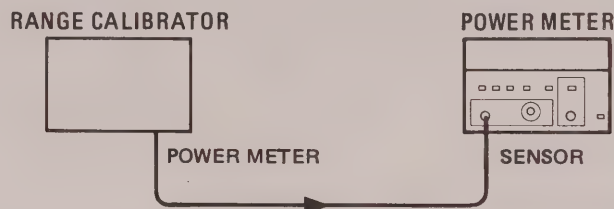


Figure 4-1. Zero Carryover Test Setup

EQUIPMENT: Range Calibrator HP 11683A

PROCEDURE:

1. Set the Power Meter switches as follows:
CAL FACTOR % 100
POWER REF off (out)
MODE WATT
RANGE HOLD off (out)
LINE ON (in)
2. Set the Range Calibrator switches as follows:
FUNCTION STANDBY
POLARITY NORMAL
RANGE 100 μ W
LINE ON (in)
3. Connect the equipment as shown in Figure 4-1.
4. Press and hold the Power Meter SENSOR ZERO switch and wait for the digital readout to stabilize. Then verify that the Power Meter ZERO lamp is lit and that the digital readout indicates 0.00 ± 0.02 .

NOTE

Power Meter is now zeroed on most sensitive range (10 μ W).

5. Release the Power Meter SENSOR ZERO switch and wait for the ZERO lamp to go out before proceeding to the next step.
6. Set the Range Calibrator FUNCTION switch to CALIBRATE and verify that the Power Meter autoranges to the 100 μ W range.
7. Set the Power Meter RANGE HOLD switch to on (in) and the Range Calibrator FUNCTION switch to standby.

PERFORMANCE TESTS

4-10. ZERO CARRYOVER TEST (cont'd)

8. Wait for the Power Meter's digital readout to stabilize and verify that the indication observed is within the limits shown on the table below. Then set the POWER Meter RANGE HOLD switch to off (out).
9. Repeat steps 6, 7, and 8 with the Range Calibrator RANGE switch set, in turn, to 1 mW, 10 mW, and 100 mW. Verify that the Power Meter autoranges properly, and that the indication observed on each range is within the limits shown in Table 4-1.

Table 4-1. Zero Carryover Autorange Digital Readout Results

Range Calibrator and Power Meter Range	Results		
	Min	Actual	Max
100 μ W	-0.2	_____	0.2
1 mW	-.002	_____	.002
10 mW	-0.02	_____	0.02
100 mW	-0.2	_____	0.2

4-11. INSTRUMENT ACCURACY TEST


SPECIFICATION: WATT MODE: $\pm 0.5\%$ in Ranges 1 through 5.
 dBm MODE: ± 0.02 dB ± 0.001 dB/ $^{\circ}$ C in Ranges 1 through 5.
 dB (REL) MODE: ± 0.02 dB ± 0.001 dB/ $^{\circ}$ C in Ranges 1 through 5.

NOTE

The dB (REL) specifications are for within-range measurements. For range-to-range accuracy, add the uncertainty associated with the range in which the reference was entered, to the uncertainty associated with the range in which the measurement was made. For example, if a reference is entered in Range 1 and a measurement is made in Range 5, the total uncertainty is ± 0.04 (Range 1 ± 0.02 + Range 5 ± 0.02 = ± 0.04).

DESCRIPTION: After the Power Meter is initially calibrated on the 1 mW range, the digital readout is monitored as the Range Calibrator is adjusted to provide reference inputs corresponding to each of the Power Meter operating ranges.

PERFORMANCE TESTS

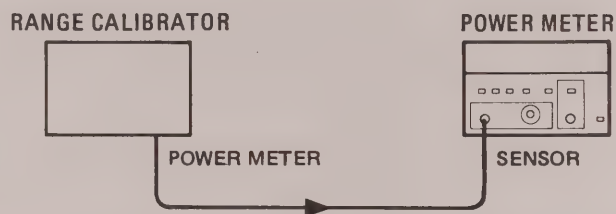4-11. INSTRUMENT ACCURACY TEST (cont'd)**Figure 4-2. Instrument Accuracy Test Setup**

EQUIPMENT: Range Calibrator HP 11683A

- PROCEDURE:**
1. Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 2. Set the Range Calibrator switches as follows:

FUNCTION	STANDBY
POLARITY	NORMAL
RANGE	1 mW
LINE	ON (in)
 3. Connect the equipment as shown in Figure 4-2.
 4. Press and hold the Power Meter SENSOR ZERO switch and wait for the digital readout to stabilize. Then verify that the Power Meter ZERO lamp is lit and that the digital readout indicates 0.00 ± 0.02 . If the digital readout does not indicate 0.00 ± 0.02 repeat the procedure.

NOTE

Power Meter is now zeroed on the most sensitive range (10 μ W).

5. Release the Power Meter SENSOR ZERO switch and wait for the ZERO lamp to go out before proceeding to the next step.
6. Set the Range Calibrator FUNCTION switch to CALIBRATE and verify that the Power Meter autoranges to the 1 mW range.
7. Observe the Power Meter digital readout and, if necessary, adjust the front-panel CAL ADJ control to obtain a 1.000 ± 0.002 indication.

NOTE

The Range Calibrator output level is adjustable in 5 dB increments. Thus, the 3 μ W, 30 μ W, 300 μ W, 3 mW, and 30 mW legends on the RANGE switch are approximations. The true outputs for these settings are 3.16 μ W, 31.6 μ W, 316 μ W, 3.16 mW and 31.6 mW.

PERFORMANCE TESTS

4-11. INSTRUMENT ACCURACY TEST (cont'd)

8. Set the Range Calibrator RANGE switch, in turn, to 10 μ W, 100 μ W, 10 mW, and 100 mW. Verify that the Power Meter autoranges properly and that the indication observed on each range is within the limits specified in the table below.
9. Set the Range Calibrator to standby. Set the Power Meter MODE switch to dBm and zero the Power Meter.
10. Set the Range Calibrator to calibrate and the RANGE switch, in turn, to -20 dBm, -10 dBm, 0 dBm, +10 dBm, and +20 dBm. Verify that the Power Meter autoranges properly and that the indication observed on each range is within the limits specified in Table 4-2.

Table 4-2. Instrument Accuracy Test Results

Range Calibrator and Power Meter Range	Results			Range Calibrator and Power Meter Range	Results		
	Min	Actual	Max		Min	Actual	Max
10 μ W	9.95	_____	10.05	-20 dBm	-20.02	_____	-19.98
100 μ W	99.5	_____	100.5	-10 dBm	-10.02	_____	-9.98
1 mW	0.995	_____	1.005	0 dBm	-0.02	_____	0.02
10 mW	9.95	_____	10.05	+10 dBm	9.98	_____	10.02
100 mW	99.5	_____	100.5	+20 dBm	19.98	_____	20.02

11. Set the Range Calibrator RANGE switch to -10 dBm.
12. Set the Power Meter MODE switch to dB [REF] and verify that the digital readout indicates 0.00 ± 0.01 .
13. Set the Range Calibrator RANGE switch, in turn, to -20 dBm, -5 dBm, and +10 dBm. Verify that the Power Meter autoranges properly, and that the indication observed on each range is within the limits specified in Table 4-3.

Table 4-3. Instrument Accuracy Test Results for dB [REF] Mode

Range Calibrator and Power Meter Ranges	Results		
	Min	Actual	Max
-20 dBm	-9.96	_____	-10.04
-5 dBm	+4.96	_____	+5.04
+10 dBm	+19.96	_____	20.04

PERFORMANCE TESTS

4-12. CALIBRATION FACTOR TEST

SPECIFICATION: 16-position switch normalizes meter reading to account for calibration factor. Range 85% to 100% in 1% steps. 100% position corresponds to calibration factor at 50 MHz.

DESCRIPTION: After the Power Meter is zeroed on the most sensitive range, a 1 mW input level is applied to the Power Meter and the CAL ADJ control is adjusted to obtain a 1.000 mW indication. Then the CAL FACTOR % switch is stepped through its 16 positions and the digital readout is monitored to ensure that the proper indication is obtained for each position.

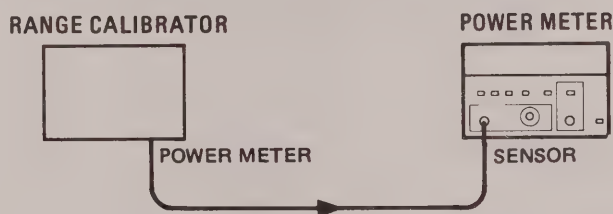


Figure 4-3. Calibration Factor Test Setup

- PROCEDURE:**
- Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	Off (out)
MODE	WATT
RANGE HOLD	Off (out)
LINE	ON (in)
 - Set the Range Calibrator switches as follows:

FUNCTION	STANDBY
POLARITY	NORMAL
RANGE	1 mW
LINE	ON (in)
 - Connect the equipment as shown in Figure 4-3.
 - Press and hold the Power Meter SENSOR ZERO switch and wait for the digital readout to stabilize. Then verify that the Power Meter ZERO lamp is lit and that the digital readout indicates 0.00 ± 0.02 .

NOTE

Power Meter is now zeroed on most sensitive range (10 μ W)

- Release the Power Meter SENSOR ZERO switch and wait for the ZERO lamp to go out before proceeding to step 6.
- Set the Range Calibrator FUNCTION switch to CALIBRATE and verify that the Power Meter autoranges to the 1 mW range.
- Adjust the Power Meter CAL ADJ control to obtain a 1.000 ± 0.002 indication on the digital readout.

PERFORMANCE TESTS

4-12. CALIBRATION FACTOR TEST (cont'd)

8. Set the CAL FACTOR % switch, in turn, to each position and verify that the indications observed are within the limits specified in Table 4-4.

Table 4-4. Calibration Factor Test Results

CAL FACTOR Switch Position	Results			CAL FACTOR Switch Position	Results		
	Min.	Actual	Max.		Min.	Actual	Max.
100	0.994	_____	1.006	92	1.081	_____	1.093
99	1.004	_____	1.016	91	1.093	_____	1.105
98	1.014	_____	1.026	90	1.105	_____	1.117
97	1.025	_____	1.037	89	1.118	_____	1.130
96	1.036	_____	1.048	88	1.130	_____	1.142
95	1.047	_____	1.059	87	1.143	_____	1.155
94	1.058	_____	1.070	86	1.157	_____	1.169
93	1.069	_____	1.081	85	1.170	_____	1.182

4-13. POWER REFERENCE LEVEL TEST

SPECIFICATION: Internal 50 MHz oscillator factory set to $1 \text{ mW} \pm 0.7\%$ traceable to the National Bureau of Standards.


Accuracy: $\pm 1.2\%$ worst case ($\pm 0.9\%$ rms) for one year (0°C to 55°C).

DESCRIPTION: The power reference oscillator output is factory adjusted to $1 \text{ mW} \pm 0.7\%$. To achieve this accuracy, Hewlett-Packard employs a special measurement system accurate to 0.5% (traceable to the National Bureau of Standards) and allows for a transfer error of $\pm 0.2\%$ in making the adjustment. If an equivalent measurement system is employed for verification, the power reference oscillator output can be verified to $1 \text{ mW} \pm 1.9\%$ ($\pm 1.2\%$ accuracy + $\pm 0.5\%$ verification system error + $\pm 0.2\%$ transfer error = 1.9% maximum error). The power reference oscillator can be set to $\pm 0.7\%$ using the same equipment and following the adjustment procedure in paragraph 5-22. To ensure maximum accuracy in verifying the power reference oscillator output, the following procedure provides step-by-step instructions for using specified Hewlett-Packard test instruments of known capability. If equivalent test instruments are used, signal acquisition criteria may vary and reference should be made to the manufacturer's guidelines for operating the instruments.

NOTE

The Power Meter may be returned to the nearest Hewlett-Packard office to have the power reference oscillator checked and/or adjusted. Refer to Section II, PACKAGING.

PERFORMANCE TESTS

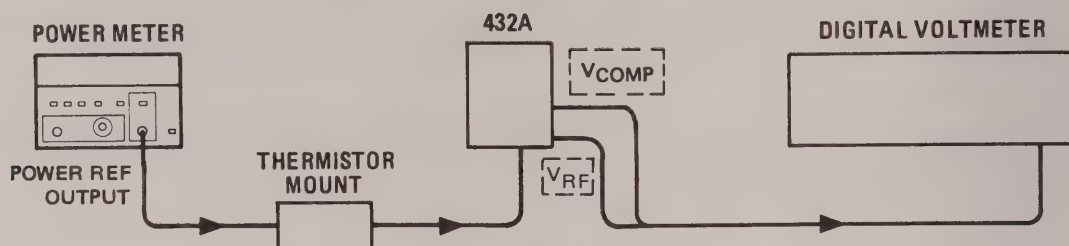4-13. POWER REFERENCE LEVEL TEST (cont'd)**Figure 4-4. Power Reference Level Test Setup**

EQUIPMENT:

Power Meter	HP 432A
Thermistor Mount	HP 478A-H75
Digital Voltmeter (DVM)	HP 3456A

- PROCEDURE:**
1. Set up the DVM to measure resistance and connect the DVM between the V_{RF} connector on the rear panel of the 432A, and pin 1 on the thermistor mount end of the 432A interconnect cable.
 2. Round off the DVM indication to two decimal places and record this value as the internal bridge resistance (R) of the 432A (approximately 200 ohms).
 3. Connect the 432A to the Power Meter as shown in Figure 4-4.
 4. Set the Power Meter LINE switch to ON (in) and the POWER REF switch to off (out). Then wait thirty minutes for the 432A thermistor mount to stabilize before proceeding to the next step.
 5. Set the 432A RANGE switch to COARSE ZERO and adjust the front-panel COARSE ZERO control to obtain a zero meter indication.
 6. Fine zero the 432A on the most sensitive range, then set the 432A RANGE switch to 1 mW.

NOTE

Ensure that DVM input leads are isolated from chassis ground when performing the next step.

7. Set up the DVM to measure microvolts and connect the positive and negative input leads, respectively, to the V_{COMP} and V_{RF} connectors on the rear panel of the 432A.
8. Observe the indication on the DVM. If less than 400 microvolts, proceed to the next step. If 400 microvolts or greater, press and hold the 432A FINE ZERO switch and adjust the COARSE ZERO control so that the DVM indicates 200 microvolts or less. Then release the FINE ZERO switch and proceed to the next step.
9. Round off the DVM indication to the nearest microvolt and record this value as V_0 .

PERFORMANCE TESTS

4-13. POWER REFERENCE LEVEL TEST (cont'd)

10. Set the Power Meter POWER REF switch to ON (in) and record the indications observed on the DVM as V_1 .
11. Disconnect the DVM negative input lead from the V_{RF} connector on the 432A and reconnect it to 432A chassis ground. Record the new indication observed on the DVM as V_{COMP} .
12. Calculate the power reference oscillator output level (P_{RF}) from the following formula:

$$P_{RF} = \frac{2 V_{COMP} (V_1 - V_0) + V_0^2 - V_1^2}{4R \text{ (CALIBRATION FACTOR)}}$$

Where:

P_{RF} = power reference oscillator output level

V_{COMP} = previously recorded value

V_1 = previously recorded value

V_0 = previously recorded value

R = previously recorded value

CALIBRATION FACTOR = value for thermistor mount at 50 MHz (traceable to the National Bureau of Standards)

13. Verify that the P_{RF} is within the following limits:

Min.	Actual	Max.
0.981 mW	_____	1.019 mW

Table 4-5. Performance Test Record (1 of 2)

Hewlett-Packard Company Model 436A Power Meter		Tested By _____		
Serial Number _____		Date _____		
Para. No.	Test	Results		
		Min	Actual	Max
4-10.	ZERO CARRYOVER			
	10 μ W	−0.02 μ W	_____	0.02 μ W
	100 μ W	−0.2 μ W	_____	0.2 μ W
	1 mW	−0.002 mW	_____	0.002 mW
	10 mW	−0.02 mW	_____	0.02 mW
	100 mW	−0.2 mW	_____	0.2 mW
4-11.	INSTRUMENTATION ACCURACY			
	WATT MODE			
	10 μ W	9.95 μ W	_____	10.05 μ W
	100 μ W	99.5 μ W	_____	100.5 μ W
	1 mW	0.995 mW	_____	1.005 mW
	10 mW	9.95 mW	_____	10.05 mW
	100 mW	99.5 mW	_____	100.5 mW
	dBm MODE			
	−20 dBm	−20.02 dBm	_____	−19.98 dBm
	−10 dBm	−10.02 dBm	_____	−9.98 dBm
	0 dBm	−0.02 dBm	_____	0.02 dBm
	10 dBm	9.98 dBm	_____	10.02 dBm
	20 dBm	19.98 dBm	_____	20.02 dBm
	dB (REL) MODE			
	−20 dBm	−9.96 dBm	_____	−10.04 dBm
	− 5 dBm	+4.96 dBm	_____	+5.04 dBm
	+ 10 dBm	+19.96 dBm	_____	20.04 dBm
4-12.	CALIBRATION FACTOR			
	100	0.994 mW	_____	1.006 mW
	99	1.004 mW	_____	1.016 mW
	98	1.014 mW	_____	1.026 mW
	97	1.025 mW	_____	1.037 mW
	96	1.036 mW	_____	1.048 mW
	95	1.047 mW	_____	1.059 mW
	94	1.058 mW	_____	1.070 mW
	93	1.069 mW	_____	1.081 mW

Table 4-5. Performance Test Record (2 of 2)

Para. No.	Test	Results		
		Min.	Actual	Max
4-12.	CALIBRATION FACTOR (cont'd)			
	92	1.081 mW	_____	1.093 mW
	91	1.093 mW	_____	1.105 mW
	90	1.105 mW	_____	1.117 mW
	89	1.118 mW	_____	1.130 mW
	88	1.130 mW	_____	1.142 mW
	87	1.143 mW	_____	1.155 mW
	86	1.157 mW	_____	1.169 mW
	85	1.170 mW	_____	1.182 mW
4-13	POWER REFERENCE			
	P_{RF}	0.981 mW	_____	1.019 mW

SECTION V

ADJUSTMENTS

5-1. INTRODUCTION

5-2. This section describes the adjustments which will return the Power Meter to peak operating condition after repairs are completed.

5-3. If the adjustments are to be considered valid, the Power Meter must have a half-hour warmup and the line voltage must be within +5 to -10% of nominal.

5-4. SAFETY CONSIDERATIONS

5-5. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition (see Sections II and III). Service and adjustments should be performed only by qualified service personnel.

WARNING

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnection of the protective earth terminal is likely to make the instrument dangerous. Intentional interruption is prohibited.

5-6. Any adjustment, maintenance, and repair of the opened instrument with voltage applied should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

5-7. Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

5-8. Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the shortcircuiting of fuseholders must be avoided.

5-9. Whenever it is likely that the protection offered by fuses has been impaired, the instrument must be made inoperative and secured against any unintended operation.

WARNING

Adjustments described herein are performed with power supplied to the instrument while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

5-10. EQUIPMENT REQUIRED

5-11. The test equipment required for the adjustment procedures is listed in Table 1-2, Recommended Test Equipment. The critical specifications of substitute test instruments must meet or exceed the standards listed in the table if the Power Meter is to meet the standards set forth in Table 1-1, Specifications.

5-12. FACTORY SELECTED COMPONENTS

5-13. Factory selected components are indicated on the schematic and replaceable parts list with an asterisk immediately following the reference designator. The nominal value of the component is listed. Table 5-1 lists the parts by reference designator and provides an explanation of how the component is selected, the normal value range, and a reference to the appropriate service sheet. The Manual Changes supplement will update any changes to factory selected component information.

5-14. ADJUSTMENT LOCATIONS

5-15. Each of the adjustments are shown on the component locator photographs that are part of the Service Sheets.

ADJUSTMENTS

Table 5-1. Factory Selected Components

Reference Designator	Selected For	Normal Value Range	Service Sheet
A2R7, R12, R18 and R81	Optimum Power Meter accuracy above 10 mW. Measure (to 3 significant digits) the +15 and -15V supply voltages at A9TP3 and TP4. Connect the Range Calibrator HP 11683A to the Power Meter's sensor connector. IF the magnitude of the -15V supply exceeds the magnitude of the +15V supply OR IF the magnitude of the +15V supply does not exceed the magnitude of the -15V supply by more than 0.5 Vdc, THEN select A2R12 for 10.00 to 10.01 mW reading with a 10 mW input. (Increasing A2R12 increases the reading.) With 100 mW input select A2R18 and R81 for a reading of 99.9 to 100.0. (Increasing A2R18 and R81 increases the power meter reading.) Check the 10 mW and 30 mW full scale readings and choose compromise resistor values as necessary for a maximum ± 1 count error. IF the magnitude of the +15V supply exceeds the magnitude of the -15V supply by more than 0.5V THEN change A2R7 to 40.0 k Ω , and follow the previous selection procedure.	A2R7 42.2 k Ω (40.0 k Ω to 42.2 k Ω) A2R12 100 k Ω (20.0 k Ω to 147 k Ω) A2R18 178 k Ω * A2R81 9.09 k Ω *	7
A2R50	Adjust A2R69 FREQ (Frequency Adj) for maximum indication on digital readout, then check frequency of 220 MHz Multivibrator. If out of specification (220 \pm 16 Hz) select value for A2R50 to produce maximum indication on digital readout while 220 Hz Multivibrator frequency is in specification.	13.3 k Ω (10 k Ω to 17.8 k Ω)	7
A8R5	A Power Reference Oscillator output of 1 mW if this value falls outside the range of adjustment available with LEVEL ADJUST potentiometer A8R5	7100 Ω (7100 Ω to 7500 Ω)	14
A2VR1,2	Correct accuracy on the 30 mW, and 100 mW ranges when accuracy on the other ranges is within specifications.	2.37V to 2.61V	7
A8VR2, A8R2	1) If the reference output power is outside the range of 1.000 \pm .007 mW between 0°C and 55°C, and 2) if the A8VR2, A8R2 combination is 5.11V-825 Ω , then change the A8VR2, A8R2 combination to 8.25V-1470 Ω . However, if the A8VR2, A8R2 combination is already 8.25V-1470 Ω , then a problem exists elsewhere.	5.11V-825 Ω or 8.25V-1470 Ω	14
A2C14	Proper phase detector operation with a multivibrator frequency of 220 Hz.	4700 pF (2500 pF to 10,000 pF)	7

NOTE: Do the Power Supply Adjustment (paragraph 5-23) first, then do the adjustments described in paragraphs 5-16 through 5-22.

*Combined series resistance 147 k Ω to 500 k Ω .

ADJUSTMENTS

5-16. DC OFFSET ADJUSTMENT

REFERENCE: Service Sheet 8.

DESCRIPTION: DC OFF potentiometer A3R2 is adjusted to remove any dc voltage introduced by the dc amplifier

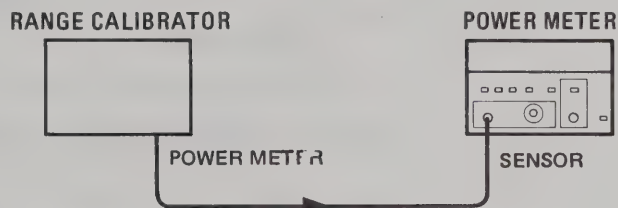


Figure 5-1. DC Offset Adjustment Setup

EQUIPMENT: Range Calibrator HP 11683A

- PROCEDURE:
1. Set the Power Meter Switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 2. Set the Range Calibrator switches as follows:

FUNCTION	CALIBRATE
POLARITY	NORMAL
RANGE	100 mW
LINE	ON (in)
 3. Connect the equipment as shown in Figure 5-1.
 4. Verify that the Power Meter autoranges to the 100 mW range, then set the RANGE HOLD switch to ON (in).
 5. Set the Range Calibrator FUNCTION switch to STANDBY.
 6. Remove the Power Meter top cover and adjust DC OFF potentiometer A3R2 so that the digital readout indicates 00.0 with a blinking minus sign.

5-17. AUTO ZERO OFFSET ADJUSTMENT

REFERENCE: Service Sheet 8.

DESCRIPTION: ZERO OFF potentiometer A3R47 is adjusted to remove any dc offset that is introduced when the SENSOR ZERO switch is pressed.

ADJUSTMENTS

5-17. AUTO ZERO OFFSET ADJUSTMENT (cont 'd)

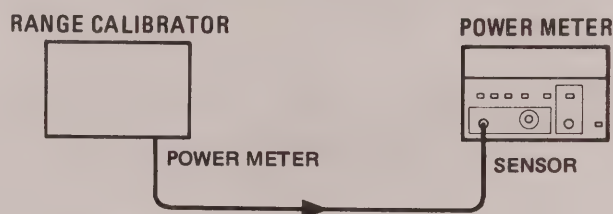


Figure 5-2. Auto Zero Offset Adjustment Setup

EQUIPMENT: Range Calibrator HP 11683A

- PROCEDURE:
1. Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 2. Set the Range Calibrator switches as follows:

FUNCTION	STANDBY
POLARITY	NORMAL
LINE	ON (in)
 3. Connect the equipment as shown in Figure 5-2.
 4. Verify that the Power Meter autoranges to the 10 μ W range, and remove the Power Meter top cover.

NOTE

If specified indication cannot be obtained in next step, perform DC Spike Balance Adjustment. Then repeat this procedure.

5. Press and hold the Power Meter SENSOR ZERO switch and adjust ZERO OFF potentiometer A3R47 so that the digital readout indicates 0.00 with blinking minus sign.

5-18. SPIKE BALANCE ADJUSTMENT

REFERENCE: Service Sheets 7 and 8.

DESCRIPTION: A reference signal is applied to the Power Meter from the Range Calibrator to force the sensor zero circuit to its negative extreme. The SENSOR ZERO switch is then held pressed while BAL potentiometer A3R65 is adjusted to center the sensor zero circuit output voltage range.

ADJUSTMENTS

5-18. SPIKE BALANCE ADJUSTMENT (cont'd)

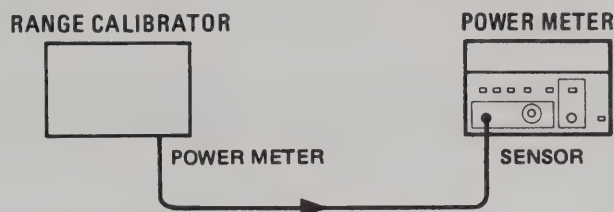


Figure 5-3. Spike Balance Adjustment Setup

EQUIPMENT: Range Calibrator HP 11683A

- PROCEDURE:
- Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 - Set the Range Calibrator switches as follows:

FUNCTION	CALIBRATE
POLARITY	NORMAL
RANGE	100 μ W
LINE	ON (in)
 - Remove the Power Meter top cover and adjust the front-panel CAL ADJ control so that the digital readout indicates 100.0 μ W
 - Press and hold the Power Meter SENSOR ZERO switch and adjust BAL potentiometer A3R65 so that the display readout indicates 60.0 \pm 0.2 μ W.

NOTE

The Power Meter sensor zero circuit must be re-zeroed as described in the following steps before valid power measurements can be made.

- Set the Range Calibrator FUNCTION switch to standby. Then press the Power Meter SENSOR ZERO switch and wait for the digital readout to stabilize.
- Release the Power Meter SENSOR ZERO switch and wait for the ZERO lamp to go out.

ADJUSTMENTS

5-19. MULTIVIBRATOR ADJUSTMENT

REFERENCE: Service Sheet 7.

DESCRIPTION: FREQ potentiometer A2R69 is adjusted to set the reference frequency of the multivibrator which drives the phase detector and the FET power sensor.

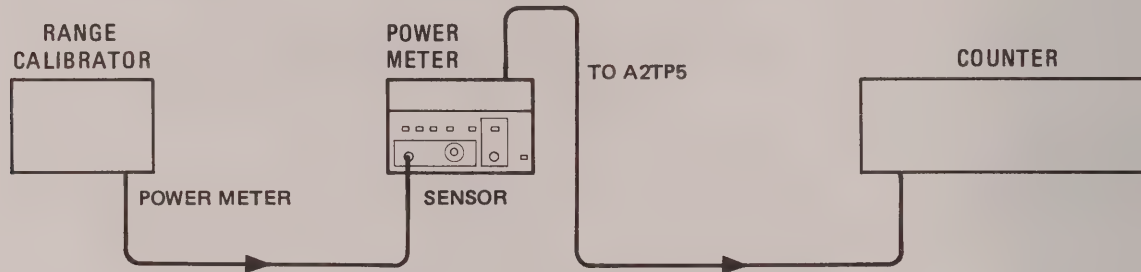


Figure 5-4. Multivibrator Adjustment Setup

EQUIPMENT: Range Calibrator HP 11683A
Counter HP 5315A

- PROCEDURE:
- Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 - Set the Range Calibrator switches as follows:

FUNCTION	CALIBRATE
POLARITY	NORMAL
LINE	ON (in)
 - Connect the equipment as shown in Figure 5-4.
 - Remove the Power Meter top cover, adjust FREQ potentiometer A2R69 to obtain maximum indication on the digital readout, and verify that the counter indicates 220 ± 16 Hz.
 - Perform the Instrument Accuracy Test described in Section IV to verify overall Power Meter accuracy. If all indications are obtained as specified, the adjustment is complete. If any indication cannot be obtained as specified, perform the A-D Converter and Linear Meter Adjustment.

ADJUSTMENTS

5-20. A-D CONVERTER AND LINEAR METER ADJUSTMENT

REFERENCE: Service Sheets 7 and 8.

DESCRIPTION: The A-D converter circuit is adjusted to obtain the specified digital readout accuracy and the meter circuit is adjusted for a corresponding indication.

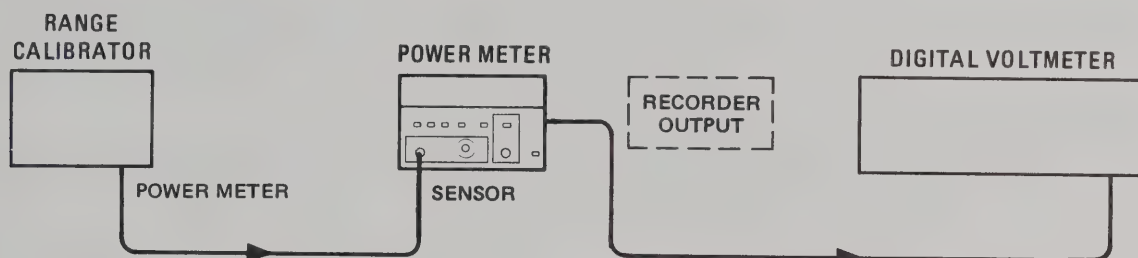


Figure 5-5. A-D Converter and Linear Meter Adjustment Setup

EQUIPMENT: Range Calibrator HP 11683A
Digital Voltmeter (DVM) HP 3456A

- PROCEDURE:
- Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 - Set the Range Calibrator switches as follows:

FUNCTION	STANDBY
RANGE	1 mW
POLARITY	NORMAL
LINE	ON (in)
 - Connect the equipment as shown in Figure 5-5.
 - Remove the Power Meter top cover and set the DVM to the 1000 mV range.
 - Press the Power Meter SENSOR ZERO switch and wait for the display readout to stabilize. Then release the SENSOR ZERO switch and wait for ZERO led to go out before proceeding to the next step.
 - Set the Range Calibrator FUNCTION switch to CALIBRATE and adjust the Power Meter front-panel CAL ADJ control to obtain a 1.000 Vdc indication on the DVM.
 - Adjust the Power Meter LIN potentiometer A3R37 so that the digital readout indicates 1.000 mW.

ADJUSTMENTS

5-20. A-D CONVERTER AND LINEAR METER ADJUSTMENT (cont'd)

8. Set the Power Meter MODE and RANGE HOLD switches to dBm and on (in), respectively.

NOTE

The next step sets the A-D log threshold. When the specified indication (-10.00 dBm) is obtained, the digital readout should be just on the verge of blanking, i.e., the readout may randomly alternate between -10.00 and UNDER RANGE, -1 .

9. Set the Range Calibrator RANGE switch to -10 dBm and adjust the power meter LZR, A3R59, for -10 dBm.
10. Set the Power Meter RANGE HOLD switch to off (out) and the Range Calibrator RANGE switch to 1 mW.
11. Adjust Power Meter LFS potentiometer A3R48 so that the digital readout indicates -0.00 .
12. Set the Power Meter MODE switch to WATT and adjust MTR potentiometer A3R17 so that the pointer is aligned half way between the last two marks on the meter face.

5-21. POWER REFERENCE OSCILLATOR FREQUENCY ADJUSTMENT

NOTE

Adjustment of the Power Reference Oscillator frequency may also affect the output level of the oscillator. Thus after the frequency is adjusted to 50.0 ± 0.5 MHz, the output level should be checked as described in Section IV. A procedure for adjusting the output to the specified level is provided in the next paragraph.

REFERENCE: Service Sheet 14.

DESCRIPTION: Variable inductor A8L1 is adjusted to set the power reference oscillator output frequency to 50.0 ± 0.5 MHz.

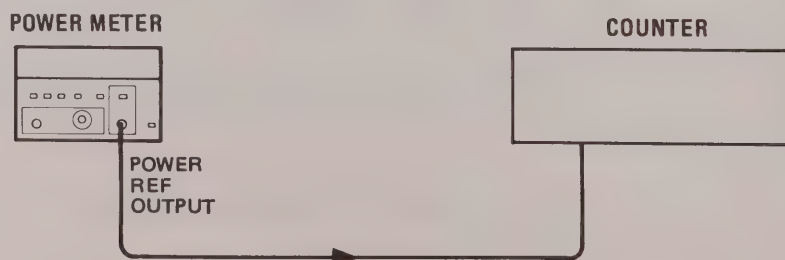


Figure 5-6. Power Reference Oscillator Frequency Adjustment Setup

ADJUSTMENTS

5-21. POWER REFERENCE OSCILLATOR FREQUENCY ADJUSTMENT (cont'd)

EQUIPMENT: Counter HP 5315A

- PROCEDURE:
1. Set the Power Meter LINE switch to ON (in) and the POWER REF switch to off (out).
 2. Set up the counter to measure frequency and connect the equipment as shown in Figure 5-6.
 3. Set the Power Meter POWER REF switch to ON (in) and observe the indication on the counter. If it is 50.0 ± 0.5 MHz, no adjustment of the power reference oscillator frequency is necessary. If it is not within these limits, adjust the power reference oscillator frequency as described in steps 4 through 9.
 4. Remove the Power Meter top cover.

CAUTION

Take care not to ground the +15V or -15V inputs to the power reference oscillator when performing the following steps. Grounding either of these inputs could damage the power reference oscillator, and/or the power supply.

5. Grasp the power reference oscillator assembly firmly, and remove the four screws which secure it to the Power Meter chassis.
6. Tilt the power reference oscillator assembly to gain access to the circuit board underneath the metal cover, and adjust A8L1 to obtain a 50.00 ± 0.5 MHz indication on the counter.
7. Reposition the power reference oscillator on the Power Meter chassis but do not replace the mounting screws.
8. Observe the indication on the counter. If it is 50.0 ± 0.5 MHz, the adjustment procedure is complete. If it is not within these limits, repeat steps 6 and 7 except offset the power reference oscillator frequency as required to obtain a 50.0 ± 0.5 MHz indication on the counter when the power reference oscillator assembly is repositioned on the Power Meter chassis.
9. Replace the four screws which secure the power reference oscillator to the Power Meter chassis.

ADJUSTMENTS

5-22. POWER REFERENCE OSCILLATOR LEVEL ADJUSTMENT

REFERENCE: Service Sheet 14.

DESCRIPTION: The power reference oscillator output is factory-adjusted to $1 \text{ mW} \pm 0.7\%$ using a special measurement system accurate to 0.5% (traceable to the National Bureau of Standards) and allowing for a 0.2% transfer error. To ensure maximum accuracy in readjusting the power reference oscillator, the following procedure provides step-by-step instructions for using specified Hewlett-Packard instruments of known capability. If equivalent instruments are used, signal acquisition criteria may vary and reference should be made to the manufacturer's guidelines for operating the equipment.

NOTE

The Power Meter may be returned to the nearest HP office to have the power reference oscillator checked and/or adjusted. Refer to Section II, PACKAGING.

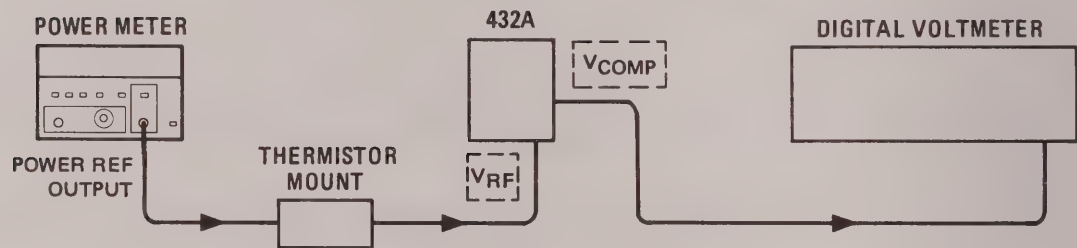


Figure 5-7. Power Reference Oscillator Level Adjustment Setup

EQUIPMENT: Power Meter HP 432A
 Thermistor Mount HP 478A-H75
 Digital Voltmeter (DVM). HP 3456A

- PROCEDURE:
1. Set up the DVM to measure resistance and connect the DVM between the V_{RF} connector on the rear panel of the 432A and pin 1 on the thermistor mount end of the 432A interconnect cable.
 2. Round off the DVM indication to two decimal places and record this value as the internal bridge resistance (R) of the 432A (approximately 200 ohms).
 3. Connect the 432A to the Power Meter as shown in Figure 5-7.
 4. Set the Power Meter LINE switch to ON (in) and the POWER REF switch to off (out). Then wait thirty minutes for the 432A thermistor mount to stabilize before proceeding to the next step.
 5. Set the 432A RANGE switch to COARSE ZERO and adjust the front-panel COARSE ZERO control to obtain a zero meter indication.
 6. Fine zero the 432A on the most sensitive range, then set the 432A RANGE switch to 1 mW.

ADJUSTMENTS

5-22. POWER REFERENCE OSCILLATOR LEVEL ADJUSTMENT (cont'd)

NOTE

Ensure that the DVM input leads are isolated from chassis ground when performing the next step.

7. Set up the DVM to measure microvolts and connect the positive and negative inputs leads, respectively, to the V_{COMP} and V_{RF} connectors on the rear panel of the 432A.
8. Observe the indication on the DVM. If less than 400 microvolts, proceed to the next step. If 400 microvolts or greater, press and hold the 432A FINE ZERO switch and adjust the COARSE ZERO control so that the DVM indicates 200 microvolts or less. Then release the FINE ZERO switch and proceed to the next step.
9. Round off the DVM indication to the nearest microvolt and record this value as V_0 .
10. Disconnect the DVM negative input lead from the V_{RF} connector on the 432A and reconnect it to chassis ground.
11. Set the Power Meter POWER REF switch to ON (in) and record the indication observed on the DVM as V_{COMP} .
12. Disconnect the DVM negative input lead from chassis ground and reconnect it to the V_{RF} connector on the rear panel of the 432A. The DVM is not set up to measure V_1 which represents the power reference oscillator output level.
13. Calculate the value of V_1 equal to 1 milliwatt from the following equation:

$$V_1 - V_0 = V_{\text{COMP}} - \sqrt{(V_{\text{COMP}})^2 - (10^{-3})(4R)(\text{EFFECTIVE EFFICIENCY})}$$

where:

V_0 = previously recorded value

V_{COMP} = previously recorded value

10^{-3} = 1 milliwatt

R = previously recorded value

EFFECTIVE EFFICIENCY = value for thermistor mount at 50 MHz (traceable to the National Bureau of Standards).

14. Remove the Power Meter top cover and adjust LEVEL ADJUST potentiometer A8R4 so that the DVM indicates the calculated value of V_1 .

ADJUSTMENTS

5-22. POWER REFERENCE OSCILLATOR LEVEL ADJUSTMENT (cont'd)

TYPICAL

CALCULATIONS:

1. ACCURACY:

DVM Measurements:	(V_{COMP})	$\pm 0.018\%$
(HP 3490A —90 days, $23^\circ\text{C} \pm 5^\circ\text{C}$)	$(V_1 - V_0)$	$\pm 0.023\%$
	(R)	$\pm 0.03\%$

Math Assumptions : $\pm 0.01\%$

EFFECTIVE EFFICIENCY CAL (NBS): $\pm 0.5\%$

MISMATCH UNCERTAINTY :

(Source & Mount SWR ≤ 1.05) $\pm 0.1\%$
 $\leq \pm 0.7\%$

2. MATH ASSUMPTIONS:

$$P_{\text{RF}} = \frac{2V_{\text{COMP}} (V_1 - V_0) + V_0^2 - V_1^2}{(4R) (\text{EFFECTIVE EFFICIENCY})}$$

$$\text{Assume: } V_0^2 - V_1^2 = (V_1 - V_0)^2 \\ -(V_1 - V_0)^2 = -V_1^2 + 2V_1V_0 - V_0^2$$

$$\text{Want: } V_0^2 - V_1^2$$

$$\therefore \text{error} = (V_1^2 + 2V_1V_0 - V_0^2) - (V_0^2 - V_1^2) = -2V_0^2 + 2V_1V_0 = 2V_0(V_1 - V_0)$$

if $2V_0(V_1 - V_0) < 2V_{\text{COMP}}(V_1 - V_0)$ i.e., $V_0 < V_{\text{COMP}}$, error is negligible.

$V_{\text{COMP}} \sim 4$ volts. If $V_0 < 400 \mu\text{V}$, error is $< 0.01\%$.

(typically V_0 can be set to $< 50 \mu\text{V}$).

3. Derivation of Formula for $V_1 - V_0$

$$P_{\text{RF}} = \frac{2V_{\text{COMP}} (V_1 - V_0) + V_0^2 - V_1^2}{(4R) (\text{EFFECTIVE EFFICIENCY})}$$

$$\text{Desired } P_{\text{RF}} = 1 \text{ mW} = 10^{-3}$$

$$\therefore 10^{-3} = \frac{2V_{\text{COMP}} (V_1 - V_0) + V_0^2 - V_1^2}{(4R) (\text{EFFECTIVE EFFICIENCY})}$$

$$\text{Let } (4R) (\text{EFFECTIVE EFFICIENCY}) (10^{-3}) = K$$

ADJUSTMENTS

5-22. POWER REFERENCE OSCILLATOR LEVEL ADJUSTMENT (cont'd)

Substitute $-(V_1 - V_0)^2$ for $V_0^2 - V_1^2$ (see Math Assumptions under Accuracy)

Then $0 = (V_1 - V_0)^2 - 2V_{\text{COMP}}(V_1 - V_0) + K$

$$\text{or } V_1 - V_0 = V_{\text{COMP}} - \sqrt{(V_{\text{COMP}})^2 - K}$$

5-23. POWER SUPPLY ADJUSTMENTS[†]

REFERENCE: See Service Sheet 15.

DESCRIPTION: While the Power Meter is measuring an equivalent 10 mW signal from the 11683A Range Calibrator, the +15V supply is adjusted for a Power Meter indication of 9.99 mW to 10.01 mW. Then the range to range accuracy is checked (performance test 4-11). Finally, if all ranges are within limits, the +15V and -15V supplies are measured with a digital voltmeter.

EQUIPMENT: Digital Voltmeter (DVM) HP 3456A
Calibrator. HP 11683A

- PROCEDURE:
1. Set the Power Meter switches as follows:

CAL FACTOR %	100
POWER REF	off (out)
MODE	WATT
RANGE HOLD	off (out)
LINE	ON (in)
 2. Set the Range Calibrator switches as follows:

FUNCTION	CALIBRATE
POLARITY	NORMAL
RANGE	10 mW
LINE	ON (in)
 3. Connect the Power Meter to the Range Calibrator.
 4. Zero the Power Meter:
 - a. Set the Range Calibrator FUNCTION switch to STANDBY.
 - b. Press and hold the Power Meter SENSOR ZERO switch and wait for the digital readout to stabilize.
 - c. Release the Power Meter SENSOR ZERO switch; wait for the ZERO lamp to go out before proceeding.
 - d. Set the Range Calibrator FUNCTION switch to CALIBRATE.
 5. Adjust A9R3 (+15V) for a Power Meter indication of 9.99 mW to 10.01 mW.

[†]Refer to Section VII, Manual Changes, for backdating information.

ADJUSTMENTS

5-23. POWER SUPPLY ADJUSTMENTS (cont'd)

6. Check Power Meter range-to-range accuracy (Performance Test 4-11).
7. Measure and record the dc voltage at A9TP3 (-15V). The voltage should be between -15.5V and -14.5V .
8. Measure the dc voltage at A9TP4 ($+15\text{V}$). The voltage should be within 150 mV of the absolute value of the voltage recorded in step 6.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering parts. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-2 lists all replaceable parts in reference designation order. Table 6-3 contains the names and addresses that correspond with the manufacturers' code numbers.

6-3. ABBREVIATIONS

6-4. Table 6-1 lists abbreviations used in the parts list, schematics and throughout the manual. In some cases, two forms of the abbreviation are used, one all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always all capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lower case and upper case letters.

6-5. REPLACEABLE PARTS LIST

6-6. Table 6-2 is the list of replaceable parts and is organized as follows:

- a. Electrical assemblies and their components in alpha-numerical order by reference designation.
- b. Chassis-mounted parts in alpha-numerical order by reference designation.
- c. Miscellaneous parts.

The information given for each part consists of the following:

- a. The Hewlett-Packard part number.
- b. The check digit (CD).
- c. The total quantity (Qty) used in the instrument.
- d. The description of the part.
- e. A typical manufacturer of the part in a five-digit code.
- f. The manufacturer's number for the part.

The total quantity for each part is given only once at the first appearance of the part number in the list.

6-7. ORDERING INFORMATION

6-8. To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-9. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

6-10. PARTS PROVISIONING

6-11. Stocking spare parts for an instrument is often done to ensure quick return to service after a malfunction occurs. Hewlett-Packard has a Spare Parts Kit available for this purpose. The kit consists of selected replaceable assemblies and components for this instrument. The contents of the kit and the Recommended Spares list are based on failure reports and repair data, and parts support for one year. A complimentary Recommended Spares list for this instrument may be obtained on request and the Spare Parts Kit may be ordered through your nearest Hewlett-Packard office.

6-12. DIRECT MAIL ORDER SYSTEM

6-13. Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are:

- a. Direct ordering and shipment from the HP Parts Center in Mountain View, California.
- b. No maximum or minimum on any mail order (there is a minimum order amount for parts ordered through a local HP office when the orders require billing and invoicing).
- c. Prepaid transportation (there is a small handling charge for each order).
- d. No invoices — to provide these advantages, a check or money order must accompany each order.

6-14. Mail order forms and specific ordering information is available through your local HP office. Addresses and phone numbers are located at the back of this manual.

Table 6-1. Reference Designations and Abbreviations (1 of 2)

REFERENCE DESIGNATIONS

A assembly	E miscellaneous electrical part	P electrical connector (movable portion); plug	U integrated circuit; microcircuit
AT attenuator; isolator; termination	F fuse	Q transistor; SCR; triode thyristor	V electron tube
B fan; motor	FL filter	R resistor	VR voltage regulator; breakdown diode
BT battery	H hardware	RT thermistor	W cable; transmission path; wire
C capacitor	HY circulator	S switch	X socket
CP coupler	J electrical connector (stationary portion); jack	T transformer	Y crystal unit (piezo-electric or quartz)
CR diode; diode thyristor; varactor	K relay	TB terminal board	Z tuned cavity; tuned circuit
DC directional coupler	L coil; inductor	TC thermocouple	
DL delay line	M meter	TP test point	
DS annunciator; signaling device (audible or visual); lamp; LED	MP miscellaneous mechanical part		

ABBREVIATIONS

A ampere	COEF coefficient	EDP electronic data processing	INT internal
ac alternating current	COM common	ELECT electrolytic	kg kilogram
ACCESS accessory	COMP composition	ENCAP encapsulated	kHz kilohertz
ADJ adjustment	COMPL complete	EXT external	k Ω kilohm
A/D analog-to-digital	CONN connector	F farad	kV kilovolt
AF audio frequency	CP cadmium plate	FET field-effect transistor	lb pound
AFC automatic frequency control	CRT cathode-ray tube	F/F flip-flop	LC inductance-capacitance
AGC automatic gain control	CTL complementary transistor logic	FH flat head	LED light-emitting diode
AL aluminum	CW continuous wave	FIL H fillister head	LF low frequency
ALC automatic level control	cw clockwise	FM frequency modulation	LG long
AM amplitude modulation	cm centimeter	FP front panel	LH left hand
AMPL amplifier	D/A digital-to-analog	FREQ frequency	LIM limit
APC automatic phase control	dB decibel	FXD fixed	LIN linear taper (used in parts list)
ASSY assembly	dBm decibel referred to 1 mW	g gram	lin linear
AUX auxiliary	dc direct current	GE germanium	LK WASH lock washer
avg average	deg degree (temperature interval or difference)	GHz gigahertz	LO low; local oscillator
AWG American wire gauge	° degree (plane angle)	GL glass	LOG logarithmic taper (used in parts list)
BAL balance	° C degree Celsius (centigrade)	GRD ground(ed)	log logarithm(ic)
BCD binary coded decimal	° F degree Fahrenheit	H henry	LPF low pass filter
BD board	° K degree Kelvin	h hour	LV low voltage
BE CU beryllium copper	DEPC deposited carbon	HET heterodyne	m meter (distance)
BFO beat frequency oscillator	DET detector	HEX hexagonal	mA milliamper
BH binder head	diam diameter	HD head	MAX maximum
BKDN breakdown	DIA diameter (used in parts list)	HDW hardware	M Ω megohm
BP bandpass	DIFF AMPL differential amplifier	HF high frequency	MEG meg (10 ⁶) (used in parts list)
BPF bandpass filter	div division	HG mercury	MET FLM metal film
BRS brass	DPDT double-pole, double-throw	HI high	MET OX metallic oxide
BWO backward-wave oscillator	DR drive	HP Hewlett-Packard	MF medium frequency; microfarad (used in parts list)
CAL calibrate	DSB double sideband	HPF high pass filter	MFR manufacturer
ccw counter-clockwise	DTL diode transistor logic	HR hour (used in parts list)	mg milligram
CER ceramic	DVM digital voltmeter	HV high voltage	MHz megahertz
CHAN channel	ECL emitter coupled logic	in inch	mH millihenry
cm centimeter	EMF electromotive force	INCD incandescent	mho mho
CMO cabinet mount only		INCL include(s)	MIN minimum
COAX coaxial		INP input	min minute (time)
		INS insulation	... ' minute (plane angle)
			MINAT miniature
			mm millimeter

NOTE

All abbreviations in the parts list will be in upper-case.

Table 6-1. Reference Designations and Abbreviations (2 of 2)

MOD modulator	OD outside diameter	PWV peak working voltage	TD time delay
MOM momentary	OH oval head	RC resistance-capacitance	TERM terminal
MOS metal-oxide semiconductor	OP AMPL operational amplifier	RECT rectifier	TFT thin-film transistor
ms millisecond	OPT option	REF reference	TGL toggle
MTG mounting	OSC oscillator	REG regulated	THD thread
MTR meter (indicating device)	OX oxide	REPL replaceable	THRU through
mV millivolt	oz ounce	RF radio frequency	TI titanium
mVac millivolt, ac	Ω ohm	RFI radio frequency interference	TOL tolerance
mVdc millivolt, dc	P peak (used in parts list)	RH round head; right hand	TRIM trimmer
mVpk millivolt, peak	PAM pulse-amplitude modulation	RLC resistance-inductance-capacitance	TSTR transistor
mVp-p millivolt, peak-to-peak	PC printed circuit	RMO rack mount only	TTL transistor-transistor logic
mVrms millivolt, rms	PCM pulse-code modulation; pulse-count modulation	rms root-mean-square	TV television
mW milliwatt	PDM pulse-duration modulation	RND round	TVI television interference
MUX multiplex	pF picofarad	ROM read-only memory	TWT traveling wave tube
MY mylar	PH BRZ phosphor bronze	R&P rack and panel	U micro (10^{-6}) (used in parts list)
μ A microampere	PHL Phillips	RWV reverse working voltage	UF microfarad (used in parts list)
μ F microfarad	PIN positive-intrinsic-negative	S scattering parameter	UHF ultrahigh frequency
μ H microhenry	PIV peak inverse voltage	s second (time)	UNREG unregulated
μ mho micromho	pk peak	” second (plane angle)	V volt
μ s microsecond	PL phase lock	S-B slow-blow (fuse) (used in parts list)	VA voltampere
μ V microvolt	PLO phase lock oscillator	SCR silicon controlled rectifier; screw	Vac volts, ac
μ Vac microvolt, ac	PM phase modulation	SE selenium	VAR variable
μ Vdc microvolt, dc	PNP positive-negative-positive	SECT sections	VCO voltage-controlled oscillator
μ Vpk microvolt, peak	P/O part of	SEMICON semiconductor	Vdc volts, dc
μ Vp-p microvolt, peak-to-peak	POLY polystyrene	SHF superhigh frequency	VDCW volts, dc, working (used in parts list)
μ Vrms microvolt, rms	PORC porcelain	SI silicon	V(F) volts, filtered
μ W microwatt	POS positive; position(s) (used in parts list)	SIL silver	VFO variable-frequency oscillator
nA nanoampere	POSN position	SL slide	VHF very-high frequency
NC no connection	POT potentiometer	SNR signal-to-noise ratio	Vpk volts, peak
N/C normally closed	p-p peak-to-peak	SPDT single-pole, double-throw	Vp-p volts, peak-to-peak
NE neon	PP peak-to-peak (used in parts list)	SPG spring	Vrms volts, rms
NEG negative	PPM pulse-position modulation	SR split ring	VSWR voltage standing wave ratio
nF nanofarad	PREAMPL preamplifier	SPST single-pole, single-throw	VTO voltage-tuned oscillator
NI PL nickel plate	PRF pulse-repetition frequency	SSB single sideband	VTVM vacuum-tube voltmeter
N/O normally open	PRR pulse repetition rate	SST stainless steel	V(X) volts, switched
NOM nominal	ps picosecond	STL steel	W watt
NORM normal	PT point	SQ square	W/ with
NPN negative-positive-negative	PTM pulse-time modulation	SWR standing-wave ratio	WIV working inverse voltage
NPO negative-positive zero (zero temperature coefficient)	PWM pulse-width modulation	SYNC synchronize	WW wirewound
NRFR not recommended for field replacement		T timed (slow-blow fuse)	W/O without
NSR not separately replaceable		TA tantalum	YIG yttrium-iron-garnet
ns nanosecond		TC temperature compensating	Z ₀ characteristic impedance
nW nanowatt			
OBD order by description			

NOTE

All abbreviations in the parts list will be in upper-case.

MULTIPLIERS

Abbreviation	Prefix	Multiple
T	tera	10^{12}
G	giga	10^9
M	mega	10^6
k	kilo	10^3
da	deka	10
d	deci	10^{-1}
c	centi	10^{-2}
m	milli	10^{-3}
μ	micro	10^{-6}
n	nano	10^{-9}
p	pico	10^{-12}
f	femto	10^{-15}
a	atto	10^{-18}

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	00436-60020	2	1	FRONT PANEL ASSEMBLY	28480	00436-60020
A1A1	00436-60007	5	1	DISPLAY ASSEMBLY	28480	00436-60007
A1A1C1	0180-0197	8	4	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A1A1C2	0180-0228	6	1	CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	150D226X9015B2
A1A1CR1	1901-0518	8	2	DIODE-SM SIG SCHOTTKY	28480	1901-0518
A1A1CR2	1901-0518	8		DIODE-SM SIG SCHOTTKY	28480	1901-0518
A1A1DS1	1990-0450	4	10	LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS2	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS3	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS4	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS5	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS6	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS7	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS8	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS9	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1DS10	1990-0450	4		LED-LAMP LUM-INT=800UCD IF=50MA-MAX	28480	5082-4484
A1A1J1	1251-3944	1	1	CONNECTOR 5-PIN M POST TYPE	28480	1251-3944
A1A1J2	1200-0473	8	6	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1J3	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1Q1	1853-0020	4	20	TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A1A1R1	1810-0151	2	12	NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A1A1R2	0757-0401	0	7	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1A1R3	0698-3441	8	9	RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1A1R4	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1A1R5	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1A1R6	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1A1R7	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1A1U1	1820-1361	9	4	IC DCDR TTL BCD-T0-7-SEG 4-T0-7-LINE	07263	9374PC
A1A1U2	1820-1361	9		IC DCDR TTL BCD-T0-7-SEG 4-T0-7-LINE	07263	9374PC
A1A1U3	1820-1361	9		IC DCDR TTL BCD-T0-7-SEG 4-T0-7-LINE	07263	9374PC
A1A1U4	1820-1361	9		IC DCDR TTL BCD-T0-7-SEG 4-T0-7-LINE	07263	9374PC
A1A1U5	1820-0174	0	2	IC INV TTL HEX	01295	SN7404N
A1A1U6	1990-0490	2	5	DISPLAY-NUM-SEG 1-CHAR .3-H	28480	5082-7730, CAT D
A1A1U7	1990-0490	2		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	5082-7730, CAT D
A1A1U8	1990-0490	2		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	5082-7730, CAT D
A1A1U9	1990-0490	2		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	5082-7730, CAT D
A1A1U10	1990-0490	2		DISPLAY-NUM-SEG 1-CHAR .3-H	28480	5082-7730, CAT D
A1A1XU1	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1XU2	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1XU3	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1XU4	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A1A1XU5				NOT ASSIGNED		
A1A1XU6	1200-0508	0	6	SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A1XU7	1200-0508	0		SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A1XU8	1200-0508	0		SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A1XU9	1200-0508	0		SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A1XU10	1200-0508	0		SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A1 MISCELLANEOUS PARTS						
	0520-0128	7	2	SCREW-MACH 2-56 .25-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	2190-0045	8	2	WASHER-LK HLCL NO. 2 .088-IN-ID	28480	2190-0045
	3050-0079	3	1	WASHER-FL NM NO. 2 .094-IN-ID .188-IN-OD	28480	3050-0079
	3050-0098	6	1	WASHER-FL MTLC NO. 2 .094-IN-ID	28480	3050-0098
A1A2	00436-60008	6	1	PUSHBUTTON SWITCH ASSEMBLY	28480	00436-60008
A1A2J1	1200-0508	0		SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A1A2MP1- A1A2MP6	0370-2486	5	6	PUSHBUTTON .230X.390X.397 IN H: JADE	28480	0370-2486
A1A2R1	0757-0438	3	5	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A1A2R2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1A2R3	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1A2R4	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1A2S1	3101-1901	1	1	SWITCH-PB 9-STATION 15MM C-C SPACING	28480	3101-1901
A1A2U1	1820-0175	1	2	IC INV TTL HEX 1-INP	01295	SN7405N
				A1A2 MISCELLANEOUS PARTS		
	0520-0128	7		SCREW-MACH 2-56 .25-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	2190-0045	8		WASHER-LK HLCL NO. 2 .088-IN-ID	28480	2190-0045
A1A3	00436-60027	9	1	CAL FACTOR SWITCH ASSEMBLY (INCLUDES W3)	28480	00436-60027
A1A3R1	0757-0346	2	15	RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R2	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R3	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R4	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R5	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R6	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R7	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R8	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R9	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R10	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R11	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R12	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R13	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R14	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R15	0757-0346	2		RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-T0-10R0-F
A1A3R16	2100-0600	2	1	RESISTOR-TRMR 5K 10% C SIDE-ADJ 22-TRN	32997	3059J-1-502M
A1A3S1	3100-3318	6	1	SWITCH-RTRY SP16T-PS 1.562-CTR-SPCG	28480	3100-3318
				A1A3 MISCELLANEOUS PARTS		
	0370-2774	4	1	KN0B-BASE-SKT 1/2 JGK .25-IN-ID	28480	0370-2774
	2190-0016	3	1	WASHER-LK INTL T 3/8 IN .377-IN-ID	28480	2190-0016
	2950-0043	8	1	NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	3050-0032	8	1	WASHER-FL MTLN NO. 8 .189-IN-ID	28480	3050-0032
†	3050-1167	2	1	WASHER-SPR CRVD NO. 10 .2-IN-ID	28480	3050-1167
A1M1	1120-0584	2	1	METER	28480	1120-0584
A1MP1	0590-0505	1	1	NUT-KNRLD-R 5/8-24-THD .125-IN-THK	00000	ORDER BY DESCRIPTION
A1MP2	2190-0002	7	1	WASHER-LK INTL T 11/16 IN .7-IN-ID	28480	2190-0002
A2†	00436-60039	3	1	AC GAIN ASSEMBLY	28480	00436-60039
A2C1	0180-1746	5	8	CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A2C2	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A2C3	0180-2206	4	3	CAPACITOR-FXD 60UF+-10% 6VDC TA	56289	150D606X9006B2
A2C4	0180-0229	7	2	CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A2C5	0160-0160	3	3	CAPACITOR-FXD 8200PF +-10% 200VDC POLYE	28480	0160-0160
A2C6	0180-2206	4		CAPACITOR-FXD 60UF+-10% 6VDC TA	56289	150D606X9006B2
A2C7	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A2C8	0160-2290	4	5	CAPACITOR-FXD .15UF +-10% 80VDC POLYE	28480	0160-2290
A2C9	0160-2199	2	1	CAPACITOR-FXD 30PF +-5% 300VDC MICA	28480	0160-2199
A2C10	0160-0160	3		CAPACITOR-FXD 8200PF +-10% 200VDC POLYE	28480	0160-0160
A2C11	0160-2290	4		CAPACITOR-FXD .15UF +-10% 80VDC POLYE	28480	0160-2290
A2C12	0160-0160	3		CAPACITOR-FXD 8200PF +-10% 200VDC POLYE	28480	0160-0160
A2C13	0160-2290	4		CAPACITOR-FXD .15UF +-10% 80VDC POLYE	28480	0160-2290
A2C14*†	0160-0157	8	1	CAPACITOR-FXD 4700PF +-10% 200VDC POLYE	28480	0160-0157
A2C15	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A2C16	0160-2055	9	11	CAPACITOR-FXD .01UF +-80-20% 100VDC CER	28480	0160-2055
A2C17	0160-2261	9	1	CAPACITOR-FXD 15PF +-5% 500VDC CER 0+-30	28480	0160-2261
A2C18	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A2C19†	0160-3439	5	2	CAPACITOR-FXD .039UF +-5% 200VDC	28480	0160-3439
A2C20†	0160-3439	5		CAPACITOR-FXD .039UF +-5% 200VDC	28480	0160-3439
A2C21- A2C35†				NOT ASSIGNED		

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2CR1†	1901-0996	6	2	DIODE-SCHOTTKY SM SIG	28480	1901-0996
A2CR2†	1901-0996	6		DIODE-SCHOTTKY SM SIG	28480	1901-0996
A2CR3	1901-0040	1	7	DIODE-SWITCHING 30V 50MA 2NS D0-35	28480	1901-0040
A2Q1	1854-0003	5	1	TRANSISTOR NPN SI T0-39 PD=800MW	28480	1854-0003
A2Q2	1855-0414	4	21	TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q3	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q4†	1854-0810	2	27	TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q5†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q6†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q7†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q8†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q9	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q10	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q11	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q12	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A2Q13†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q14	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q15				NOT ASSIGNED		
A2Q16†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q17†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q18†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A2Q19	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q20	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q21	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q22	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q23	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q24	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q25	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q26	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q27	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2Q28	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A2R1	0698-3450	9		RESISTOR 42.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4222-F
A2R2	0698-3156	2	2	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A2R3	0683-2265	1	1	RESISTOR 22M 5% .25W FC TC=-900/+1200	01121	CB2265
A2R4				NOT ASSIGNED		
A2R5	0757-0459	8	1	RESISTOR 56.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5622-F
A2R6	0698-3159	5	3	RESISTOR 26.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2612-F
A2R7*†	0698-3450	9	5	RESISTOR 42.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4222-F
A2R8	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A2R9	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A2R10	0757-0444	1	3	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A2R11	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R12*†	0757-0465	6	8	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R13	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A2R14	0698-3160	8	4	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A2R15	0698-3158	4	4	RESISTOR 23.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2372-F
A2R16	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A2R17	0698-0083	8	1	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A2R18*	0757-0470	3	1	RESISTOR 162K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1623-F
A2R19	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R20	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A2R21	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A2R22	0698-3136	8	5	RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F
A2R23	0757-0441	8	1	RESISTOR 8.25K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A2R24	0811-3351	1	1	RESISTOR 11K .025% .05W PWM TC=0+-10	28480	0811-3351
A2R25	0811-3348	6	2	RESISTOR 111.1 .025% .05W PWM TC=0+-10	28480	0811-3348
A2R26	1810-0158	9	2	NETWORK-RES 7-SIP56.0K OHM X 6	28480	1810-0158
A2R27	0698-3136	8		RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F
A2R28	0698-3150	6	2	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A2R29	0698-3158	4		RESISTOR 23.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2372-F
A2R30	0757-0464	5	1	RESISTOR 90.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-9092-F
A2R31	0698-3449	6	1	RESISTOR 28.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2872-F
A2R32	0757-0290	5	3	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A2R33	0698-3450	9		RESISTOR 42.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4222-F
A2R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R35	0698-3136	8		RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2R36	0757-0289	2	2	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F
A2R37	0811-3348	6		RESISTOR 111.11 .025% .05W PWW TC=0+-10	28480	0811-3348
A2R38	0811-3350	0	1	RESISTOR 10K .025% .05W PWW TC=0+-10	28480	0811-3350
A2R39	0811-3349	7	1	RESISTOR 1K .025% .05W PWW TC=0+-10	28480	0811-3349
A2R40	0698-3452	1	2	RESISTOR 147K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1473-F
A2R41	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A2R42	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A2R43	0698-3136	8		RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F
A2R44	0757-0280	3	7	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R45	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A2R46	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R47	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R48	0698-3450	9		RESISTOR 42.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4222-F
A2R49	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A2R50*	0757-0442	9	27	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R51	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A2R52	0698-3450	9		RESISTOR 42.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4222-F
A2R53	0698-3150	6		RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A2R54	0698-3159	5		RESISTOR 26.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2612-F
A2R55	0757-0460	1	5	RESISTOR 61.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A2R56	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R57	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R58	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R59	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R60	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R61	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R62	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R63	0698-3154	0	2	RESISTOR 4.22K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4221-F
A2R64	0757-0200	7	2	RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R65	0757-0460	1		RESISTOR 61.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A2R66	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A2R67	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R68	0757-0460	1		RESISTOR 61.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A2R69	2100-2514	1	1	RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN	30983	ET50W203
A2R70	0698-3154	0		RESISTOR 4.22K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4221-F
A2R71	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A2R72	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A2R73	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A2R74	0757-0279	0	1	RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A2R75	0757-0200	7		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A2R76	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R77	0757-0422	5	1	RESISTOR 909 1% .125W F TC=0+-100	24546	C4-1/8-T0-909R-F
A2R78	0698-0085	0	3	RESISTOR 2.61K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2611-F
A2R79	0698-3446	3	1	RESISTOR 383 1% .125W F TC=0+-100	24546	C4-1/8-T0-383R-F
A2R80	0698-0085	0		RESISTOR 2.61K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2611-F
A2R81**	0757-0288	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A2TP1	0360-1514	7	15	TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2TP4	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2TP5	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2TP6	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A2U1	1820-0223	0	3	IC OP AMP GP TO-99 PKG	3L585	CA301AT
A2U2	1826-0092	3	2	IC OP AMP GP DUAL TO-99 PKG	28480	1826-0092
A2U3	1820-0174	0		IC INV TTL HEX	01295	SN7404N
A2U4	1826-0161	7	1	IC OP AMP GP QUAD 14-DIP-P PKG	04713	LM324P
A2U5	1826-0092	3		IC OP AMP GP DUAL TO-99 PKG	28480	1826-0092
A2U6†	00436-80009	9	1	IC TTL S 256-BIT ROM 40-NS 0-C	28480	00436-80009
A2U7	1818-2245	5	1	IC NMOS 4096 (4K) ROM	28480	1818-2245
A2U8	1820-0223	0		IC OP AMP GP TO-99 PKG	3L585	CA301AT
A2VR1	1902-3002	3	2	DIODE-ZNR 2.37V 5% DO-7 PD=.4W TC=-.074%	28480	1902-3002
A2VR2	1902-3002	3		DIODE-ZNR 2.37V 5% DO-7 PD=.4W TC=-.074%	28480	1902-3002

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2 MISCELLANEOUS PARTS						
	5000-9043	6	4	PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6847	6	1	EXTRACTOR, RED	28480	5040-6847
	1460-0553	5	1	CLIP-WINDOW	28480	1460-0553
A3†	00436-60040	6	1	A-D CONVERTER ASSEMBLY	28480	00436-60040
A3A1	00436-60010	0	1	AUTO ZERO ASSEMBLY	28480	00436-60010
A3C1	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A3C2	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A3C3	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A3C4	0160-2290	4		CAPACITOR-FXD .15UF +-10% 80VDC POLYE	28480	0160-2290
A3C5	0180-1745	4	1	CAPACITOR-FXD 1.5UF+-10% 20VDC TA	56289	150D155X9020A2
A3C6	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A3C7	0180-0291	3	3	CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A3C8	0160-0168	1	1	CAPACITOR-FXD .1UF +-10% 200VDC POLYE	28480	0160-0168
A3C9	0160-0970	3	1	CAPACITOR-FXD .47UF +-10% 80VDC POLYE	28480	0160-0970
A3C10	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A3C11	0180-0218	4	1	CAPACITOR-FXD .15UF+-10% 35VDC TA	56289	150D154X9035A2
A3C12†	0160-5756	3	1	CAPACITOR-FXD .47UF +-5% 100VDC	28480	0160-5756
A3C13	0180-0374	3	1	CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A3C14	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A3C15	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A3C16	0160-2290	4		CAPACITOR-FXD .15UF +-10% 80VDC POLYE	28480	0160-2290
A3C17	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A3C18-†				NOT ASSIGNED		
A3C22†						
A3CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR6	1901-0179	7	2	DIODE-SWITCHING 15V 50MA 750PS DO-7	28480	1901-0179
A3CR7	1901-0179	7		DIODE-SWITCHING 15V 50MA 750PS DO-7	28480	1901-0179
A3Q1	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q2	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q3	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q4	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q5	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q6†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q7†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q8†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q9†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q10†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q11	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q12†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q13	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q14	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q15	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q16	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q17†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q18	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q19	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q20	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q21†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q22	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A3Q23†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q24†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q25†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3Q26	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q27	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q28	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q29	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3Q30	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3031	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3032	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3033	1855-0414	4		TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	04713	2N4393
A3034†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A3R1	0698-3157	3	7	RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R2	2100-2516	3	3	RESISTOR-TRMR 100K 10% C SIDE-ADJ 1-TRN	32997	3329W-1-104
A3R3	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A3R4	0698-0085	0		RESISTOR 2.61K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2611-F
A3R5	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A3R6	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R7	0757-0467	8	4	RESISTOR 121K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1213-F
A3R8	0757-0467	8		RESISTOR 121K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1213-F
A3R9	0757-0467	8		RESISTOR 121K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1213-F
A3R10	0757-0462	3	3	RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7502-F
A3R11	1810-0158	9		NETWORK-RES 7-SIP56.0K OHM X 6	28480	1810-0158
A3R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R13	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R14	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R15	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R16	0698-3136	8		RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F
A3R17	2100-2489	9	1	RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN	30983	ET50X502
A3R18	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R19	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R20	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R22	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R23	0757-0462	3		RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7502-F
A3R24	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R25	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R26	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A3R27	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R28	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R29	0757-0458	7	2	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A3R30	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A3R31	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R32	0698-3452	1		RESISTOR 147K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1473-F
A3R33	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A3R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R35	0698-3260	9	7	RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A3R36	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R37	2100-2522	1	1	RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN	30983	ET50X103
A3R38	0698-7666	7	1	RESISTOR 56K 1% .125W F TC=0+-25	19701	MF4C1/8-T9-5602-F
A3R39	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R40	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A3R41	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R42	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A3R43	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A3R44	0757-0462	3		RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7502-F
A3R45	0757-0180	2	1	RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A3R46	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R47	2100-2516	3		RESISTOR-TRMR 100K 10% C SIDE-ADJ 1-TRN	32997	3329W-1-104
A3R48	2100-3207	1	1	RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN	28480	2100-3207
A3R49	0698-7880	7	2	RESISTOR 28.7K 1% .125W F TC=0+-25	19701	MF4C1/8-T9-2872-F
A3R50	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A3R51	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A3R52	0698-3158	4		RESISTOR 23.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2372-F
A3R53	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R54	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A3R55	0757-0460	1		RESISTOR 61.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A3R56	0698-3158	4		RESISTOR 23.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2372-F
A3R57	0698-3444	1	1	RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A3R58	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A3R59	2100-3274	2	1	RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN	28480	2100-3274
A3R60	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3R61	0757-0438	3	1	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A3R62	0698-7880	7		RESISTOR 28.7K 1% .125W F TC=0+-25	19701	MF4C1/8-T0-2872-F
A3R63	0698-6799	5		RESISTOR 4.53K 1% .125W F TC=0+-25	28480	0698-6799
A3R64				NOT ASSIGNED		
A3R65	2100-2516	3		RESISTOR-TRMR 100K 10% C SIDE-ADJ 1-TRN	32997	3329W-1-104
A3R66	0698-0084	9	1	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R67	0757-0289	2		RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F
A3R68	0757-0467	8		RESISTOR 121K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1213-F
A3R69	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R70	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A3R71	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R72	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3TP1	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3TP4	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3TP5	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3TP6	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A3U1	1826-0102	6	2	IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG	27014	LM312H
A3U2	1820-0223	0		IC OP AMP GP TO-99 PKG	3L585	CA301AT
A3U3	1826-0102	6	2	IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG	27014	LM312H
A3U4	1826-0547	3		IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	01295	TL072ACP
A3U5	1826-0547	3		IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	01295	TL072ACP
A3VR1	1902-0041	4	1	DIODE-ZNR 5.11V 5% D0-35 PD=.4W	28480	1902-0041
A3VR2	1902-0680	7		DIODE-ZNR 1N827 6.2V 5% D0-7 PD=.4W	24046	1N827
A3VR3	1902-3024	9	1	DIODE-ZNR 2.87V 5% D0-7 PD=.4W TC=-.07%	28480	1902-3024
A3VR4	1902-3139	7		DIODE-ZNR 8.25V 5% D0-35 PD=.4W	28480	1902-3139
A3VR5	1902-3139	7		DIODE-ZNR 8.25V 5% D0-35 PD=.4W	28480	1902-3139
A3VR6	1902-3070	5	2	DIODE-ZNR 4.22V 5% D0-35 PD=.4W	28480	1902-3070
				A3 MISCELLANEOUS PARTS		
	5000-9043	6	1	PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6852	3		EXTRACTOR, ORANGE	28480	5040-6852
A4	00436-60003	1	1	COUNTER ASSEMBLY	28480	00436-60003
A4C1	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A4C2	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C3	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C4	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C5	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C6	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C7	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C8	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A4C9	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A4C10	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A4J1	1200-0507	9	1	SOCKET-IC 16-CONT DIP-SLDR	28480	1200-0507
A4Q1†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A4R1	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R3	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R4	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R5	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A4R6†	0698-0084	9	4	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A4TP1	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A4TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A4TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A4U1	1820-1411	0	5	IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A4U2	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A4U3	1820-1411	0	8	IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A4U4	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A4U5†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4U6†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U7†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U8†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U9†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U10†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U11†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U12†	1820-1277	6		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS192N
A4U13	1820-1202	7	2	IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A4U14	1820-1197	9	4	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A4U15	1820-1212	9	1	IC FF TTL LS J-K NEG-EDGE-TRIG	01295	SN74LS112AN
A4U16	1820-0077	2	1	IC FF TTL D-TYPE POS-EDGE-TRIG CLEAR	01295	SN7474N
A4U17	1820-0076	1	1	IC FF TTL J-K PULSE PRESET/CLEAR DUAL	01295	SN7476N
A4U18	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A4U19	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A4U20	1820-1204	9	1	IC GATE TTL LS NAND DUAL 4-INP	01295	SN74LS20N
A4U21	1820-1199	1	2	IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A4Y1	0410-0590	4	1	CRYSTAL-QUARTZ 240.000 KHZ	28480	0410-0590
A4 MISCELLANEOUS PARTS						
	5000-9043	6		PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6848	7	1	EXTRACTOR	28480	5040-6848
A5	00436-60004	2	1	CONTROLLER ASSEMBLY	28480	00436-60004
A5C1	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A5C2	0180-0100	3	1	CAPACITOR-FXD 4.7UF+-10% 35VDC TA	56289	150D475X9035B2
A5C3	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A5C4	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A5C5	0180-2206	4		CAPACITOR-FXD 60UF+-10% 6VDC TA	56289	150D606X9006B2
A5CR1	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A5Q1†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A5Q2†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A5Q3†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A5Q4†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A5Q5†	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A5Q6	1853-0020	4		TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A5R1	0698-0082	7	1	RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A5R2	0698-3439	4	1	RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A5R3	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R4	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R5	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A5R6	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A5R7	0683-4755	8	1	RESISTOR 4.7M 5% .25W FC TC=-900/+1100	01121	CB4755
A5R8	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R9	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A5R10	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A5R11	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R12	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R13	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A5R14	0757-0460	1		RESISTOR 61.9K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A5R15	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A5R16	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A5R17	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A5R18	0698-3159	5		RESISTOR 26.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2612-F
A5R19	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A5R20	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A5R21	0757-0444	1		RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A5R22	0757-0444	1		RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A5U1	1820-1112	8	5	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A5U2	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A5U3	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A5U4	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A5U5	1820-0054	5	2	IC GATE TTL NAND QUAD 2-INP	01295	SN7400N

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5U6	1820-0328	6	1	IC GATE TTL NOR QUAD 2-INP	01295	SN7402N
A5U7	1820-1194	6	1	IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS193N
A5U8	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A5U9	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A5U10	1820-0175	1		IC INV TTL HEX 1-INP	01295	SN7405N
A5U11	1818-2244	4	1	IC NMOS 4096 (4K) ROM	28480	1818-2244
A5U12	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A5U13	1820-0640	5	1	IC MUXR/DATA-SEL TTL 16-T0-1-LINE 16-INP	01295	SN74150N
A5U14	1820-0495	8	1	IC DCDR TTL 4-T0-16-LINE 4-INP	01295	SN74154N
A5U15	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A5U16	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A5U17	1820-0054	5		IC GATE TTL NAND QUAD 2-INP	01295	SN7400N
A5VR1	1902-3070	5		DIODE-ZNR 4.22V 5% D0-35 PD=.4W	28480	1902-3070
A5XU11†	1200-0567	1	1	SOCKET-IC 28-CONT DIP DIP-SLDR	28480	1200-0567
				A5 MISCELLANEOUS PARTS		
	5000-9043	6		PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6851	2	1	EXTRACTOR	28480	5040-6851

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6†	00436-60053	1	1	HP INTERFACE BUS (HP-IB) CONTROL ASSEMBLY (FOR OPTION 022 ONLY)	28480	00436-60053
A6C1	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A6C2	0160-3334	9	10	CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C3	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C4	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C5	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C6	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C7	0160-4574	1	4	CAPACITOR-FXD 1000PF +-10% 100VDC CER	28480	0160-4574
A6C8	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C9	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C10	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C11	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C12	0160-3334	9		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-3334
A6C13	0160-4574	1		CAPACITOR-FXD 1000PF +-10% 100VDC CER	28480	0160-4574
A6C14	0160-4918	7	3	CAPACITOR-FXD .022UF +-10% 50VDC CER	28480	0160-4918
A6C15	0160-4918	7		CAPACITOR-FXD .022UF +-10% 50VDC CER	28480	0160-4918
A6C16	0160-4918	7		CAPACITOR-FXD .022UF +-10% 50VDC CER	28480	0160-4918
A6C17	0160-4574	1		CAPACITOR-FXD 1000PF +-10% 100VDC CER	28480	0160-4574
A6C18	0160-4574	1		CAPACITOR-FXD 1000PF +-10% 100VDC CER	28480	0160-4574
A6CR1	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A6Q1	1853-0020	4	1	TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A6R1	0698-3444	1	6	RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R2	0757-0280	3	1	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A6R3	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R4	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R5	0757-0442	9	7	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A6R6	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R7	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R8	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A6R9	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A6R10	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A6R11	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A6S1†	3101-0403	6	1	SWITCH-SL 5-SPDT DIP-SLIDE-ASSY .1A	28480	3101-0403
A6TP1	0360-1514	7	4	TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6TP4	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6U1	1820-1204	9	1	IC GATE TTL LS NAND DUAL 4-INP	01295	SN74LS20N
A6U2	1820-1144	6	3	IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
A6U3	1820-1197	9	3	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U4	1820-1207	2	1	IC GATE TTL LS NAND 8-INP	01295	SN74LS30N
A6U5	1820-1112	8	5	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U6	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U7	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
A6U8	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U9	1820-1053	6	2	IC SCHMITT-TRIG TTL INV HEX	01295	SN7414N
A6U10	1820-1199	1	2	IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U11	1820-1202	7	2	IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A6U12	1820-0621	2	3	IC BFR TTL NAND QUAD 2-INP	01295	SN7438N
A6U13	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U14	1820-0629	0	1	IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A6U15	1820-1298	1	5	IC MUXR/DATA-SEL TTL LS 8-T0-1-LINE	01295	SN74LS251N
A6U16	1820-1198	0	3	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
A6U17	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U18	1820-1053	6		IC SCHMITT-TRIG TTL INV HEX	01295	SN7414N
A6U19	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U20	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6U21	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
A6U22	1820-1056	9	1	IC SCHMITT-TRIG TTL NAND QUAD 2-INP	01295	SN74132N
A6U23	1820-1216	3	1	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U24	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A6U25	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U26	1820-1198	0		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
A6XA1 - A6XA6 A6XA7	1251-2315	8	1	NOT ASSIGNED CONNECTOR-PC EDGE 20-CONT/ROW 2-ROWS A6 MISCELLANEOUS (OPT. 022)	28480	1251-2315
	5000-9043	6	1	PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6849	8	1	EXTRACTOR, P.C. BOARD	28480	5040-6849
A7	00436-60012	2	1	HP INTERFACE BUS(HP-IB)INPUT/OUTPUT ASS (FOR OPTION 022 ONLY)	28480	00436-60012
A7C1	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A7C2	0160-3879	7	2	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A7C3	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A7J1	1200-0507	9	1	SOCKET-IC 16-CONT DIP-SLDR	28480	1200-0507
A7J2				NOT ASSIGNED		
A7J3				NOT ASSIGNED		
A7J4				NOT ASSIGNED		
A7J5				NOT ASSIGNED		
A7J6				NOT ASSIGNED		
A7J7	1251-3283	1	1	CONNECTOR 24-PIN F MICRORIBBON	28480	1251-3283
A7Q1†	1854-0810	2	1	TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810
A7R1	1810-0151	2	2	NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A7R2	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A7R3	1810-0136	3	2	NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0136
A7R4	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A7R5	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A7R6	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A7R7	1810-0136	3		NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0136
A7S1	3101-1213	8	1	SWITCH-TGL SUBMIN DPST .5A 120VAC PC	28480	3101-1213
A7U1	1820-1298	1		IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE	01295	SN74LS251N
A7U2	1820-1194	6	1	IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS193N
A7U3	1820-1298	1		IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE	01295	SN74LS251N
A7U4†	00436-80008	8	1	IC TTL S 256-BIT ROM 40-NS 3-S	28480	00436-80008
A7U5	1820-0621	2		IC BFR TTL NAND QUAD 2-INP	01295	SN7438N
A7U6	1820-1298	1		IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE	01295	SN74LS251N
A7U7	1820-1198	0		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
A7U8	1820-0621	2		IC BFR TTL NAND QUAD 2-INP	01295	SN7438N
A7U9	1820-1298	1		IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE	01295	SN74LS251N
				A7 MISCELLANEOUS (OPT. 022)		
	0380-0643	3	2	STANDOFF-HEX .255-IN-LG 6-32THD	00000	ORDER BY DESCRIPTION
	1530-1098	4	2	CLEVIS 0.070-IN W SLT: 0.454-IN PIN CTR	00000	ORDER BY DESCRIPTION
	00436-00010	4	1	COVER PLATE-HP-IB	28480	00436-00010
	5951-7587	4	1	TAG-HARDWARE	28480	5951-7587
	7120-4855	4	1	LABEL-IDENTIFICATION .45-IN-WD 1.5-IN-LG (OPTION 022)	28480	7120-4855

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
The A6 and A7 assemblies for Option 024 have been deleted.						

See introduction to this section for ordering information
*Indicates factory selected value
†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A8	00436-60030	4	1	POWER REFERENCE OSCILLATOR ASSEMBLY	28480	00436-60030			
A8A1	00436-60011	1	1	POWER REFERENCE OSCILLATOR BOARD ASSEMBLY	28480	00436-60011			
A8A1C1	0160-3879	7	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879			
A8A1C2	0160-3036	8	2	CAPACITOR-FDTHRU 5000PF +80 -20% 200V	28480	0160-3036			
A8A1C3	0160-3036	8		CAPACITOR-FDTHRU 5000PF +80 -20% 200V	28480	0160-3036			
A8A1C4	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879			
A8A1C5	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879			
A8A1C6	0160-2027	5	1	CAPACITOR-FXD 300PF +-5% 500VDC MICA	28480	0160-2027			
A8A1C7	0160-3070	0	1	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-3070			
A8A1C8	0180-0100	3	1	CAPACITOR-FXD 4.7UF+-10% 35VDC TA	56289	150D475X903582			
A8A1C9	0160-2255	1	1	CAPACITOR-FXD 8.2PF +- .25PF 500VDC CER	28480	0160-2255			
A8A1C10	0160-3878	6	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-3878			
A8A1C11	0160-0179	4	1	CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-0179			
A8A1C12	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879			
A8A1C13	0160-4006	4	1	CAPACITOR-FXD 36PF +-5% 300VDC GL	28480	0160-4006			
A8A1C14	0160-4007	5	1	CAPACITOR-FXD 200PF +-5% 300VDC GL	28480	0160-4007			
A8A1CR1	1901-0518	8	2	DIODE-SM SIG SCHOTTKY	28480	1901-0518			
A8A1CR2	1901-0518	8		DIODE-SM SIG SCHOTTKY	28480	1901-0518			
A8A1CR3	0122-0299	9	1	DIODE-VVC 82PF 5% C2/C20-MIN=2 BVR=20V	28480	0122-0299			
A8A1J1	1250-1220	0	1	CONNECTOR-RF SMC M PC 50-OHM	28480	1250-1220			
A8A1L1	00436-80001	1	1	COIL-VARIABLE	28480	00436-80001			
A8A1L2	9140-0144	0	1	INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG	28480	9140-0144			
A8A1L3	00436-80002	2	1	COIL-3-1/2 TURNS	28480	00436-80002			
A8A1Q1	1854-0247	9	1	TRANSISTOR NPN SI T0-39 PD=1W FT=800MHZ	28480	1854-0247			
A8A1Q2*	1854-0810	2	1	TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810			
A8A1R1	0757-0442	9	2	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F			
A8A1R2*	0757-1094	9	1	RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F			
A8A1R3	0811-3234	9	1	RESISTOR 10K 1% .05W PWJ TC=0+-10	20940	140-1/20-1002-F			
A8A1R4	2100-3154	7	1	RESISTOR-TRMR 1K 10% C SIDE-ADJ 17-TRN	02111	43P102			
A8A1R5	0811-3381	7	1	RESISTOR 7.1K 1% .05W PWJ TC=0+-10	28480	0811-3381			
A8A1R6	0757-0440	7	1	RESISTOR 7.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7501-F			
A8A1R7	0698-7284	5	2	RESISTOR 100K 1% .05W F TC=0+-100	24546	C3-1/8-T0-1003-F			
A8A1R8	0757-0465	6	1	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F			
A8A1R9	0698-7284	5		RESISTOR 100K 1% .05W F TC=0+-100	24546	C3-1/8-T0-1003-F			
A8A1R10	0757-0280	3	2	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F			
A8A1R11	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F			
A8A1R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F			
A8A1R13	0757-0438	3	1	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F			
A8A1R14	0757-0398	4	1	RESISTOR 75 1% .125W F TC=0+-100	24546	C4-1/8-T0-75R0-F			
A8A1R15	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F			
A8A1R16*	0698-6364	0	1	RESISTOR 50 .1% .125W F TC=0+-25	28480	0698-6364			
A8A1TP1	0360-1514	7	8	TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514			
A8A1TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514			
A8A1U1	1826-0013	8	1	IC OP AMP LOW-NOISE T0-99 PKG	06665	SSS741CJ			
A8A1U2	1820-0223	0	1	IC OP AMP GP T0-99 PKG	3L585	CA301AT			
A8A1VR1	1902-0680	7	1	DIODE-ZNR 1N827 6.2V 5% D0-7 PD=.4W	24046	1N827			
A8A1VR2*	1902-0956	0	1	DIODE-ZNR 8.2V 5% D0-35 PD=.4W TC=+.065%	28480	1902-0956			
				A8 MISCELLANEOUS PARTS					
				2190-0008	3	4	WASHER-LK EXT T NO. 6 .141-IN-ID	28480	2190-0008
				2190-0009	4	8	WASHER-LK INTL T NO. 8 .168-IN-ID	28480	2190-0009
				2190-0124	4	1	WASHER-LK INTL T NO. 10 .195-IN-ID	28480	2190-0124
				2360-0209	7	4	SCREW-MACH 6-32 1-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
				2580-0002	4	8	NUT-HEX-DBL-CHAM 8-32-THD .085-IN-THK	28480	2580-0002
				2950-0078	9	1	NUT-HEX-DBL-CHAM 10-32-THD .067-IN-THK	28480	2950-0078
				3050-0079	3	1	WASHER-FL NM NO. 2 .094-IN-ID .188-IN-OD	28480	3050-0079
				7100-1204	9	1	CAN-RECT 2.00"	28480	7100-1204

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9†	00436-60054	2	1	POWER SUPPLY ASSEMBLY	28480	00436-60054
A9C1	0180-1985	4	2	CAPACITOR-FXD 500UF+75-10% 30VDC AL	28480	0180-1985
A9C2	0180-1985	4		CAPACITOR-FXD 500UF+75-10% 30VDC AL	28480	0180-1985
A9C3†	0180-3344	3	2	CAPACITOR-FXD 2.2UF +-20% 50VDC AL	28480	0180-3344
A9C4†	0180-3344	3		CAPACITOR-FXD 2.2UF +-20% 50VDC AL	28480	0180-3344
A9C5†	0180-3343	2		CAPACITOR-FXD 10UF+-20% 25VDC AL	28480	0180-3343
A9CR1	1901-0200	5	2	DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A9CR2	1901-0200	5		DIODE-PWR RECT 100V 1.5A	28480	1901-0200
A9CR3	1901-0328	8	4	DIODE-PWR RECT 400V 1A 6US	03508	A14D
A9CR4	1901-0328	8		DIODE-PWR RECT 400V 1A 6US	03508	A14D
A9CR5	1901-0328	8		DIODE-PWR RECT 400V 1A 6US	03508	A14D
A9CR6	1901-0328	8		DIODE-PWR RECT 400V 1A 6US	03508	A14D
A9F1†			4	NOT ASSIGNED		
A9F2†				NOT ASSIGNED		
A9F3†				NOT ASSIGNED		
A9R1†	0698-3442	9	1	RESISTOR 237 1% .125W F TC=0+-100	24546	C4-1/8-T0-237R-F
A9R2†	0698-3150	6	1	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-237I-F
A9R3†	2100-3123	0	1	RESISTOR-TRMR 500 10% C SIDE-ADJ 17-TRN	02111	43P501
A9TP1	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9TP4	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9TP5	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9TP6	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A9U1†	1826-0277	6	1	IC V RGLTR-FXD-NEG 14.4/15.6V T0-220 PKG	27014	LM320T-15
A9U2†	1826-0393	7	1	IC V RGLTR-ADJ-POS 1.2/37V T0-220 PKG	27014	LM317T
A9 MISCELLANEOUS PARTS						
	2200-0103	2	2	SCREW-MACH 4-40 .25-IN-LG PAN-HD-POZI	28480	2200-0103
	5000-9043	6	1	PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6845	4	1	PC BOARD EXTRACTOR, WHITE	28480	5040-6845
A10	00436-60009	7	1	MOTHER BOARD ASSEMBLY	28480	00436-60009
A10J1	1200-0508	0	1	SOCKET-IC 14-CONT DIP-SLDR	28480	1200-0508
A10J2	1200-0507	9	1	SOCKET-IC 16-CONT DIP-SLDR	28480	1200-0507
A10J3	1251-3898	4	2	CONNECTOR 10-PIN M POST TYPE	28480	1251-3898
A10J4	1251-3898	4		CONNECTOR 10-PIN M POST TYPE	28480	1251-3898
A10VR1	1902-0551	1	1	DIODE-ZNR 6.2V 5% PD=1W IR=10UA	28480	1902-0551
A10XU1				NOT ASSIGNED		
A10XU2	1251-1365	6		CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS	28480	1251-1365
A10XU3	1251-1365	6		CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS	28480	1251-1365
A10XU4	1251-1365	6		CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS	28480	1251-1365
A10XU5A	1251-1365	6	5	CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS	28480	1251-1365
A10XU5B	1251-1626	2	1	CONNECTOR-PC EDGE 12-CONT/ROW 2-ROWS	28480	1251-1626
A10XU6	1251-1365	6		CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS	28480	1251-1365
A10 MISCELLANEOUS PARTS						
	2190-0007	2	4	WASHER-LK INTL T NO. 6 .141-IN-ID	28480	2190-0007
	2360-0195	0	4	SCREW-MACH 6-32 .312-IN-LG PAN-HD-POZI	28480	2360-0195
A11	0960-0444	2	1	LINE MODULE-UNFILTERED	28480	0960-0444
W3	00436-60023	5	1	CABLE ASSEMBLY-MOLEX, FRONT	28480	00436-60023
W3P1	1251-3537	8	2	CONNECTOR 10-PIN F POST TYPE	28480	1251-3537
†	1251-3966	7	19	CONTACT-CONN U/W-POST-TYPE FEM CRP	28480	1251-3966
W3P2	1251-0512	3	1	CONNECTOR 5-PIN F POST TYPE	28480	1251-0512

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
W7	00436-60024	6	1	CABLE ASSEMBLY-MOLEX, REAR	28480	00436-60024
W7P1	1251-3537	8		CONNECTOR 10-PIN F POST TYPE	28480	1251-3537
†	1251-3966	7		CONTACT-CONN U/W-POST-TYPE FEM CRP	28480	1251-3966
C1	0180-2221	3	1	CAPACITOR-FXD 7200UF+75-10% 15VDC AL	28480	0180-2221
	0360-0270	0	2	TERMINAL-SLDR LUG LK-MTG FOR-#10-SCR	28480	0360-0270
	2680-0128	7	2	SCREW-MACH 10-32 .25-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
†	00436-20055	9	1	CLAMP-CAP 2.062-DIA STL	28480	00436-20055
C2	0180-0197	8	1	CAPACITOR-FXD 2.2UF+10% 20VDC TA	56289	150D225X9020A2
C3	0160-2437	1	3	CAPACITOR-FDTHRU 5000PF +80 -20% 200V	28480	0160-2437
	2190-0009	4		WASHER-LK INTL T NO. 8 .168-IN-ID	28480	2190-0009
	2580-0002	4		NUT-HEX-DBL-CHAM 8-32-THD .085-IN-THK	28480	2580-0002
C4	0160-2437	1		CAPACITOR-FDTHRU 5000PF +80 -20% 200V	28480	0160-2437
	2190-0009	4		WASHER-LK INTL T NO. 8 .168-IN-ID	28480	2190-0009
	2580-0002	4		NUT-HEX-DBL-CHAM 8-32-THD .085-IN-THK	28480	2580-0002
C5	0160-2437	1		CAPACITOR-FDTHRU 5000PF +80 -20% 200V	28480	0160-2437
	2190-0009	4		WASHER-LK INTL T NO. 8 .168-IN-ID	28480	2190-0009
	2580-0002	4		NUT-HEX-DBL-CHAM 8-32-THD .085-IN-THK	28480	2580-0002
F1	2110-0063	2	1	FUSE .75A 250V NTD 1.25X.25 UL (FOR 100, 120 VAC OPERATION)	28480	2110-0063
F1	2110-0421	6	1	FUSE .375A 250V TD 1.25X.25 UL (FOR 220, 240 VAC OPERATION)	75915	313.375
J1				MOUNT-CONNECTOR, FRONT: PART OF W5		
J2				REFERENCE OSCILLATOR, FRONT: P/O W6		
	0590-0011	4	1	NUT-KNRLD-R 5/8-24-THD .125-IN-THK	28480	0590-0011
J3	1250-0083	1	2	CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM	28480	1250-0083
	2190-0016	3	2	WASHER-LK INTL T 3/8 IN .377-IN-ID	28480	2190-0016
	2950-0001	8	2	NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
J4	1250-0083	1		CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM	28480	1250-0083
	2190-0016	3		WASHER-LK INTL T 3/8 IN .377-IN-ID	28480	2190-0016
	2950-0001	8		NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
J5				REFERENCE OSCILLATOR CONNECTOR, REAR PART OF W10		
J6				MOUNT-CONNECTOR, REAR: P/O W9		
J7	1251-3283	1	1	CONNECTOR 24-PIN F MICRORIBBON (PART OF A7, OPTION 022 ONLY)	28480	1251-3283
MECHANICAL PARTS						
MP1	0520-0128	7	1	SCREW-MACH 2-56 .25-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
MP2	1460-1345	5	1	TILT STAND SST	28480	1460-1345
MP3	2190-0045	8	1	WASHER-LK HLCL NO. 2 .088-IN-ID	28480	2190-0045
MP4	2360-0115	4	14	SCREW-MACH 6-32 .312-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
MP5	2360-0334	9	4	SCREW-MACH 6-32 .312-IN-LG 100 DEG	28480	2360-0334
MP6	2510-0192	6	8	SCREW-MACH 8-32 .25-IN-LG 100 DEG	00000	ORDER BY DESCRIPTION
MP7†				NOT ASSIGNED		
MP8	6960-0027	3	1	PLUG-HOLE STD. HD .625-DIA NYLON (OMIT ON OPTION 003)	28480	6960-0027
MP9	5001-0439	8	2	TRIM, FRONT SIDE	28480	5001-0439
MP10	5020-8815	0	1	FRAME-FRONT	28480	5020-8815
MP11	5020-8879	6	2	STRUT-CORNER	28480	5020-8879
MP12	5040-7201	8	4	FOOT (STANDARD)	28480	5040-7201
MP13	5040-7203	0	1	TRIM STRIP	28480	5040-7203
MP14	5060-9971	5	1	COVER-PERFORATED, BOTTOM	28480	5060-9971
MP15	00436-00002	4	1	SUPPORT-RIGHT HAND	28480	00436-00002
MP16	00436-00003	5	1	SUPPORT-LEFT HAND	28480	00436-00003
MP17	00436-00011	5	1	COVER-PLATE, BLANK	28480	00436-00011
MP18	00436-00018	2	1	COVER-TOP, UPPER PERFORATED	28480	00436-00018
MP19	5020-8816	1	1	FRAME-REAR	28480	5020-8816
MP20	00436-00007	9	1	PANEL-REAR	28480	00436-00007
MP21	00436-00008	0	1	SHIELD-POWER SUPPLY	28480	00436-00008
MP22	00436-00013	7	1	COVER-TRANSFORMER	28480	00436-00013
MP23	00436-00001	3	1	SUB-PANEL, FRONT	28480	00436-00001
MP24	00436-00004	6	1	PANEL-FRONT, LOWER	28480	00436-00004
	0370-0914	0	1	BEZEL-PB KNOB, .490LG, .330W, .165HI, JADE	28480	0370-0914

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
MP25	00436-20017	3	1	WINDOW-FRONT	28480	00436-20017
MP26	5040-6927	3	1	STRIP	28480	5040-6927
MP27†	00436-00029	5	1	SCREEN, RFI	28480	00436-00029
MP28	2190-0018	5	1	WASHER-LK HLCL NO. 6 .141-IN-ID	28480	2190-0018
P1	0362-0192	9	10	CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P2	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P3	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P4	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P5	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192

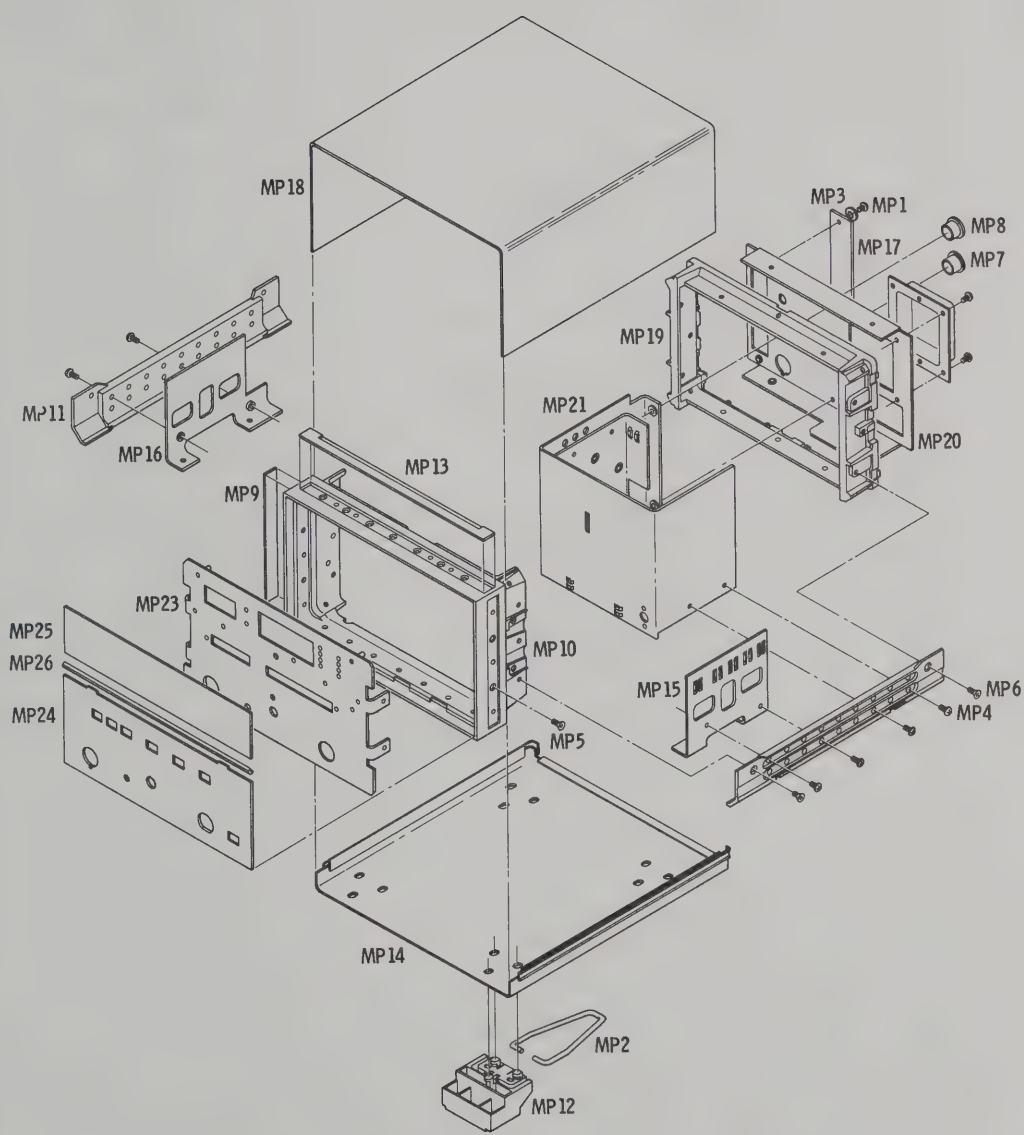


Figure 6-1. Cabinet Parts

See introduction to this section for ordering information
*Indicates factory selected value
†Backdating information in Section VII

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
P6	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P7	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P8	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P9	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
P10	0362-0192	9		CONNECTOR-SGL CONT QDISC-FEM	28480	0362-0192
S1	00436-60028	0	1	POWER SWITCH ASSEMBLY	28480	00436-60028
	00436-60014	4	1	POWER SWITCH CONNECTOR ROD	28480	00436-60014
	0510-0067	2	2	NUT-SHMET-U-TP 4-40-THD .21-WD STL	28480	0510-0067
	2200-0105	4	2	SCREW-MACH 4-40 .312-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
S1C6†	0160-4065	5	1	CAPACITOR-FXD .1UF +-20% 250VAC(RMS)	28480	0160-4065
T1	9100-0647	4	1	TRANSFORMER-POWER 100/120/220/240V	28480	9100-0647
	2360-0139	2	4	SCREW-MACH 6-32 2-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	0590-0025	0	4	NUT-HEX-PLSTC LKG 6-32-THD .172-IN-THK	28480	0590-0025
TB1	5020-8122	2	1	LINE VOLTAGE SELECTOR CARD	28480	5020-8122
U1	1826-0181	1	1	IC V RGLTR TO-3	27014	LM323K
	0626-0002	0	2	SCREW-TPG 6-20 .5-IN-LG PAN-HD-SLT	00000	ORDER BY DESCRIPTION
W1	8120-0619	1	1	CABLE ASSEMBLY	28480	8120-0619
W2	8120-0617	9	1	CABLE ASSY 26AWG 16-CNDCT	28480	8120-0617
W3				SEE INFORMATION FOLLOWING A11		
W4	8120-1733	2	1	CABLE ASSY 26AWG 16-CNDCT (NOT USED ON OPTION 022)	28480	8120-1733
W5†	00436-60032	6	2	CABLE ASSEMBLY-SENSOR INPUT (INCL J1)	28480	00436-60032
	00436-20014	0	2	WASHER-CONNECTOR MOUNT	28480	00436-20014
	1251-3362	7	2	NUT-AUDIO CONN	28480	1251-3362
W6	00436-60029	1	1	CABLE-REFERENCE OSCILLATOR OUTPUT (INCL J2)	28480	00436-60029
W7				SEE INFORMATION FOLLOWING A11		
W8	8120-1378	1	1	CABLE ASSY 18AWG 3-CNDCT JGK-JKT	28480	8120-1378
W9	00436-60032	6		CABLE-SENSOR IN REAR (INCL J6: OPTION 002 AND 003)	28480	00436-60032
	00436-20014	0		WASHER-CONNECTOR MOUNT	28480	00436-20014
	1251-3362	7		NUT-AUDIO CONN	28480	1251-3362
W10	00436-60033	7	1	CABLE-REFERENCE OSCILLATOR REAR (INCL J OPTION 003 ONLY)	28480	00436-60033
W11	8120-3304	7	1	CABLE-DATA (OPT. 022)	28480	8120-3304
W12	11730A	4	1	CABLE ASSEMBLY-5'	28480	11730A
W12	11730B	6	1	CABLE ASSY-SENSOR 10'	28480	11730B
W12	11730C	8	1	CABLE ASSY-SENSOR 20'	28480	11730C
W12	11730D	0	1	CABLE ASSY-SENSOR 50'	28480	11730D
W12	11730E	2	1	CABLE ASSY-SENSOR 100'	28480	11730E
W12	11730F	4	1	CABLE ASSY-SENSOR 200'	28480	11730F
XA1 -						
XA8						
XA9	1251-2309	0	1	NOT ASSIGNED CONNECTOR-PC EDGE 12-CONT/ROW 1-ROW	28480	1251-2309

See introduction to this section for ordering information

*Indicates factory selected value

†Backdating information in Section VII

Table 6-3. Code List of Manufacturers

Mfr Code	Manufacturer Name	Address	Zip Code
00000	ANY SATISFACTORY SUPPLIER		
01121	ALLEN-BRADLEY CO	MILWAUKEE WI	53204
01296	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS TX	75222
02111	SPECTROL ELECTRONICS CORP	CITY OF IND CA	91745
03508	GE CO SEMICONDUCTOR PROD DEPT	AUBURN NY	13201
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85008
06665	PRECISION MONOLITHICS INC	SANTA CLARA CA	95050
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW CA	94042
19701	MEPCO/ELECTRA CORP	MINERAL WELLS TX	76067
20940	MICRO-OHM CORP	EL MONTE CA	91731
24046	TRANSITRON ELECTRONIC CORP	WAKEFIELD MA	01880
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
3L585	RCA CORP SOLID STATE DIV	SOMERVILLE NJ	
30983	MEPCO/ELECTRA CORP	SAN DIEGO CA	92121
32997	BOURNS INC TRIMPOT PROD DIV	RIVERSIDE CA	92507
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
75915	LITTELFUSE INC	DES PLAINES IL	60016
91637	DALE ELECTRONICS INC	COLUMBUS NE	68601

SECTION VII

MANUAL CHANGES

7-1. INTRODUCTION

7-2. This section contains manual change instructions for backdating this manual for HP Model 436A Power Meters that have serial number prefixes that are lower than the prefix listed on the title page.

7-3. MANUAL CHANGES

7-4. To adapt this manual to your instrument, refer to Table 7-1 and make all of the manual

changes listed opposite your instrument's serial number or prefix. The manual changes are listed in serial number sequence and should be made in the sequence listed. For example, Change A should be made after Change B; Change B should be made after Change C. Table 7-2 is a summary of manual changes arranged first by page number, then by component. It should be useful when you are trying to locate changes to a specific page or component, or when you are trying to find all changes related to a subject.

Table 7-1. Manual Changes By Serial Number

Serial Prefix or Number	Make Manual Changes
1447A, 1451A, 1503A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E, D, C, B, A
1448A, 1501A, 1504A, 1505A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E, D, C, B
1538A, 1550A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E, D, C
1606A, 1611A and 1629A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E, D
1713A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E
1725A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F
1746A	S, R, Q, P, O, N, M, L, K, J, I, H, G, F
1803A	S, R, Q, P, O, N, M, L, K, J, I, H
1908A	S, R, Q, P, O, N, M, L, K, J, I
1911A	S, R, Q, P, O, N, M, L, K, J
1917A	S, R, Q, P, O, N, M, L, K
1918A	S, R, Q, P, O, N, M, L
1930A	S, R, Q, P, O, N, M
2008A	S, R, Q, P, O, N
2016A	S, R, Q, P, O
2101A	S, R, Q, P
2236A	S, R, Q
2330A	S, R
2347A, 2347U	S

Table 7-2. Summary of Manual Changes by Page Number (1 of 2)

Page	Description	Change	Page	Description	Change
Title			6-10	A4R6	M
Page	Options	S		A4U5	B, Q
1-1	Paragraph 1-9	S	6-11	A5Q1-5	P
1-3	Paragraph 1-17	S		A4U6-12	B, Q
	Paragraph 1-20	S	6-12	A5XU11	L, S
	Paragraph 1-21	R, S	6-13	A6 (Option 022)	I, Q
1-4	Paragraph 1-25, 1-26	S		A6S1	I
2-2	Paragraph 2-13	I, S	6-14	A7Q1	P
	Paragraph 2-16	I		A7U4	J
2-3	Paragraph 2-17	S	6-15	A6 (Option 024)	D, S
	Paragraph 2-19	S		A6C8	D
2-4	Table 2-2	I, S		A6R6	D
2-5	Figure 2-4	S		A6U1, U4-6	D
3-1	Paragraphs 3-3, 3-9	S		A7	S
3-3	Figure 3-1	S	6-16	A8A1Q2	P
3-5	Figure 3-1	S		A8A1R16	R
3-7	Figure 3-2	S	6-17	A9	E, H, S
3-11	Figure 3-3	S		A9C3	E, S
3-12	Figure 3-3	S		A9C4	S
3-13	Figure 3-3	S		A9C5	S
3-14	Figure 3-3	S		A9F1-3	E
3-23	Paragraph 3-62	S		A9R1-3	H
3-30	Paragraph 3-64	S		A9U1	E
	Paragraph 3-70	S		A9U2	E, H
3-31	Table 3-7	S		A9 Miscellaneous Parts	E
	Table 3-8	S	6-18	C1	Q
5-2	Table 5-1	F, H, L		W3P1 and W7P1	O
5-13	Paragraph 5-23	H		J7	S
6-5	A1A3 Miscellaneous Parts	S		MP7	S
	A2	E	6-19	MP27	G
	A2C14	L	6-20	S1C6	L
	A2C19, 20	O		W5	R, S
	A2C21-28	E, P		W11	S
	A2C29-35	E, P	8-1	Paragraph 8-2, step f.	S
6-6	A2CR1, 2	N, Q	8-6	Figure 8-2	S
	A2CR3	A	8-20	Table 8-2	S
	A2Q4-8, 13	P	8-117	Paragraph 8-68, 8-69	S
	A2Q16-18	P		Table 8-5	S
	A2R4	A		Paragraph 8-72	S
	A2R7	F	8-124	Table 8-6	S
	A2R9	A	8-157	Paragraph 8-155	S
	A2R12	F		Paragraph 8-157	
	A2R18	C, F		(Output Data)	D
6-7	A2R81	C, F	8-159	Figure 8-21	S
	A2U6	J	8-167	Figure 8-25	D, S
6-8	A3	E	8-169	Figure 8-28	S
	A3C12	Q	8-171	Figure 8-29	E
	A3C18-21	E, P		Figure 8-30	R, S
	A3C22	E, P		A2C14	L
	A3Q6-10	P		A2C21-28	E, P
	A3Q12, 17, 21, 23-25	P		A2C29-35	E, P
6-9	A3Q34	P		A2CR3	A
6-10	A4C10	B		A2Q4-8, 13, 16-18	P
	A4Q1	P		A2R4	A
	A4R5	B		A2R7	F

Table 7-2. Summary of Manual Changes by Page Number (2 of 2)

Page	Description	Change
8-171	A2R9	A
	A2R18	C
	A2R81	C, F
	J1 and J6	K, P
8-173	Figure 8-32	E
	Figure 8-33	R, S
	A3C18-22	E, P
	A3Q6-10, 12, 17, 21, 23-25, 34	P
8-175	A4C10	B
	A4Q1	P
	A4R5	B
	A4R6	M
	A4U5-12	Q
8-177	A5Q1-5	P
8-178	Figure 8-38	C, I

Page	Description	Change
8-179	Figure 8-39	I, Q
8-181	A7Q1	P
8-183	Figure 8-43	S
	A6	D
	A6C8	D
	A6R6	D
	A6U1, A6U4-6 (schematic)	D
	Voltage and Ground Table	D
	Part Number Table	D
8-187	A8A1Q2	P
8-188	Circuit Descriptions	E
8-189	Figure 8-46	E, H, S
	Figure 8-48	E, H, L, S
8-191	Figure 8-49	S

7-5. If your instrument's serial number or prefix is not listed on the title page of this manual or in Table 7-1, it may be documented in a yellow MANUAL CHANGES supplement. For additional

important information about serial number coverage, refer to INSTRUMENTS COVERED BY MANUAL in Section I.

7-6. MANUAL CHANGE INSTRUCTIONS

CHANGE A

Page 6-5, Table 6-2:

Delete diode A2CR3.

Page 6-6, Table 6-2:

Add A2R4 0757-0442 FXD RESISTOR 10K OHM 1% .125W F TUBULAR.

Change A2R9 0757-0442 FXD RESISTOR 10K OHM 1% .125W F TUBULAR.

Service Sheet 7, Figure 8-30:

Change schematic as follows:

Remove diode A2CR3 from transistor Q1.

Change resistor A2R9 to 10k Ω .

Connect resistor A2R4 10k Ω between U5B pin 6 and -15 VF supply point.

Add resistor A2R4 to REFERENCE DESIGNATIONS table.

CHANGE B

Page 6-9, Table 6-2:

Change A4C10 to 0160-3466 FXD 100 pF.

Change A4R5 to 0757-0465 FXD 100K OHM 1% .125W.

Change A4U5 IC COUNTER 74192N (PREFERRED PART).

Page 6-10, Table 6-2:

Change A4U6—A4U12 IC COUNTER 74192N (PREFERRED PART).

Service Sheet 9, Figure 8-35:

Change schematic as follows:

Change capacitor A4C10 to 100 pF.

Change resistor A4R5 to 100 k Ω .

CHANGE C

Page 6-6, Table 6-2:

Change A2R18 to 0698-3453, RESISTOR 196K 1% 0.125W F TUBULAR.

Page 6-7, Table 6-2:

Delete A2R81.

Page 8-179, Figure 8-30:

Change A2R18 to 196K.

Delete A2R81 (connect R18 directly to VR2 and R20).

Page 8-186, Figure 8-38:

This circuit board has been incorrectly marked. The "1 0" marking immediately to the left of U1 should be reversed to read "0 1".

CHANGE D

Table 6-2:

A6 was originally 00436-60013. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Change U1, U4-6 to 1820-1201 CD6 IC GATE TTL LS and QUAD 2-INP

Delete A6C8

Delete A6R6

Section VIII:

Under Circuit Descriptions for Service Sheet 5 replace the paragraph covering Output Data with the following:

8-157. Output Data. The Line Buffers are continuously enabled for both local and remote operation. They invert and buffer the measurement and status inputs for continuous application to a remote controller via rear-panel BCD Remote Interface connector J7. Each time that the operating program enters the Display and Remote Talk Subroutine, a low Print output is generated in response to the LSDAV instruction to inform the external controller that the data output of the line selectors is valid. The Print output is then reset high by the HLLD instruction generated at the start of the next program cycle.

CHANGE D (cont'd)

Service Sheet 5:

Replace the Line Latches and Line Buffers portion of the block diagram with Figure 7-1:

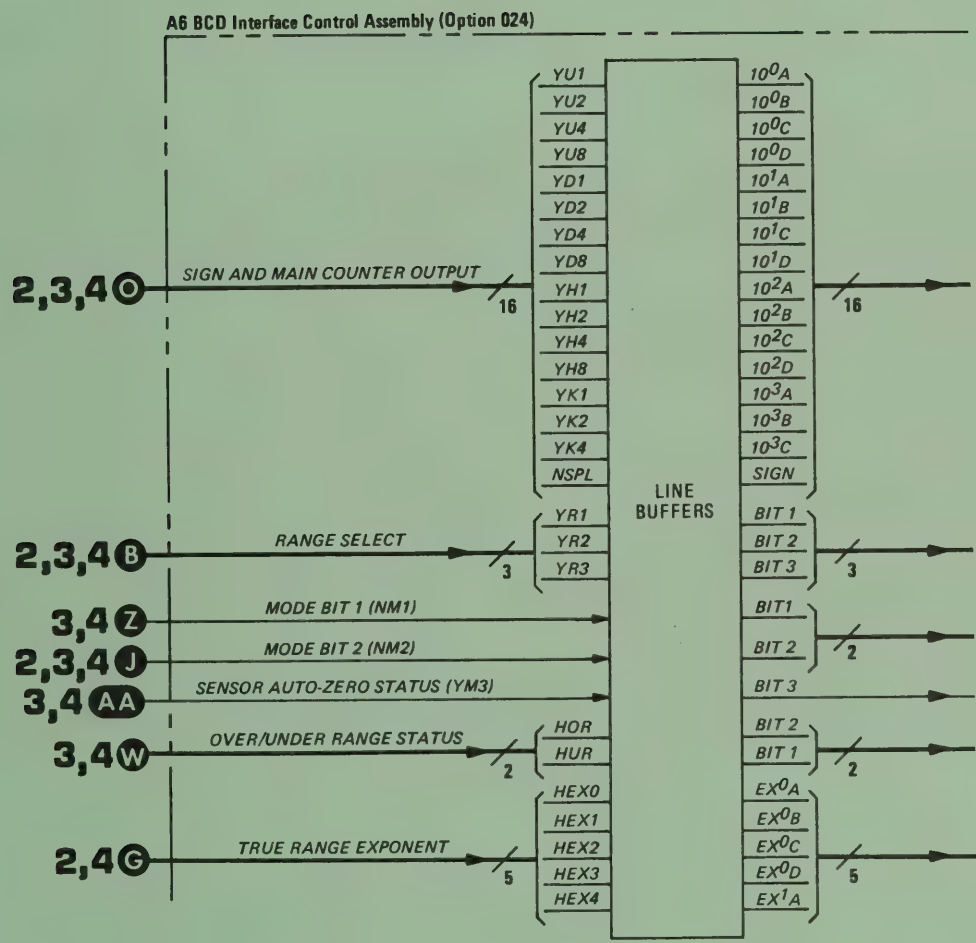


Figure 7-1. BCD Interface (Option 024) Circuit Block Diagram (P/O Change D)

CHANGE D (cont'd)

Service Sheet 13 (Component Locations photograph):

Replace the component locator photograph with Figure 7-2.


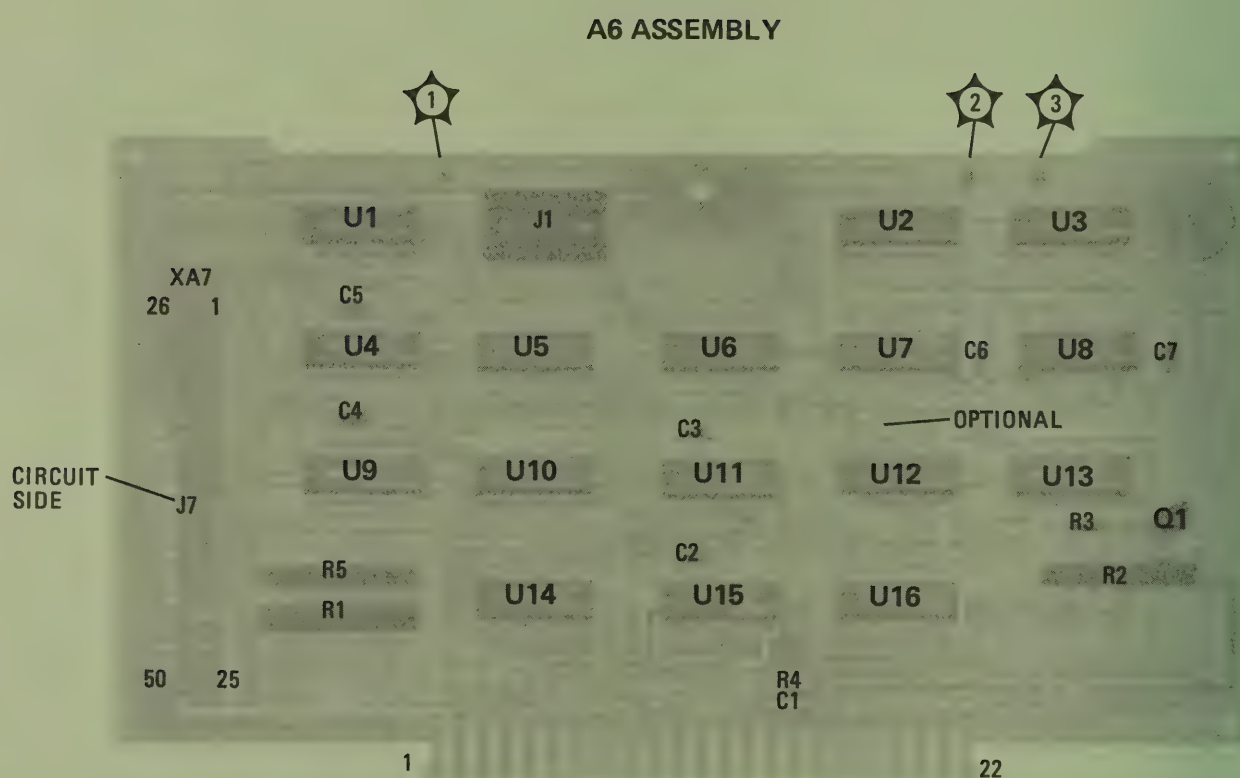


Figure 7-2. A6 BCD Interface Control (Option 024) Assembly Component and Test Point Locations (P/O Change D)

Change the A6 part number to 00436-60013 (upper left side).

Change the Integrated Circuit Voltage and Ground Connections table references for U1 and U4-6 to the same as U2-3 and U9-16.

Change the Transistor and Integrated Circuit Part Numbers table for U1 and U4-6 to 1820-1201.
Delete the 100-Ohm resistor (R6) between the LSDAV input (pin 6) and U3D pin 12.
Delete the 0.01 μ F capacitor (C8) from U3D pin 12 and digital ground.
Replace the center portion of the schematic with Figure 7-3:

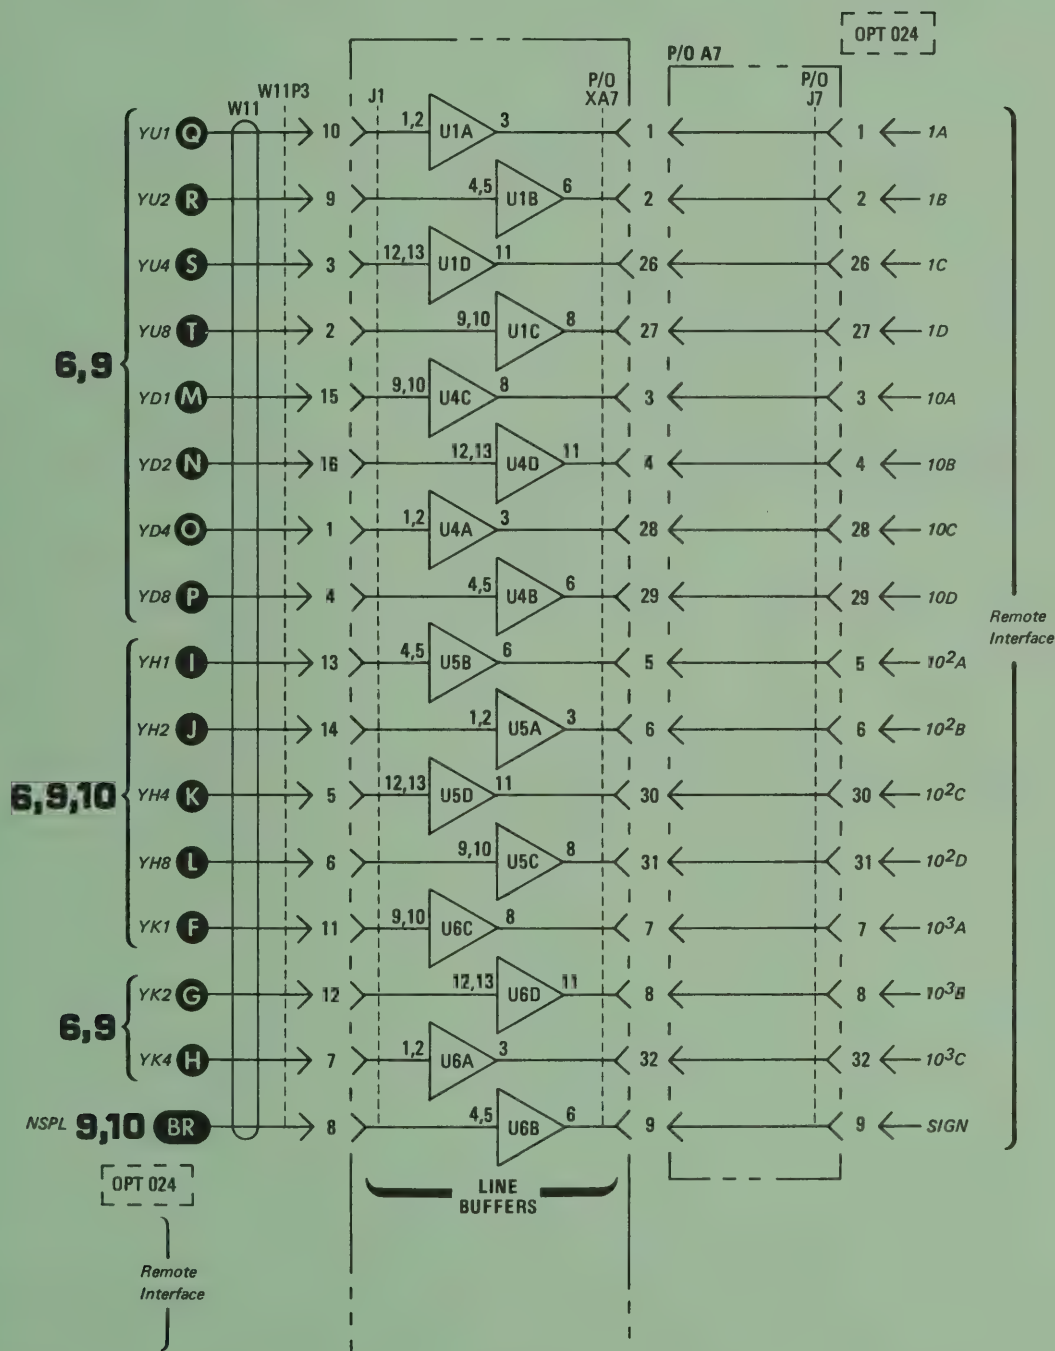

CHANGE E:**Table 6-2:**

A2 was originally 00436-60001. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Delete A2C21-28.

Delete A2C29-35.

A3 was originally 00436-60002. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Delete A3C18-21.

Delete A3C22.

The A9 assembly was originally 00436-60006. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Add A9F1,2 2110-0012 CD1 FUSE .5A 250V 1.25 x .25 UL.

Add A9F3 2110-0010 CD9 FUSE 5A 250V 1.25 x .25 UL.

Add A9U1 1826-0283 CD4 IC V RGLTR 14-DIP-P.

Delete A9C3,4.

Delete A9U1,2.

Under A9 Miscellaneous Parts add the following:

1205-0294 CD1 HEAT SINK SGL PLSTC-PWR-CS.

2110-0269 CD0 FUSEHOLDER-CLIP TYPE .25D-FUSE.

CHANGE E (cont'd)

Service Sheet 7:
Replace the component locator photograph with Figure 7-4.

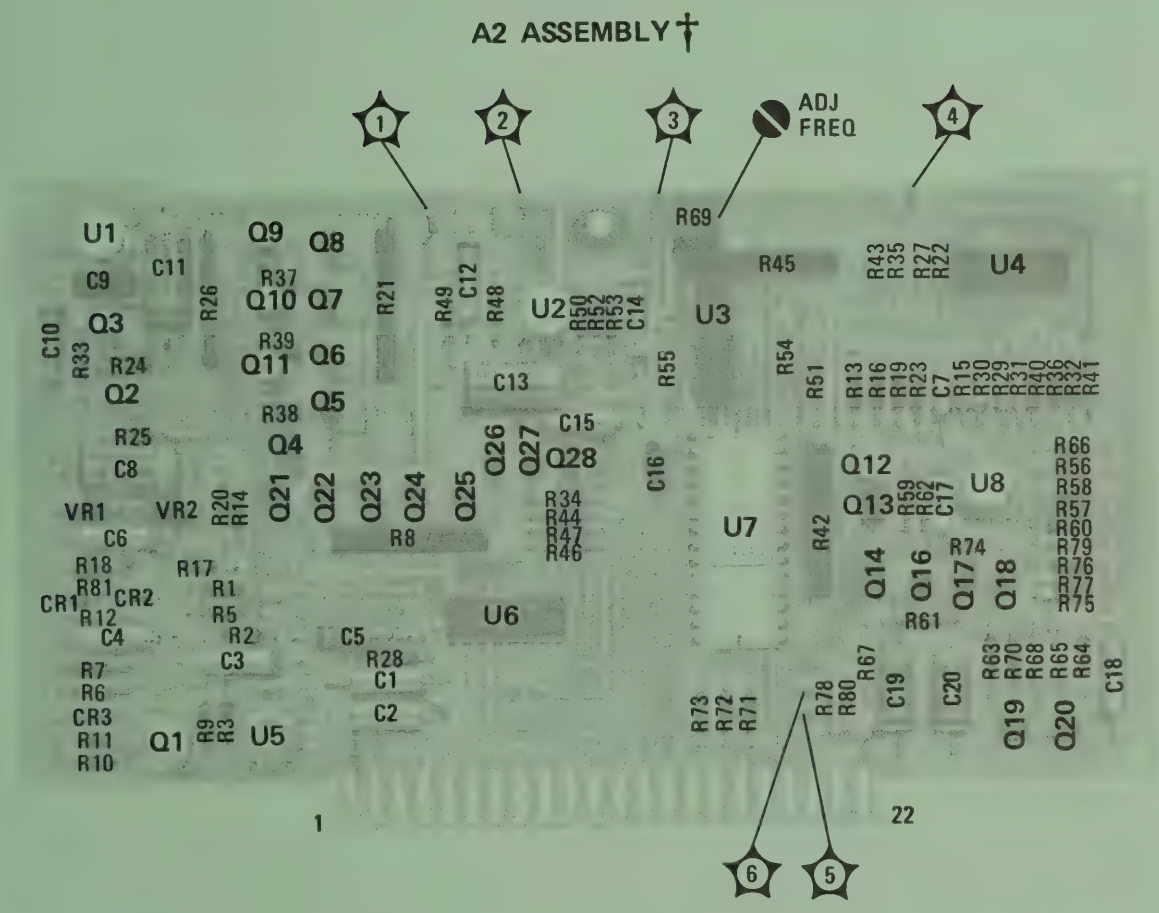


Figure 7-4. A2 AC Gain Assembly Component, Test Point, and Adjustment Locations (P/O Change E)

CHANGE E (cont'd)

Service Sheet 7 (schematic):

- On U5 delete C21, C25, C29 and C30.
- On U1 delete C22, C26 and C31.
- On U2 delete C23, C27, C32 and C33.
- On U8 delete C24, C28 and C34.
- On Q12 delete C35.

Service Sheet 8:

- Replace the component locator photograph with Figure 7-5.

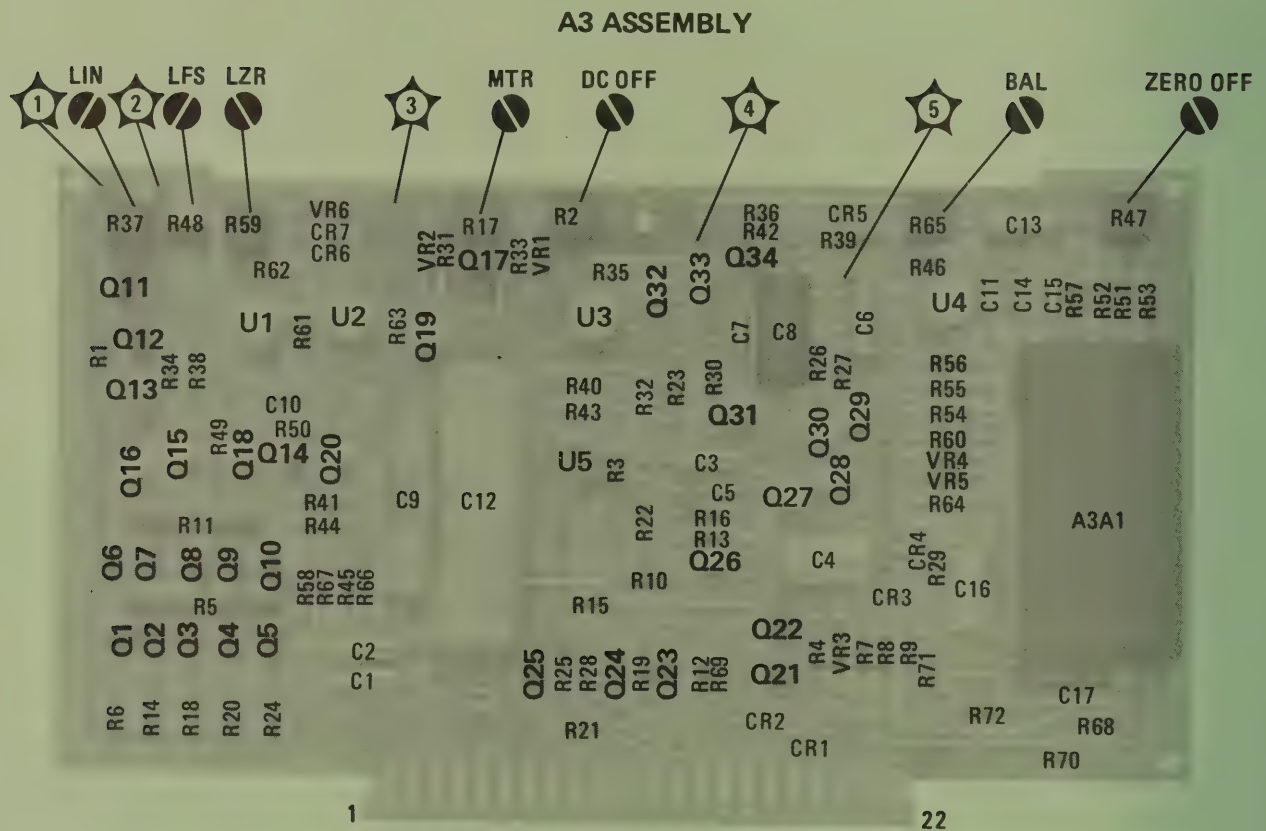


Figure 7-5. A3 A-D Converter Assembly Components, Test Point, and Adjustment Locations (P/O Change E)

CHANGE E (cont'd)

Service Sheet 8 (schematic):

On U5 delete C18, C20 and C22.

On U3 delete C19 and C21.

Service Sheet 15:

Replace the paragraphs labeled Power Supply Rectifier and Regulator Assembly with the following:

Power Supply Rectifier and Regulator Assembly

Diodes A9CR3 through A9CR6 comprise a bridge rectifier circuit with capacitors A9C1 and A9C2 providing filtering for the rectified voltages. The filtered dc voltages are applied to the $+V_{IN}$ (A9TP2) and $-V_{IN}$ (A9TP1) inputs of the Dual-Voltage Regulator (A9U1). The $+15V$ (A9TP4) and $-15V$ (A9TP3) outputs of the Dual-Voltage Regulator track each other. Fuses A9F1 and A9F2 provide protection for the Power Transformer.

Diodes A9CR1 and A9CR2 provide full-wave rectification of the voltage at A9TP6 to be applied to the $+5V$ Regulator. Fuse A9F3 provides protection for diodes A9CR1 and A9CR2 and the Power Transformer.

CHANGE E (cont'd)

Change the references to U1 or U2 in the troubleshooting paragraph to "U1".
Replace the component locator photograph with Figure 7-6.

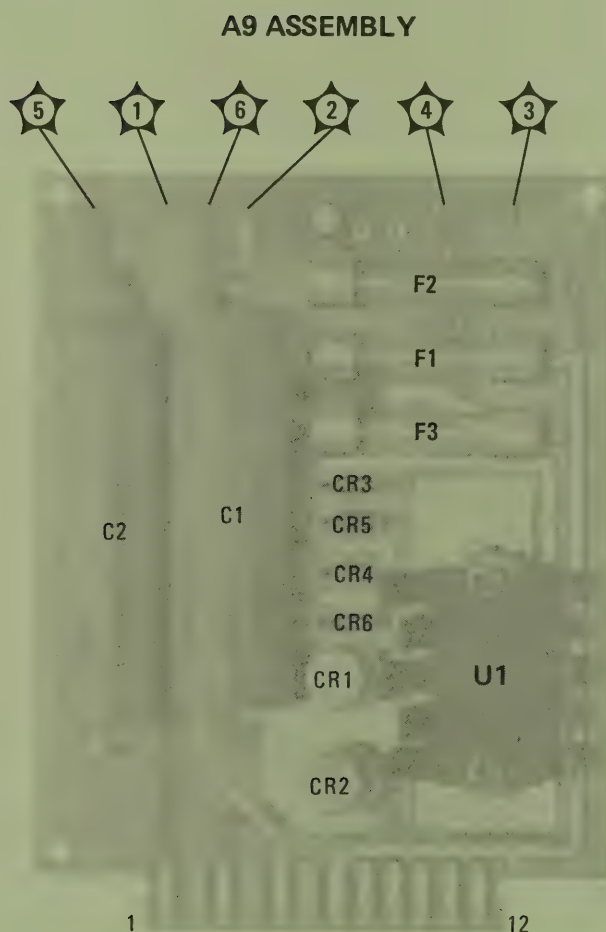


Figure 7-6. A9 Power Supply Rectifier and Regulator Assembly Component and Test Point Locations (P/O Change E)

CHANGE E (cont'd)

Replace the A9 portion of the schematic with Figure 7-7.

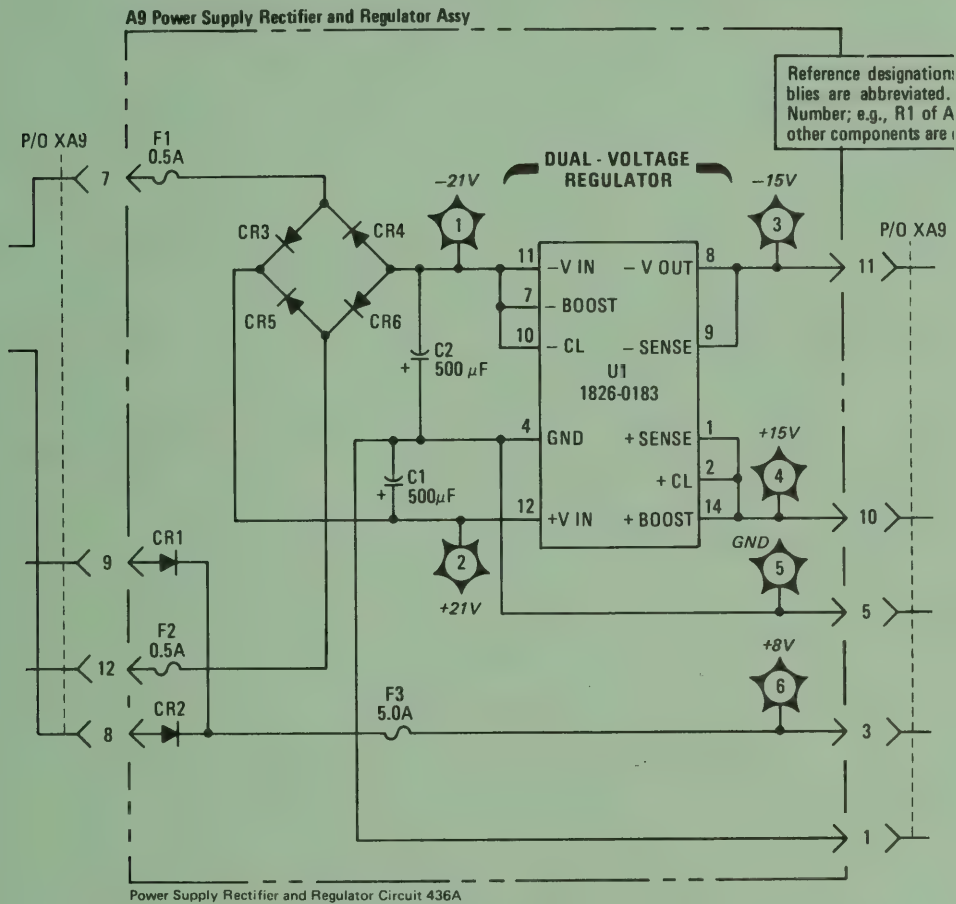


Figure 7-7. Power Supply Rectifier and Regulator Assembly Schematic Diagram (P/O Change E)

CHANGE F:

Table 5-1:

Replace the portion of Table 5-1 for selecting A2R7, R12, R18 and R81 with the following:

Table 5-1. Factory Selected Components

Reference Designator	Selected For	Normal Value Range	Service Sheet
A2R18	A display readout of 100.0 mW if the Power Meter, after being properly adjusted, passes all of the Instrumentation Accuracy Tests specified in Section IV except for the high range (100 mW/20 dBm)	162K (150KΩ to 250KΩ)	7

CHANGE F (cont'd)

Table 6-2:

Delete the asterisk (*) next to A2R7, R12, R18 and R81.

Service Sheet 7 (schematic):

Delete the asterisk next to A2R7 and A2R12.

Delete A2R81 between A2R18 and the point connecting A2VR2 and A2R20.

CHANGE G:

Table 6-2:

Delete MP27

CHANGE H:

Adjustments:

Delete the NOTE before paragraph 5-16.

Delete paragraph 5-23.

Table 6-2:

The A9 assembly was originally 00436—60038. However, the part number shown is the recommended replacement. Therefore, no manual change is required.

Delete A9R1-3

Change U2 to 1826-0106 CD0 VOLTAGE REG. 15V LM340T-15.

Service Sheet 15:

Replace the component locator photograph with Figure 7-8.

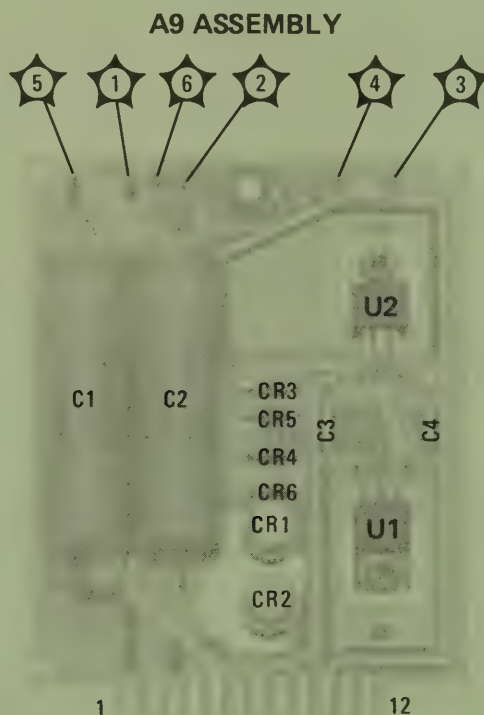


Figure 7-8. A9 Power Supply Rectifier and Regulator Assembly Component and Test Point Locations (P/O Change H)

CHANGE H (cont'd)

Replace the A9 portion of the schematic with Figure 7-9.

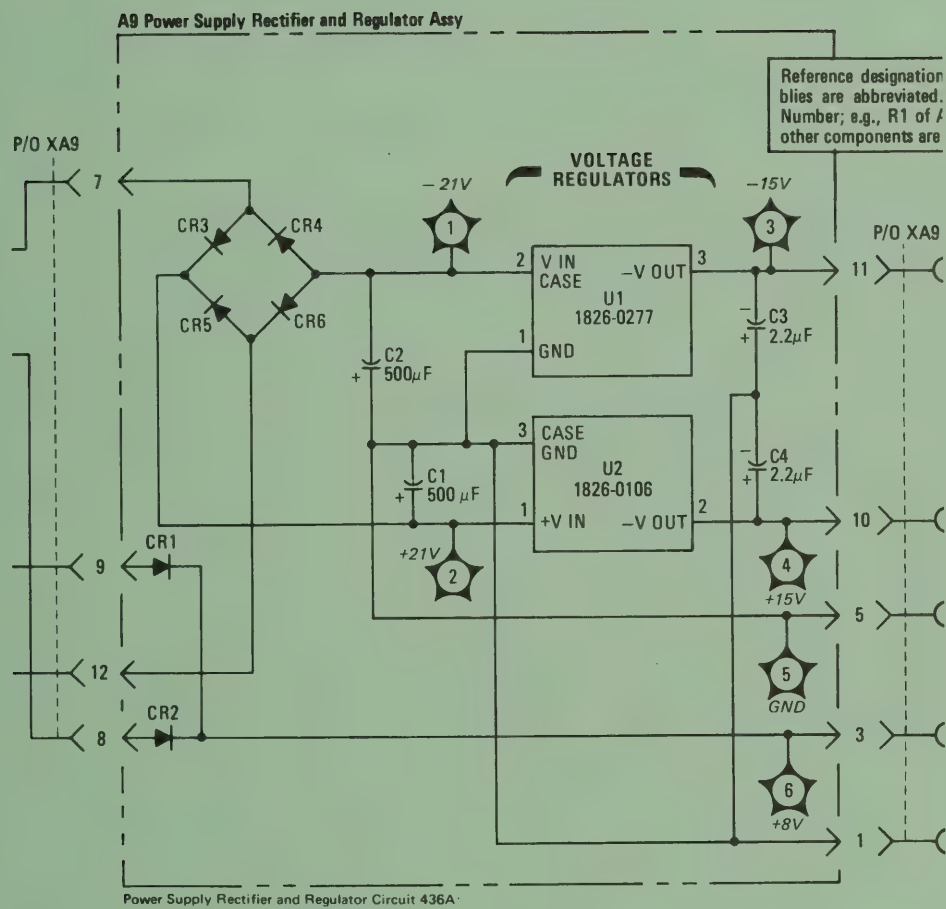


Figure 7-9. Power Supply Rectifier and Regulator Assembly Schematic Diagram (P/O Change H)

CHANGE I:**Section II:**

Under Circuit Options change the first sentence to read the following:

Jumper options are available for selecting a filtered or unfiltered dc RECORDER OUTPUT or for changing the TALK and LISTEN addresses when Hewlett-Packard Interface Bus Option 022 is installed.

Delete the paragraph on Address Selection.

Add the following to the bottom of Table 2-2:

Hewlett-Packard Interface Bus Control Assembly A6 (Option 022)	11	<p>The factory installed jumpers select TALK address M and LISTEN address — (minus sign) for the Power Meter. As shown on Service Sheet 11, either of these addresses causes a high enable output at U2C-10. If it is desired to change these addresses, refer to Service Sheet 11 and Table 2-2 and reconnect the jumpers to decode the appropriate ASCII characters. For example, to change to TALK address E and LISTEN address %, the jumpers would be reconnected as follows.</p> <p>ASCII code (logic 1=0V)</p> <p style="text-align: center;">NOTE</p> <p><i>For instruments with serial prefixes 1550A and below, the circuit board has been incorrectly marked. Refer to the component location diagram for the A6 assembly on Service Sheet 11. The “1 0” immediately to the left of U1 should be reversed to read “0 1”.</i></p> <table><tr><td></td><td>D</td><td>D</td><td>D</td><td>D</td><td>D</td><td>D</td><td>D</td></tr><tr><td></td><td>I</td><td>I</td><td>I</td><td>I</td><td>I</td><td>I</td><td>I</td></tr><tr><td></td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr><tr><td></td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr></table> <table><tr><td>M</td><td>1</td><td>0</td><td>0</td><td>1</td><td>1</td><td>0</td><td>1</td><td rowspan="2">Note: DI07 and DI06 must always be 1 and 0, respectively, for TALK address.</td></tr><tr><td>E</td><td>1</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>1</td></tr></table> <table><tr><td>—</td><td>0</td><td>1</td><td>0</td><td>1</td><td>1</td><td>0</td><td>1</td><td rowspan="2">Note: DI07 and DI06 must always be 0 and 1, respectively, for LISTEN address.</td></tr><tr><td>%</td><td>0</td><td>1</td><td>0</td><td>0</td><td>1</td><td>0</td><td>1</td></tr></table> <p>Jumpers</p> <table><tr><td>M</td><td>U1B-13</td><td>HI01</td><td rowspan="5">E, %, Disconnect jumper from HI04 and reconnect to LI04.</td></tr><tr><td>—</td><td>U1B-12</td><td>LI02</td></tr><tr><td></td><td>U1B-10</td><td>HI03</td></tr><tr><td></td><td>U1B- 9</td><td>HI04</td></tr><tr><td></td><td>U2C- 9</td><td>HI05</td></tr></table>		D	D	D	D	D	D	D		I	I	I	I	I	I	I		0	0	0	0	0	0	0		7	6	5	4	3	2	1	M	1	0	0	1	1	0	1	Note: DI07 and DI06 must always be 1 and 0, respectively, for TALK address.	E	1	0	0	0	1	0	1	—	0	1	0	1	1	0	1	Note: DI07 and DI06 must always be 0 and 1, respectively, for LISTEN address.	%	0	1	0	0	1	0	1	M	U1B-13	HI01	E, %, Disconnect jumper from HI04 and reconnect to LI04.	—	U1B-12	LI02		U1B-10	HI03		U1B- 9	HI04		U2C- 9	HI05
	D	D	D	D	D	D	D																																																																													
	I	I	I	I	I	I	I																																																																													
	0	0	0	0	0	0	0																																																																													
	7	6	5	4	3	2	1																																																																													
M	1	0	0	1	1	0	1	Note: DI07 and DI06 must always be 1 and 0, respectively, for TALK address.																																																																												
E	1	0	0	0	1	0	1																																																																													
—	0	1	0	1	1	0	1	Note: DI07 and DI06 must always be 0 and 1, respectively, for LISTEN address.																																																																												
%	0	1	0	0	1	0	1																																																																													
M	U1B-13	HI01	E, %, Disconnect jumper from HI04 and reconnect to LI04.																																																																																	
—	U1B-12	LI02																																																																																		
	U1B-10	HI03																																																																																		
	U1B- 9	HI04																																																																																		
	U2C- 9	HI05																																																																																		

Table 6-2:

The A6 assembly was originally 00436-60005. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Delete A6S1.

CHANGE I (cont'd)

Service Sheet 11 (Figure 8-38):
Replace this figure with Figure 7-10.

A6 ASSEMBLY

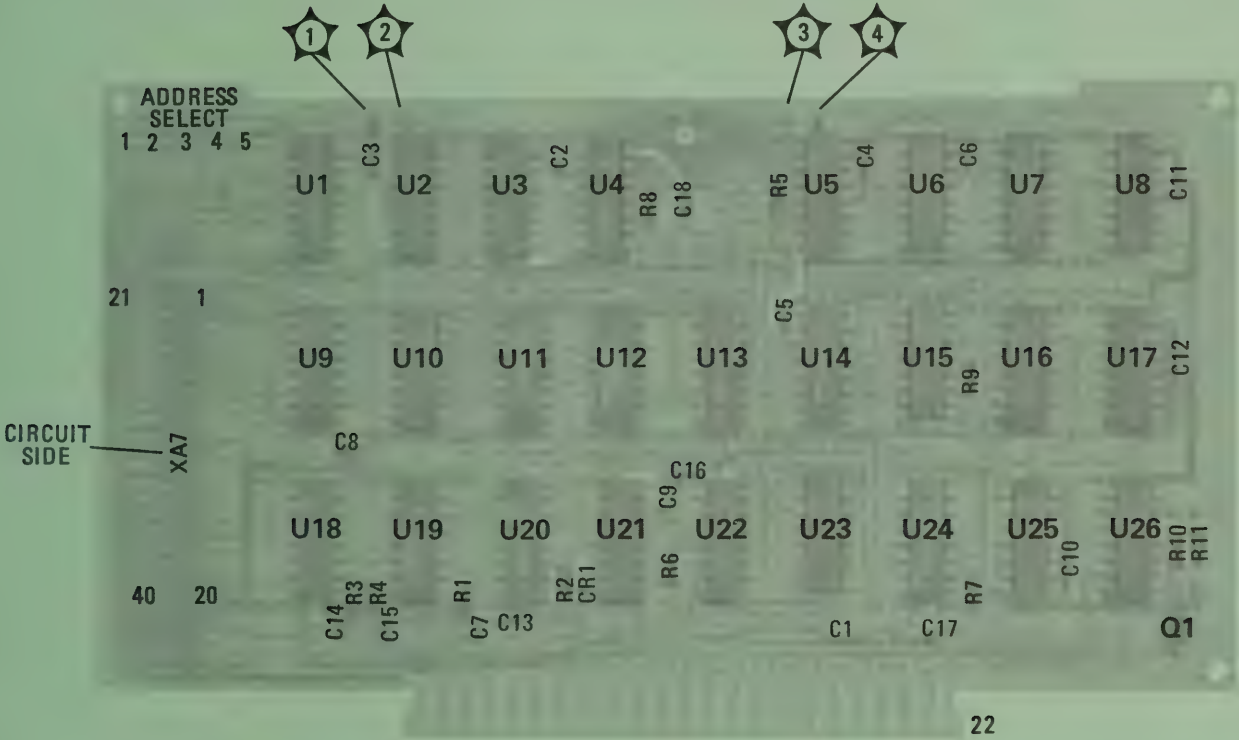


Figure 7-10. A6 HP-IB (Option 022) Control Assembly Component and Test Point Locations (P/O Change I)

CHANGE I (cont'd)

Service Sheet 11 (schematic):

Replace the ADDRESS DECODER portion of the schematic with Figure 7-11.

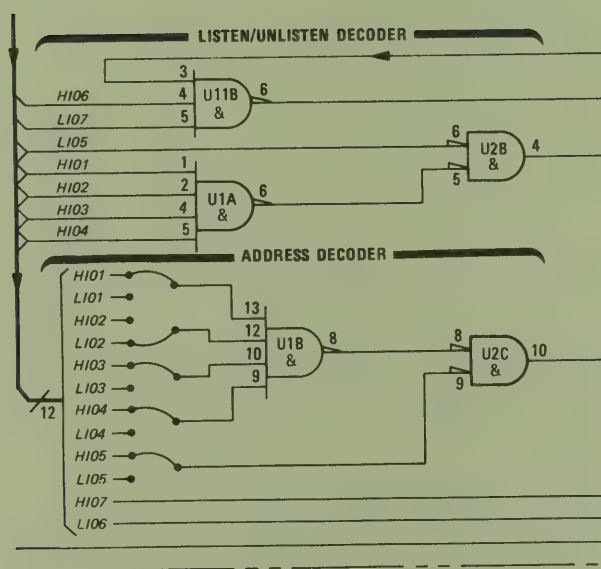


Figure 7-11. P/O HP-1B (Option 022) Control Assembly Schematic Diagram (P/O Change I)

CHANGE J:

Table 6-2:

A2U6 was originally 1816-0615. However, the part number shown is the recommended replacement. Therefore, no manual change is required.

A7U4 was originally 1816-0614. However, the part number shown is the recommended replacement. Therefore, no manual change is required.

CHANGE K:

Service Sheet 7 (schematic):

Replace the J1 and J6 Input Connectors (left side of schematic) with Figure 7-12.

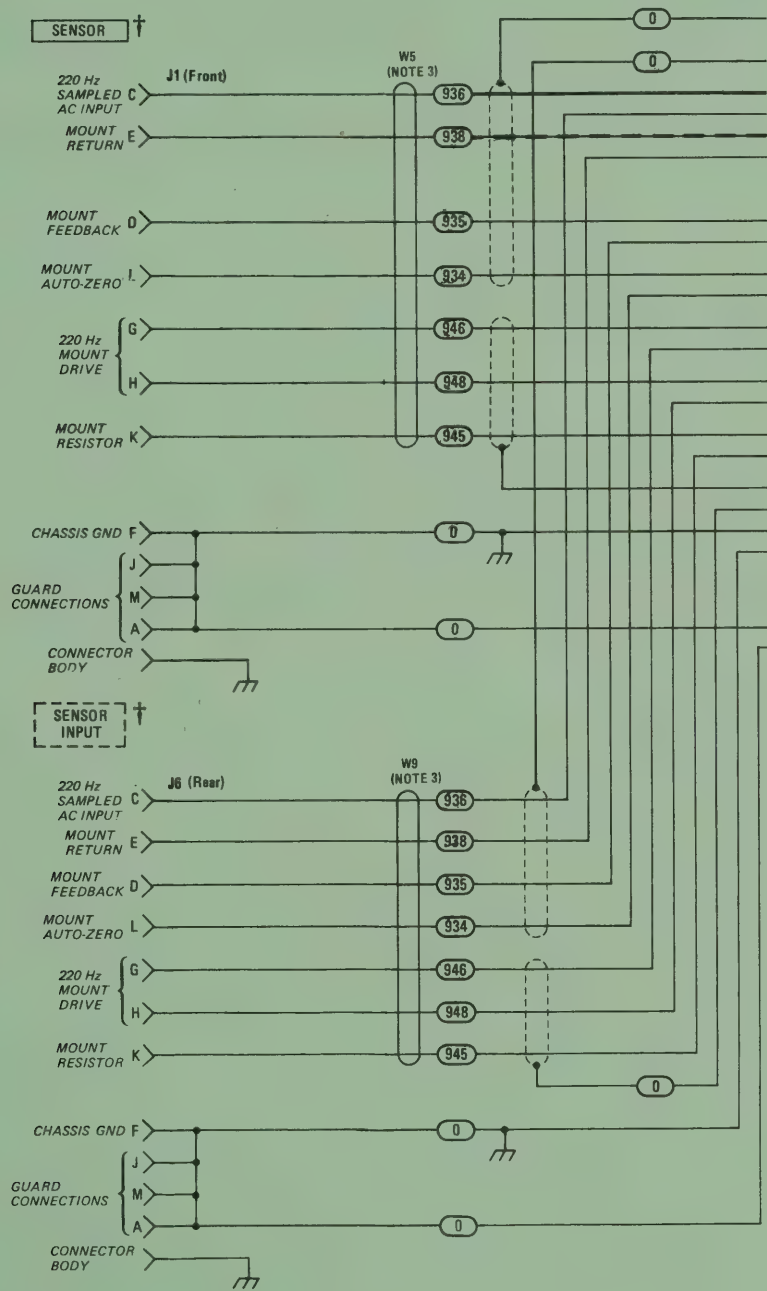


Figure 7-12. P/O AC Gain Assembly Schematic Diagram (P/O Change K)

CHANGE L:

Table 6-2:

Add A5XU11 1200-0553 CD5 SOCKET-IC 28-CONT DIP-SLDR

Delete S1C6

Service Sheet 15 (schematic):

At the bottom of the A11 assembly (left side of schematic) delete C6.

CHANGE M:

Table 6-2:

A4R6 was originally 0757-0438. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

CHANGE N:

A2CR1 and A2CR2 were originally 1901-0518. However, the part numbers shown in the table are the recommended replacements. Therefore, no manual change is required.

CHANGE O:

Table 6-2:

A2C19 and A2C20 were originally 0160-0164. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

The part number under W3P1 and W7P1 was originally 1251-3897. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

CHANGE P:

Table 6-2:

Add A2C21-A2C28 0160-0575 CD4 CAPACITOR-FXD .047 μ F \pm 20% 50VDC CER

Add A2C29-A2C35 0160-3877 CD5 CAPACITOR-FXD 100pF \pm 20% 200VDC CER

A2Q4-8, A2Q13, A2Q16-18, A3Q6-10, A3Q12, A3Q17, A3Q21, A3Q23-25, A3Q34, A4Q1, A5Q1-5, A7Q1 and A8Q2 originally had the part number 1854-0071. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Add A3C18-21 0160-3879 CD7 CAPACITOR-FXD .01 μ F \pm 20% 100VDC CER

Add A3C22 0160-3877 CD5 CAPACITOR-FXD 100pF \pm 20% 200VDC CER

Service Sheet 7 (schematic):

Replace the component locator photograph with Figure 7-13.

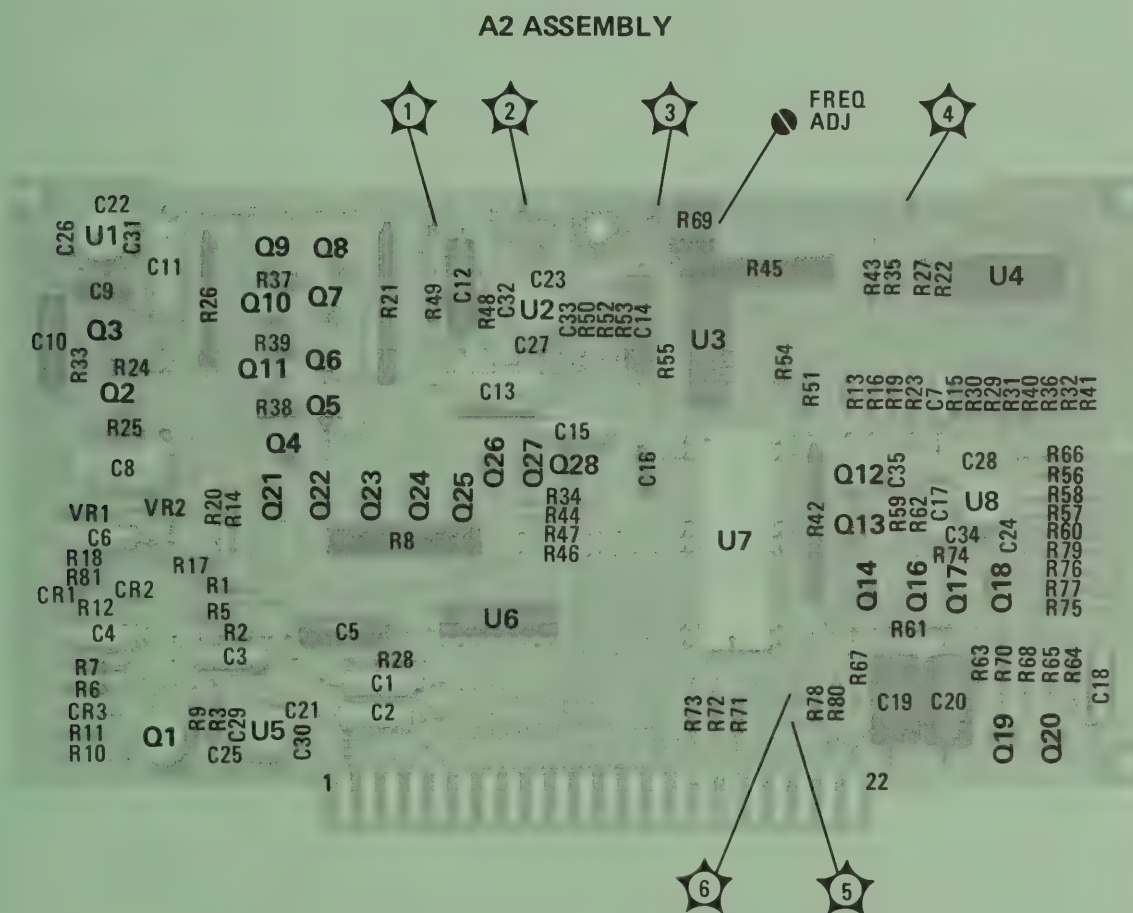


Figure 7-13. A2 AC Gain Assembly Component, Test Point and Adjustment Locations (P/O Change P)

Add the following capacitors between Analog (A) ground and the designated point:

C21 .047 μ F, U5A pin 4

C25 .047 μ F, U5A pin 8

C22 .047 μ F, U1 pin 4

C26 .047 μ F, U1 pin 7

C23 .047 μ F, U2B pin 4

C27 .047 μ F, U2B pin 8

C24 .047 μ F, U8 pin 4

C28 .047 μ F, U8 pin 7

CHANGE P (cont'd)

Add the following capacitors between the designated points:

- C29 100 pF, U5B pins 5 and 6
- C30 100 pF, U5A pins 2 and 3
- C31 100 pF, U1 pins 2 and 3
- C32 100 pF, U2B pins 5 and 6
- C33 100 pF, U2A pins 2 and 3
- C34 100 pF, U8 pins 2 and 3
- C35 100 pF, Q12 pins D and S

Replace the J1 and J6 Input Connectors (left side of schematic) with Figure 7-14.

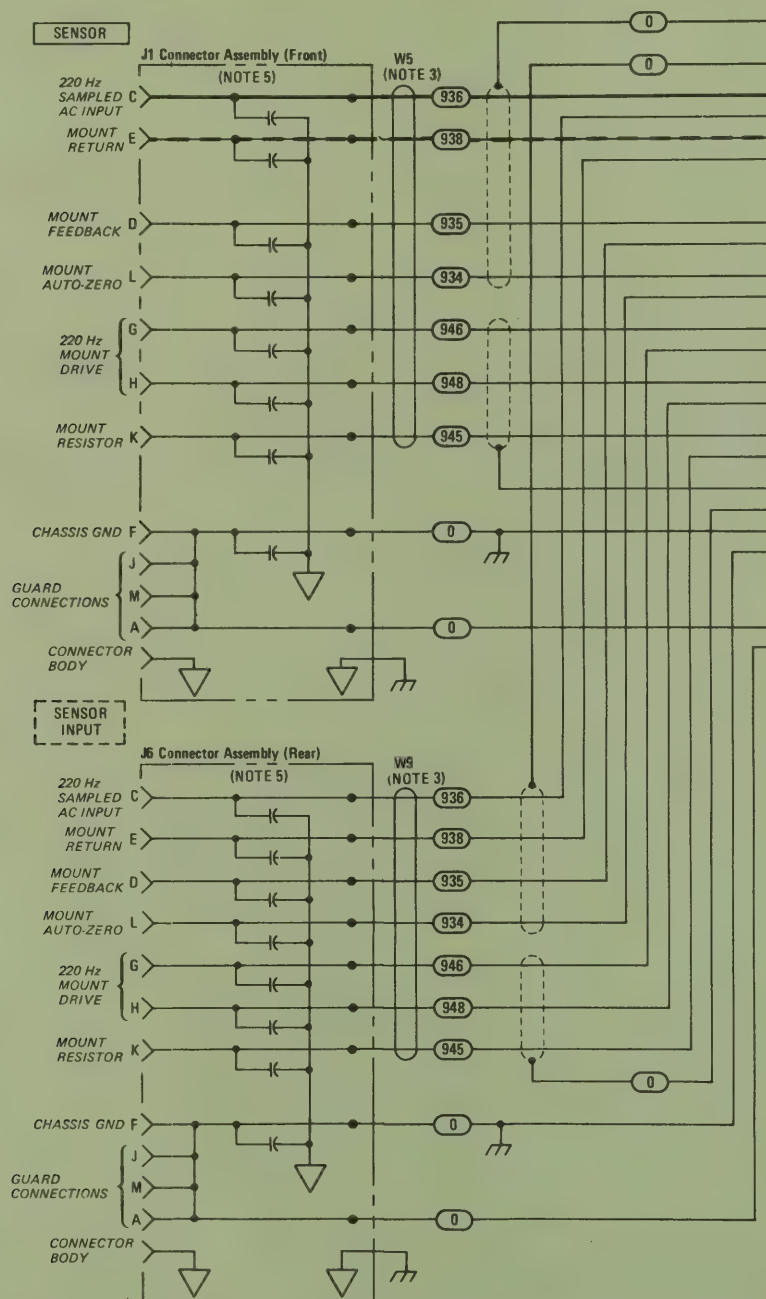


Figure 7-14. P/O AC Gain Assembly Schematic Diagram (P/O Change P)

CHANGE P (cont'd)

Service Sheet 8 (schematic):

Replace the component locator photograph with Figure 7-15.

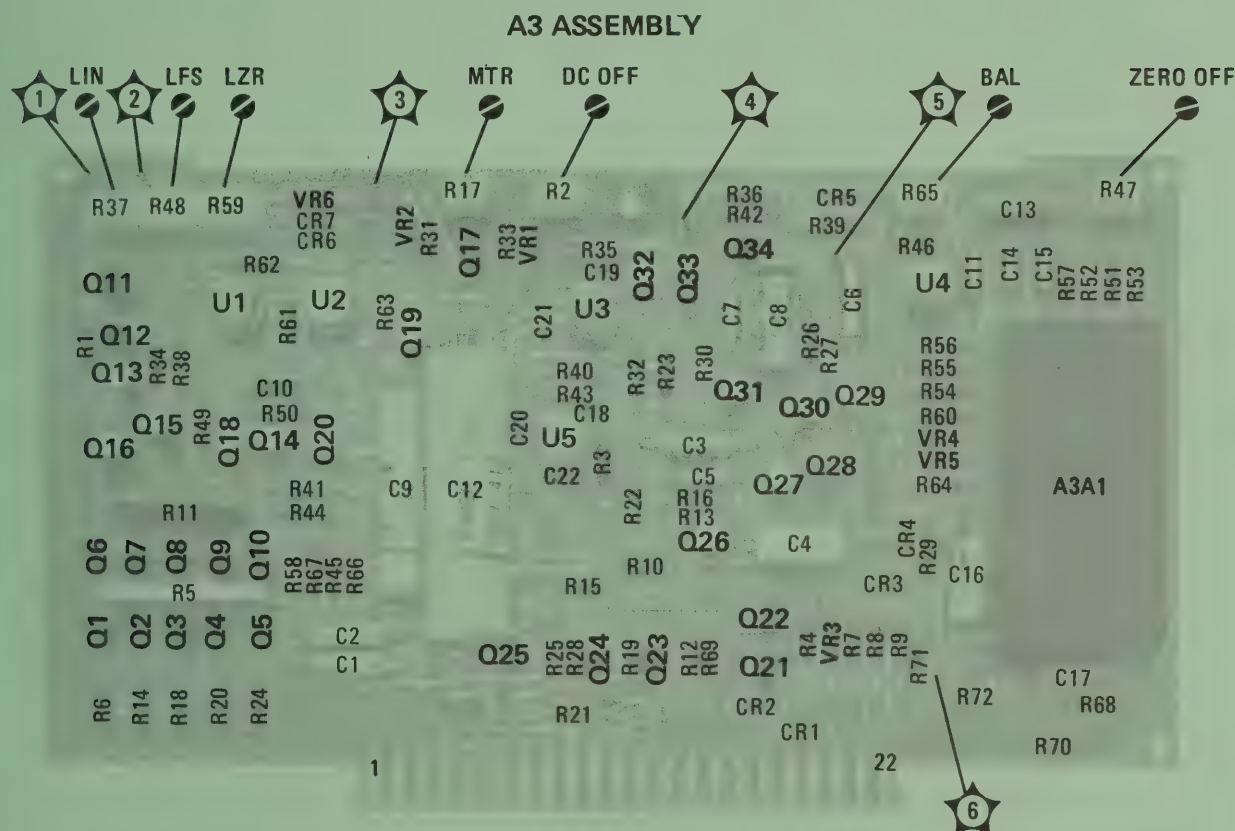


Figure 7-15. A3 A-D Converter Assembly Components, Test Point, and Adjustment Locations (P/O Change P)

Add the following capacitors between the designated points and chassis (C) ground:

- C18 .01 μ F, U5A pin 4
- C19 .01 μ F, U3A pin 4
- C20 .01 μ F, U5B pin 8
- C21 .01 μ F, U3A pin 7
- C22 100 pF, U5A pins 2 and 3

CHANGE Q:

Table 6-2:

A2CR1,2 was originally 1901-0895. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

A3C12 was originally 0160-4272. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

A4U5-12 was originally 1820-0546. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

The A6 assembly (Option 022) originally was 00436-60047. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

The capacitor clamp below C1 was originally 0180-0078. However, the part number shown is the recommended replacement. Therefore, no manual change is required.

Service Sheet 11 (schematic):

Replace the A6 portion of the schematic with Figure 7-16.

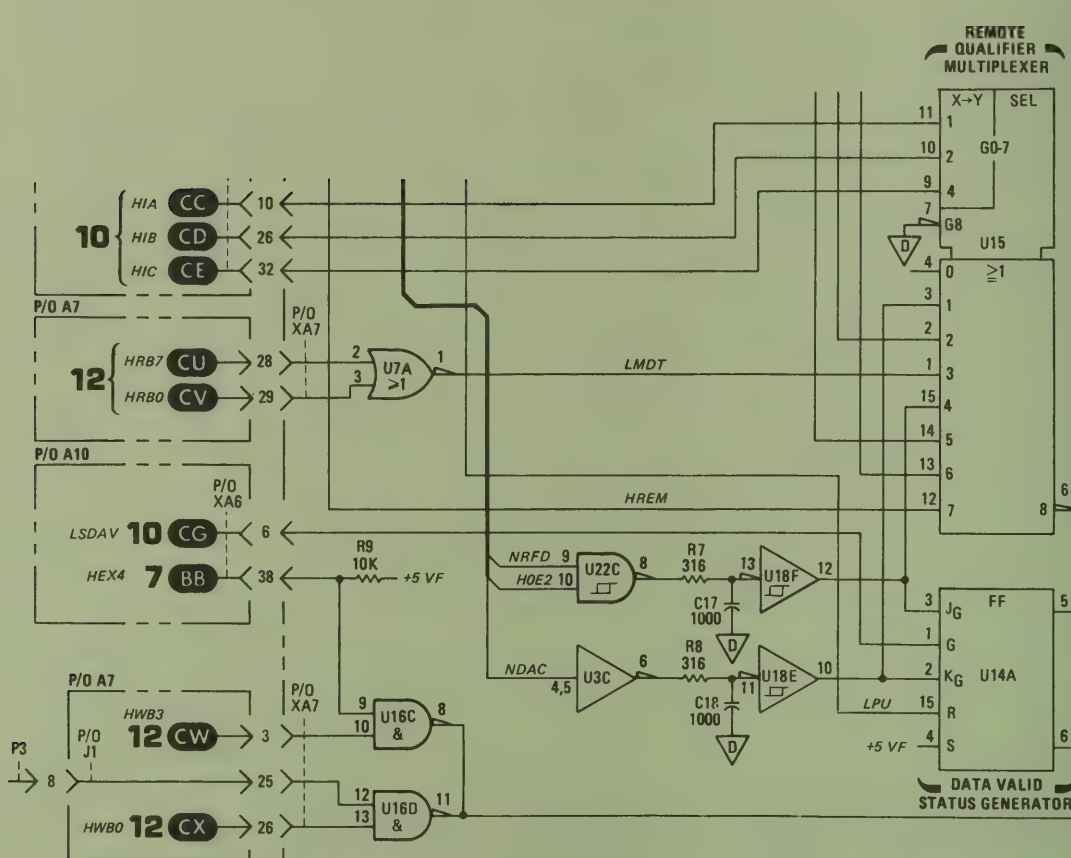


Figure 7-16. HP-IB (Option 022) Control Assembly Schematic Diagram (P/O Change Q)

CHANGE R:

Section I (Options):

Change the description for Option 003 to the following:

A rear panel input connector replaces the standard front panel input connector; a rear panel POWER REF OUTPUT connector replaces the standard front panel connector.

Table 6-2:

A8R16 was originally 0698-8581. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Under the description for W5 add to omit with Option 003.

Service Sheet 7:

Under notes item 3 (right side of schematic) add W5 (Omitted on Option 003) and delete from W5 and W9 connected in parallel (Option 002 and 003).

Service Sheet 8:

Under notes item 4 (right side of schematic) add W5 (Omitted on Option 003) and delete from W5, W9 connected in parallel (Option 002 and 003).

CHANGE S:

Title Page:

Add Option 002 and 024.

Section I:

Under Instruments Covered By Manual in the first sentence of the first paragraph add Option 002 before Option 003 and add Option 024 after Option 004.

Replace paragraph 1-17 with the following:

1-17. Two programming interfaces are available as options for the Power Meter — a Hewlett-Packard Interface Bus (HP-IB) Option 022; and a BCD Interface, Option 024. Both interfaces allow full remote control of all the power meter functions (CAL FACTOR can be programmed to either 100% or the CAL FACTOR which has been manually set on the front panel). These options may be added by the user at a later time as his requirements grow.

Add the following between paragraph 1-19 and 1-20:

Option 002. A rear panel input connector is connected in parallel with the front panel input connector.

CHANGE S (cont'd)

Change the definition of Option 003 to the following:

A rear panel input connector is connected in parallel with the front panel input connector. A rear panel POWER REF OUTPUT connector replaces the standard front panel connector.

Replace paragraphs 1-23 and 1-24 with the following:

1-24. Remote Control Options

Options 022 and 024 add remote interface capability to the Power Meter. Option 022 is compatible with the Hewlett-Packard Interface Bus (AH1, C0, DC2, DT1, L2, LE0, PP0, RL2, SH1, SR0, T3, TE0); Option 024 uses dedicated input/output lines to enable remote programming and to provide parallel, BCD-coded output data.

Option 022 or 024 may be ordered in kit form under HP part numbers 00436-60035 and 00436-60034 respectively. Each kit contains a control assembly printed-circuit board, an input/output assembly printed circuit board, and a data cable for interconnection.

Section II:

Replace paragraph 2-14 with the following:

Jumper options are available for selecting a filtered or unfiltered dc RECORDER OUTPUT, and for selecting the desired programming of the SENSOR ZERO function when BCD Interface Option 024 is installed. Table 2-2 lists the factory installed jumper connections and indicates how they may be reconnected to select the options.

Add the following between paragraphs 2-17 and 2-18:

BCD Interface Bus Option 024. Interconnection data for BCD Interface Option 024 is provided in Figure 2-4. Power Meter programming and output data format is described in Section III, Operation.


CHANGE S (cont'd)

Replace paragraph 2-19 with the following:
Interface Connectors. Interface mating connectors for Options 022 and 024 are indicated in Figures 2-3 and 2-4, respectively.
Add the following to Table 2-2:

BCD Interface Control Assembly A6 (Option 024)	13	The factory-installed jumper enables the SENSOR ZERO function to be programmed only when the REMOTE ENABLE input to the Power Meter is low. If it is desired to program the SENSOR ZERO function independently of the remote enable input, reconnect the jumper to provide +5V to U12C-9 as shown on Service Sheet 8.
--	----	---

CHANGE S (cont'd)

After Figure 2-3 add Figure 7-17:

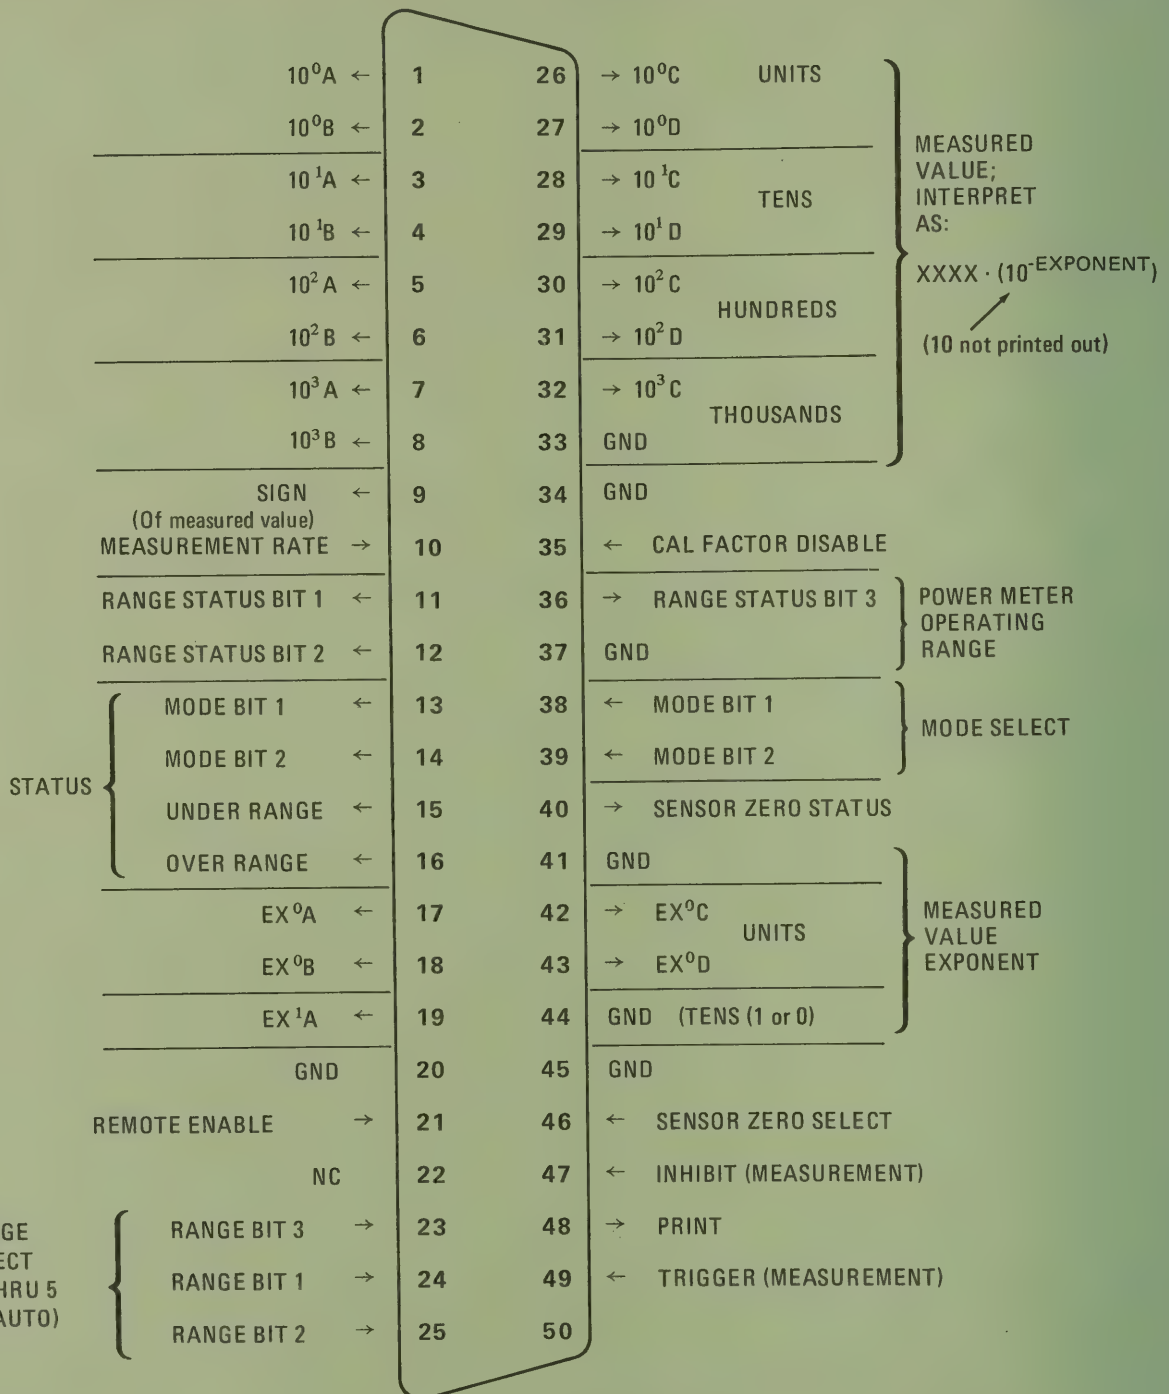

Logic Levels

The BCD Interface logic levels are TTL compatible, i.e., the true state is 2.5 Vdc to +5 Vdc and the false state is 0.0 Vdc to 0.4 Vdc.

Programming and Output Data Format

Refer to Section III, Operation

Mating Connectors — HP 1251-0086

Mating Cables Available — HP 562A-16C
for 5055A Printer

Figure 7-17. BCD Interface Connection (P/O Change S)

CHANGE S (cont'd)**Section III:**

In paragraph 3-3 after (Option 022) add “or BCD Remote Interface Option 024, respectively,”.

In the second sentence of paragraph 3-9 change “two” to “three” and add “Remote BCD Operation” after Local Operation.

For item 6 of Figure 3-1 add “and BCD Option 024” after Option 022.

In Figure 3-1 replace the definition of item 19 with the following:

Available only with Options 002 or 003. Option 002 and 003 have a rear panel input connector wired in parallel with the front panel **14** SENSOR connector.

In Figure 3-1 under item 25 add “and 024” after 022.

In the NOTE under Operator's Checks (Local Operation) step 1 add “BCD or” before Hewlett.

At the end of the Operator's Checks (Local Operation) add the following:

REMOTE BCD OPERATION**WARNINGS**

BEFORE CONNECTING LINE POWER TO THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

CAUTION

DO NOT TWIST the body of the power sensor when connecting or disconnecting it to other instruments. Twisting may cause major damage to the power sensor's electrical circuits.

1. Connect the Power Sensor to the Power Meter with the Power Sensor Cable.
2. Connect the Power Sensor to the **8** POWER REF OUTPUT connector.
3. Connect the Power Cable to the power outlet and **20** Line Power Module receptacle, and set the **9** LINE ON-OFF switch to ON (in).
4. Set the Power Meter **12** CAL FACTOR % switch to 100 and the **7** POWER REF switch to off (out).

NOTE

Perform steps 5 through 20 only if Power Meter is connected to HP 8481A, 8482A, or 8483A Power Sensor. If Power Meter is connected to 8481H or 8482H Power Sensor, proceed to step 21.

5. Set the Remote Enable input to the Power Meter to logical 1 (+2.5 to +5 Vdc), and program the Power Meter as follows:

Mode	WATT
Range	1
10 SENSOR ZERO	ON
12 CAL FACTOR %	enabled


6. Verify that the Power Meter **6** REMOTE, **2** μ W, and **5** ZERO lamps are lit and that the **23** RF BLANKING output is 0.0 ± 0.4 V.
7. Program the SENSOR ZERO function to off and verify that the **5** ZERO lamp remains lit for approximately four seconds. When the **5** ZERO lamp goes out, verify that the **1** Digital Readout indicates 0.00 ± 0.02 μ W.

Figure 3-2. Operator's Checks

CHANGE S (cont'd)

OPERATOR'S CHECKS

REMOTE BCD OPERATION (cont'd)

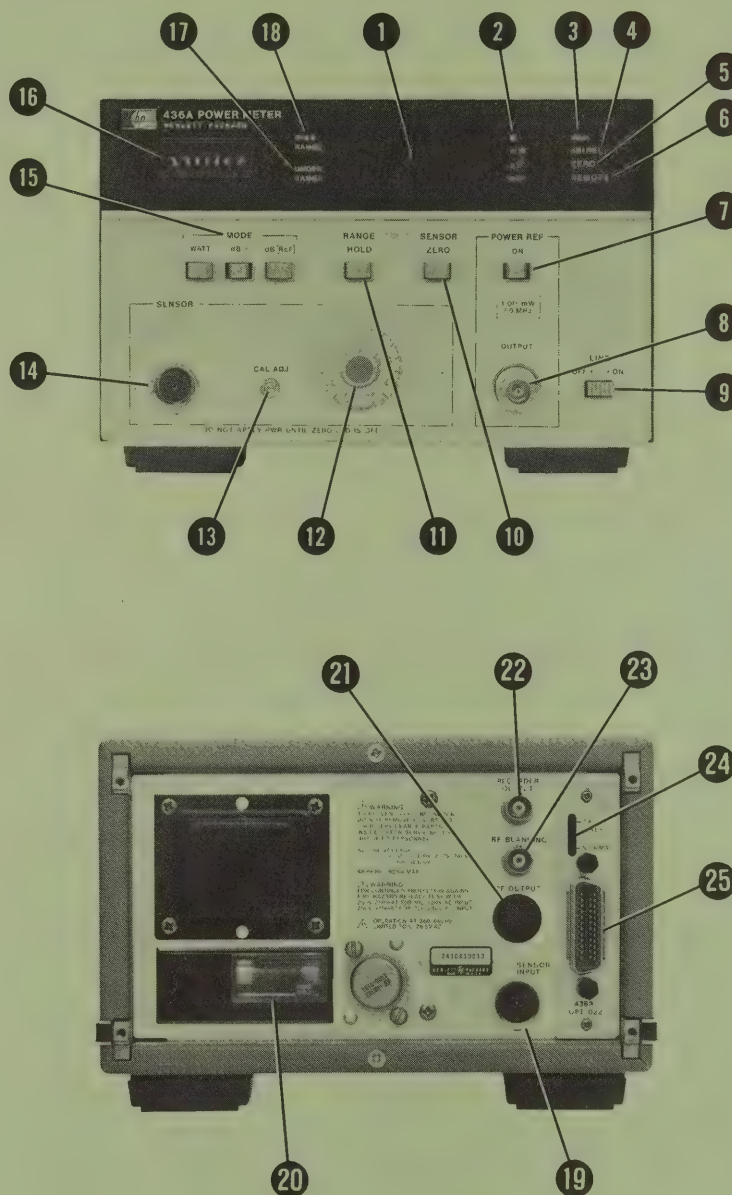

8. Set the **7** POWER REF switch to ON. Verify that the **18** OVER RANGE lamp lights and the **1** Digital Readout blanks (1 _ . _ _ μ W).

NOTE

Underscore (_) indicates blanked digit.

9. Program the Power Meter to Range 3. Verify that the **2** mW lamp lights and that the **18** OVER RANGE lamp goes out.

Figure 3-2. Operator's Checks

CHANGE S (cont'd)

OPERATOR'S CHECKS

REMOTE BCD OPERATION (cont'd)

10. Adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW. Verify that the pointer on the **16** Auxiliary Meter is aligned between the last two marks, and that the **22** RE-CORDER OUTPUT is approximately 1.00 Vdc.
11. Rotate the **12** CAL FACTOR % switch through its range and verify that the **1** Digital Readout increases slightly for each successive step.
12. Set the CAL FACTOR disable programming input to logical 1 (+2.5 to +5 Vdc) and verify that the **1** Digital Readout indication changes back to 1.000 mW.
13. Program the Power Meter to the dBm MODE and verify that the **1** Digital Readout indicates -0.00 ± 0.01 dBm.
14. Set the **7** POWER REF switch to off (out). Verify that the **17** UNDER RANGE lamp lights and that the **1** Digital Readout blanks ($-1_ _ \text{ dBm}$).
15. Program the Power Meter to Range 1, and verify that the **1** Digital Readout blanked indication changes to $-3_ _ \text{ dBm}$. The new indication verifies that the Power Meter is on the most sensitive dBm range.
16. Set the **7** POWER REF switch to ON (in). Verify that the **18** OVER RANGE lamp lights and that the **1** Digital Readout blanked indication changes to $-1_ _ \text{ dBm}$.
17. Program the Power Meter for Auto Ranging and verify that the **1** Digital Readout indication changes to -0.00 ± 0.01 dBm. This new indication verifies that the Power Meter has autoranged properly.
18. Adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates -1.40 dBm.
19. Program the Power Meter to the dB [REF] MODE. Verify that the **3** dBm lamp goes out, the **4** dB (REL) lamp lights, and the **1** Digital Readout changes to -0.00 . This step verifies that the Power Meter can store a dB reference value and indicate RF input power levels in dB with respect to the stored reference.
20. Program the Power Meter to the WATT MODE and readjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW.

NOTE

Steps 21 through 31 are performed in lieu of steps 5 through 20 when the Power Meter is connected to an HP 8481H or an HP 8482H Power Sensor.

21. Set the Remote Enable input to the Power Meter to logical 1 (0.0 ± 0.4 Vdc) and program the Power Meter as follows:

Mode	WATT
Range	AUTO
10 SENSOR ZERO	ON
12 CAL FACTOR %	enabled


22. Verify that the Power Meter **6** REMOTE, **2** μW , and **5** ZERO lamps are lit and that the **23** RF BLANKING output is $0.0 \pm 0.4\text{V}$.

Figure 3-2. Operator's Checks

CHANGE S (cont'd)

OPERATOR'S CHECKS

REMOTE BCD OPERATION (cont'd)

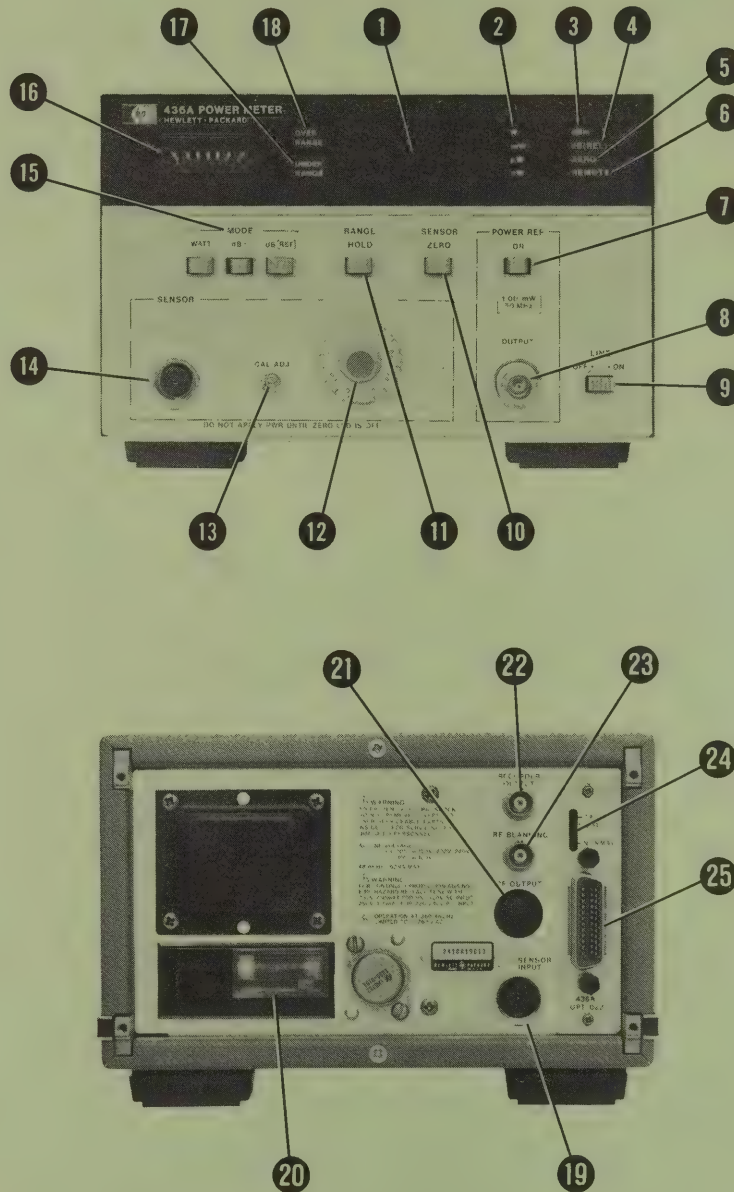

23. Program the SENSOR ZERO function to off and verify that the **5** ZERO lamp remains lit for approximately four seconds. When the **5** ZERO lamp goes out, verify that the **1** Digital Readout indicates 0.00 ± 0.02 mW.
24. Set the **7** POWER REF switch to ON (in) and adjust the **13** CAL ADJ control so that the **1** Digital Readout indicates 1.000 mW. Verify that the pointer on the **16** Auxiliary Meter is aligned between the last two marks and that the **22** RECORDER OUTPUT is approximately 1.000 Vdc.

Figure 3-2. Operator's Checks

CHANGE S (cont'd)

OPERATOR'S CHECKS

REMOTE BCD OPERATION (cont'd)

25. Rotate the 12 CAL FACTOR % switch through its range and verify that the 1 Digital Readout indication increases slightly for each successive step.
26. Set the CAL FACTOR Disable programming input to logical 1 (+2.5 to +5 Vdc) and verify that the 1 Digital Readout indication changes back to 1.000 mW.
27. Program the Power Meter to the dBm MODE and verify that the 1 Digital Readout indicates -0.00 ± 0.01 dBm.
28. Set the 7 POWER REF switch to off (out). Verify that the 17 UNDER RANGE lamp lights and that the 1 Digital Readout blanks ($-1 _ _ \text{ dBm}$).
29. Set the 7 POWER REF switch to ON (in) and adjust the 13 CAL ADJ control so that the 1 Digital Readout indicates -1.40 dBm.
30. Program the Power Meter to the dB [REF] MODE and verify that the 3 dBm lamp goes out, the 4 dB (REL) lamp lights, and the 1 Digital Readout changes to -0.00 . This step verifies that the Power Meter can store a dB reference value and indicate input power levels in dB with respect to the stored reference.
31. Program the Power Meter to the WATT MODE and readjust the 13 CAL ADJ control so that the 1 Digital Readout indicates 1.000 mW.

Figure 3-2. Operator's Checks

CHANGE S (cont'd)

In the NOTE under Operating Instructions (Local Operation) step 1 add "BCD or" before Hewlett. At the top of the page for Remote Operating Instructions add "Or BCD Remote" after HP-IB. Add the following information after paragraph 3-61:

REMOTE BCD INTERFACE OPERATION

BCD Option 024 adds remote programming and digital output capability to the Power Meter. There are two basic methods for operating the Power Meter with this option. It can be operated locally with an external instrument used to record output data, or it can be operated remotely by sending remote programming inputs to the Power Meter.

Figure 3-3 provides instructions for operating the Power Meter with the BCD option installed. In order to follow these instructions, the operator must be familiar with Power Meter programming and output data format. This information is provided in detail in the paragraphs which follow.

NOTE

The Power Meter BCD option is designed to interface directly with an HP 5055A Digital Recorder. When it is used with this recorder, it can only be operated in the Local mode (unless a special cable is fabricated), as the BCD interface bus lines that are normally used to program the Power Meter, are used instead to pre-set the digital recorder print format. In the paragraphs which follow, differences in Power Meter output data format for digital recorder and "universal" interfacing are noted as applicable.

Output Data Format

When the Power Meter is interfaced with an HP 5055A Digital Recorder, the output data print-out is as described in Table 3-4. When the Power Meter is interfaced with other controller or recorder instruments, data format is selected by the user. Refer to Table 3-5 for a description of the function and coding of the Power Meter output data lines.

BCD Remote Programming

Remote programming of the Power Meter is enabled when a 0.0 to +0.4 Vdc level is applied to remote enable input line J7-21. The Power

Meter controls that can be programmed remotely are the MODE and SENSOR ZERO switches. The controls not programmable are the POWER REF and LINE switches. The CAL FACTOR % switch can be enabled and disabled via the remote interface but, when enabled, the calibration factor entered at the front panel of the Power Meter is used.

NOTE

Jumper options are provided to enable remote programming of the SENSOR ZERO switch when the remote enable input is high (+2.5 to +5.0V level is applied to J7-21). See Section II, Installation.

Remote range programming is slightly different than Local Range selection. For Local operation, a particular range is selected by allowing the Power Meter to autorange to the desired range, then pressing the RANGE HOLD switch to hold the range. For Remote operation, the programming codes have provision for direct selection of the desired range as well as selection of the autorange function.

An additional feature that is only available via remote programming is selection of standby, triggered, or free running operation of the Power Meter. (During Local operation, the Power Meter is allowed to free run with approximately 133 milliseconds allowed for settling time between measurements.) The specific remote triggering capabilities are:

a. Hold — when the power meter is programmed to Hold, it is inhibited from taking measurements and from outputting data. Thus, it is set to a predetermined reference condition from which a measurement can be triggered synchronously to some external event.

b. Trigger Immediate — this programming command directs the Power Meter to make one measurement and output the data in the minimum possible time, then to go into Hold until the next Triggering command is received. It does not allow settling time prior to the measurement.

CHANGE S (cont'd)

Power Meter Output Data Printout for HP 5055A Digital Recorder

Column	Interpretation	*Range Code	1 = Range 1 (most sensitive) 2 = Range 2 3 = Range 3 4 = Range 4 5 = Range 5 (least sensitive)
1 (right)	Units Digit	**Mode Decode	V = dB [REF] A = dB (REL) Ω = Watts * = dBm
2	Tens Digit		
3	Hundreds Digit		
4	Thousands Digit		
5	Sign		
6	Range*	***Status	0 = In Range 1 = Underrange (WATT Mode) 2 = Overrange 3 = Underrange (dBm Mode) 4 = ZERO Mode
7	Mode**		
8	Status***		
9	Exponent Units Digit		
10 (left)	Exponent Tens Digit		
Intrepret measured value as $XXXX \cdot 10^{-\text{EXPONENT}}$			

BCD Remote Programming (cont'd)

c. Trigger with Delay — this trigger command is identical to the trigger immediate command except that it causes the Power Meter to execute a settling-time delay subroutine before taking a measurement and outputting data.

d. Free run at maximum rate — this programming command is normally used for asynchronous operation of the Power Meter. It directs the Power Meter to continuously take measurements and output data in the minimum possible time. It does not allow settling time prior to each measurement.

e. Free run with Delay — this programming command is identical to the previous command except that it causes the Power Meter to execute a settling-time delay subroutine prior to each measurement.

When programming the Power Meter for synchronous triggered operation, there are two factors that the programmer must consider to ensure the validity of the output measurement data. The first factor is the time that it takes the Power

Meter to respond to a full scale change in input power level. A typical Power Meter response curve is shown in Figure 3-4. By comparing this curve with the measurement timing cycle shown in Figure 3-6 and summarized in Table 3-5, the validity of the Power Meter output can be tabulated according to operating range and triggering interval — versus change in input power level. A general summay of this information is as follows:

a. When the Power Meter is programmed for trigger with settling time operation, sufficient time is provided for the Power Meter to settle to the input power level on all ranges except range 1. On range 1 approximately 10 seconds (0–10 measurements) are required for the Power Meter to settle

b. When the Power Meter is programmed for trigger immediate operation, the desired amount of settling time can be incorporated into the operating program.

The programming codes that the Power Meter will respond to are listed in Table 3-8.

CHANGE S (cont'd)

Add Table 7-3 and Table 7-4 after paragraph 3-80:

NOTE

The BCD output data levels are TTL compatible. A false (0) state is defined as 0.0 to +0.4 Vdc and a true state is defined as +2.5 to +5.0 Vdc

Table 7-3. BCD Output Data Codes (1 of 2)

Function		Code	
MEASURED VALUE — The Power Meter format for outputting the measured value is SIGN, Four BCD DIGITS, and a negative EXPONENT. It is interpreted as: <div style="text-align: center; margin-top: 10px;"> $\pm \text{XXXX} \cdot (10)^{\text{EXPONENT}}$ <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center; margin-right: 10px;"> \nwarrow not printed </div> <div style="text-align: center;"> \nwarrow EXPONENT </div> </div> </div>		NOTES <i>Pin numbers refer to connector J7 on the rear panel.</i> <i>When used with 5055A, a four line format is established by the following pins:</i> 34 (ground) 10 (measurement rate; floats high) 35 (cal factor disable; floats high)	
Sign space (+) —		PIN 9 0 1	
<div style="display: flex; justify-content: space-between;"> <div style="width: 15%;">Digits</div> <div style="width: 65%;"> <div>Units</div> <div>10⁰ A</div> <div>10⁰ B</div> <div>10⁰ C</div> <div>10⁰ D</div> <div>Tens</div> <div>10¹ A</div> <div>10¹ B</div> <div>10¹ C</div> <div>10¹ D</div> <div>Hundreds</div> <div>10² A</div> <div>10² B</div> <div>10² C</div> <div>10² D</div> <div>Thousands</div> <div>10³ A</div> <div>10³ B</div> <div>10³ C</div> <div>10³ D</div> </div> <div style="width: 15%;"> <div>Weight</div> <div>1</div> <div>2</div> <div>4</div> <div>8</div> <div>1</div> <div>2</div> <div>4</div> <div>8</div> <div>1</div> <div>2</div> <div>4</div> <div>8</div> <div>1</div> <div>2</div> <div>4</div> <div>8</div> </div> </div>		<div style="display: flex; justify-content: space-between;"> <div style="width: 15%;">Pin Number</div> <div style="width: 65%;"> <div>1</div> <div>2</div> <div>26</div> <div>27</div> <div>3</div> <div>4</div> <div>28</div> <div>29</div> <div>5</div> <div>6</div> <div>30</div> <div>31</div> <div>7</div> <div>8</div> <div>32</div> <div>33</div> </div> <div style="width: 15%;"></div> </div>	

CHANGE S (cont'd)

Table 7-3. BCD Output Data Codes (2 of 2)

Function		Code		
STATUS OUTPUTS		Pin 40	Pin 16	Pin 15
	In Range	0	0	0
	Underrange (WATT Mode)	0	0	1
	Overrange	0	1	0
	Underrange (dBm Mode)	0	1	1
	Zero Mode	1	0	0
RANGE — indicates range on which last measurement made.		Pin 36	Pin 12	Pin 11
	1 (most sensitive)	0	0	1
	2	0	1	0
	3	0	1	1
	4	1	0	0
	5 (least sensitive)	1	0	1
EXPONENT		Weight	Pin	
	Units EX ⁰ A	1	17	
	EX ⁰ B	2	18	
	EX ⁰ C	4	42	
	EX ⁰ D	8	43	
	Tens EX ¹ A	1	19	
		Note: when used with 5055A, four line format is established by following pins: 20 (ground) 44 (ground) 45 (ground)		
MODE	dB [REF]	Pin 14	Pin 13	
	dB (REL)	0	0	
	WATT	0	1	
	dBm	1	0	
		1	1	
		Note: when used with 5055A, four line format is established by following pins: 38 (floats high) 39 (floats high)		
PRINT		High to low transition on pin 48 when output data is valid.		

CHANGE S (cont'd)

Table 7-4. BCD Programming Commands

Commands	Input Pin	Function																																
Remote enable	J7-21	<p>When high, enables local operation of Power Meter via front-panel controls. When low, enables remote operation of Power Meter via programming commands listed below.</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;"><i>When equipped with the BCD Option 024, the Power Meter generates a Print command and provides valid output data after each measurement for both Local and Remote operation.</i></p>																																
Range Bit 1 Range Bit 2 Range Bit 3	J7-24 J7-25 J7-23	<p>Select Power Meter measurement range when Remote Enable input is low.</p> <table><tr><td>Range</td><td>Pin 23</td><td>Pin 25</td><td>Pin 24</td></tr><tr><td>0*</td><td>0</td><td>0</td><td>0</td></tr><tr><td>1</td><td>0</td><td>0</td><td>1</td></tr><tr><td>2</td><td>0</td><td>1</td><td>0</td></tr><tr><td>3</td><td>0</td><td>1</td><td>1</td></tr><tr><td>4</td><td>1</td><td>0</td><td>0</td></tr><tr><td>5</td><td>1</td><td>0</td><td>1</td></tr><tr><td>Auto</td><td>1</td><td>1</td><td>X (0 or 1)</td></tr></table> <p>*Standby range: Power Meter operating program is held at Power Up address 000₈.</p>	Range	Pin 23	Pin 25	Pin 24	0*	0	0	0	1	0	0	1	2	0	1	0	3	0	1	1	4	1	0	0	5	1	0	1	Auto	1	1	X (0 or 1)
Range	Pin 23	Pin 25	Pin 24																															
0*	0	0	0																															
1	0	0	1																															
2	0	1	0																															
3	0	1	1																															
4	1	0	0																															
5	1	0	1																															
Auto	1	1	X (0 or 1)																															
Rate Inhibit	J7-10 J7-47	<p>Selects Power Meter triggering when remote enable input is low</p> <table><tr><td></td><td>Pin 10</td><td>Pin 47</td><td>Pin 49</td></tr><tr><td>Hold</td><td>X (0 or 1)</td><td>0</td><td>X (0 or 1)</td></tr><tr><td>Trigger Intermediate</td><td>0</td><td>0</td><td rowspan="2">} Positive-to-negative transition</td></tr><tr><td>Trigger with Delay</td><td>1</td><td>0</td></tr><tr><td>Free Run Fast</td><td>0</td><td>1</td><td>X (0 or 1)</td></tr><tr><td>Free Run with Delay</td><td>1</td><td>1</td><td>X (0 or 1)</td></tr></table>		Pin 10	Pin 47	Pin 49	Hold	X (0 or 1)	0	X (0 or 1)	Trigger Intermediate	0	0	} Positive-to-negative transition	Trigger with Delay	1	0	Free Run Fast	0	1	X (0 or 1)	Free Run with Delay	1	1	X (0 or 1)									
	Pin 10	Pin 47	Pin 49																															
Hold	X (0 or 1)	0	X (0 or 1)																															
Trigger Intermediate	0	0	} Positive-to-negative transition																															
Trigger with Delay	1	0																																
Free Run Fast	0	1	X (0 or 1)																															
Free Run with Delay	1	1	X (0 or 1)																															
Cal Factor Disable	J7-35	When low disables front-panel CAL FACTOR % switch (same as 100% position). When high, enables switch.																																
Mode Bit 1 Mode Bit 2	J7-38 J7-39	<p>Select mode when remote enable input is low.</p> <table><tr><td>Mode</td><td>Pin 38</td><td>Pin 39</td></tr><tr><td>dB [REF]</td><td>0</td><td>0</td></tr><tr><td>dB (REL)</td><td>1</td><td>0</td></tr><tr><td>WATT</td><td>0</td><td>1</td></tr><tr><td>dBm</td><td>1</td><td>1</td></tr></table>	Mode	Pin 38	Pin 39	dB [REF]	0	0	dB (REL)	1	0	WATT	0	1	dBm	1	1																	
Mode	Pin 38	Pin 39																																
dB [REF]	0	0																																
dB (REL)	1	0																																
WATT	0	1																																
dBm	1	1																																
SENSOR Zero Select	J7-46	<p>When low, enables power sensor auto zero circuit.</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;"><i>When programming this function, allow the circuit about 7 seconds to settle before applying input power to Power Sensor. If RF input power is applied while ZERO lamp is on, it will introduce an offset that will affect future measurements.</i></p>																																

CHANGE S (cont'd)

Table 6-2:

Under A1A3 Miscellaneous Parts 3050-1167 was originally 3050-0253. However, the part shown in the table is the recommended replacement. Therefore, no manual change is required.

Delete A5XU11

Add the following Replaceable Parts before the A8 assembly:

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6†	00436-60037	1	1	BCD INTERFACE BUS CONTROL ASSEMBLY (FOR OPTION 024 ONLY)	28480	00436-60037
A6C1	0180-0197	8	1	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A6C2	0160-2055	9	7	CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C3	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C4	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C5	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C6	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C7	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6C8†	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A6J1	1200-0507	9	1	SOCKET-IC 16-CONT DIP-SLDR	28480	1200-0507
A6J2-				NOT ASSIGNED		
A6J6				CONNECTOR-PC EDGE 25-CONT/ROW 2-ROWS	28480	1251-2955
A6J7	1251-2955	2	1			
A6Q1	1853-0020	4	1	TRANSISTOR PNP SI PD=300MW FT=150MHZ	28480	1853-0020
A6R1	1810-0151	2	3	NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A6R2	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A6R3	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A6R4	0757-0438	3	1	RESISTOR 5.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A6R5	1810-0151	2		NETWORK-RES 7-SIP10.0K OHM X 6	91637	CSP07C07-103J
A6R6†	0757-0401	0	1	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A6TP1	0360-1514	7	3	TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6TP2	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6TP3	0360-1514	7		TERMINAL-STUD SGL-PIN PRESS-MTG	28480	0360-1514
A6U1†	1820-1411	0	4	IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A6U2	1820-1199	1	3	IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U3	1820-1197	9	2	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U4†	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A6U5†	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A6U6†	1820-1411	0		IC LCH TTL LS D-TYPE 4-BIT	01295	SN74LS75N
A6U7	1820-1112	8	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U8	1820-1298	1	1	IC MUXR/DATA-SEL TTL LS 8-T0-1-LINE	01295	SN74LS251N
A6U9	1820-1201	6	3	IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U10	1820-1201	6		IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U11	1820-1201	6		IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U12	1820-1198	0	1	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
A6U13	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U14	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U15	1820-0621	2	1	IC BFR TTL NAND QUAD 2-INP	01295	SN7438N
A6U16	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
				A6 MISCELLANEOUS (OPT. 024)		
	5000-9043	6	1	PIN:P.C. BOARD EXTRACTOR	28480	5000-9043
	5040-6849	8	1	EXTRACTOR, P.C. BOARD	28480	5040-6849
A7	00436-60031	5	1	BCD INTERFACE BUS INPUT/OUTPUT ASSY (FOR OPTION 024 ONLY)	28480	00436-60031
				A7 MISCELLANEOUS (OPT. 024)		
	0520-0129	8	1	SCREW-MACH 2-56 .312-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	0590-0106	8	1	NUT-HEX-PLSTC LKG 2-56-THD .143-IN-THK	00000	ORDER BY DESCRIPTION
	1251-0087	7	1	CONNECTOR 50-PIN F MICRO RIBBON	28480	1251-0087
	00436-00017	1	1	COVER PLATE-BCD	28480	00436-00017

CHANGE S (cont'd)

The A9 assembly was originally 00436-60048. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

A9C3,4 were originally 0180-0197. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Delete A9C5

Add J7 1251-0087 CD7 CONNECTOR 50-PIN MICRORIBBON (OPTION 024 ONLY)

Add MP7 6960-0024 CD0 PLUG-HOLE .688" ID (OMIT ON OPTION 002 AND 003)

W5 was originally 00436-60025. However, the part number shown in the table is the recommended replacement. Therefore, no manual change is required.

Add to the description for W5 "Omit on Option 003".

Add to the description for W11 "and 024".

Section VIII:

Under paragraph 8-2 step f. add "or a BCD-equipped" after standard.

At the top of Figure 8-2 under W11P2 add "or 024".

Replace the first three pages of Table 8-2 with Table 7-5.

Table 7-5. Program Mnemonic Descriptions (1 of 3)

Mnemonic	Service Sheet	Subroutine	Description
PROGRAM QUALIFIER INPUTS			
NAUTO	3, 4, 6, 10, 11	Remote Initialize Under Range Over Range	When low, enables Power Meter to automatically select most accurate measurement range. When high, causes Power Meter to hold last range selected, either locally or remotely.
YH1 YH2 YH4 YH8	2, 3, 4, 6, 9, 10, 12	Linear, Positive — Conversion (YH1, YH2 only) Linear, Negative — Conversion (YH1, YH2 only) Log Conversion (all)	Main counter hundreds output (BCD).
YK1	2, 3, 4, 6, 9, 10, 12	Remote Initialize Measurement should be Linear, Positive-Conversion Linear, Negative-Conversion	Least significant digit of main counter thousands output (BCD).
YK8	3, 9 10	Power Up Auto Zero Delay	Most significant digit of main counter thousands output (BCD).

CHANGE S (cont'd)

Table 7-5. Program Mnemonic Descriptions (2 of 3)

Mnemonic	Service Sheet	Subroutine	Description																																				
YM1 YM2	3, 10	Remote Initialize Measurement Relative dB Over/Under Range Continue	Two-bit code which selects measurement mode as follows: <table><tr><td>YM2</td><td>YM1</td><td>Mode</td></tr><tr><td>1</td><td>1</td><td>dBm</td></tr><tr><td>0</td><td>1</td><td>dB Rel</td></tr><tr><td>1</td><td>0</td><td>Watts</td></tr><tr><td>0</td><td>0</td><td>dB Ref (dB [REF] switch pressed)</td></tr></table>	YM2	YM1	Mode	1	1	dBm	0	1	dB Rel	1	0	Watts	0	0	dB Ref (dB [REF] switch pressed)																					
YM2	YM1	Mode																																					
1	1	dBm																																					
0	1	dB Rel																																					
1	0	Watts																																					
0	0	dB Ref (dB [REF] switch pressed)																																					
YPLS	2, 3, 8, 10	Measurement Linear, Positive-Conversion Linear, Negative-Conversion Log Conversion	A-D converter output. During measurement subroutine, indicates whether A-D input is above or below A-D threshold (YPLS high or low, respectively). During conversion subroutines, changes state when A-D converter discharges through threshold.																																				
YR1 YR2 YR3	2, 3, 4, 7, 10, 12	Power Up Remote Initialize Local Initialize Under Range (YR2, YR3 only) Over Range	Three-bit code which selects measurement range as follows: <table><tr><td>YR3</td><td>YR2</td><td>YR1</td><td>Range</td></tr><tr><td>0</td><td>0</td><td>0</td><td>0 (Remote only)</td></tr><tr><td>0</td><td>0</td><td>1</td><td>1</td></tr><tr><td>0</td><td>1</td><td>0</td><td>2</td></tr><tr><td>0</td><td>1</td><td>1</td><td>3</td></tr><tr><td>1</td><td>0</td><td>0</td><td>4</td></tr><tr><td>1</td><td>0</td><td>1</td><td>5</td></tr><tr><td>1</td><td>1</td><td>0</td><td>6 (Invalid; Power Meter</td></tr><tr><td>1</td><td>1</td><td>1</td><td>7 automatically selects range 5 even if NAUTO high)</td></tr></table>	YR3	YR2	YR1	Range	0	0	0	0 (Remote only)	0	0	1	1	0	1	0	2	0	1	1	3	1	0	0	4	1	0	1	5	1	1	0	6 (Invalid; Power Meter	1	1	1	7 automatically selects range 5 even if NAUTO high)
YR3	YR2	YR1	Range																																				
0	0	0	0 (Remote only)																																				
0	0	1	1																																				
0	1	0	2																																				
0	1	1	3																																				
1	0	0	4																																				
1	0	1	5																																				
1	1	0	6 (Invalid; Power Meter																																				
1	1	1	7 automatically selects range 5 even if NAUTO high)																																				
YRMT (DACQ)	3, 4, 10, 11	Display and Remote Talk	Remote input. When HP-IB option installed, serves as I/O transfer control signal (refer to description and timing diagram provided under Principles of Operation). When BCD interface option installed, functions in conjunction with YRMT (FAST) to select measurement rate (see below).																																				
YRMT (FAST)	3, 4, 10, 11	Remote Initialize Delay	Remote input. When HP-IB option installed, functions in conjunction with YRMT (HOLD) to select measurement rate as indicated below. When BCD interface option installed, functions in conjunction with YRMT (DACQ) to select measurement rate as indicated below. <table><tr><td>FAST</td><td>HOLD/DACQ</td><td>Measurement Rate</td></tr><tr><td>X</td><td>low (level)</td><td>Disabled (hold)</td></tr><tr><td>high</td><td>high (pulse)</td><td>trigger (with settling time)</td></tr><tr><td>low</td><td>high (pulse)</td><td>trigger (immediate)</td></tr><tr><td>high</td><td>high (level)</td><td>free run (at maximum rate)</td></tr><tr><td>low</td><td>high (level)</td><td>free run (with settling time)</td></tr></table>	FAST	HOLD/DACQ	Measurement Rate	X	low (level)	Disabled (hold)	high	high (pulse)	trigger (with settling time)	low	high (pulse)	trigger (immediate)	high	high (level)	free run (at maximum rate)	low	high (level)	free run (with settling time)																		
FAST	HOLD/DACQ	Measurement Rate																																					
X	low (level)	Disabled (hold)																																					
high	high (pulse)	trigger (with settling time)																																					
low	high (pulse)	trigger (immediate)																																					
high	high (level)	free run (at maximum rate)																																					
low	high (level)	free run (with settling time)																																					

CHANGE S (cont'd)

Table 7-5. Program Mnemonic Descriptions (3 of 3)

Mnemonic	Service Sheet	Subroutine	Description
YRMT (HOLD)	3, 4, 10, 11	Local/Remote Branch Display and Remote Talk	Remote input. When HP-IB option installed, functions in conjunction with YRMT (FAST) to select measurement rate as indicated above. Hardwired high when BCD interface option installed.
YRMT (MORE DATA)	3, 4, 10,11	Display and Remote Talk	Remote talk I/O transfer control signal associated with HP-IB option. Set low at start of talk cycle to indicate that last word of data message not sent to external controller; reset high at end of talk cycle. Hardwired low when BCD interface option installed.
YRMT (REMOTE)	3, 4, 10,11	Local/Remote Branch Delay Display and Remote Talk	Remote input. When low, selects local operation of Power Meter; when high, selects remote operation of Power Meter
YRMT (RFDQ)	3, 4, 10,11	Display and Remote Talk	Remote talk I/O transfer control signal associated with HP-IB option (refer to description and timing diagram provided under Principles of Operation). Hardwired low when BCD interface option installed.
YRMT (TALK)	3, 4, 10,11	Display and Remote Talk	Remote talk enable input associated with HP-IB option; set low by external controller to request output data from Power Meter. Hardwired low when BCD interface option installed.
NZRO	3,9,10	Relative dB	Relative counter status output. Goes low to indicate that contents of relative counter are equal to 0.
INSTRUCTIONS			
LAZ	3, 10	Power Up Local/Remote Branch Remote Initialize Auto Zero Delay Display and Remote Talk	Sets A-D auto-zero register thereby enabling A-D converter auto-zero loop.
LCKM	3, 10	Power Up Remote Initialize Local Initialize	Loads mode select bits into mode register.

CHANGE S (cont'd)

Add the following text and Table 7-6 after Table 8-4.

TROUBLESHOOTING

BCD Instrument Checkout

A procedure for checking the operation of a BCD equipped Power Meter is provided in Table 8-5. The procedure is structured identically to the standard instrument checkout procedure described previously. For additional information covering BCD circuit operation and program interfacing, refer to Service Sheets 3 and 5.

NOTE

Since a number of operating program addresses could not be verified for local

operation, it is possible that an address malfunction could inhibit execution of the program. If this occurs it can be verified using the logic analyzer in the free run mode. To isolate this type of problem, it is necessary to turn power on and off to the Power Meter, then to reprogram the Power Meter to the failed condition while using the logic analyzer to verify program execution starting at the Local/Remote Branch Subroutine (see Figure 8-15).

Table 7-6. BCD Interface Option 024 Checkout (1 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence																																																
1	<p>Connect Range Calibrator to Power Meter and turn power on to both units. Set Range Calibrator FUNCTION switch to STANDBY and program Power Meter for remote free-run operation , range 0. Check that the following front-panel indications are observed:</p> <p>a. REMOTE indicator is lit.</p> <p>b. Digital Readout is blanked.</p> <p>c. Either OVER RANGE or UNDER RANGE indicator is lit.</p>	<p>Description — This step verifies that the mode select gates provide a remote enable (LREM) output when the remote enable input is true, and that the range select gates provide a master reset (LPU) output when the Power Meter is programmed to remote range 0.</p> <p>Key Operating Sequence —</p> <p>a. Mode select gates provide low remote enable (LREM) output.</p> <p>b. Range select gates provide low master reset (LPU) output.</p> <p>c. Master reset output of range select gates holds operating program at starting address 000g (refer to Service Sheet 3, Block Diagram Description, Program Initialization).</p>																																																
2	<p>Set Power Meter MODE dBm and RANGE HOLD switches to on (in). Then program Power Meter for local operation and check that the Power Meter outputs the following data:</p> <p>Status — 3 (Under range log)</p> <p>Range — 5</p> <p>Mode — 03 (dBm)* or blank (printer)</p> <p>Sign — 0 (+)</p> <p>Data — same as front-panel digital readout (while PRINT signal is low)</p> <p>Exponent — 02</p> <p>NOTE</p> <p><i>Operating program will hang up in Display and Remote Talk Subroutine data transfer pause loop (addresses 110g, 106g) is inhibit input is true while Power Meter is programmed for local operation.</i></p>	<p>Description — This step verifies that the Power Meter outputs a data message each time that it enters the Display and Remote Talk Subroutine while free running in the local mode.</p> <p>Key Operating Sequence —</p> <p>a. Remote enable (LREM) and master reset (CPU) outputs of mode and range select gates go high when Power Meter programmed for local operation.</p> <p>b. Operating program cycles to Display and Remote Talk Subroutine.</p> <p>c. The following display is observed with the logic analyzer corrected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 177g (Display and Remote Talk Subroutine Address).</p> <table><tr><td>11</td><td>111</td><td>111</td><td>1</td><td>01</td><td>001</td><td>000</td><td>7</td></tr><tr><td>10</td><td>010</td><td>010</td><td>2</td><td>11</td><td>001</td><td>001</td><td>8</td></tr><tr><td>00</td><td>010</td><td>011</td><td>3</td><td>01</td><td>001</td><td>010</td><td>9</td></tr><tr><td>00</td><td>100</td><td>100</td><td>4</td><td>10</td><td>010</td><td>110</td><td>10</td></tr><tr><td>10</td><td>100</td><td>101</td><td>5</td><td></td><td></td><td></td><td></td></tr><tr><td>10</td><td>100</td><td>110</td><td>6</td><td></td><td></td><td></td><td></td></tr></table>	11	111	111	1	01	001	000	7	10	010	010	2	11	001	001	8	00	010	011	3	01	001	010	9	00	100	100	4	10	010	110	10	10	100	101	5					10	100	110	6				
11	111	111	1	01	001	000	7																																											
10	010	010	2	11	001	001	8																																											
00	010	011	3	01	001	010	9																																											
00	100	100	4	10	010	110	10																																											
10	100	101	5																																															
10	100	110	6																																															

CHANGE S (cont'd)

Table 7-6. BCD Interface Option 024 Checkout (2 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence																																																																
3	<p>Program Power Meter for remote operation, watt mode, range 1, trigger with settling time. Then trigger a second measurement and check that the Power Meter outputs the following data:</p> <p>Status — 0 (In Range) Range — 1 Mode — 2 (Watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — Same as front-panel digital readout. Exponent — 08</p>	<p>Description — This test verifies that the Power Meter is capable of remote, watt mode, range 1 operation, and that the operating program enters the Display and Remote Talk Subroutine data transfer pause loop after outputting data when programmed for triggered operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. Mode select gates provide low remote enable (LREM) output along with Watt mode output.</p> <p>b. Range select gates provide range 1 output.</p> <p>c. DACQ qualifier of measurement control circuit is set low by first trigger with settling time programming command, then reset by HCLD instruction generated in Display and Remote Talk Subroutine.</p> <p>d. Operating program enters Display and Remote Talk Subroutine BCD hold loop (106g, 110g).</p> <p>e. DACQ qualifier of measurement control circuit is set low by second trigger with settling time programming command, and the following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 110g Q=0 (Display and Remote Talk Subroutine address).</p> <table><tr><td>01</td><td>001</td><td>000</td><td>1</td><td>00</td><td>001</td><td>110</td><td>9</td></tr><tr><td>11</td><td>001</td><td>001</td><td>2</td><td>00</td><td>001</td><td>111</td><td>10</td></tr><tr><td>01</td><td>001</td><td>010</td><td>3</td><td>10</td><td>011</td><td>001</td><td>11</td></tr><tr><td>00</td><td>010</td><td>110</td><td>4</td><td>10</td><td>011</td><td>110</td><td>12</td></tr><tr><td>10</td><td>100</td><td>010</td><td>5</td><td>01</td><td>010</td><td>111</td><td>13</td></tr><tr><td>10</td><td>001</td><td>010</td><td>6</td><td>01</td><td>010</td><td>111</td><td>14</td></tr><tr><td>00</td><td>001</td><td>011</td><td>7</td><td>01</td><td>010</td><td>111</td><td>15</td></tr><tr><td>10</td><td>001</td><td>101</td><td>8</td><td>01</td><td>010</td><td>111</td><td>16</td></tr></table> <p>f. Watt mode output of mode select gates is loaded into mode select logic.</p> <p>g. Operating program cycles to Display and Remote Talk Subroutine data transfer pause loop.</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;"><i>Address 120g Q=1, 123g, and 122g of Delay Subroutine not previously verified.</i></p>	01	001	000	1	00	001	110	9	11	001	001	2	00	001	111	10	01	001	010	3	10	011	001	11	00	010	110	4	10	011	110	12	10	100	010	5	01	010	111	13	10	001	010	6	01	010	111	14	00	001	011	7	01	010	111	15	10	001	101	8	01	010	111	16
01	001	000	1	00	001	110	9																																																											
11	001	001	2	00	001	111	10																																																											
01	001	010	3	10	011	001	11																																																											
00	010	110	4	10	011	110	12																																																											
10	100	010	5	01	010	111	13																																																											
10	001	010	6	01	010	111	14																																																											
00	001	011	7	01	010	111	15																																																											
10	001	101	8	01	010	111	16																																																											
4	<p>Program Power Meter for remote operation, Watt mode, range 2, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 1 (Under range, watt) Range — 2 Mode — 2 (watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — same as front-panel Digital Readout Exponent — 07</p>	<p>Description — This test verifies that the Power Meter is capable of remote, watt mode, range 2 operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. Range select gates provide range 2 output.</p> <p style="text-align: center;">continued . . .</p>																																																																

CHANGE S (cont'd)

Table 7-6. BCD Interface Option 024 Checkout (3 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
4 (cont)		<p>b. The following display is obtained with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 10 001 010 1 10 001 111 5 00 001 011 2 00 011 000 6 10 001 101 3 10 011 110 7 00 001 110 4 01 010 111 8 </pre>
5	<p>Program Power Meter for remote operation, Watt mode, range 3, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 1 (under range, watt) Range — 3 Mode — 2 (watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — same as front-panel Digital Readout Exponent — 06</p>	<p>Description — This test verifies that the Power Meter is capable of remote, Watt mode, range 3 operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. Range select gates provide range 3 output.</p> <p>b. The following display is obtained with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 10 001 010 1 10 001 111 5 00 001 011 2 10 011 000 6 10 001 101 3 10 101 110 7 00 001 110 4 00 101 111 8 </pre>
6	<p>Program Power Meter for remote operation, watt mode, range 4, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 1 (under range, watt) Range — 4 Mode — 2 (Watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — same as front-panel Digital Readout Exponent — 05</p>	<p>Description — This test verifies that the Power Meter is capable of remote, Watt mode, range 4 operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. Range select gates provide range 4 output.</p> <p>b. The following display is obtained with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 10 001 010 1 10 001 110 5 10 001 011 2 10 101 110 6 00 001 100 3 10 101 111 7 10 001 101 4 10 101 111 8 </pre>
7	<p>Program Power Meter for remote operation, Watt mode, range 5, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 1 (under range, watt) Range — 5 Mode — 2 (watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — same as front-panel Digital Readout Exponent — 04</p>	<p>Description — This test verifies that the Power Meter is capable of remote, watt mode, range 5 operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. Range select gates provide range 5 output.</p> <p>b. Range counter is preset to range 5 during Remote Initialize Subroutine.</p>

CHANGE S (cont'd)

Table 7-6. BCD Interface Option 024 Checkout (4 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
8	<p>Program Power Meter for remote operation, Watt mode, auto range (6 or 7), trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 0 (in range) Range — 1 Mode — 02 (watt) or Ω (printer) Sign — 1 or 0 (+ or —) Data — Same as front-panel Digital Readout Exponent — 08</p>	<p>Description — This test verifies that the Power Meter is capable of remote, watt mode, auto range operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except for auto range enable output of range select gates and address 012₈ Q=0 of Remote Initialize Subroutine.</p>
9	<p>Program Power Meter for remote operation, dBm mode, range 3, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 3 (under range dBm mode) Range — 3 Mode — 03 (dBm) or * (printer — might be blank) Sign — 1 or 0 (+ or —) Data — same as front-panel Digital Readout Exponent — 02</p>	<p>Description — This test verifies that the Power Meter is capable of remote, dBm operation and that an LCKM instruction is generated for a range 3, trigger with settling time measurement.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Mode select gates provide dBm mode output. LCKM instruction is generated at address 017₈ of Remote Initialize Subroutine and dBm output of mode select gates is loaded into mode register.
10	<p>Program Power Meter for remote operation, dB (REL) mode, range 4, trigger with settling time. Check that the Power Meter outputs the following data:</p> <p>Status — 3 (under range log mode) Range — 4 Mode — 01 (dB REL) or A (printer) Sign — 1 or 0 (+ or —) Data — Same as front-panel Digital Readout Exponent — 02</p>	<p>Description — This test verifies that the Power Meter is capable of remote dB (REL) operation and that an LCKM instruction is generated for a range 4 trigger with settling time measurement.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Mode select gates provide dB (REL) output. LCKM instruction is generated at address 017₈ of Remote Initialize Subroutine and dB (REL) output of mode select gate is loaded into mode register.
11	<p>Program Power Meter for remote operation, dB [REF] mode, range 4, trigger immediate. Check that the Power Meter outputs the following data:</p> <p>Status — 3 (under range log mode) Range — 4 Mode — 00 (dB [REF] mode) or V (printer) Data — same as front-panel Digital Readout Exponent — 02</p>	<p>Description — This test verifies that the Power Meter is capable of remote dB [REF] trigger immediate operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Mode select gates provide dB [REF] mode output. The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address). <pre> 10 001 010 1 10 001 011 2 00 001 100 3 00 001 101 4 01 000 001 5 01 000 010 6 01 000 011 7 01 000 011 8 </pre>

CHANGE S (cont'd)

Table 7-6. BCD Interface Option 024 Checkout (5 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence																																
11 (cont)		<p>c. The dB [REF] mode output of the mode select gates is loaded into the mode select register at address 102₈ of the Remote Initialize Subroutine.</p> <p>d. The operating program branches from the Remote Initialize Subroutine to the Measurement Subroutine.</p>																																
12	<p>Program Power Meter for remote operation, dB (REL) mode, range 4, trigger immediate. Check that the Power Meter outputs the following data:</p> <p>Status — 3 (under range log) Range — 4 Mode — 01 (dB REL) or A (printer) Data — same as front-panel Digital Readout Exponent — 02</p>	<p>Description — This step verifies that the Power Meter is capable of remote, dB (REL) mode, trigger immediate operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address):</p> <table><tr><td>10</td><td>001</td><td>010</td><td>1</td><td>11</td><td>000</td><td>001</td><td>5</td></tr><tr><td>10</td><td>001</td><td>011</td><td>2</td><td>01</td><td>000</td><td>011</td><td>6</td></tr><tr><td>00</td><td>001</td><td>100</td><td>3</td><td>01</td><td>000</td><td>011</td><td>7</td></tr><tr><td>00</td><td>001</td><td>101</td><td>4</td><td>01</td><td>000</td><td>011</td><td>8</td></tr></table> <p>b. The dB (REL) output of the mode select gates is loaded into the mode select register at address 101₈ of the Remote Initialize Subroutine.</p>	10	001	010	1	11	000	001	5	10	001	011	2	01	000	011	6	00	001	100	3	01	000	011	7	00	001	101	4	01	000	011	8
10	001	010	1	11	000	001	5																											
10	001	011	2	01	000	011	6																											
00	001	100	3	01	000	011	7																											
00	001	101	4	01	000	011	8																											
13	<p>Program the Power Meter for remote operation, Watt mode, range 4, trigger immediate. Check that the Power Meter outputs the following data:</p> <p>Status — 1 (under range, Watt mode) Range — 4 Mode — 02 (Watt) or Ω (printer) Data — same as front-panel Digital Readout Exponent — 02</p>	<p>Description — This step verifies that the Power Meter is capable of remote, Watt mode, trigger immediate operation.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except as indicated below:</p> <p>a. The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address):</p> <table><tr><td>10</td><td>001</td><td>010</td><td>1</td><td>01</td><td>000</td><td>001</td><td>5</td></tr><tr><td>10</td><td>001</td><td>011</td><td>2</td><td>11</td><td>000</td><td>010</td><td>6</td></tr><tr><td>00</td><td>001</td><td>100</td><td>3</td><td>01</td><td>000</td><td>100</td><td>7</td></tr><tr><td>00</td><td>001</td><td>101</td><td>4</td><td>01</td><td>000</td><td>100</td><td>8</td></tr></table> <p>b. The watts output of the mode select gates is loaded into the mode select register at address 102₈ of the Remote Initialize Subroutine.</p>	10	001	010	1	01	000	001	5	10	001	011	2	11	000	010	6	00	001	100	3	01	000	100	7	00	001	101	4	01	000	100	8
10	001	010	1	01	000	001	5																											
10	001	011	2	11	000	010	6																											
00	001	100	3	01	000	100	7																											
00	001	101	4	01	000	100	8																											

CHANGE S (cont'd)

Table 7-6. BCD Interface Option 024 Checkout (6 of 6)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
14	<p>Program Power Meter for remote operation, Watt mode, auto range, trigger immediate. Check that the Power Meter outputs the following data:</p> <p>Status — 0 (in range) Range — 1 Mode — 2 (Watt) or Ω (printer) Data — same as front-panel Digital Readout Exponent — 08</p>	<p>Description — This step verifies that the operating program is capable of cycling through the Delay Subroutine remote fast branch.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except for Delay Subroutine address branching. With the logic analyzer connected normally and set up for single sweep, TRIGGER WORD 0068, the following display should be observed:</p> <pre> 00 000 110 1 00 101 110 3 01 010 000 2 00 101 111 4 </pre> <p>NOTE Address 0128, Q=0 of Remote Initialize Subroutine not previously verified.</p>
15	<p>Program Power Meter for remote operation, dBm mode, range 1, trigger immediate. Then provide auto zero enable input and trigger second measurement. Check that the front-panel ZERO lamp remains lit for approximately 4 seconds and that the Power Meter outputs the following data after the second trigger is sent</p> <p>Status — 4 (Auto zeroing, in range) Range — 1 Mode — 2 (Watt) or Ω (printer) Data — same as front-panel Digital Readout Exponent — 08</p>	<p>Description — This step verifies that the Power Meter is configured to the Watt mode when remote auto zero operation is selected.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except for YM3 output of mode select gates</p>
16	<p>Program Power Meter for remote, free-run, Watt mode, auto range operation. Then set up range calibrator to provide 1-milli-watt output. Adjust Power Meter CAL ADJ control to obtain 1.000 mW indication on front-panel Digital Readout, set CAL FACTOR % switch to 85 and program CAL FACTOR % switch to on, then off. Check that indication on front-panel Digital Readout changes from 1.000 mW to 1.176 ± 0.002 mW when CAL FACTOR % switch is enabled.</p>	<p>Description — This step verifies that the CAL FACTOR % switch can be enabled and disabled remotely.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except for cal factor enable output of mode select gates.</p>
17	<p>Leave range calibrator set up as specified for the previous step and program Power Meter for remote, Watt mode, range 2, trigger with settling time operation. Check that the front-panel OVER RANGE indicator lights and that the Power Meter outputs status code 2 (over range).</p>	<p>Description — This step verifies that the Power Meter provides the correct status output for an over range condition.</p> <p>Key Operating Sequence — Program execution and circuit operation previously verified except for over/under range decoder operation. Refer to Service Sheet 3.</p>

CHANGE S (cont'd)

In the first paragraph under Block Diagram Circuit Descriptions (Service Sheet 1) after (Option 022) add "or a BCD Interface (Option 024).".

Replace the first three pages of Table 8-6 with Table 7-7.

Table 7-7. Operating Program Descriptions (1 of 3)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer to	Block Diagram Description	
					Service Sheet	Title
Power Up	000	Blank Display (LSOR; UNDER RANGE or OVER RANGE indicator will light depending on whether under/over range decoder powers up in set or reset mode).	Address 001 _g	Table 8-3, Step 1	2	Display Assembly
					3	Program and Remote Interface Circuit Initialization.
	001, 032, 033	a. Count to range counter down to range 0(LCRD)	Address 034 _g	Table 8-3, Step 1	10	Range Counter
		b. Clear main counter and set sign positive (LCLR)		Table 8-3, Step 1	9	Main Counter
		c. Load contents of main counter (0000) into reference register to clear register (LLRE)		Table 8-3, Step 1	9	Reference Register
		d. Display blanked count and sign (0_ . _ _) (LTC) Note: — indicates blanked digit		Table 8-3, Step 1	6	Display Assembly
	034	a. Auto zero A-D converter for 8000 counts (LAZ, LCNT)	Address 035 _g	Table 8-3, Step 1	2	A-D Converter, Auto-Zero Function
					3	A-D Converter Auto-Zeroing
	035	b. Count range counter down to range 7 (LCRD)	Address 035 _g	Table 8-3, Step 1	10	N/A (Circuit Operation covered under Digital Integrated Circuits and Symbols)
		a. Count range counter down to range 5 (LCRD)	Local/Remote Branch Subroutine Address 026 _g	Table 8-3, Step 1	10	
		b. Load mode select input into mode register (LCKM)	Local/Remote Branch Subroutine Address 026 _g	Table 8-3, Step 1	3	Mode Selection
Local/Remote Branch	026	Check whether local or remote operation is selected (Remote, 037 _g)	a. Local initialize subroutine, address 052 for local operation. b. Address 042 for remote operation	Table 8-3, Step 1	3	Program Execution
					4	Remote Enable
					5	General Description

CHANGE S (cont'd)

Table 7-7. Operating Program Descriptions (2 of 3)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Local/ Remote Branch (cont'd)	042	Check whether free run or triggered operation is selected (HOLD, 036g; associated with BCD Interface Option 024 only)	a. Branch to Remote Initialize sub-routine, Address 012 for free run or if trigger is received to initiate program cycle b. 043 if trigger not received	Table 8-4, Error #3 (HP-IB Option) Table 8-5, Step 3 (BCD Option)	3 4 5	Program Execution Measurement Rate Programming Command Processing Measurement Rate Programming, Remote Qualifier/Program Interface and Talk Cycle
	043	Auto-zero A-D Converter one count (LAZ)	Address 026	Table 8-4, Error #3, (HP-IB Option) Table 8-5, Step 3 (BCD Option)	2, 3	A-D Converter Auto-Zero Function
Remote Initialize	012	a. Hold range selected in previous program cycle if autoranging selected (Blank Instruction) b. Load remote range select inputs into range counter if autoranging not selected (LLRA)	Address 013 Address 013	Table 8-4, Error #3 (HP-IB Opt.) Table 8-5, Step 14 (BCD Option) Table 8-4, Error #4 and 4.5 (HP-IB Option) Table 8-5, Step 3 (BCD Option)	3 4 5	Range Selection Range Programming Command Processing Range Programming Commands
	013, 014	a. Count range counter down to range 5 if range 6 or 7 selected (LCRD) b. Clear main counter (LCLR)	Address 015 Address 015	Not verified Table 8-4, Error #4, 4.5 & 12 (HP-IB Option) Table 8-5, Steps 3 & 6 (BCD Option)	3 4 5 9	Range Selection Range Programming Command Processing Range Programming Commands N/A (Circuit Operation covered under Digital Integrated Circuits & Symbols)
	015	a. Check whether delayed or immediate measurement enabled (FAST, 035g)	Address 016 for delayed measurement Address 101 for immediate measurement	Table 8-4, Error #3 (HP-IB Option) Table 8-5, Step 3, (BCD Option) Table 8-4, Error #33 (HP-IB Option) Table 8-5, Step 11 (BCD Option)	3 4 5	Program Execution Measurement Rate Programming Command Processing Measurement Rate Programming, Remote Qualifier/Program Interface and Talk Cycle

CHANGE S (cont'd)

Table 7-7. Operating Program Descriptions (3 of 3)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Remote Initialize (Cont'd)	016, 017, 030, 031	a. Determine Range (YR1, YR2, YR3)	Auto-Zero subroutine, Address 056, for range 3,4, or 5	Table 8-4, Error #11 and 12 (HP-IB Option) Table 8-5, Steps 5 & 6 (BCD Option)	3	Range Selection,
		b. Load mode select inputs into mode register	Delay subroutine, Address 036, for range 1 or 2	Table 8-4, Errors #4, 4.5 and 5 (HP-IB Option) Table 8-5, Steps 3 and 4 (BCD Option)		Mode Selection
	101, 102	a. Determine mode selected for previous program cycle	Address 104 if Watts mode was selected for previous program cycle	Table 8-4, Error #36 (HP-IB Option) Table 8-5, Step 13 (BCD Option)	3	Mode Selection
		b. Load mode select inputs into mode register to select mode for current program cycle (LCKM)	Address 103 if Watts mode was not selected for previous program cycle	Table 8-4, Errors #3 and 33 (HP-IB Option) Table 8-5, Steps 11 and 12 (BCD Option)		
	103	a. Auto-zero A-D converter for 1000 counts (LAZ, LCNT) b. Clear main counter (LCLR)	Address 104	Table 8-4 Error #33 (HP-IB Option) Table 8-5, Step 11 (BCD Option)	2, 3	A-D Converter Auto-Zero Function
	104	a. Auto-zero A-D converter for 1000 counts (LAZ, LCNT) b. Clear main counter (LCLR)	Measurement Subroutine Address 061	Table 8-4, Error #33 (HP-IB Option) Table 8-5, Step 11 (BCD Option)	2, 3	A-D Converter Auto-Zero Function
Local Initialize	052, 053, 054, 055	a. Count range counter down to range 5 if range 0, 6, or 7 is selected (LCRD) b. Load mode select inputs into mode register	Auto-Zero Subroutine, Address 056	Table 8-3, Step 1 (range 5 branch) Step 14 (range 3 branch) Step 19 (range 1 branch) Step 24 (mode register loaded)	3	Range Selection, Mode Selection

CHANGE S (cont'd)

After paragraph 8-154 add the following text:

CIRCUIT DESCRIPTIONS

8-155. SERVICE SHEET 5

8-156. General. The BCD Interface Circuits (Option 024) add remote programming and digital output capability to the Power Meter. As stated previously, the programming outputs of these circuits are applied to the Controller in a "WIRED OR" configuration with the outputs of the front-panel switches. Thus, local or remote operation of the Power Meter is selected by the Remote Enable input to the BCD Interface Circuits. When the Remote Enable input is false (low), it enables the Range Select Gates, the Mode Select Gates, and the

Remote Qualifier Multiplexer, and sets the LREM output low to disable the front-panel switches. Thus, the programming inputs to the BCD Interface Circuits are enabled to select the desired type of Power Meter operation. When the Remote Enable input is true (high), the Range Select Gates, the Mode Select Gates, and the Remote Qualifier Multiplexer are disabled and the LREM output is set high to enable the front-panel switches to select the desired type of Power Meter operation.

8-157. Output Data. The outputs of the Line Latches and Buffers are applied to the controller via the rear panel BCD Remote Interface Connector (J7). The Latches store the Sign and Measured Value and the Buffers pass Range, Status, Exponent and Mode Information. When the Power Meter's operating program executes the Display and Remote Talk subroutine an LSDAV instruction clocks new data into the Latches and informs the controller (by making the Print line Low) that valid information is on the output lines.

8-158. Range Programming Commands. The Range Select Gates continually buffer the Range Bit 1, 2, and 3 inputs to provide YRR1, YRR2, and YRR3 outputs to the Controller. As stated previously, these outputs are only loaded into the Range Counter at the start of each program cycle when remote operation is enabled (LREM output low) and auto-ranging is not selected (NAUTO output high).

8-159. The Auto Range output of the Range Select Gates is generated by decoding the Range Bit 2 and 3 inputs. When both of these inputs are high (range 6 or 7) and the Remote Enable input is low, a gate is enabled to set the NAUTO output to the Controller low. When remote operation is not selected, the high Remote Enable input holds the NAUTO output at a high level to enable "WIRED OR" selection of this function via the front-panel RANGE HOLD switch.

8-160. The remaining output of the Range Select Gates is the LPU signal. This output is set false (low) to hold the operating program at starting address 000g when the Range Bit inputs are all low (range 0) and remote operation is selected by a low Remote Enable input.

8-161. Mode Programming Commands. The Mode Select Gates buffer the Mode, Cal Factor Disable, and Sensor Zero programming inputs and gate these inputs with the Remote Enable input. When the Remote Enable input is low, the gates are enabled and the programming inputs are routed to the Controller to control Power Meter operation as described on Service Sheets 2 and 3, Block Diagram Description. When the Remote Enable input is high, the outputs of the gates are reset high to enable "WIRED OR" selection of these functions via the front-panel switches.

NOTE

A jumper option is provided to enable the Sensor Zero function to be programmed independently of the Remote Enable input (refer to Table 2-1). Thus, when the optional jumper connection is employed and the Power Meter is configured for local operation, the Sensor Zero function can be selected either by the remote programming input of the front-panel SENSOR ZERO switch.

8-162. Measurement Rate Programming, Remote Qualifier/Program Interface, and Talk Cycle. In order to understand how the Measurement Rate Programming Commands are processed to enable free-run, triggered, or hold operation of the Power Meter, it is necessary to refer to Figure 8-15, Sheet

CHANGE S (cont'd)

CIRCUIT DESCRIPTIONS

Service Sheet 5 (cont'd)

14, of the Operating Program Flow Chart. On this figure it is shown that various remote qualifiers are processed to control branching of the operating program and that each of the qualifiers is identified by a 3X code with the X representing a digit from 1 to 7. To access a remote qualifier, the operating program encodes the particular digit associated with the qualifier into the HIA, HIB, and HIC inputs to the Remote Qualifier Multiplexer, thereby causing the Multiplexer to route the qualifier to the Controller. As shown on Service Sheet 5 Block Diagram, all but the Rate, DACQ and LREM qualifier inputs to the Remote Qualifier Multiplexer are hardwired to preselect the majority of the operating program branching decisions. Thus, when the BCD Interface Circuit option is installed, the operating program will always branch to address 045g after entering the Display and Remote Talk Subroutine. The state of the DACQ qualifier will then determine further branching.

8-163. The DACQ qualifier output of the Measurement Control Circuit is controlled by the Print signal described previously under Output Data. When the Print signal is high, it holds the DACQ qualifier high; when the Print signal is low, the DACQ qualifier is controlled by the Inhibit and Trigger inputs. Since the Print signal is set high by the HLLD instruction generated at the start of each program cycle, the operating program will always branch from address 045g to address 046g each time that it subsequently enters the Display and Remote Talk Subroutine. The resulting LSDAV instruction will then set the Print output

low, allowing the DACQ qualifier to be controlled by the Inhibit and Trigger inputs as described in the following paragraphs.

a. When the Inhibit input to the Measurement Control Circuit is programmed high to select free-run operation, a gate is enabled by the low Print signal and a low DACQ output is provided to the Remote Qualifier Multiplexer. Thus, the operating program is enabled to continue to the Local/Remote Branch Subroutine to initiate the next program cycle. If remote operation is selected (LREM qualifier low), the rate programming input is then accessed by the operating program in the Remote Initialize Subroutine to enable an immediate (Rate-high) or delayed measurement (Rate-low).

b. When the Inhibit input to the Measurement Control Circuit is programmed low to prevent free-run operation, the output of a flip-flop is gated with the Print signal to control the state of the DACQ qualifier (see Service Sheet 13). This flip-flop is held reset during each program cycle while the Print signal is high, thereby causing the DACQ qualifier to be held high. When the Print signal is set low by the LSDAV instruction, the flip-flop is allowed to respond to the Trigger input. Until a negative-going trigger is applied to the Power Meter a hold loop (address 110g and 106g) is enabled by the high DACQ qualifier. After a Trigger input is received, the set output of the flip-flop and the low Print signal cause the DACQ qualifier to go low, thereby enabling the operating program to continue as previously described.

CHANGE S (cont'd)

Service Sheet 1:

Replace the portion of Service Sheet 1 with Figure 7-18.

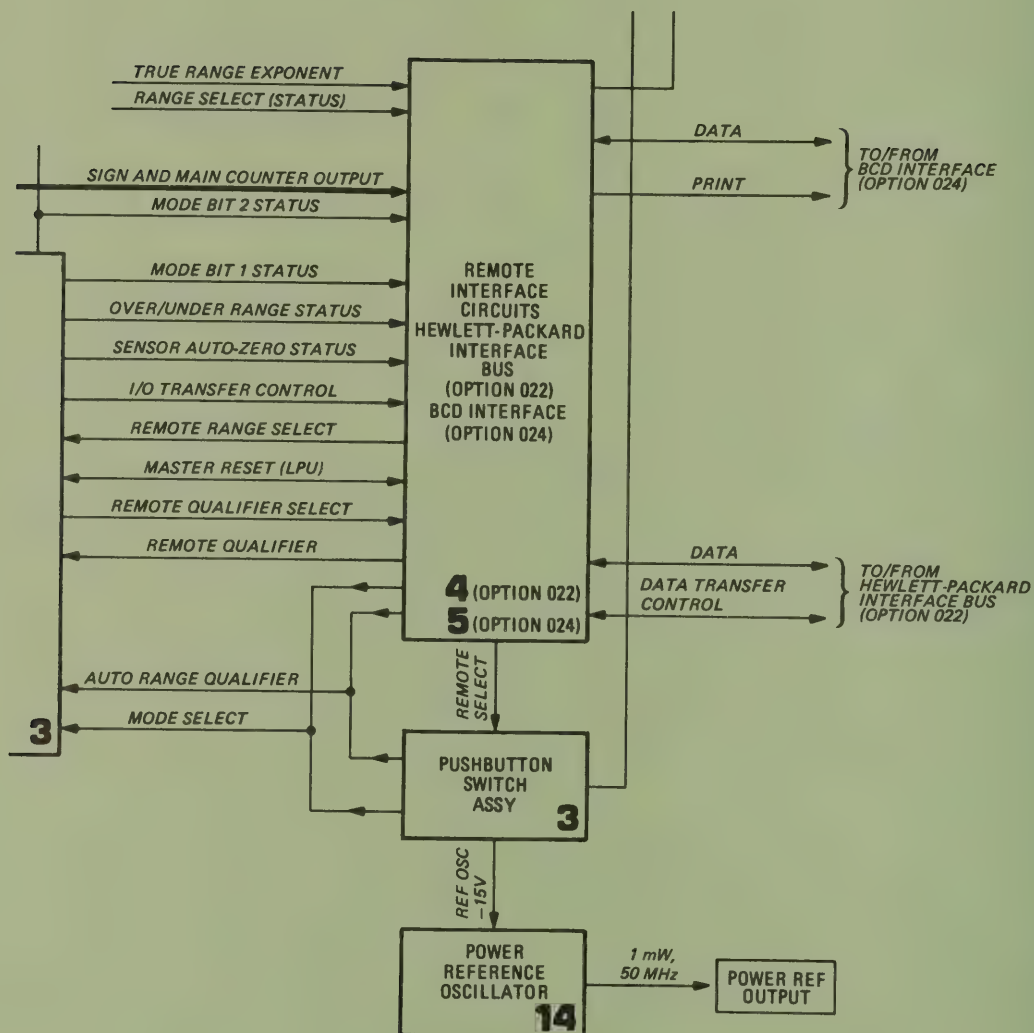


Figure 7-18. P/O Overall Block Diagram (P/O Change S)

Model 436A

CHANGE S (cont'd)

Service Sheet 5:

Add Service Sheet

BCD Interface (Option 024) Circuit Block Diagram
(A6, A7)

◀ **SERVICE SHEET 5**

CHANGE S (cont'd)

Service Sheet 1:

Replace the portion of Service Sheet 1 with Figure 7-18.

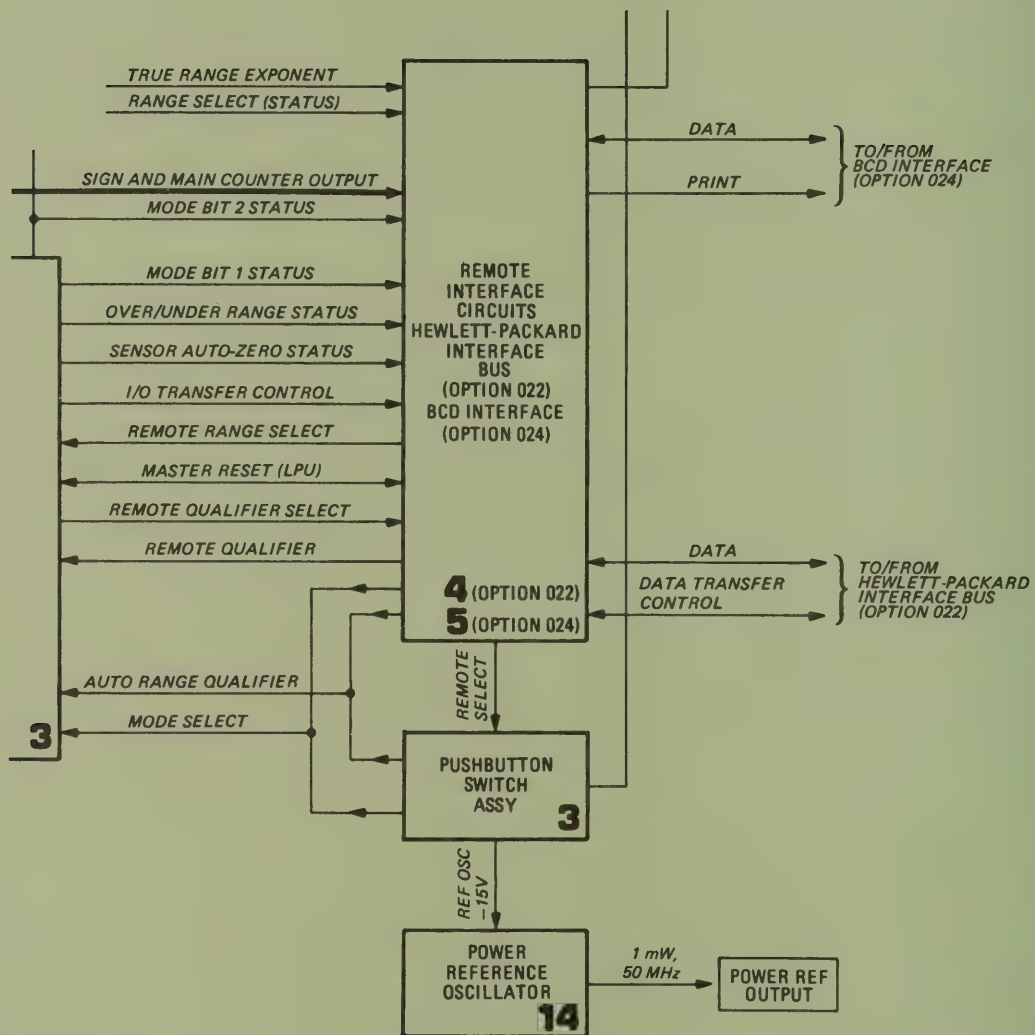


Figure 7-18. P/O Overall Block Diagram (P/O Change S)

CHANGE S (cont'd)

Service Sheet 1:

Replace the portion of Service Sheet 1 with Figure 7-18.

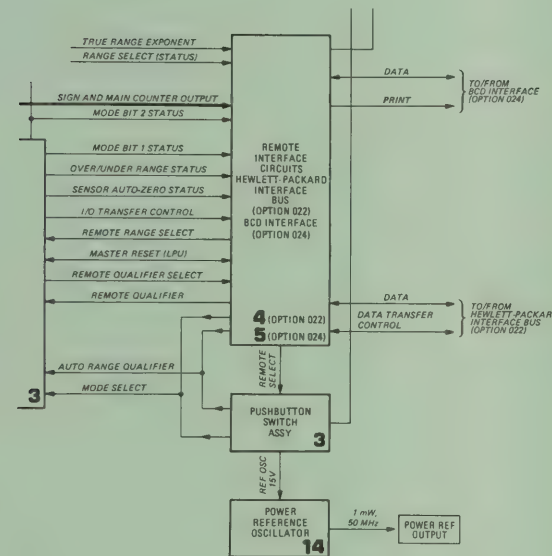


Figure 7-18. P/O Overall Block Diagram (P/O Change S)

CHANGE S (cont'd)

Service Sheet 5:

Add Service Sheet 5 using Figure 7-19.

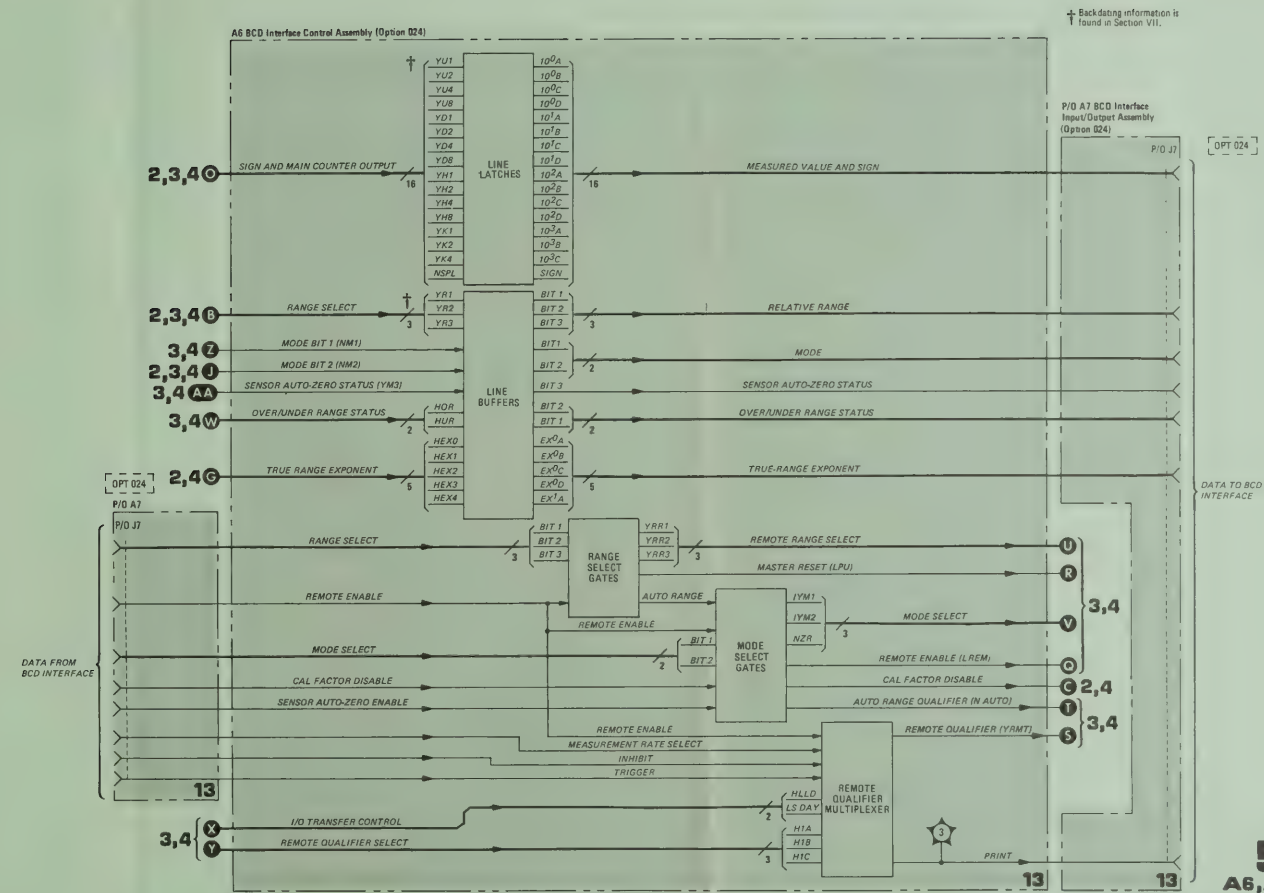


Figure 7-19. BCD Interface (Option 024) Circuit Block Diagram

CHANGE S (cont'd)**Service Sheet 6:**

Under NOTES (right side of Service Sheet), item 2, add "024" next to 022.

Service Sheet 7:

Replace the NOTES (right side of Service Sheet) with the following:

NOTES

1. Unless otherwise indicated:
Resistance in ohms;
Capacitance in picofarads.
2. Asterisk (*) indicates selected component, average values shown.
3. W9 (Option 003);
W5 and W9 connected in parallel (Option 002 and 003).
4. For voltages and waveforms shown, controls are set as follows:
RANGE 1 mW
CAL FACTOR % . . 100
POWER REF . . . ON
Connect POWER SENSOR to
POWER REF OUTPUT.
5. Components of the J1 and J6 assemblies are not separately replaceable.

Add "(NOTE 3)" under W5 and W9 (left side of Service Sheet).

Change the Note 3 to "Note 4" at the waveforms (right side of Service Sheet).

Service Sheet 8:

Replace the NOTES (right side of Service Sheet) with the following:

NOTES

1. Unless otherwise indicated:
Resistance in ohms;
Capacitance in picofarads.
2. Standard connection shown for R69,
optional connection is between
XA3-33 and A3U5-1.
3. Pins 1 and 5 cut off.
4. W9 (Option 003),
W5, W9 connected in parallel
(Option 002 and 003).
5. For voltages and waveforms shown, controls are set as follows:
RANGE 1 mW
CAL FACTOR % . . 100
POWER REF . . . ON
Connect POWER SENSOR to
POWER REF OUTPUT.

Model 436A

CHANGE S (cont'd)

Add "(Note 4)" above
Change (NOTE 4) to

Service Sheet 13:
Add Service Sheet 13

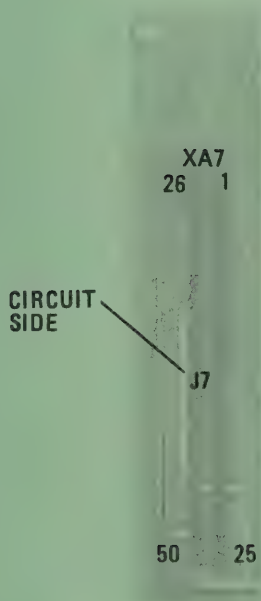


Figure 7-20. A

CHANGE S (cont'd)

Service Sheet 6:
Under NOTES (right side of Service Sheet), item 2, add “024” next to 022.

Service Sheet 7:
Replace the NOTES (right side of Service Sheet) with the following:

- NOTES
1. Unless otherwise indicated:
Resistance in ohms;
Capacitance in picofarads.
 2. Asterisk (*) indicates selected component, average values shown.
 3. W9 (Option 003);
W5 and W9 connected in parallel (Option 002 and 003).
 4. For voltages and waveforms shown, controls are set as follows:
RANGE 1 mW
CAL FACTOR % . . 100
POWER REF . . . ON
Connect POWER SENSOR to POWER REF OUTPUT.
 5. Components of the J1 and J6 assemblies are not separately replaceable.

Add “(NOTE 3)” under W5 and W9 (left side of Service Sheet).
Change the Note 3 to “Note 4” at the waveforms (right side of Service Sheet).

Service Sheet 8:
Replace the NOTES (right side of Service Sheet) with the following:

- NOTES
1. Unless otherwise indicated:
Resistance in ohms;
Capacitance in picofarads.
 2. Standard connection shown for R69, optional connection is between XA3-33 and A3U5-1.
 3. Pins 1 and 5 cut off.
 4. W9 (Option 003),
W5, W9 connected in parallel (Option 002 and 003).
 5. For voltages and waveforms shown, controls are set as follows:
RANGE 1 mW
CAL FACTOR % . . 100
POWER REF . . . ON
Connect POWER SENSOR to POWER REF OUTPUT.

CHANGE S (cont'd)

Add "(Note 4)" above P/O W5/W9 at the bottom of the Cal Factor Switch Assembly. Change (NOTE 4) to "(NOTE 5)" at the waveforms (right side of Service Sheet).

Service Sheet 13:
Add Service Sheet 13 using Figure 7-20 and 7-21.

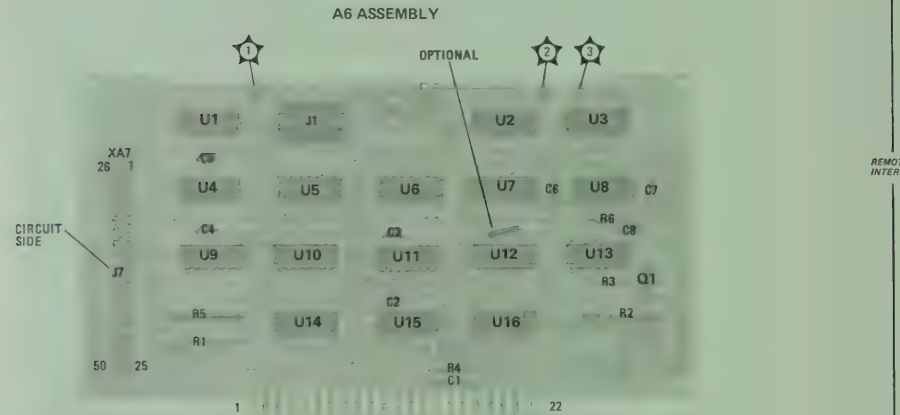


Figure 7-20. A6 BCD Interface Control (Option 024) Assembly Component and Test Point Locations

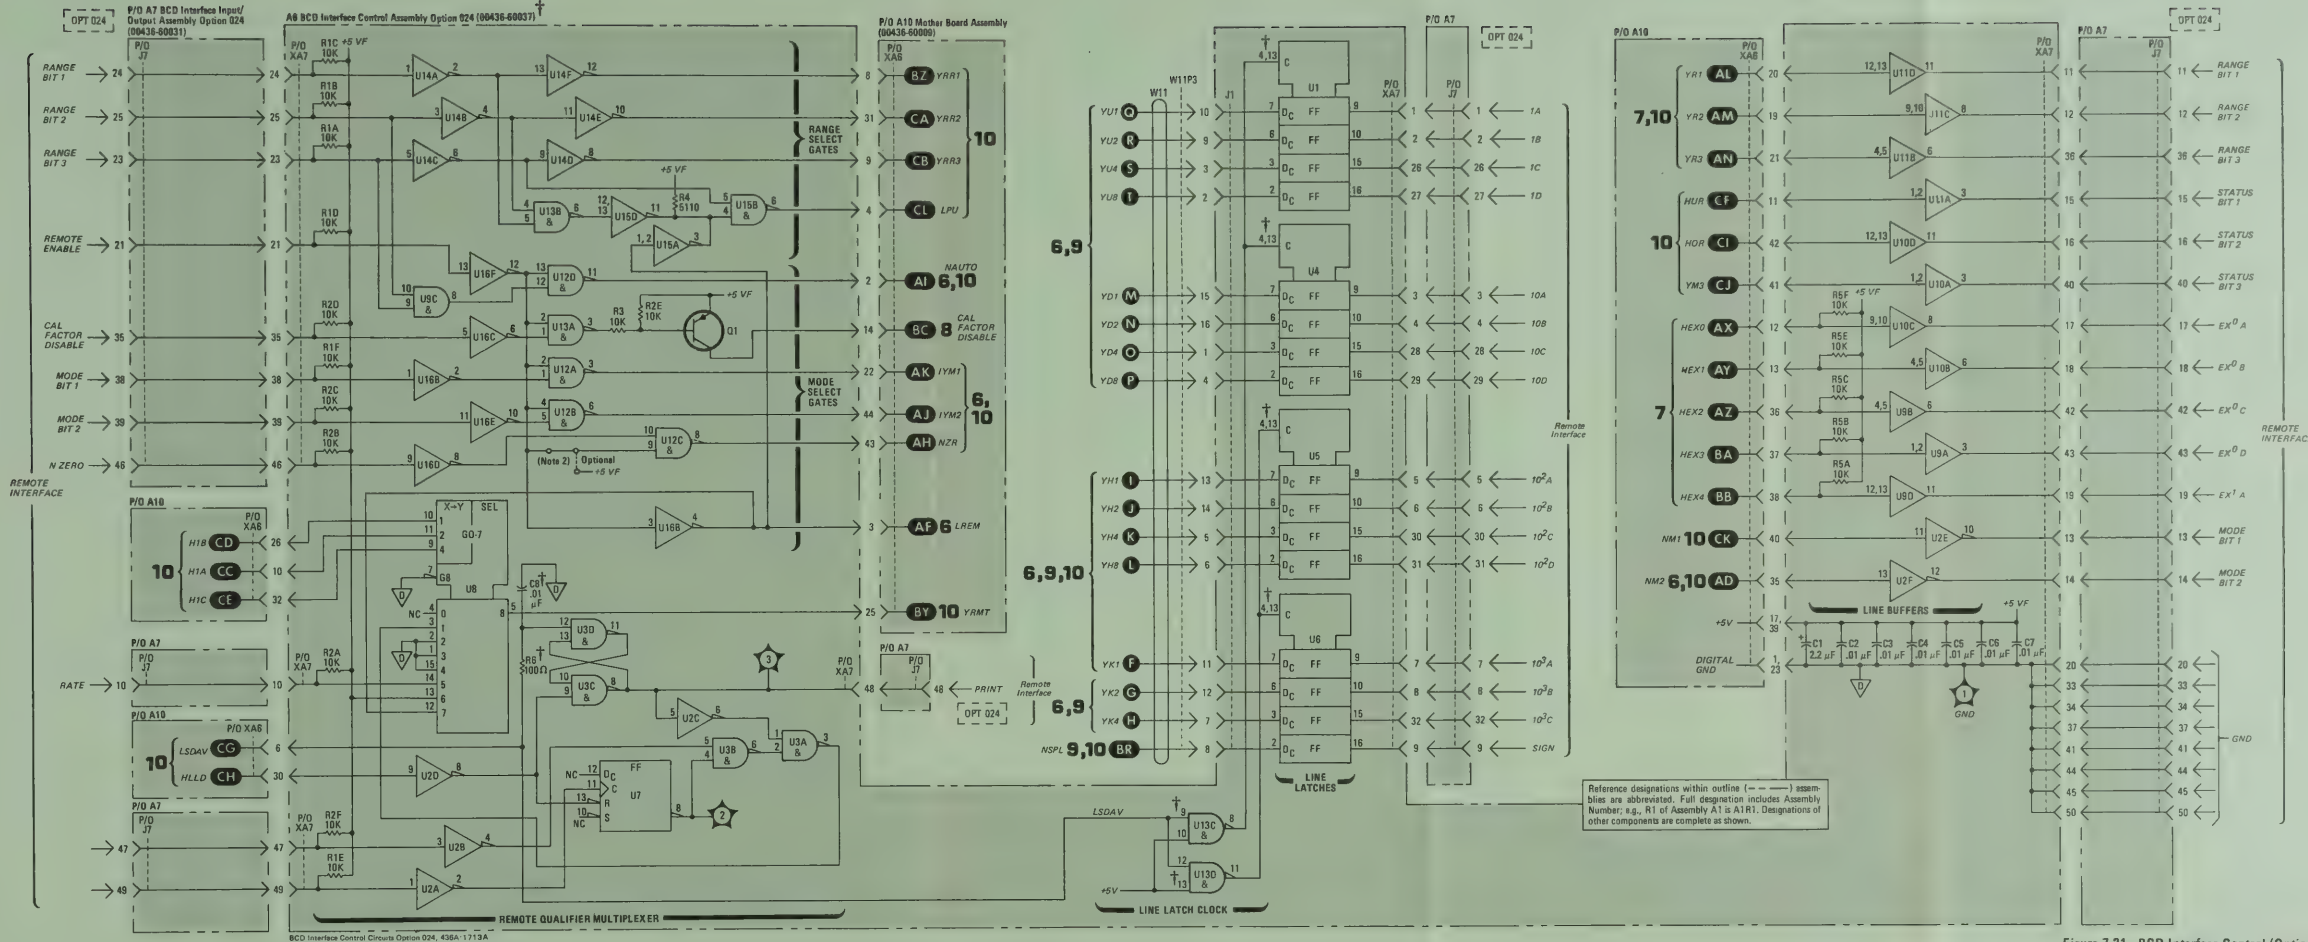


Figure 7-21. BCD Interface Control (Option 024) Assembly Schematic Diagram

NOTES

1 Unless otherwise indicated, Resistance in ohms; Capacitance in picofarads.

2 Normal connection shown. Optional connection allows sensor auto zero function to be selected remotely regardless of the state of the remote enable input.

† Backdating information is found in Section VII.

REFERENCE DESIGNATIONS

NO PREFIX	AS ASSY
W11	C1-8
W11P3	J1
A7 ASSY	O1
J7	R1-8
A10 ASSY	T1-3
XAB	U1-16
	XA7

INTEGRATED CIRCUIT VOLTAGE AND GROUND CONNECTIONS

REFERENCE DESIGNATIONS	PIN NUMBER
U1, 4-6	+5 V _F - 5
	-12
U2, 3, 9-16	+5V _F -14
	-7
U8	+5 V _F -16
	8

TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS

REFERENCE DESIGNATIONS	PART NUMBER
Q1	1833-0020
† U1, 4-6	1820-1411
U2, 14, 16	1820-1199
U3, 13	1820-1197
U7	1820-1112
U8	1820-1298
U8-11	1820-1201
U12	1820-1198
U15	1820-0621

CHANGE S (cont'd)**Service Sheet 15:**

Replace the component locator photograph with Figure 7-22.



Figure 7-22. A9 Power Supply Rectifier and Regulator Assembly Component and Test Point Locations (P/O Change S)

Replace the A9 portion of the schematic with Figure 7-23.


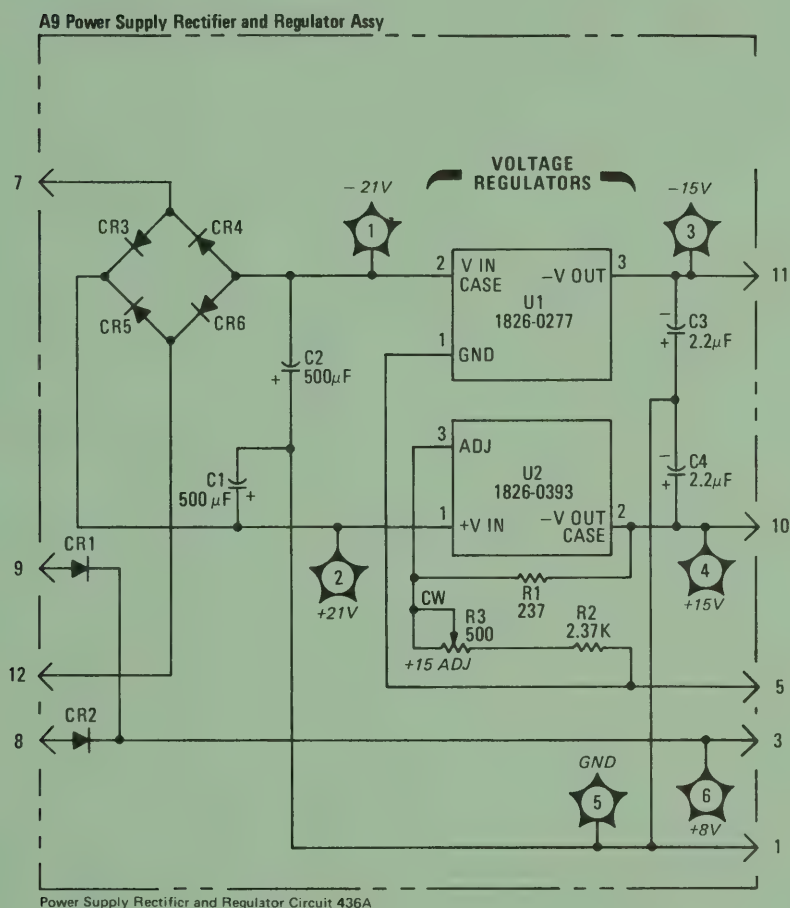


Figure 7-23. P/O Power Supply Rectifier and Regulator Assembly Schematic Diagram (P/O Change S)

At the top of Figure 8-49 add “or 024” next to Opt 022.

CHANGE S (cont'd)

Service Sheet 15:
Replace the component locator photograph with Figure 7-22.

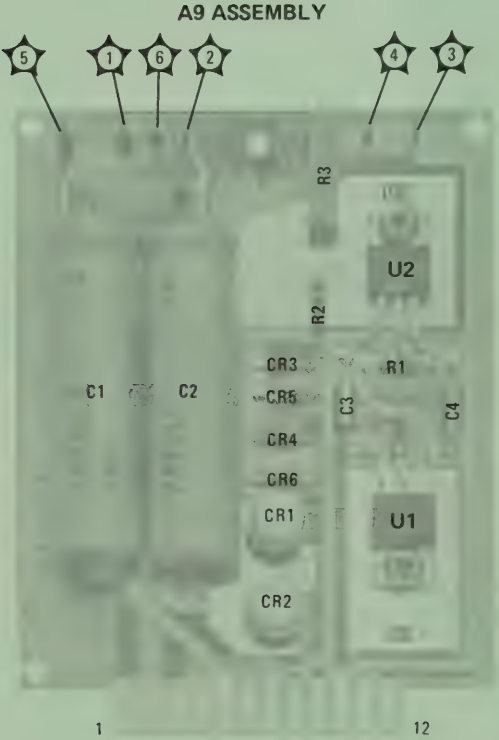

CHANGE S (cont'd)

Replace the A9 portion of the schematic with Figure 7-23.

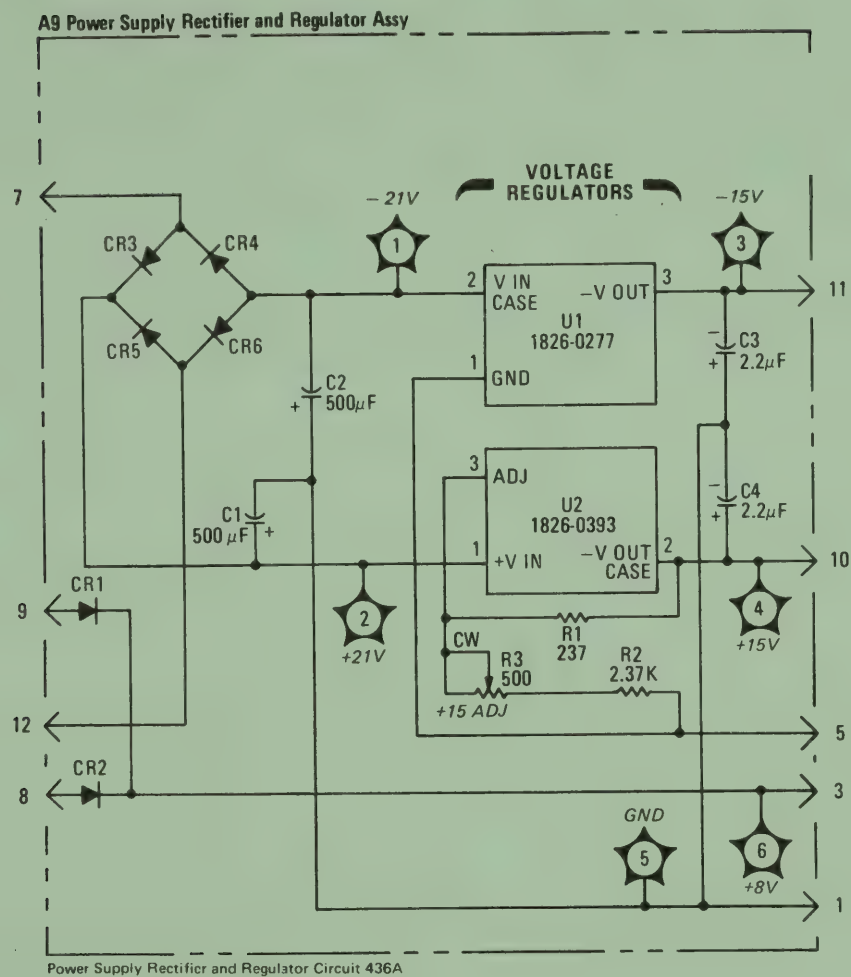


Figure 7-23. P/O Power Supply Rectifier and Regulator Assembly Schematic Diagram (P/O Change S)

At the top of Figure 8-49 add “or 024” next to Opt 022.

SECTION VIII

SERVICE

8-1. INTRODUCTION

8-2. This section provides principles of operation, troubleshooting procedures, and general service information for the Power Meter. The specific content and arrangement of this section is outlined below.

a. Safety Considerations: Provides general safety precautions that should be observed when working on the Power Meter.

b. Recommended Test Equipment: Defines the test equipment and accessories required to maintain the Power Meter.

c. Service Aids: Provides general information useful in servicing the Power Meter.

d. Repair: Provides general information for replacing factory selected components and instrument disassembly procedures.

e. Basic Circuit Descriptions: Describes the functional operation of linear and digital integrated circuits used in the Power Meter.

f. Troubleshooting: Provides step-by-step procedures for checkout and troubleshooting of a standard instrument, and a verification program for checkout and troubleshooting of an HP-IB equipped instrument. (Additional circuit troubleshooting data is provided as required on the individual service sheets located at the end of the section.)

g. Principles of Operation: Principles of operation are provided on two levels in this section. The first level is a block diagram description which covers the overall operation of the Power Meter in detail and is located at the end of the section just before the service sheets. The second level consists of detailed circuit theory descriptions which are provided as required on the individual service sheets with the appropriate schematics.

h. Service Sheets: Foldout service sheets are provided at the end of the section. Service Sheet 1 is an overall block diagram which illustrates major

signal flow and circuit dependency and is keyed, by the numbers in the lower, right-hand corners of the individual blocks on the diagram, to the detailed block diagrams. The detailed block diagrams provide an assembly-by-assembly description of instrument operation and are keyed to the service sheets containing schematics which follow them.

NOTE

Figure 8-1, Schematic Diagram Notes, explains any unusual symbols that appear on the schematics and the switch-wafer numbering system.

8-3. SAFETY CONSIDERATIONS

8-4. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition (see Sections II, III, and V). Service and adjustments should be performed only by qualified service personnel.

WARNING

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnection of the protective earth terminal is likely to make the instrument dangerous. Intentional interruption is prohibited.

8-5. Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

8-6. Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

8-7. Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement.

SCHEMATIC DIAGRAM NOTES

Resistance in ohms, capacitance in picofarads, inductance in millihenries unless otherwise noted.

*

Asterisk denotes a factory-selected value. Value shown is typical. Part may be omitted.



Tool-aided adjustment.



Manual control.



Encloses front-panel designation.



Encloses rear-panel designation.



Circuit assembly borderline.



Other assembly borderline. Also used to indicate mechanical interconnection (ganging).



Heavy line with arrows indicates path and direction of main signal.



Heavy dashed line with arrows indicates path and direction of main feedback.



Wiper moves toward CW with clockwise rotation of control (as viewed from shaft or knob).



Numbered Test Point.
Measurement aid provided.



Lettered Test Point.
No measurement aid provided.



Encloses wire color code. Code used is the same as the resistor color code. First number identifies the base color, second number identifies the wider stripe, third number identifies the narrower stripe. E.g., **947** denotes white base, yellow wide stripe, violet narrow stripe.



A direct conducting connection to the earth, or a conducting connection to a structure that has a similar function (e.g., the frame of an air, sea, or land vehicle).



A conducting connection to a chassis or frame.



Common connections. All like-designated points are connected.




Letter = off-page connection.
Number = Service Sheet number for off-page connection.



Number (only) = on page connection.

Figure 8-1. Schematic Diagram Notes (1 of 3)

 SCHEMATIC DIAGRAM NOTES




Indicates multiple paths represented by only one line. Letters or names identify individual paths. Numbers indicate number of paths represented by the line.




Coaxial or shielded cable.



Relay contact moves in direction of arrow when energized.

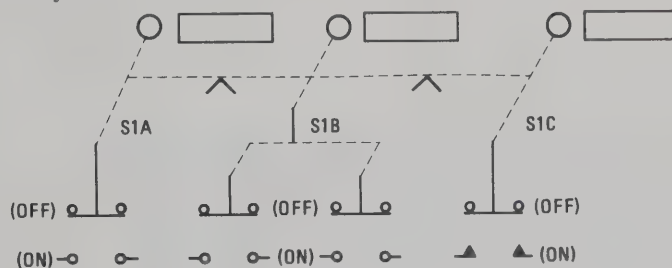

Indicates interlocked pushbutton switches with one momentary switch section. Only one switch section can be (ON) at a time. Depressing one switch section releases any other switch section.

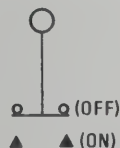

Indicates a pushbutton switch with a momentary (ON) position.

SWITCH DESIGNATIONS

EXAMPLE: A3S1AR(2-1/2)

A3S1 = SWITCH S1 WITHIN ASSEMBLY A3

A = 1ST WAFER FROM FRONT (A=1ST, ETC)

R = REAR OF WAFER (F=FRONT)

(2-1/2) = TERMINAL LOCATION (2-1/2) (VIEWED FROM FRONT)

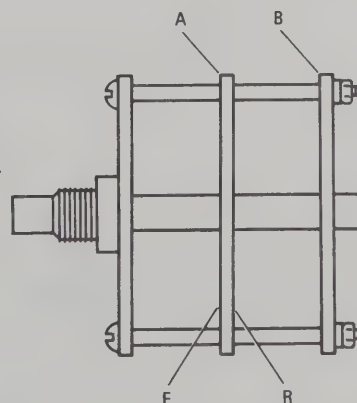
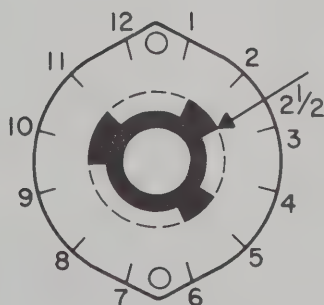


Figure 8-1. Schematic Diagram Notes (2 of 3)

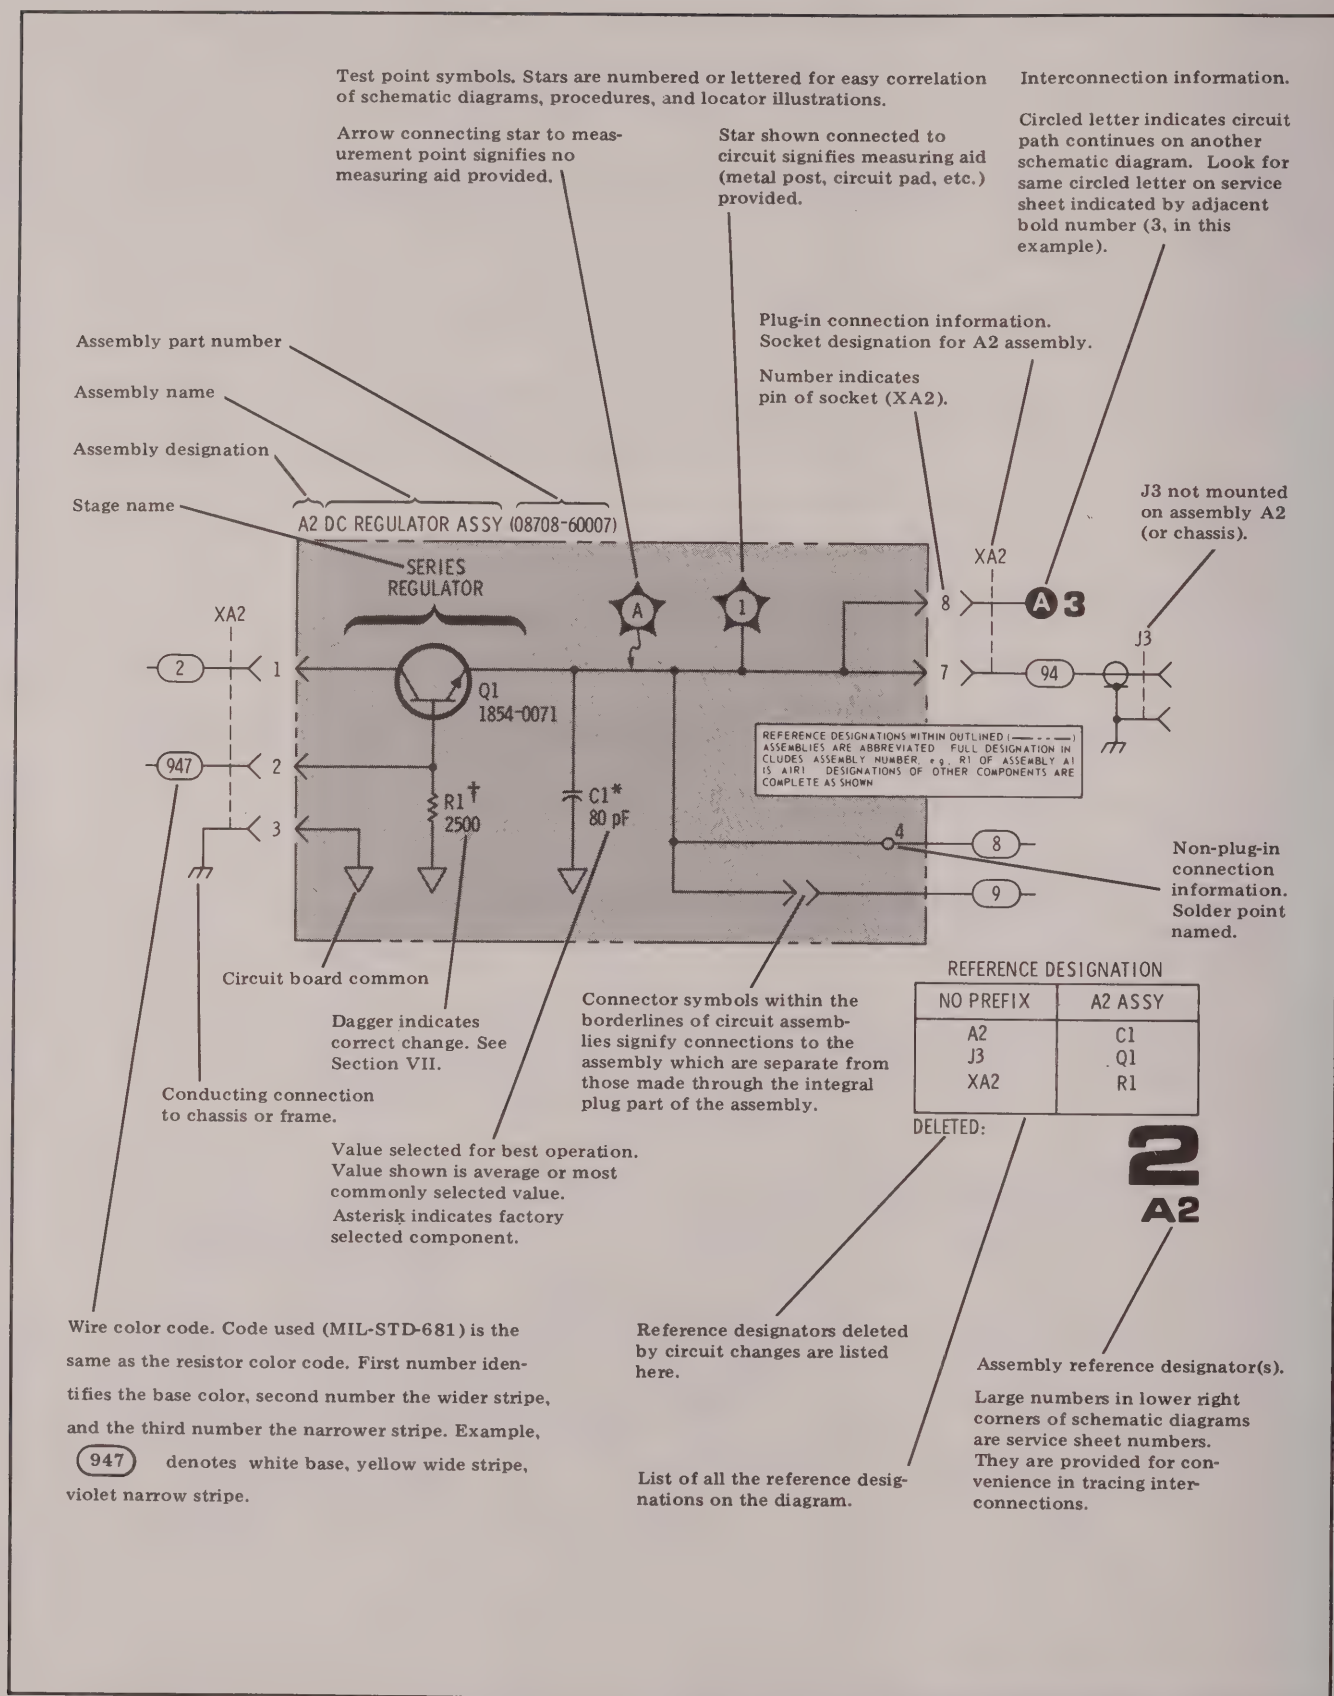


Figure 8-1. Schematic Diagram Notes (3 of 3)

Safety Considerations (cont'd)

The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

8-8. Whenever it is likely that this protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

WARNING

The service information is often used with power supplied and protective covers removed from the instrument. Energy available at many points may, if contacted, result in personal injury.

8-9. RECOMMENDED TEST EQUIPMENT

8-10. Test equipment and test equipment accessories required to maintain the Power Meter are listed in Table 1-2. Equipment other than that listed may be used if it meets the listed critical specifications.

8-11. SERVICE AIDS

8-12. Pozidriv Screwdrivers. Many screws in the instrument appear to be Phillips, but are not. To avoid damage to the screw slots, Pozidriv screwdrivers should be used.

8-13. Blade Tuning Tools. For adjustment of the front panel CAL ADJ control a special tuning tool is provided (HP Part Number 8710-0630). In situations not requiring non-metallic tuning tools, an ordinary small screwdriver or other suitable tool is sufficient. No matter what tool is used, never try to force any adjustment control in this instrument. This is especially critical when adjusting variable inductors or capacitors.

8-14. Part Location Aids. The locations of some chassis-mounted parts and the major assemblies are shown on the last foldout in this manual. The locations of individual components mounted on printed circuit boards or other assemblies are shown on the appropriate schematic diagram page or on the page opposite it. The part reference designator is the assembly designator plus the part designator (for example, A2R9 is R9 on the A2 assembly). For specific component description and ordering information refer to the parts list in Section VI.

8-15. Servicing Aids on Printed Circuit Boards.

The servicing aids include test points, transistor and integrated circuit designations, adjustment callouts and assembly stock numbers.

8-16. REPAIR**8-17. Factory Selected Components**

8-18. Some component values are selected at the time of final checkout at the factory (see Table 5-1). Usually these values are not extremely critical; they are selected to provide optimum compatibility with associated components. These components are identified on individual schematics by an asterisk (*). The recommended procedure for replacing a factory-selected part is as follows:

- a. Try the original value, then perform the calibration test specified for the circuit in the performance and adjustment sections of this manual.
- b. If calibration cannot be accomplished, try the typical value shown in the parts list and repeat the test.
- c. If the test results are still not satisfactory, substitute various values within the tolerances specified in Table 5-1 until the desired result is obtained.

8-19. Disassembly and Reassembly Procedures**WARNINGS**

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, if inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

8-20. Before performing any of the following disassembly or reassembly procedures, the following steps must be performed.

- a. Set POWER ON-OFF switch to OFF position.
- b. Remove Line Power Cable (W8) from Line Power Module (A11).

Disassembly and Reassembly Procedures (cont'd)

8-21. Top Cover Removal. To remove the top cover from the Power Meter follow the steps as listed below:

- a. Remove Pozidriv screw from rear edge of top cover.
- b. Slide top cover back until free from front frame and lift off. Reverse the procedure to replace the top cover.

8-22. Bottom Cover Removal. To remove the bottom cover from the Power Meter follow the steps as listed below:

- a. Place Power Meter with bottom cover facing up.
- b. Remove four plastic feet from bottom cover. Lift up on back edge of plastic foot and

push back on front edge of plastic foot to free foot from bottom cover.

- c. Remove captive Pozidriv screw from rear edge of bottom cover.
- d. Slide bottom cover back until it clears rear frame. Reverse the procedure to replace the bottom cover.

8-23. Front Panel Removal. To remove the front panel from the Power Meter follow the steps as listed below:

- a. Remove top and bottom covers.
- b. Remove side trim strips from front frame.
- c. Remove two Pozidriv screws from both sides of front frame.
- d. Carefully push front panel from behind to free it from the front frame (see Figure 8-2).

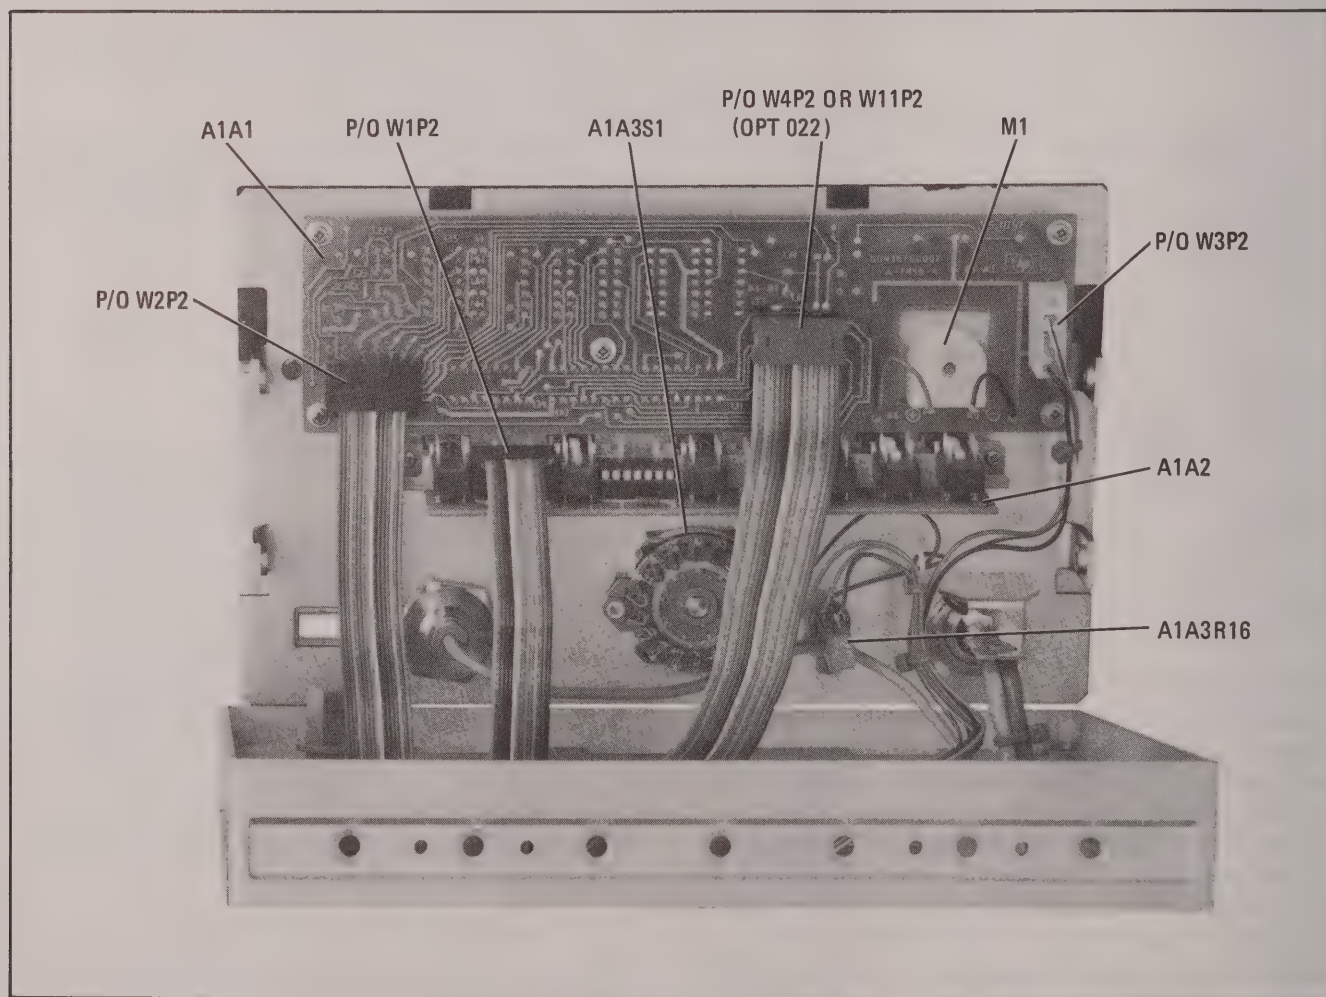


Figure 8-2. Front Panel Removal

Disassembly and Reassembly Procedures (cont'd)

e. Disconnect cables as necessary for access to front panel assemblies and components. Reverse the procedure to replace the front panel.

8-24. BASIC CIRCUIT DESCRIPTIONS

8-25. Linear Integrated Circuits

8-26. Operational Amplifiers. Operational amplifiers are used to provide such functions as summing and offsetting voltages, as buffer amplifiers, detectors, and in power supplies. The particular function is determined by the external circuit connections. Equivalent circuit and functional diagrams for typical operational amplifiers are contained in Figure 8-3. Circuit A is a non-inverting buffer amplifier with gain of one. Circuit B is a non-inverting amplifier with gain determined by the resistance of R1 and R2. Circuit C is an inverting amplifier with gain determined by R1 and R2, with the input impedance equal to R2. Circuit D shows the equivalent circuit and typical parameters for an operational amplifier.

NOTE

It is assumed that the amplifier has high gain, low output impedance and high input impedance.

8-27. Troubleshooting. An operational amplifier can be characterized as an ideal voltage amplifier having low output impedance, high input impedance, and very high gain. Also the output voltage is proportional to the difference in the voltages *applied* to the input terminals. In use, the amplifier drives the input voltage difference close to zero.

8-28. When troubleshooting an operational amplifier, measure the voltages at the two inputs with no signal applied; the difference between these voltages should be less than 10 mV. A difference voltage much greater than 10 mV indicates trouble in the amplifier or its external circuitry. Usually this difference will be several volts and one of the inputs will be very close to an applied circuit operating voltage (for example, +20V, -12V).

8-29. Measure the amplifier's output voltage. It will probably be close to one of the supply voltages or ground. Verify that the output voltage follows the input voltages, i.e., if the non-inverting input voltage is more positive than normal and/or if the inverting input voltage is more negative than

normal, then the change in output voltage should be more positive. If the non-inverting input is less positive and/or the inverting input voltage is less negative, the change in output voltage should be less positive. The preceding symptoms indicate the defective component is in the external circuitry. If the symptoms as stated are absent, the operational amplifier is probably defective.


8-30. Digital Integrated Circuits and Symbols


8-31. Introduction. Except for two Read Only Memory (ROM) devices, all digital circuits used in this instrument belong to the TTL family. The two ROMs belong to the MOS family and are made TTL compatible via the use of pull-up resistors attached to the input/output ports. Refer to Table 8-1 for TTL and MOS input/output voltage level specifications, and for MOS input power requirements.


8-32. The symbols used in this manual conform to the requirements of American National Standard ANSI Y32.14-1973, "Graphic Symbols for Logic Diagrams (Two-State Devices)". Unless otherwise specified all symbols and signal mnemonics should be interpreted according to the following general rules:

a. Signals that are active-low are identified by the letter L or N followed by the signal mnemonic (e.g., LQT).


b. Signals that are active-high are identified by the letter H or Y followed by the signal mnemonic (e.g., HLLD).

c. A polarity indicator symbol () at an input indicates that it is active-low or triggers on a low going edge; a polarity indicator symbol at an output indicates inversion or that the output is active-low. Active-high inputs or inputs which trigger on a high going edge; and active-high outputs are shown without the polarity indicator symbol.

d. A dynamic indicator symbol () at an input indicates that the input triggers (is active) only on the leading or trailing edge of an input signal. If a polarity indicator symbol is present with the dynamic indicator symbol, then the input triggers on the negative edge of the input signal. Inputs that are not edge sensitive are referred to as level sensitive and are shown without the dynamic indicator symbol.

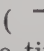e. The output-delay indicator symbol () indicates that the output is effective at the time

OPERATIONAL AMPLIFIER

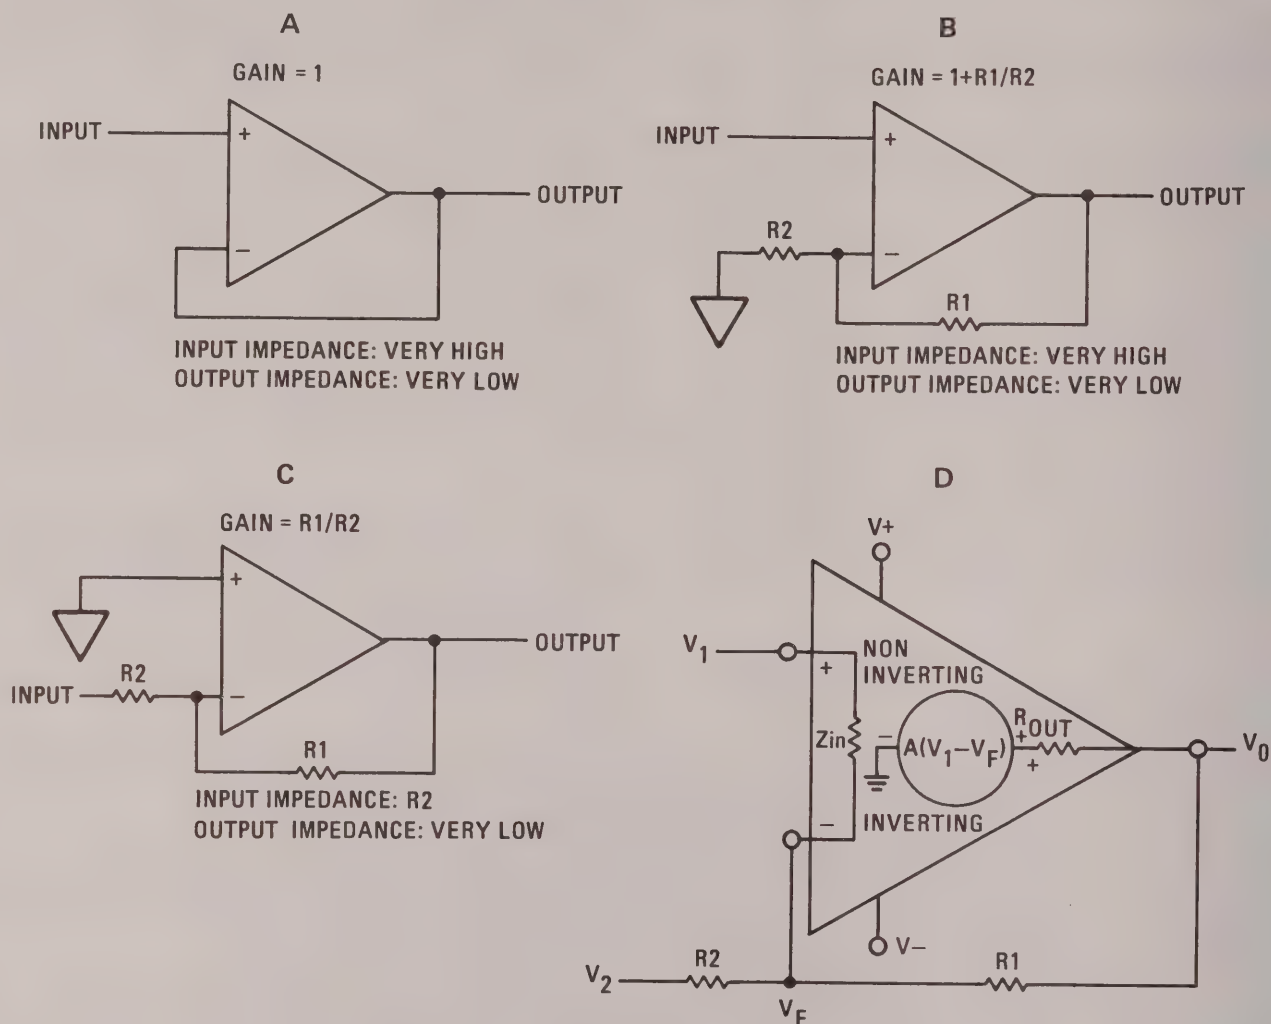

IF "A" IS LARGE, $V_F = V_1$

$$(1) \quad V_0 = V_1 \left(1 + \frac{R1}{R2}\right) - V_2 \left(\frac{R1}{R2}\right)$$

(2) IF $V_2 = 0$ (∇), THEN

$$V_0 = V_1 \left(1 + \frac{R1}{R2}\right)$$

(3) IF $V_1 = 0$ (∇), THEN

$$V_0 = -V_2 \left(\frac{R1}{R2}\right)$$

Figure 8-3. Operational Amplifier Functional Circuits

Digital Integrated Circuits and Symbols (cont'd)
that the signal which initiates the change returns to its opposite state.

f. The inhibiting-input indicator symbol (+) indicates that the output is prevented from going to its indicated state as long as the inhibiting-input remains high. If an inhibiting-input indicator and a polarity indicator symbols are used together, the output will be inhibited as long as the inhibiting-input remains low. The inhibiting-input symbol is used mainly with three-state logic devices to allow the use of the “wired OR” connection of the outputs.

NOTE

The term “binary coded decimal” (BCD) refers to four-bit binary circuits that range from decimal 0 to 9 in an 8421 code.

The term “binary”, when applied to four-bit binary circuits, refers to circuits that range from decimal 0 to 15 in an 8421 code.

Table 8-1. Logic Levels and Power Requirements

Logic	High =	Low =	Power Requirements
TTL	≥2V	≤0.8V	Gnd, +5V
MOS	Input ≥ 4V	Input and output ≤0.8V	Gnd V _{DD} +5V
	Output ≥ 2V		V _{GG} +12V V _{EE} -2V

8-33. Dual D-Type Flip-Flop. The dual D-type flip-flop shown in Figure 8-4 consists of two

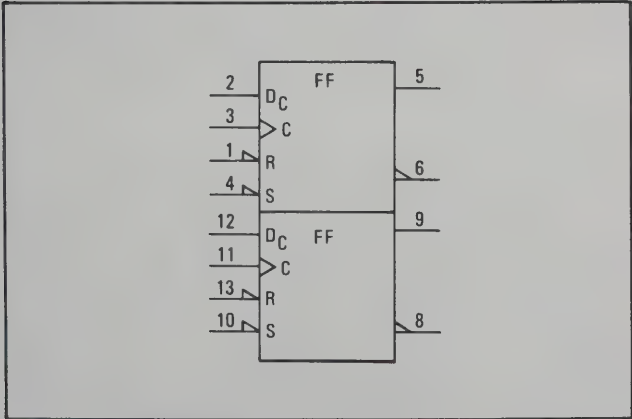


Figure 8-4. Dual D-Type Flip-Flop

independent D-type flip-flops. The information present at the data (D_C) input is transferred to the active-high and active-low outputs on a low-to-high transition of the clock (C) input. The data input is then locked out and the outputs do not change again until the next low-to-high transition of the clock input.

8-34. The set (S) and reset (R) inputs override all other input conditions: when set (S) is low, the active-high output is forced high; when reset (R) is low, the active-high output is forced low. Although normally the active-low output is the complement of the active-high output, simultaneous low inputs at the set and reset will force both the active-low and active-high outputs to go high at the same time on some D-type flip-flops. This condition will exist only for the length of time that both set and reset inputs are held low. The flip-flop will return to some indeterminate state when both the set and reset inputs are returned to the high state.

8-35. Four-Bit Bistable Latch. The four-bit bistable latch shown in Figure 8-5 consists of four independent D-type flip-flops. The flip-flops (FF1 and FF2) are controlled by the C1 clock input and the flip-flops (FF3 and FF4) are controlled by the C2 clock input. Information present at a data (D_C) input is transferred to the active-high and active-low outputs when the associated clock input is high; the outputs will follow the data as long as the clock remains high. When the clock goes low, the information that was present at the data input when the transition occurred is retained at the outputs until the clock returns high.

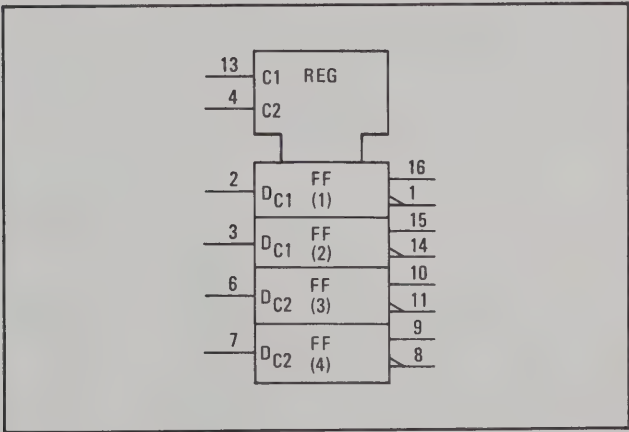


Figure 8-5. Four-Bit Bistable Latch

8-36. Dual J-K Master/Slave Flip-Flop. The dual J-K Master/Slave Flip-Flop shown in Figure 8-6 consists of two independent J-K flip-flops. Inputs to the master section is controlled by the gate (G)

Digital Integrated Circuits and Symbols (cont'd)

pulse. The gate pulse also controls the state of the coupling transistors which connect the master and slave sections. The sequence of operation is as follows:

- T1 — Isolate slave from master.
- T2 — Enter information from J and K inputs to master.
- T3 — Disable J and K inputs.
- T4 — Transfer information from master to slave.

8-37. Flip-flop response is determined by the levels present at the J and K inputs at time T2. The four possible combinations are as follows:

- When J and K are low, the outputs will not change state.
- When J is high and K is low, the active-high output will go high, unless it is already high.
- When J is low and K is high, the active-high output will go low, unless it is already low.
- When J and K are both high, the flip-flop will toggle. That is, the active-high and active-low outputs will change states for each gate pulse.

8-38. The set (S) and reset (R) inputs override all other input conditions: when set (S) is low, the active-high output is forced high; when reset (R) is low, the active-high output is forced low. Although normally the active-low output is the complement of the active-high output, simultaneous low inputs to both S and R will force both outputs high on some J/K flip-flops. This forced high on both outputs will exist only for as long as both R and S are held low. The flip-flop will return to some indeterminate state when both R and S go high.

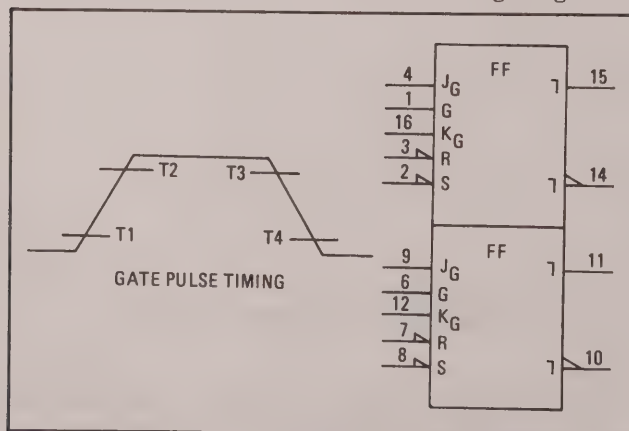


Figure 8-6. Dual J-K Master/Slave Flip-Flop and Gate Pulse Timing

8-39. **Dual J-K Edge-Triggered Flip-Flop.** The dual J-K edge-triggered flip-flop shown in Figure 8-7 is functionally identical to the master/slave flip-flop described previously except for gate pulse timing. The edge-triggered flip-flop response is determined by the levels present at the J and K inputs at the instant that a negative gate transition (high-to-low) occurs.

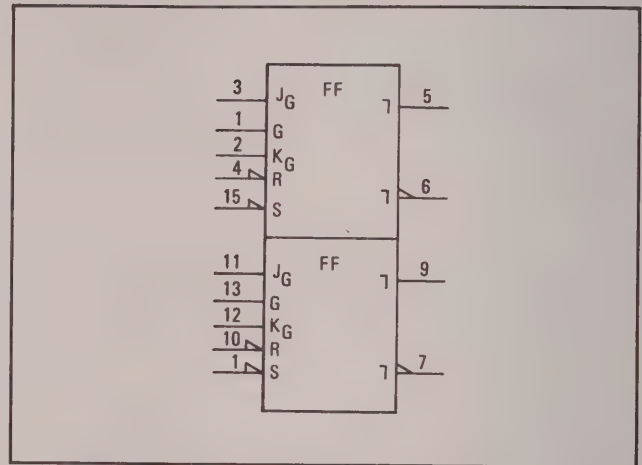


Figure 8-7. Dual J-K Edge-Triggered Flip-Flop

8-40. **Programmable Counters.** Programmable binary and decade counters used in the Power Meter are shown in Figure 8-8. The operating modes for both counters are identical. The only differences in operation are in the count sequences.

8-41. Operation of the counters is synchronous, with the outputs changing state after the high-to-low transition of either the Count-Up Clock (+1) or the Count-Down Clock (-1). The direction of counting is determined by which clock input is pulsed while the other clock is high. Incorrect counting will occur if both clock inputs are low simultaneously. Both counters will respond to a clock pulse on either input by changing to the next appropriate state of the count sequence. The state diagram for the decade counter (Figure 8-8) shows both the regular sequence and the sequence if a code greater than nine is present in the counter.

8-42. Both counters have a parallel load (asynchronous) facility which permits the counters to be preset. Whenever the Parallel Load input (C) and Master Reset (R) are low, the information present on the D_C inputs will be loaded into the counters and appear at the outputs independently of the conditions of the clocks. When the Parallel Load (C) input goes high, this information is stored in the counters. When the counters are clocked they will change to the next

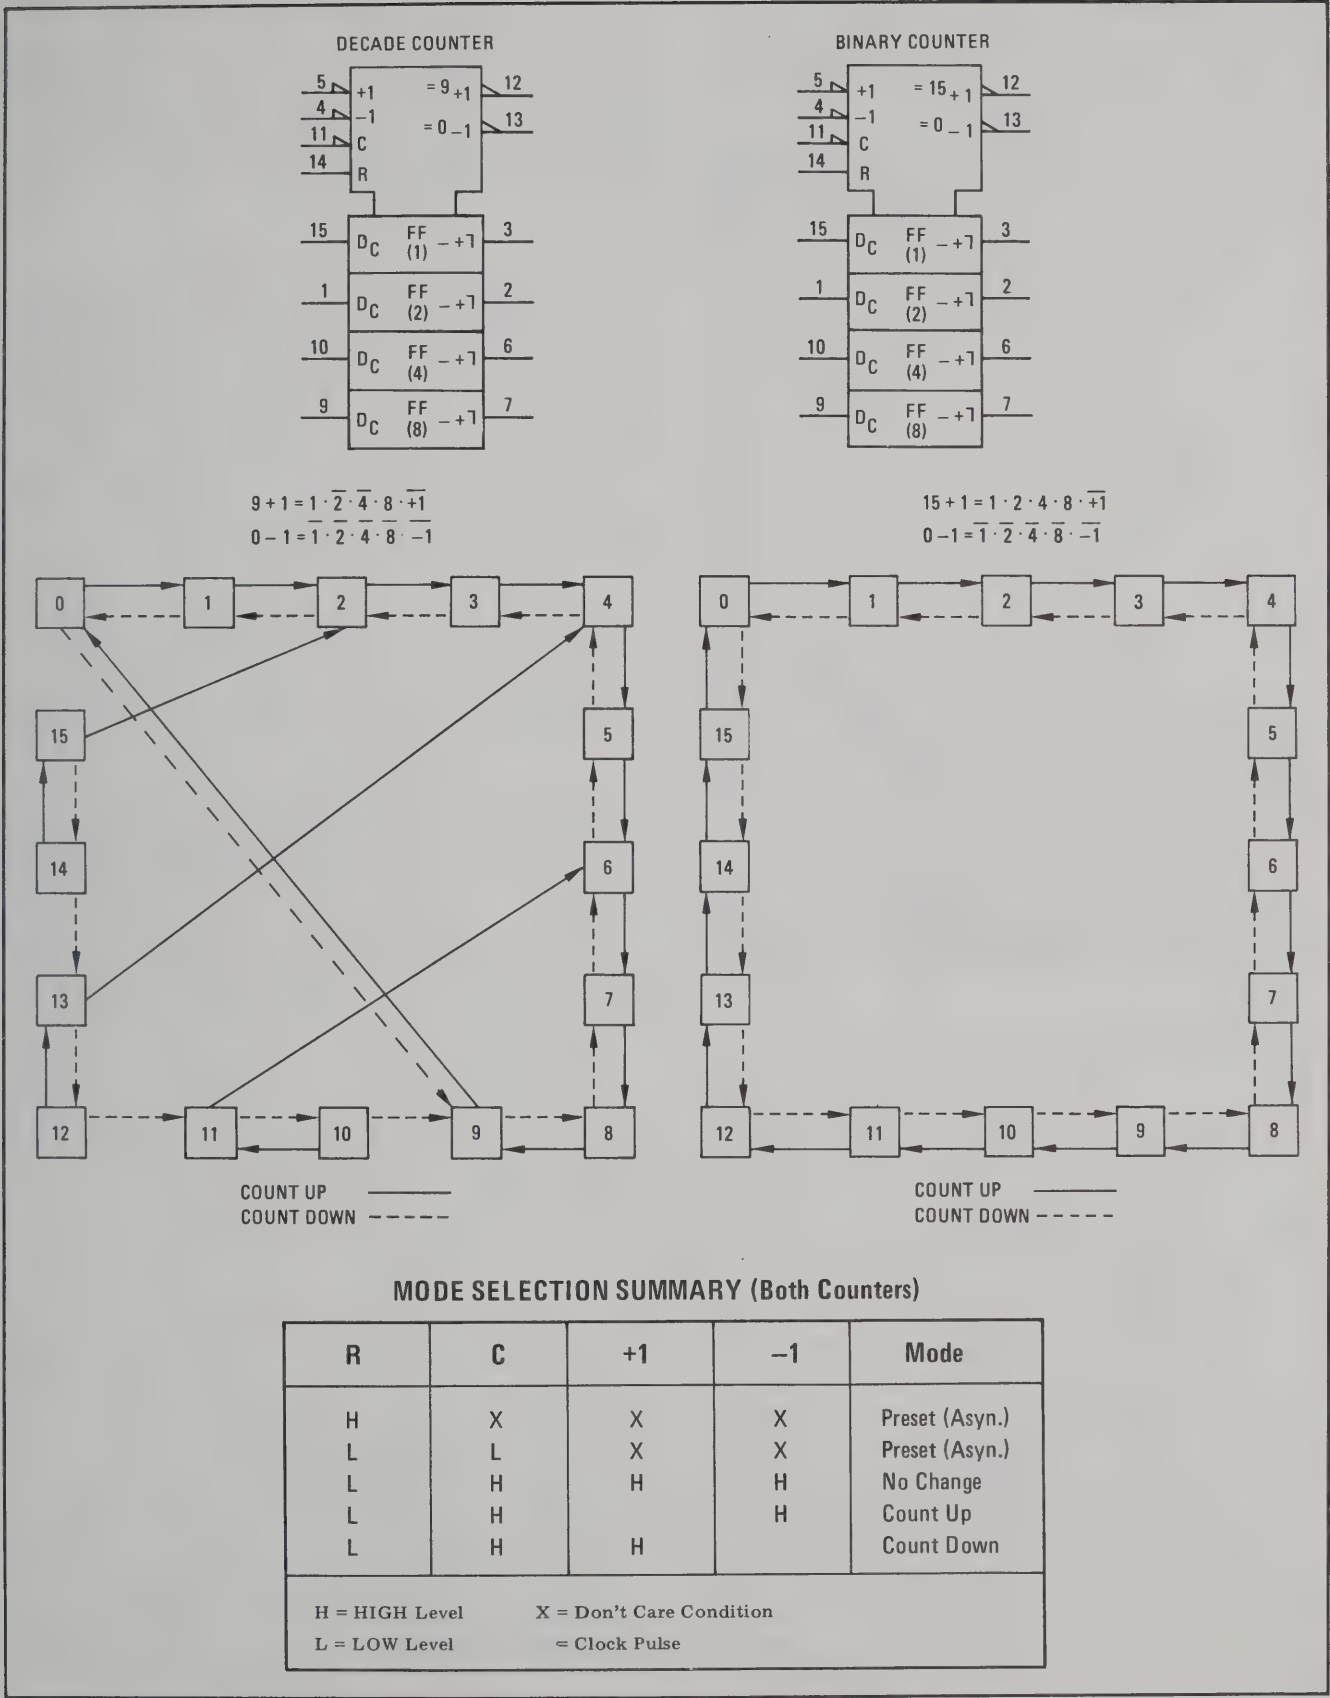


Figure 8-8. Programmable Counters

Digital Integrated Circuits and Symbols (cont'd)
appropriate state in the count sequence. The D_C inputs are inhibited when C is held high and have no effect on the counters.

8-43. The Terminal Count-Up (9₊₁ or 15₊₁) or Terminal Count-Down (0₋₁) outputs (carry and borrow respectively) allow multidecade counter operations without additional logic. The counters are cascaded by feeding the terminal count-up output to the count-up clock input and terminal count-down output to the count-down clock input.

8-44. The Terminal Count-Up outputs of the decade and binary counters are low when their count-up clock inputs are low and the counters are in state nine and fifteen respectively. Similarly, the Terminal Count-Down outputs are low when their count-down clock inputs are low and both counters are in state zero. Thus, when the decade counter is in state nine and the binary counter is in state fifteen and both are counting up, or both are in state zero and counting down, a clock pulse will change the counter's state on the rising edge and simultaneously clock the following counter through the appropriate active low terminal count output. There are two gate delays per state when these counters are cascaded.

8-45. The asynchronous Master Reset (R) input, when high, overrides all other inputs and clears the counters. Master Reset (R) overrides Parallel Load (C) input so that when both are activated the counters will be reset.

8-46. Decoder. There are two types of decoders used in the Power Meter: a 3-line to 8-line and a 4-line to 16-line decoder. Operation of both decoders is identical except for the number of input and output lines. Therefore only the operation of the 3-line to 8-line decoder is shown in the truth table in Figure 8-9.

8-47. Data Selector (Multiplexer). There are two types of data selectors used in the Power Meter: an 8-input data selector and a 16-input data selector. The operation of both data selectors are identical except for the number of inputs. Therefore only the operation of the 8-input data selector is described and the symbol shown in Figure 8-10. One of the 8-input lines (0 through 7) is selected by the SEL output (G0 through 7). The strobe input (G8) must be low in order to enable the output lines. If the strobe input is high, the output lines are inhibited and present a high impedance. This circuit uses Three State logic so that the outputs may be connected into a "wired OR" configuration.

8-48. Display Driver. The display driver (Figure 8-11) accepts a 4-bit binary code and provides output drive to light the appropriate segments of a 7-segment numeric display. The decode format employed allows generation of numeric codes 0 through 9 as well as other codes shown in the truth table in Figure 8-11.

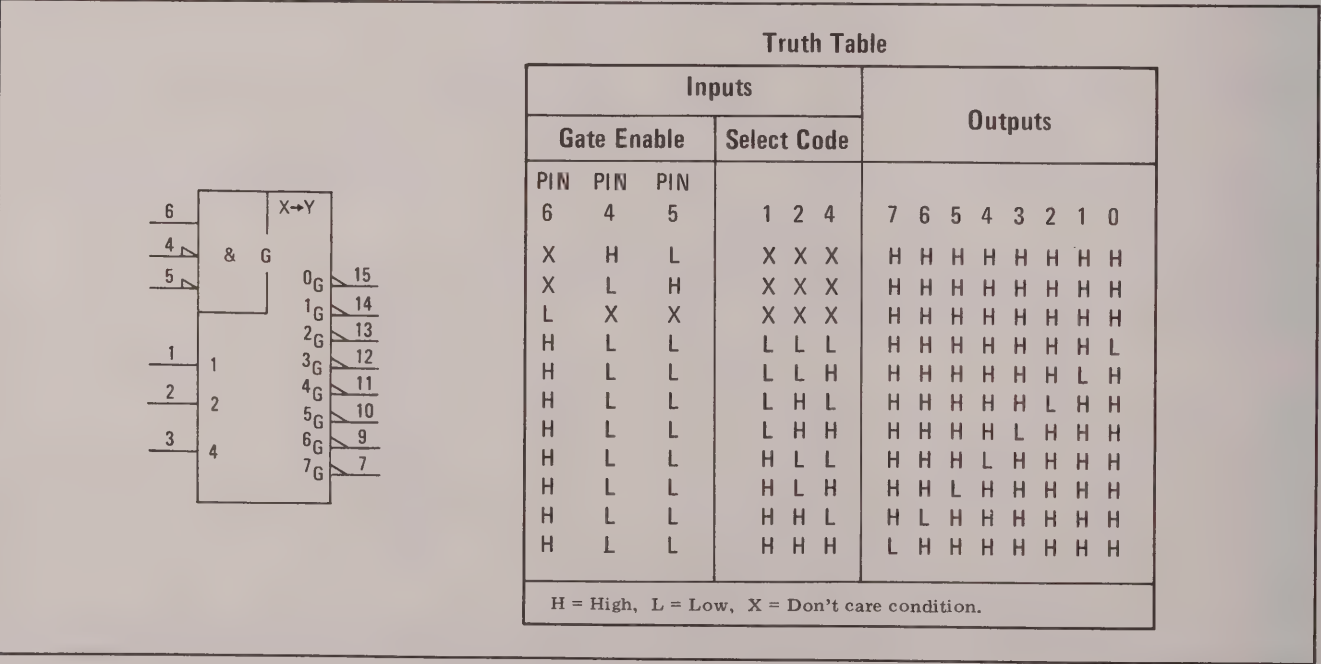


Figure 8-9. 3-Line to 8-Line Decoder

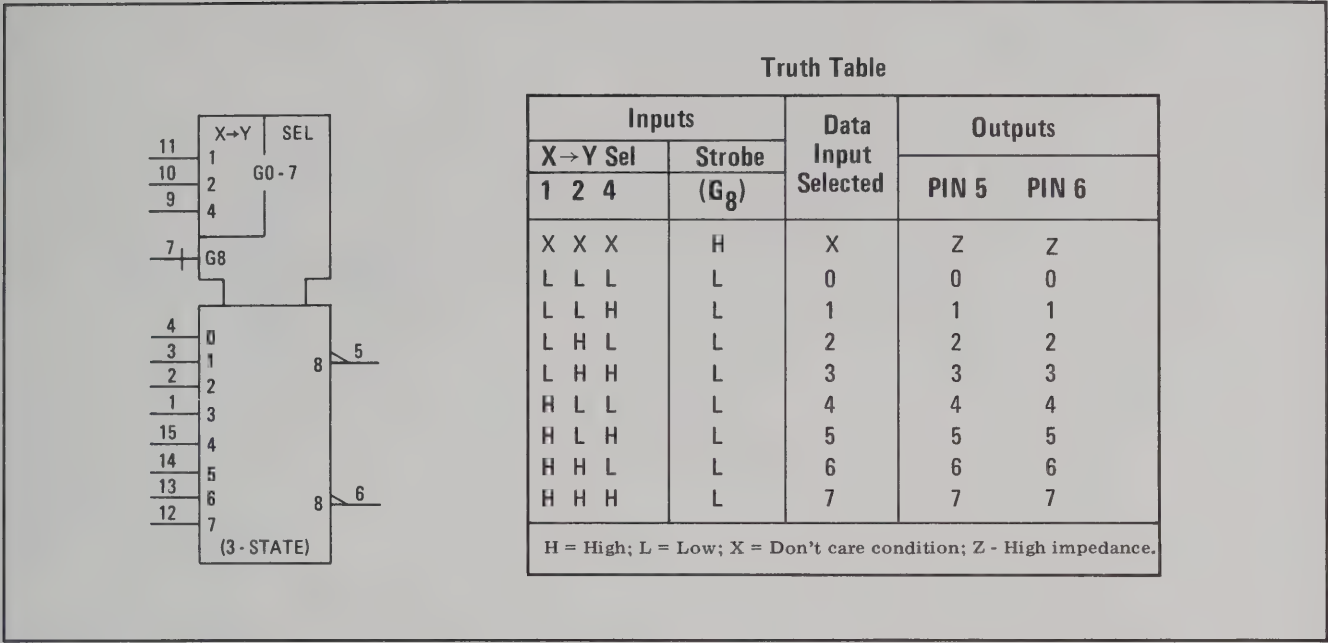


Figure 8-10. 8-Input Data Selector (Multiplexer)

8-49. Latches on the four data inputs are controlled by the gate (G2) input. When G2 is low, the states of the outputs are determined by the input data code. When G2 goes high, the last data code present at the input to the latches is stored and the output remains stable.

8-50. The display driver also has provision for automatic blanking and zero suppression via the ripple blanking input, RBI, (G1) and the ripple blanking output (RBO), respectively. The G1 line always serves as an input; the RBO line typically serves as an output but it can also be configured as an input (G3) by connecting it to an external drive source. When G3 is held low by an external source, it overrides all other inputs to the display driver and causes the display driver to provide blanking outputs to all segments of the associated display.

8-51. When the RBO line is not connected to an external drive source it serves as a blanking output which is controlled by G1. As shown on the truth table in Figure 8-11, the combination of a low G1 and a binary 0 code causes the display driver to set the RBO low and to provide blanking outputs to all segments of the associated display. For zero suppression, the RBI (G1) input associated with the most significant digit is grounded and the RBO output is connected to the G1 input of the next significant digit. Using this configuration a number such as 0010 would be displayed as 10.

8-52. **Numeric Display.** The numeric display consists of eight individual light emitting diodes (LED) which share a common anode input. Seven of the LEDs, designated a through g, are arranged to form a seven-segment display as shown in Figure 8-12. The eighth LED, designated dp, provides a left-hand decimal point display. Each segment is lighted individually by a low input to the cathode pin (a through g and dp) of the LEDs.

8-53. **Read Only Memories (ROMs).** The Read Only Memories (ROMs) used in the Power Meter fall into two separate logic families: TTL and MOS. As shown in Figure 8-13, the only significant differences between the two types of ROMs are the power requirements and the amount of program storage. The power requirements for each family are provided in Table 8-1. Storage capacity for the TTL ROM is 32 8-bit words (256 bits); for the MOS ROM, storage capacity increases to 256 16-bit words (4096 bits).

8-54. When the ROMs are initially programmed, each 8- or 16-bit word is stored at a predetermined address. During subsequent operation, selection of the desired word is accomplished by applying the appropriate address code to the X→Y inputs. (In the Power Meter, the gate (G) input on the TTL ROMs is not used; it is tied to ground to keep the ROMs continuously enabled.) The specific program associated with each ROM is listed adjacent to the Service Sheet schematic on which the ROM is shown.

Truth Table

Binary Data Input	Inputs						Outputs										Display
	Control			Data													
	G1	G2	G3	8	4	2	1	a	b	c	d	e	f	g	RBO		
—	*	H	**	X	X	X	X	← STABLE →							H	STABLE	
0	L	L	**	L	L	L	L	H	H	H	H	H	H	H	L	BLANK	
0	H	L	**	L	L	L	L	L	L	L	L	L	L	H	H	0	
1	X	L	**	L	L	L	H	H	L	L	H	H	H	H	H	1	
2	X	L	**	L	L	H	L	L	L	H	L	L	H	L	H	2	
3	X	L	**	L	L	H	H	L	L	L	L	H	H	L	H	3	
4	X	L	**	L	H	L	L	H	L	L	H	H	L	L	H	4	
5	X	L	**	L	H	L	H	L	H	L	L	H	L	L	H	5	
6	X	L	**	L	H	H	L	L	H	L	L	L	L	L	H	6	
7	X	L	**	L	H	H	H	L	L	L	H	H	H	H	H	7	
8	X	L	**	H	L	L	L	L	L	L	L	L	L	L	H	8	
9	X	L	**	H	L	L	H	L	L	L	H	H	L	L	H	9	
10	X	L	**	H	L	H	L	H	H	H	H	H	H	L	H	— (dash)	
11	X	L	**	H	L	H	H	L	H	H	L	L	L	L	H	E	
12	X	L	**	H	H	L	L	H	L	L	H	L	L	L	H	H	
13	X	L	**	H	H	L	H	H	H	H	L	L	L	H	H	L	
14	X	L	**	H	H	H	L	L	L	H	H	L	L	L	H	P	
15	X	L	**	H	H	H	H	H	H	H	H	H	H	H	H	BLANK	
X	X	X	L	X	X	X	X	H	H	H	H	H	H	H	**	BLANK	

H = HIGH; L = LOW; X = DON'T CARE CONDITION

*The G1 input will blank the display only if a binary zero is stored in the latches.

**The RBO output (pin 4) when used as an input (G3) overrides all other input conditions.


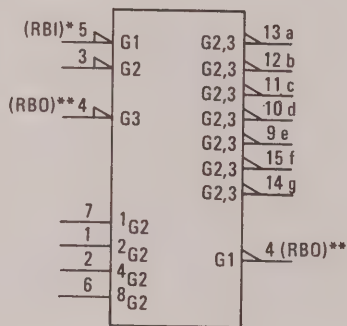


Figure 8-11. LED Display Driver

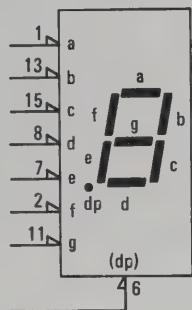

Truth Table

Inputs									Display
a	b	c	d	e	f	g	dp		
L	L	L	L	L	L	H	X		0
H	L	L	H	H	H	H	X		1
L	L	H	L	L	H	L	X		2
L	L	L	L	H	H	L	X		3
H	L	L	H	H	L	L	X		4
L	H	L	L	H	L	L	X		5
L	H	L	L	L	L	L	X		6
L	L	L	H	H	H	H	X		7
L	L	L	L	L	L	L	X		8
L	L	L	H	H	L	L	X		9
H	H	H	H	H	H	H	X		BLANK
X	X	X	X	X	X	X	L		.

H = high; L = low; X = Don't care condition.

Figure 8-12. Numeric Display

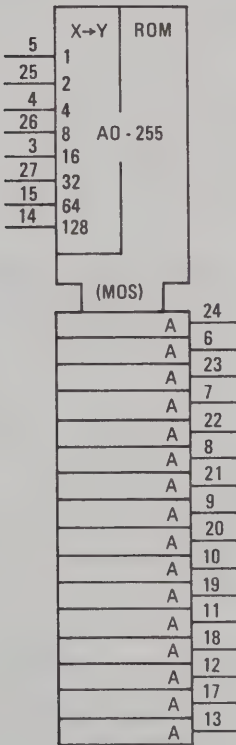
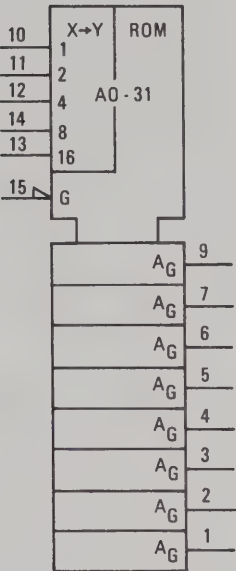


Figure 8-13. MOS and TTL ROMs

TROUBLESHOOTING

8-55. TROUBLESHOOTING

8-56. Since the Power Meter is a software controlled instrument, effective troubleshooting requires a thorough knowledge of both hardware operation and program execution. As an aid to this understanding, a general overview of Power Meter operation and troubleshooting rationale is provided in the Block Diagram Description associated with Service Sheets 1 through 5, detailed descriptions of the operating program are provided in Tables 8-3 and 8-6 and Figure 8-15, and circuit descriptions and troubleshooting data are provided as required on Service Sheets 6 through 15.

8-57. In addition to the information referenced above, this section also contains step-by-step verification procedures for a standard instrument, an HP-IB equipped instrument, and a BCD equipped instrument. Each of these procedures are designed to accomplish three major purposes. The first purpose is to exercise the stored program and the hardware circuits in a known sequence so that a fault condition can be readily isolated to a circuit group or to a segment of the stored program. The second purpose is to describe each check in sufficient detail to familiarize a maintenance technician with overall Power Meter operation. The third and most significant purpose is to indicate a logical troubleshooting entry point for program verification and signal tracing.

8-58. When the verification procedures are used as a basis for troubleshooting instruments equipped with either the HP-IB or BCD option, it is necessary that the standard instrument verification procedure be performed first to ascertain that the fault is not in the standard instrument circuits. After the standard instrument circuits are known to be operating properly, a fault can be readily isolated to a remote option circuit group, or to that segment of the operating program associated with remote operation.

8-59. Standard Instrument Checkout

8-60. A step-by-step procedure for verifying the operation of a standard instrument is provided in Table 8-3. Each step of the procedure directs that a specific function be verified and summarizes the program execution and/or circuit operation associated with the function. Each summary, in

turn, is based on normal indications previously obtained. Thus, if the steps are performed in the order listed, an abnormal indication is directly related to a small segment of the operating program or to a specific circuit group. The information contained on the Service Sheets and in the Operating Program Flow Chart (Figure 8-15) can then be used to further isolate the problem. Typical examples of using the checkout procedure as a basis for troubleshooting are listed below.

8-61. Example 1: Abnormal Indication is Observed for Step 1. For this example, it is assumed that the power supplies are operating normally since troubleshooting of these circuits is straightforward (refer to Service Sheet 15). The first step in isolating any other type of fault is to determine whether the fault is in the ROM which contains the operating program, or whether it is one of the major circuit groups shown on Service Sheet 1. To isolate the fault, proceed as follows:

a. Look at the front-panel display while referring to Figure 8-14 and try to determine what portion of the operating program that the fault is associated with. Note that the range and mode indications are generated at the start of the program cycle, the in-range/out-of-range status indications are generated next, then the digital readout is updated at the end of the program cycle. (When autoranging is enabled and an out-of-range conversion is detected, additional measurements are taken until an in-range conversion is detected, or until an out-of-range conversion is detected on the last range. Thus, the digital readout is not updated until after the last conversion of the program cycle.)

b. If the mode and range indications are abnormal, the fault occurs early in the program cycle and will affect circuit operation for the remainder of the cycle. Thus, the abnormal indication should be remedied before attempting any further analysis of Power Meter operation. To isolate the fault, proceed as follows:

1) Connect the logic analyzer (HP 1600A or equivalent) to the Power Meter as follows:

NOTE

Unless otherwise indicated, the logic analyzer is always connected

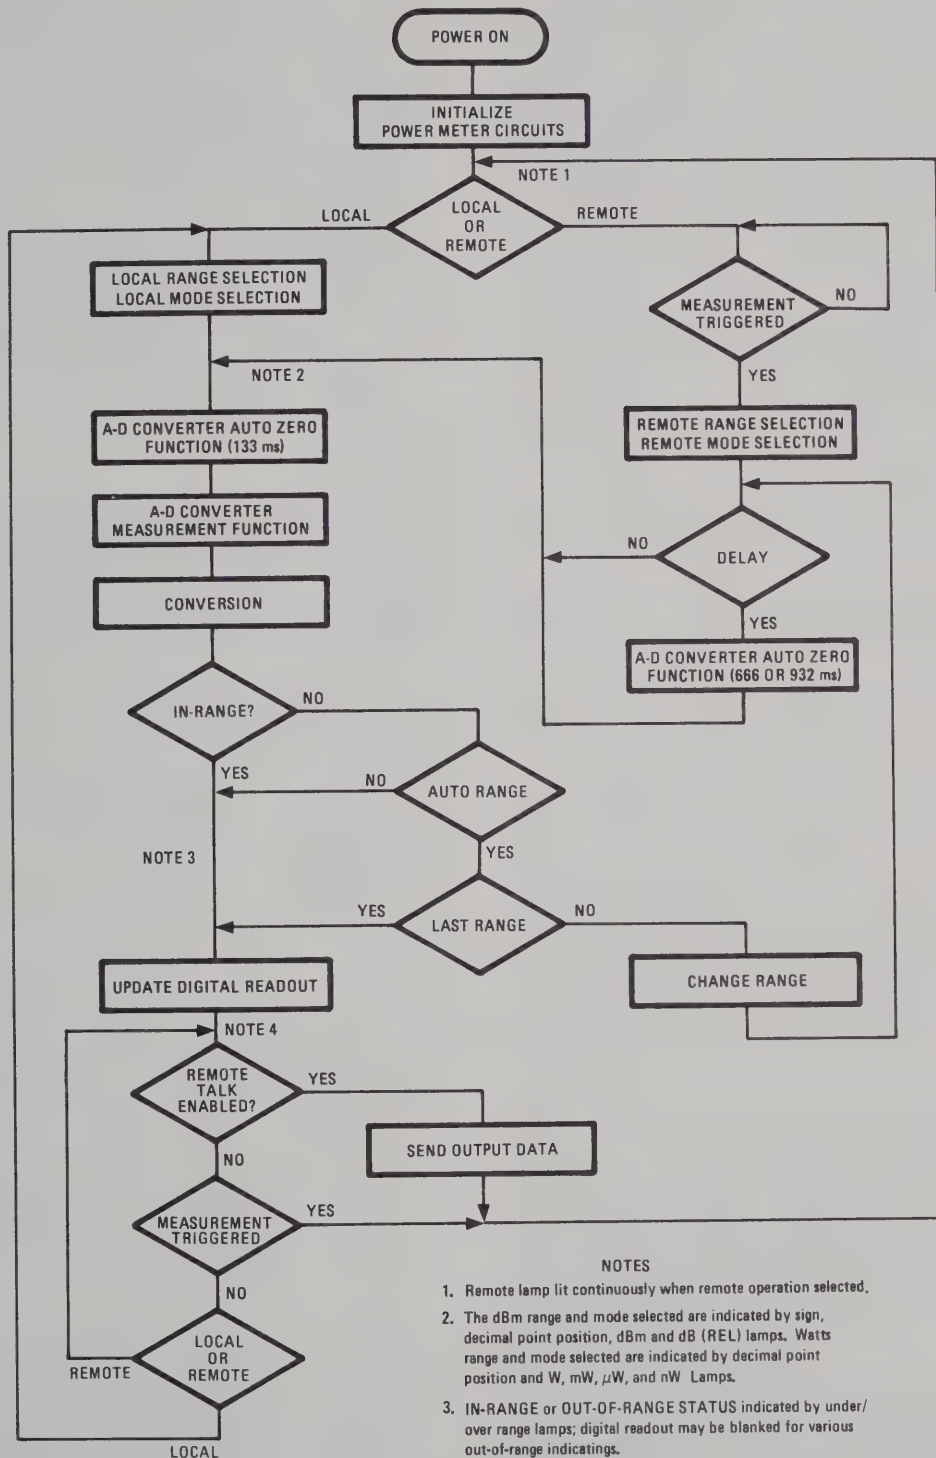


Figure 8-14. Power Meter Operating Cycle

TROUBLESHOOTING

Standard Instrument Checkout (cont'd)

Note cont'd)


as specified below for verifying program execution.

Logic Analyzer Input	Connect to:
DATA INPUTS BIT 0	A5TP1
DATA INPUTS BIT 1	A5TP2
DATA INPUTS BIT 2	A5TP3
DATA INPUTS BIT 3	A5TP4
DATA INPUTS BIT 4	A5TP5
DATA INPUTS BIT 5	A5TP6
DATA INPUTS BIT 6	A5TP7
DATA INPUTS BIT 7	A5TP8
DATA INPUTS GND	A5TP11
CLOCK INPUT	A5TP10

2) Set the logic analyzer controls as indicated below.

NOTE

Unless otherwise indicated, the logic analyzer controls are always set as specified below for verifying program execution.

DISPLAY	CLOCK: 	THRESHOLD: TTL
LOGIC: POS	DISPLAY TIME: as desired.	
MARK: OFF BYTE: 3 BIT	COLUMN BLANKING: to display Bits 0 through 7.	

3) Observe the logic analyzer NO CLOCK indicators to verify that a 01 clock input is applied to the Controller. If either indicator is lit, refer to Service Sheet 9 for information covering checkout and troubleshooting of the Clock Generator Circuits. (Service Sheet 1 indicates that Program Clocks are applied to the Controller from the Counter and Clock Generator Circuits and that a detailed block diagram of these circuits is provided on Service Sheet 3. Service Sheet 3, in turn, indicates that a schematic of the Clock Generator Circuits is provided on Service Sheet 9.)

4) Move the logic analyzer CLOCK probe from A5TP10 to A4TP2 and observe the NO CLOCK indicators to verify that a 02 clock is applied to the Controller. If either indicator is lit, refer to Service Sheet 9 for information covering checkout and troubleshooting of the Clock Generator Circuits.


5) Return logic analyzer CLOCK probe to A5TP10 and set remaining logic analyzer controls as indicated below. These controls select the triggering of the logic analyzer and are adjusted as required to verify Power Meter program execution.

DELAY SET: 00000

SAMPLE MODE: REPET

TRIGGER MODE: START DISPLAY

TRIGGER WORD: (switch settings specified select address 052₈; qualifier =1 or 0)

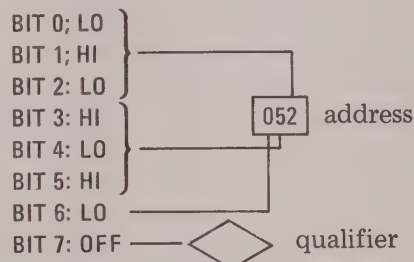

6) If the operating program is cycling normally, the NO TRIG indicator will be off and the logic analyzer will provide a 16-line display starting at address 052₈. The first two lines of the display should indicate that the YR3 qualifier associated with address 052₈ is a logic 1, and that the YR2 qualifier associated with address 055₈ is a logic 0. An explanation of how this status indication is derived can be found in Table 8-3 and 8-6 and in Figure 8-15. Table 8-6 indicates that the range counter was counted down to range 7 at address 034₈ of the Power Up subroutine, and to range 5 at address 035₈. Figure 8-15 shows the qualifiers associated with these addresses and how the qualifiers are processed to control address branching and instruction generation. Table 8-2

TROUBLESHOOTING

Standard Instrument Checkout (cont'd)

describes the purpose and function of each qualifier and instruction. Thus, from the information contained in the tables and on the figure, it can be determined that after the Range Counter is counted down from range 5, the Mode Register is loaded, then the program branches to the Local/Remote Subroutine. Since Local operation is automatically selected when power is turned on, the next branch is to address 052_g of the Local Initialize subroutine. The Range Counter was counted down properly, the range qualifiers should be set to the following logic states: YR3 = H, YR2 = L, YR1 = H.

7) If a display is present on the logic analyzer, it verifies that the operating program is cycling normally and branching to address 052_g to initiate each cycle. With this fact established, it's just a matter of signal tracing to find out exactly where the problem is. Refer to Service Sheet 3 and check the outputs of the Mode Register and Range Counter. If they're normal, trace out the signal lines to the Display Assembly to isolate the problem to a circuit. If the outputs of the Mode Register are abnormal, use the logic analyzer and an oscilloscope to isolate the problem to the ROM containing the program, the Instruction Register, the Front-Panel Switches, the Buffers, or the Mode Register and Gates (Service Sheet 3). If the outputs of the Range Counter are abnormal, turn power on and off while using the logic analyzer to check program execution and Range Counter operation during the Power Up Subroutine.

8) If no display is present on the logic analyzer, turn power on and off as required to verify program execution starting at address 000_g of the Power Up Subroutine.

c. If the mode and range indications are normal, check the output of the Amplifier, Demodulator, and Filter circuits at DC test point A3TP4. If it is abnormal, refer to Service Sheet 2 and check the YLOG and range select inputs to the circuit. If the YLOG and Range Select inputs are normal, use standard signal tracing techniques to isolate the problem. If they're abnormal, refer back to step b.

d. If the output of the Amplifier, Demodulator, and Filter circuit is normal, sync the logic analyzer on address 071_g and check whether the A-D Converter qualifier goes to logic 0 at 633 ± 160 clock pulses later. If no display can be obtained on the logic analyzer, turn power on and off and verify program execution starting at the Local Initialize Subroutine. If an erroneous display is observed, use the logic analyzer and an oscilloscope to isolate the problem to the ROM containing the program, the Instruction Register, the A-D Control Register and Gates, the A-D Converter, or the Counters. (The TRIGGER OUTPUT of the logic analyzer can be used to sync the oscilloscope at any address.)

e. If the conversion described in step d is proper, check that an LCOR instruction is generated at address 072_g and that an LTC instruction is generated to load the Display Register at address 177_g. If both of these instructions are generated properly, use standard signal tracing techniques to isolate the problem to the Under/Over-Range Decoder, the Main Counter, or the Display Assembly.

8-62. Example 2: Abnormal Indication is Observed for Step 8. This example was chosen because it illustrates Power Meter autoranging during a program cycle. When the RANGE HOLD switch is released for step 8, an LCRD instruction should be generated during the Under Range Subroutine to count the Range Counter down to range 4, then an LSOR instruction should be generated to blank the front-panel digital readout (refer to Service Sheet 3, Linear Under-Range Conversion). The range 4 output of the Range Counter, in turn, should cause the True-Range Decoder to change the digital readout decimal point position, and should also select higher gain operation of the Amplifier, Demodulator, and Filter circuit. Thus, the input voltage to the A-D Converter at DC test point A3TP4 should rise to 0.980 Vdc by the time that the subsequent Auto Zero Subroutine is completed. Program execution and circuit operation from this point on was verified in steps 1 through 7. The key step in isolating an abnormal indication then, is to check that the output of the Amplifier, Demodulator, and Filter circuit rises to the specified value by the end of the Auto Zero Subroutine which follows the Under Range Subroutine. The main reason for making this check

TROUBLESHOOTING

Standard Instrument Checkout (cont'd)

first is that if the output of the Amplifier, Demodulator, and Filter circuit does not rise to an in-range level by the end of the Auto Zero Subroutine, a range 4 under-range conversion will be detected. A second Under Range Subroutine will then be executed to count the Range Counter down to range 3 and the range 3 output of the Range Counter will change the output of the True-Range Decoder and the gain of the Amplifier, Demodulator, and Filter circuit a second time. Depending on the type of failure present, either an under-range conversion or an over-range conversion could be detected for range 3. Thus, for this type of problem, neither the final range that the Power Meter will settle on nor the resultant front-panel indication can be predicted.

8-63. To isolate a step 8 abnormal indication proceed as follows:

a. Check the output of the Range Counter to determine what range the Power Meter settles on. If the Power Meter settles on range 4, sync the logic analyzer on address 052_g as described in Example 1 to determine whether the operating program is cycling. If the program is not cycling, turn off power and reestablish the conditions of step 7. Then turn power back on, release the RANGE HOLD switch, and verify program execution starting at the Under Range Subroutine.

b. If the Power Meter has settled on range 4 and the operating program is cycling normally, refer to Service Sheets 2 and 3 and isolate the problem to the True-Range Decoder, the Amplifier, Demodulator, and Filter circuit, the Over/Under-Range Decoder, or the Display Assembly.

Table 8-2. Program Mnemonic Descriptions (1 of 5)

Mnemonic	Service Sheet	Subroutine	Description
PROGRAM QUALIFIER INPUTS			
NAUTO	3, 4, 6, 10, 11	Remote Initialize Under Range Over Range	When low, enables Power Meter to automatically select most accurate measurement range. When high, causes Power Meter to hold last range selected, either locally or remotely.
YH1 YH2 YH4 YH8	2, 3, 4, 6, 9, 10, 12	Linear, Positive — Conversion (YH1, YH2 only) Linear, Negative — Conversion (YH1, YH2 only) Log Conversion (all)	Main counter hundreds output (BCD).
YK1	2, 3, 4, 6, 9, 10, 12	Remote Initialize Measurement should be Linear, Positive-Conversion Linear, Negative-Conversion	Least significant digit of main counter thousands output (BCD).
YK8	3, 9 10	Power Up Auto Zero Delay	Most significant digit of main counter thousands output (BCD).

Table 8-2. Program Mnemonic Descriptions (2 of 5)

Mnemonic	Service Sheet	Subroutine	Description																																				
YM1 YM2	3, 10	Remote Initialize Measurement Relative dB Over/Under Range Continue	Two-bit code which selects measurement mode as follows: <table><tr><td>YM2</td><td>YM1</td><td>Mode</td></tr><tr><td>1</td><td>1</td><td>dBm</td></tr><tr><td>0</td><td>1</td><td>dB Rel</td></tr><tr><td>1</td><td>0</td><td>Watts</td></tr><tr><td>0</td><td>0</td><td>dB Ref (dB [REF] switch pressed)</td></tr></table>	YM2	YM1	Mode	1	1	dBm	0	1	dB Rel	1	0	Watts	0	0	dB Ref (dB [REF] switch pressed)																					
YM2	YM1	Mode																																					
1	1	dBm																																					
0	1	dB Rel																																					
1	0	Watts																																					
0	0	dB Ref (dB [REF] switch pressed)																																					
YPLS	2, 3, 8, 10	Measurement Linear, Positive-Conversion Linear, Negative-Conversion Log Conversion	A-D converter output. During measurement subroutine, indicates whether A-D input is above or below A-D threshold (YPLS high or low, respectively). During conversion subroutines, changes state when A-D converter discharges through threshold.																																				
YR1 YR2 YR3	2, 3, 4 7, 10 12	Power Up Remote Initialize Local Initialize Under Range (YR2, YR3 only) Over Range	Three-bit code which selects measurement range as follows: <table><tr><td>YR3</td><td>YR2</td><td>YR1</td><td>Range</td></tr><tr><td>0</td><td>0</td><td>0</td><td>0 (Remote only)</td></tr><tr><td>0</td><td>0</td><td>1</td><td>1</td></tr><tr><td>0</td><td>1</td><td>0</td><td>2</td></tr><tr><td>0</td><td>1</td><td>1</td><td>3</td></tr><tr><td>1</td><td>0</td><td>0</td><td>4</td></tr><tr><td>1</td><td>0</td><td>1</td><td>5</td></tr><tr><td>1</td><td>1</td><td>0</td><td>6 (Invalid; Power Meter</td></tr><tr><td>1</td><td>1</td><td>1</td><td>7 automatically selects range 5 even if NAUTO high)</td></tr></table>	YR3	YR2	YR1	Range	0	0	0	0 (Remote only)	0	0	1	1	0	1	0	2	0	1	1	3	1	0	0	4	1	0	1	5	1	1	0	6 (Invalid; Power Meter	1	1	1	7 automatically selects range 5 even if NAUTO high)
YR3	YR2	YR1	Range																																				
0	0	0	0 (Remote only)																																				
0	0	1	1																																				
0	1	0	2																																				
0	1	1	3																																				
1	0	0	4																																				
1	0	1	5																																				
1	1	0	6 (Invalid; Power Meter																																				
1	1	1	7 automatically selects range 5 even if NAUTO high)																																				
YRMT (DACQ)	3, 4, 10, 11	Display and Remote Talk	Remote input. When HP-IB option installed, serves as I/O transfer control signal (refer to description and timing diagram provided under Principles of Operation).																																				
YRMT (FAST)	3, 4, 10, 11	Remote Initialize Delay	Remote input. When HP-IB option installed, functions in conjunction with YRMT (HOLD) to select measurement rate as indicated below. When BCD interface option installed, functions in conjunction with YRMT (DACQ) to select measurement rate as indicated below. <table><tr><td>FAST</td><td>HOLD/DACQ</td><td>Measurement Rate</td></tr><tr><td>X</td><td>low (level)</td><td>Disabled (hold)</td></tr><tr><td>high</td><td>high (pulse)</td><td>trigger (with settling time)</td></tr><tr><td>low</td><td>high (pulse)</td><td>trigger (immediate)</td></tr><tr><td>high</td><td>high (level)</td><td>free run (at maximum rate)</td></tr><tr><td>low</td><td>high (level)</td><td>free run (with settling time)</td></tr></table>	FAST	HOLD/DACQ	Measurement Rate	X	low (level)	Disabled (hold)	high	high (pulse)	trigger (with settling time)	low	high (pulse)	trigger (immediate)	high	high (level)	free run (at maximum rate)	low	high (level)	free run (with settling time)																		
FAST	HOLD/DACQ	Measurement Rate																																					
X	low (level)	Disabled (hold)																																					
high	high (pulse)	trigger (with settling time)																																					
low	high (pulse)	trigger (immediate)																																					
high	high (level)	free run (at maximum rate)																																					
low	high (level)	free run (with settling time)																																					

Table 8-2. Program Mnemonic Descriptions (3 of 5)

Mnemonic	Service Sheet	Subroutine	Description
YRMT (HOLD)	3, 4 10, 11	Local/Remote Branch Display and Remote Talk	Remote input. When HP-IB option installed, functions in conjunction with YRMT (FAST) to select measurement rate as indicated above.
YRMT (MORE DATA)	3, 4 10, 11	Display and Remote Talk	Remote talk I/O transfer control signal associated with HP-IB option. Set low at start of talk cycle to indicate that last word of data message not sent to external controller; reset high at end of talk cycle.
YRMT (REMOTE)	3, 4 10, 11	Local/Remote Branch Delay Display and Remote Talk	Remote input. When low, selects local operation of Power Meter; when high, selects remote operation of Power Meter
YRMT (RFDQ)	3, 4, 10,11	Display and Remote Talk	Remote talk I/O transfer control signal associated with HP-IB option (refer to description and timing diagram provided under Principles of Operation).
YRMT (TALK)	3, 4, 10,11	Display and Remote Talk	Remote talk enable input associated with HP-IB option; set low by external controller to request output data from Power Meter.
NZRO	3,9,10	Relative dB	Relative counter status output. Goes low to indicate that contents of relative counter are equal to 0.
INSTRUCTIONS			
LAZ	3, 10	Power Up Local/Remote Branch Remote Initialize Auto Zero Delay Display and Remote Talk	Sets A-D auto-zero register thereby enabling A-D converter auto-zero loop.
LCKM	3, 10	Power Up Remote Initialize Local Initialize	Loads mode select bits into mode register.

Table 8-2. Program Mnemonic Descriptions (4 of 5)

Mnemonic	Service Sheet	Subroutine	Description
LCLR	3, 9, 10	Power Up Remote Initialize Auto Zero Measurement Over/Under Range Continue Delay	Sets sign register (sign +) and clears main counter.
LCNT	3, 9, 10	Power Up Remote Initialize Auto Zero Measurement Linear, Positive- Conversion Linear, Negative- Conversion Log Conversion Relative dB Delay	Enables one up/down clock pulse to main counter.
LCOR	3, 9, 10	Linear, Positive- Conversion Linear, Negative- Conversion Log Conversion Relative dB	Clears over-range and under-range flip-flops and loads contents of reference register into relative counter.
LCRD	10	Power Up Remote Initialize Local Initialize Under Range	Counts range counter down one range.
LCRU	10	Power Up Over Range	Counts range counter up one range.
LINP	3, 10	Measurement	Sets 1/2 of A-D conversion control register, thereby enabling A-D converter to charge to input voltage level.
LLRA	3, 9, 10	Remote Initialize	Loads remote range select inputs into range register.
LLRE	3, 9, 10	Power Up Relative dB Over/Under Range Continue	Loads contents of main counter into reference register.
LPSC	3, 9, 10	Measurement	Loads true-range counter and sign preset inputs into main counter and sign register, respectively.

Table 8-2. Program Mnemonic Descriptions (5 of 5)

Mnemonic	Service Sheet	Subroutine	Description
LREL	3, 9, 10	Relative dB	Serves as down clock to relative counter, and as steering input to main counter up/down count control logic.
LRMP	3, 10	Measurement Linear, Positive- Conversion Linear, Negative- Conversion Log Conversion	<p>Sets 1/2 of A-D conversion control register. Output of register is then gated with various status signals to enable A-D converter conversion ramp as follows:</p> <p>Linear Positive Conversion Ramp — enabled when Watts mode selected and A-D input voltage exceeds threshold.</p> <p>Linear Negative-Conversion Ramp — enabled when Watts mode selected and A-D input voltage is below threshold.</p> <p>Log Conversion Ramp and Log Reference — enabled when dBm, or dB Rel mode selected.</p>
LSDAV	3, 10, 11 13	Display and Remote Talk	Remote talk I/O transfer control signal (refer to description and timing diagram provided under Principles of Operation.
LSOR	3, 10	Power Up Measurement Under Range Over Range	Sets overrange flip-flop to provide blanking output to display, and, if under range flip-flop is reset, to light OVER RANGE lamp.
LSUR	3, 10	Measurement Under Range	Sets underrange flip-flop to light UNDER RANGE lamp.
LTC	2, 3, 4, 6, 11, 13	Power Up Display and Remote Talk	Clocks display sign flip-flop and loads sign and contents of main counter into display registers.

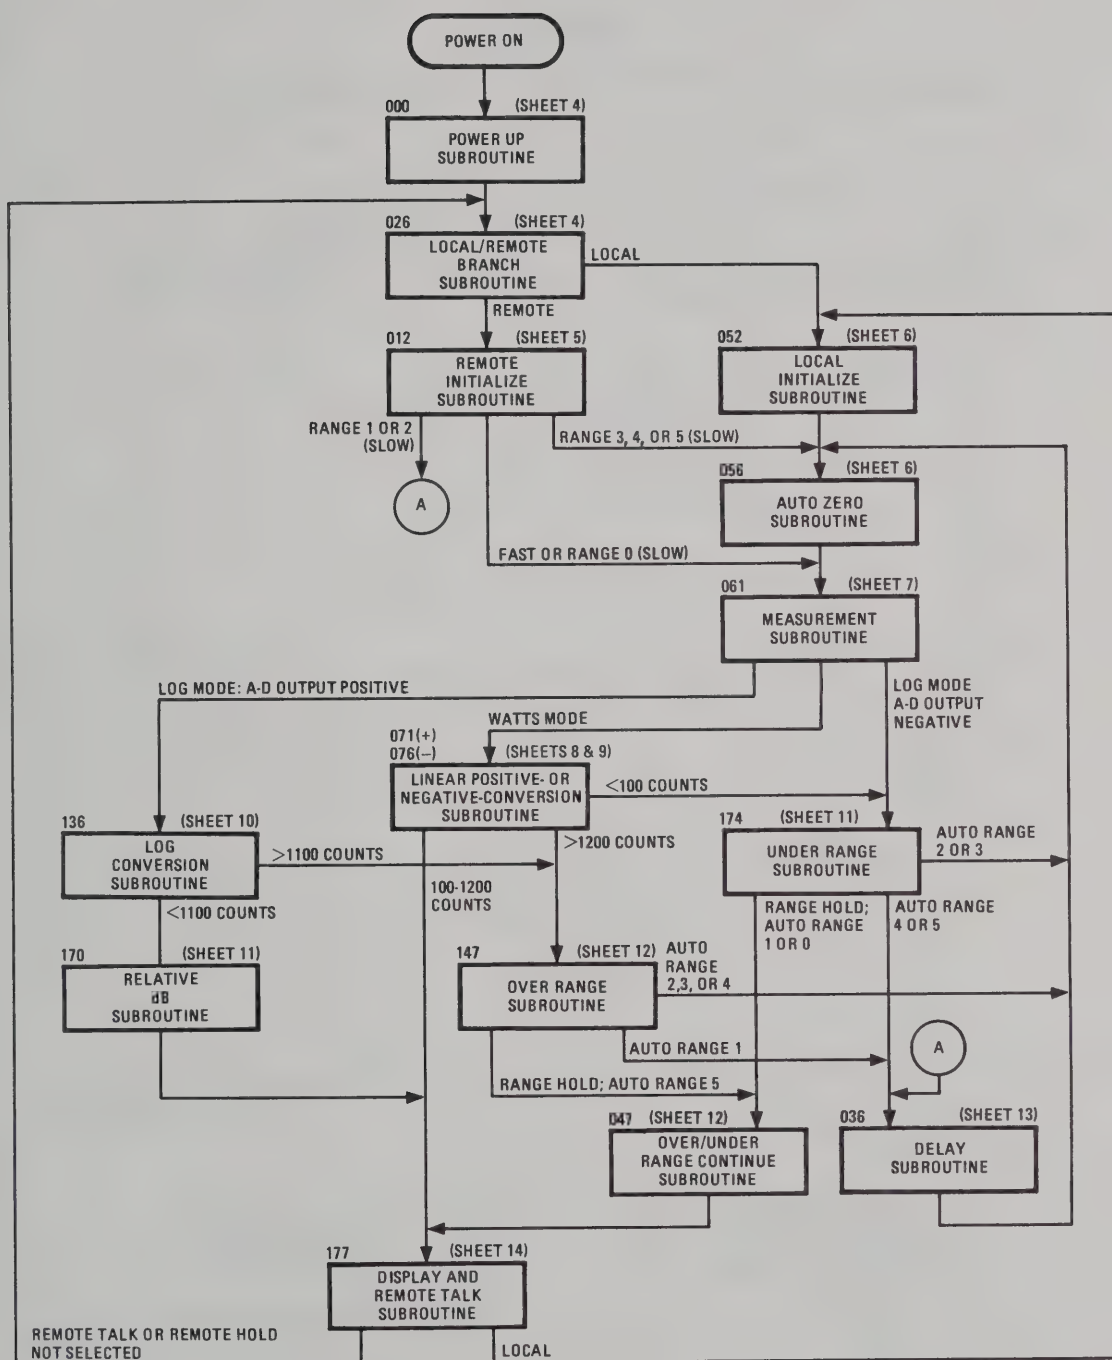


Figure 8-15. Operating Program Flow Chart (1 of 14)

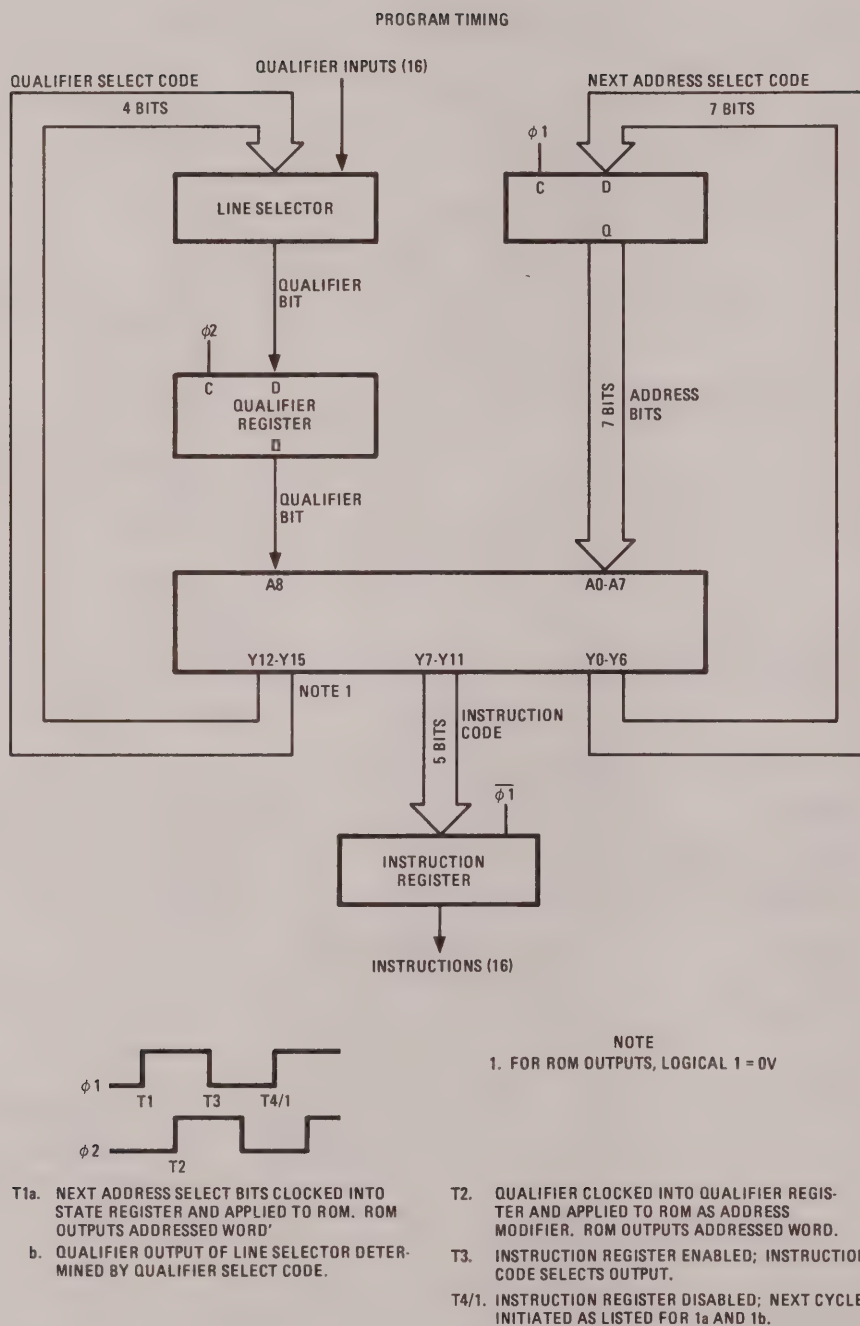


Figure 8-15. Operating Program Flow Chart (2 of 14)

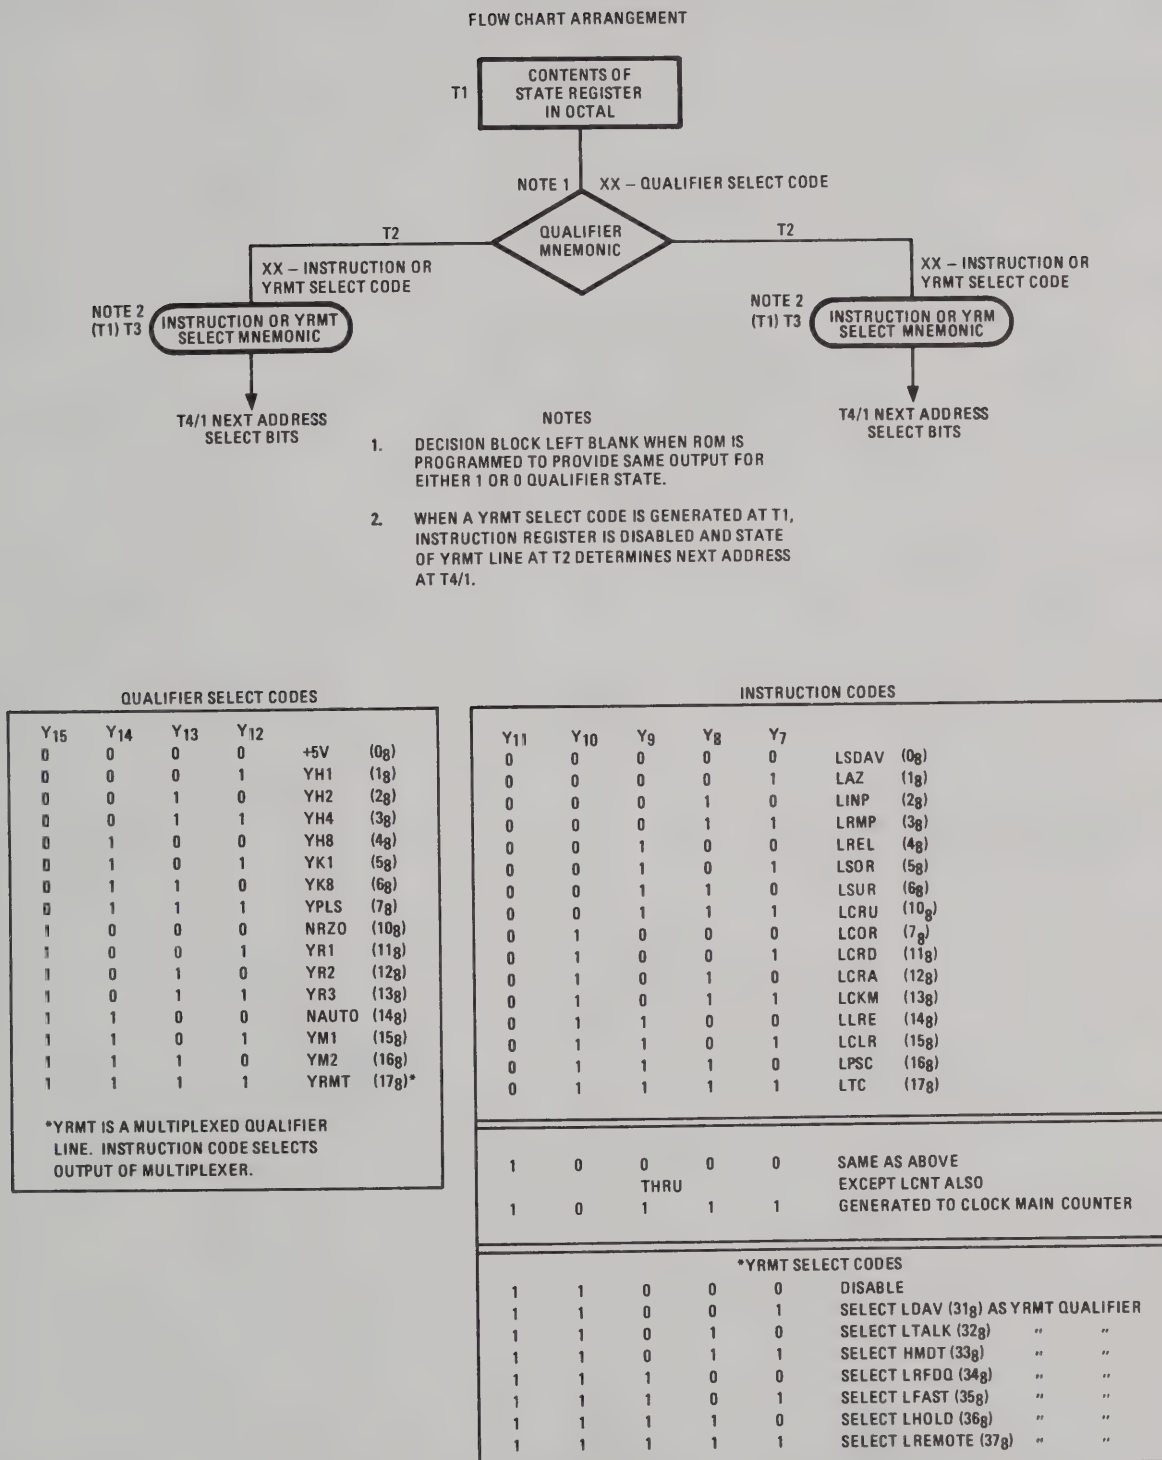


Figure 8-15. Operating Program Flow Chart (3 of 14)

4a


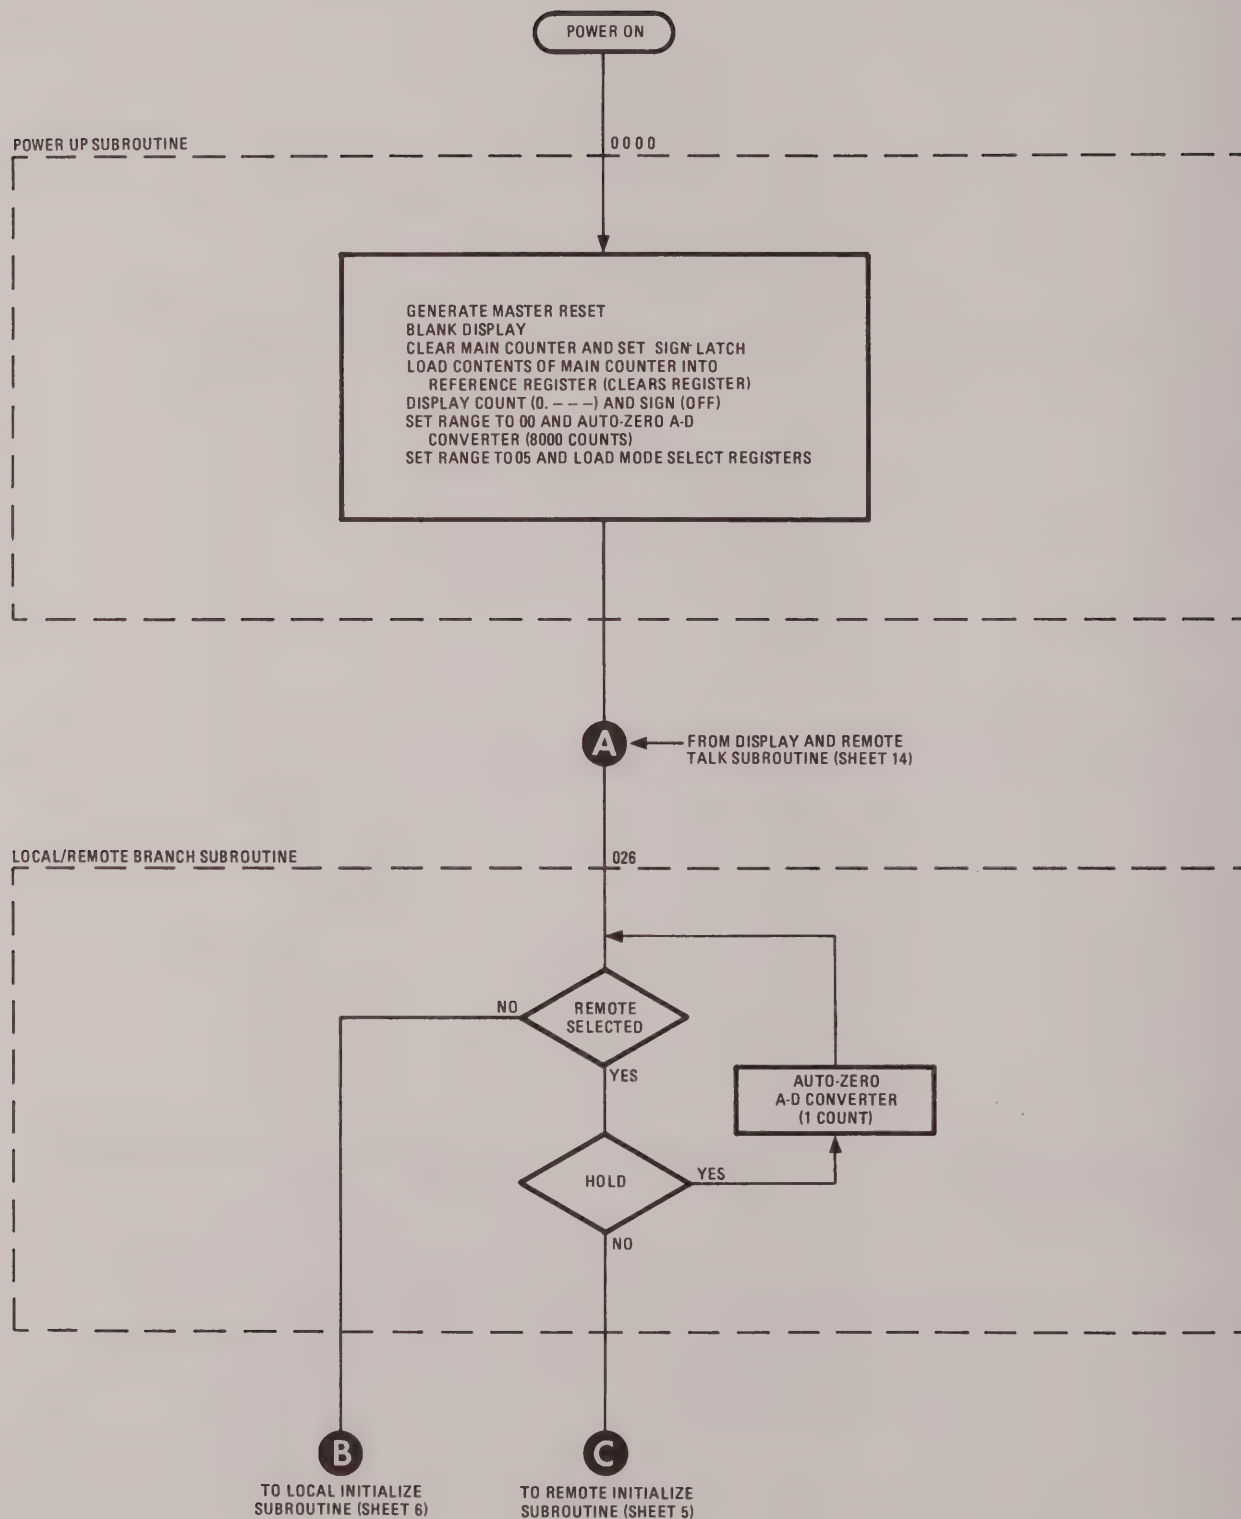



Figure 8-15. Operating Program Flow Chart (4A of 14)

4b

POWER UP SUBROUTINE

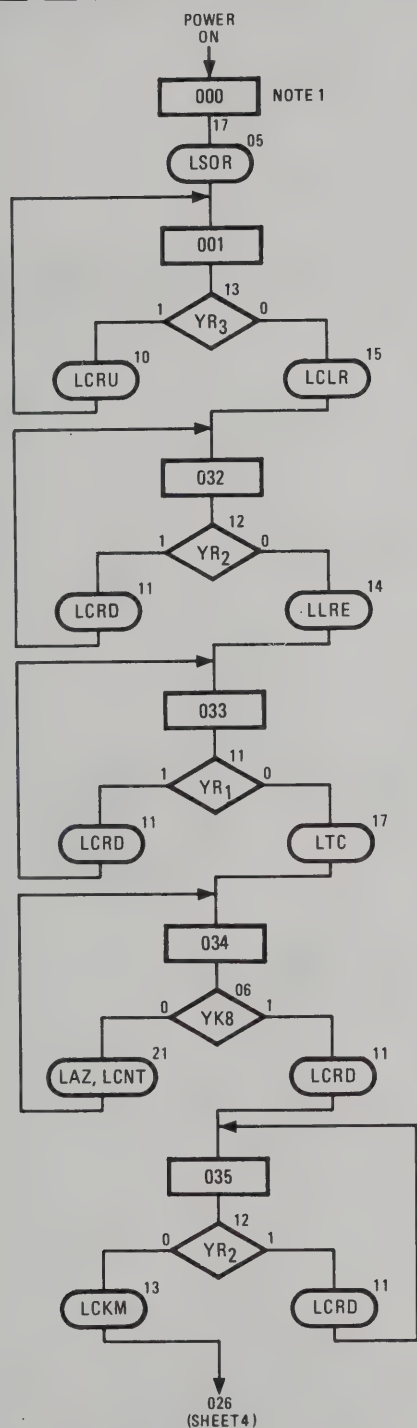

LOCAL/REMOTE BRANCH SUBROUTINE

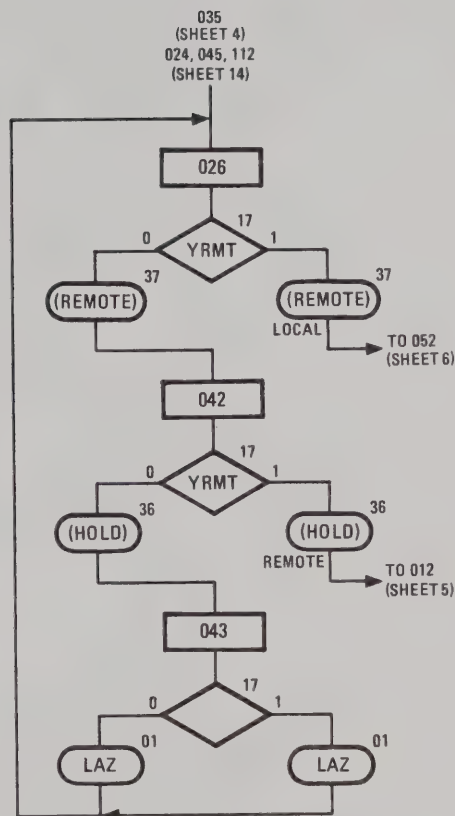

NOTE

1. ADDRESS 0000 WILL BE HELD UNTIL END OF LPU PULSE (SEE SERVICE SHEET 10).

Figure 8-15. Operating Program Flow Chart (4B of 14)

5a

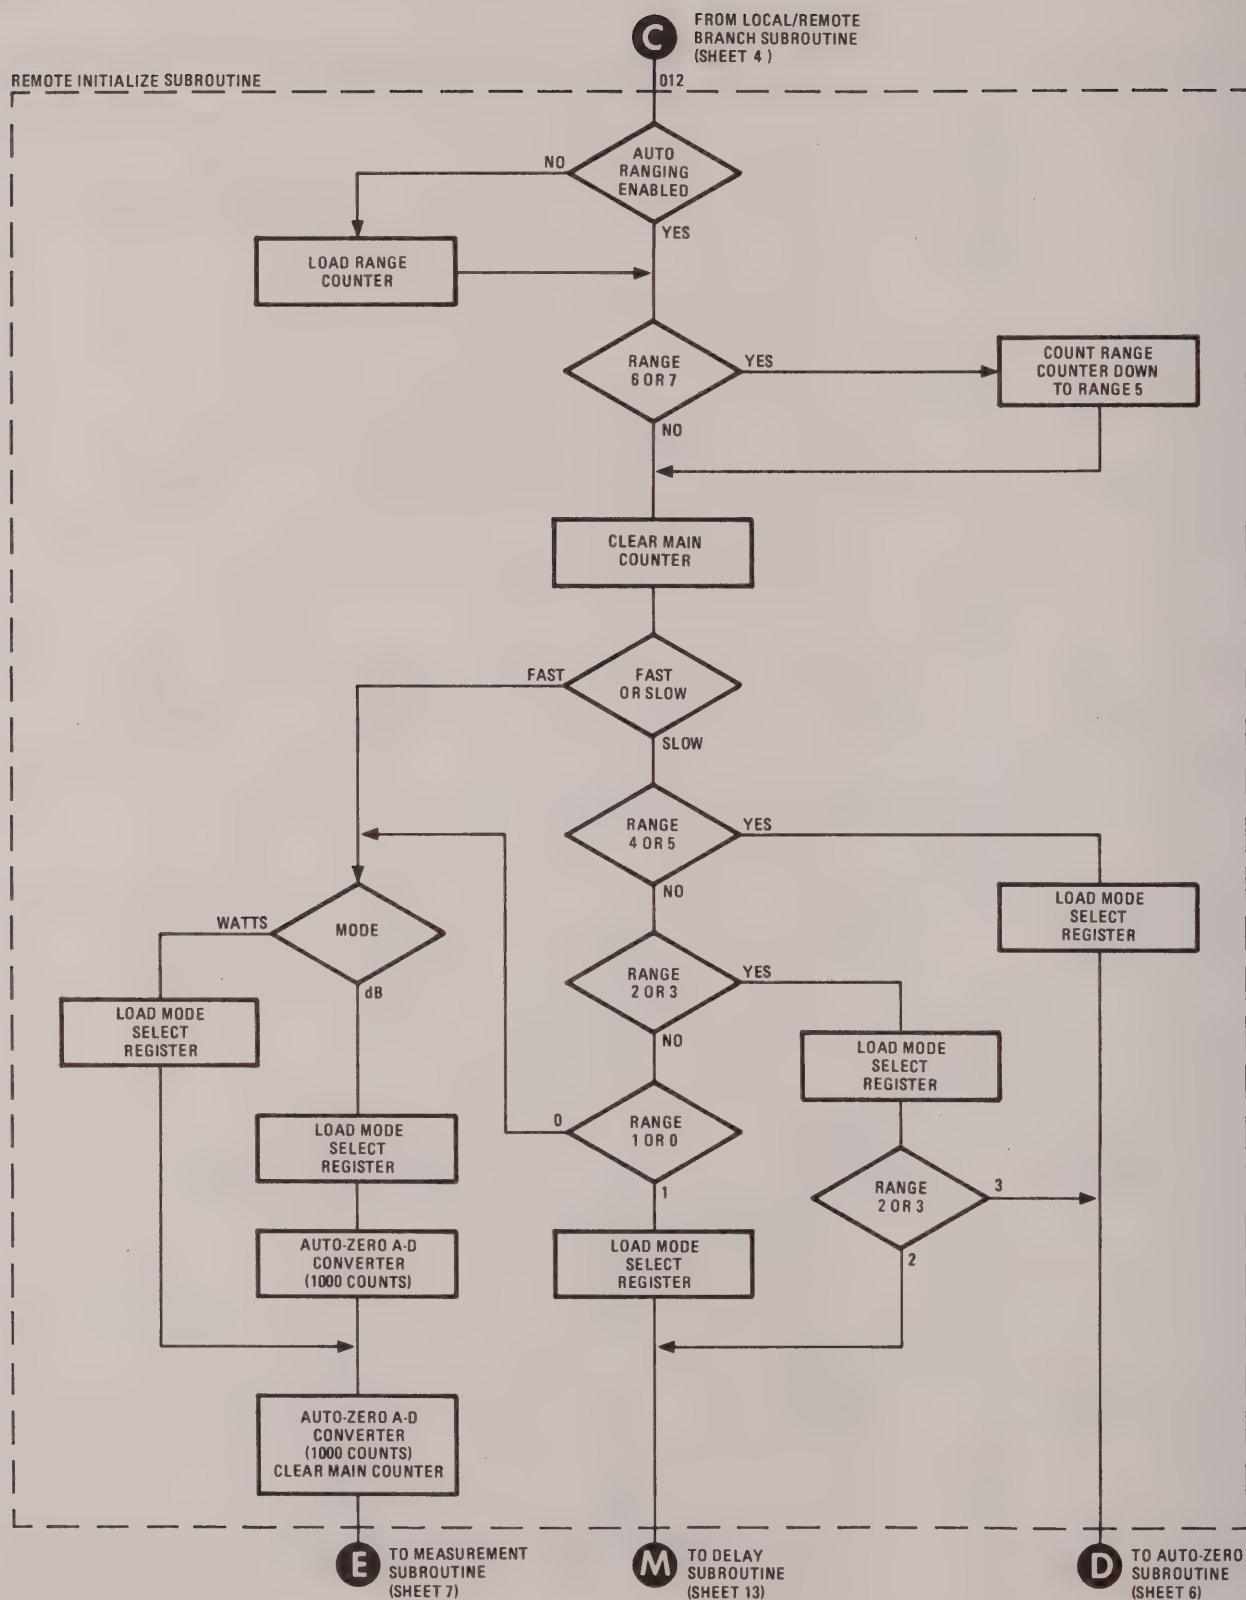


Figure 8-15. Operating Program Flow Chart (5A of 14)

5b

REMOTE INITIALIZE SUBROUTINE

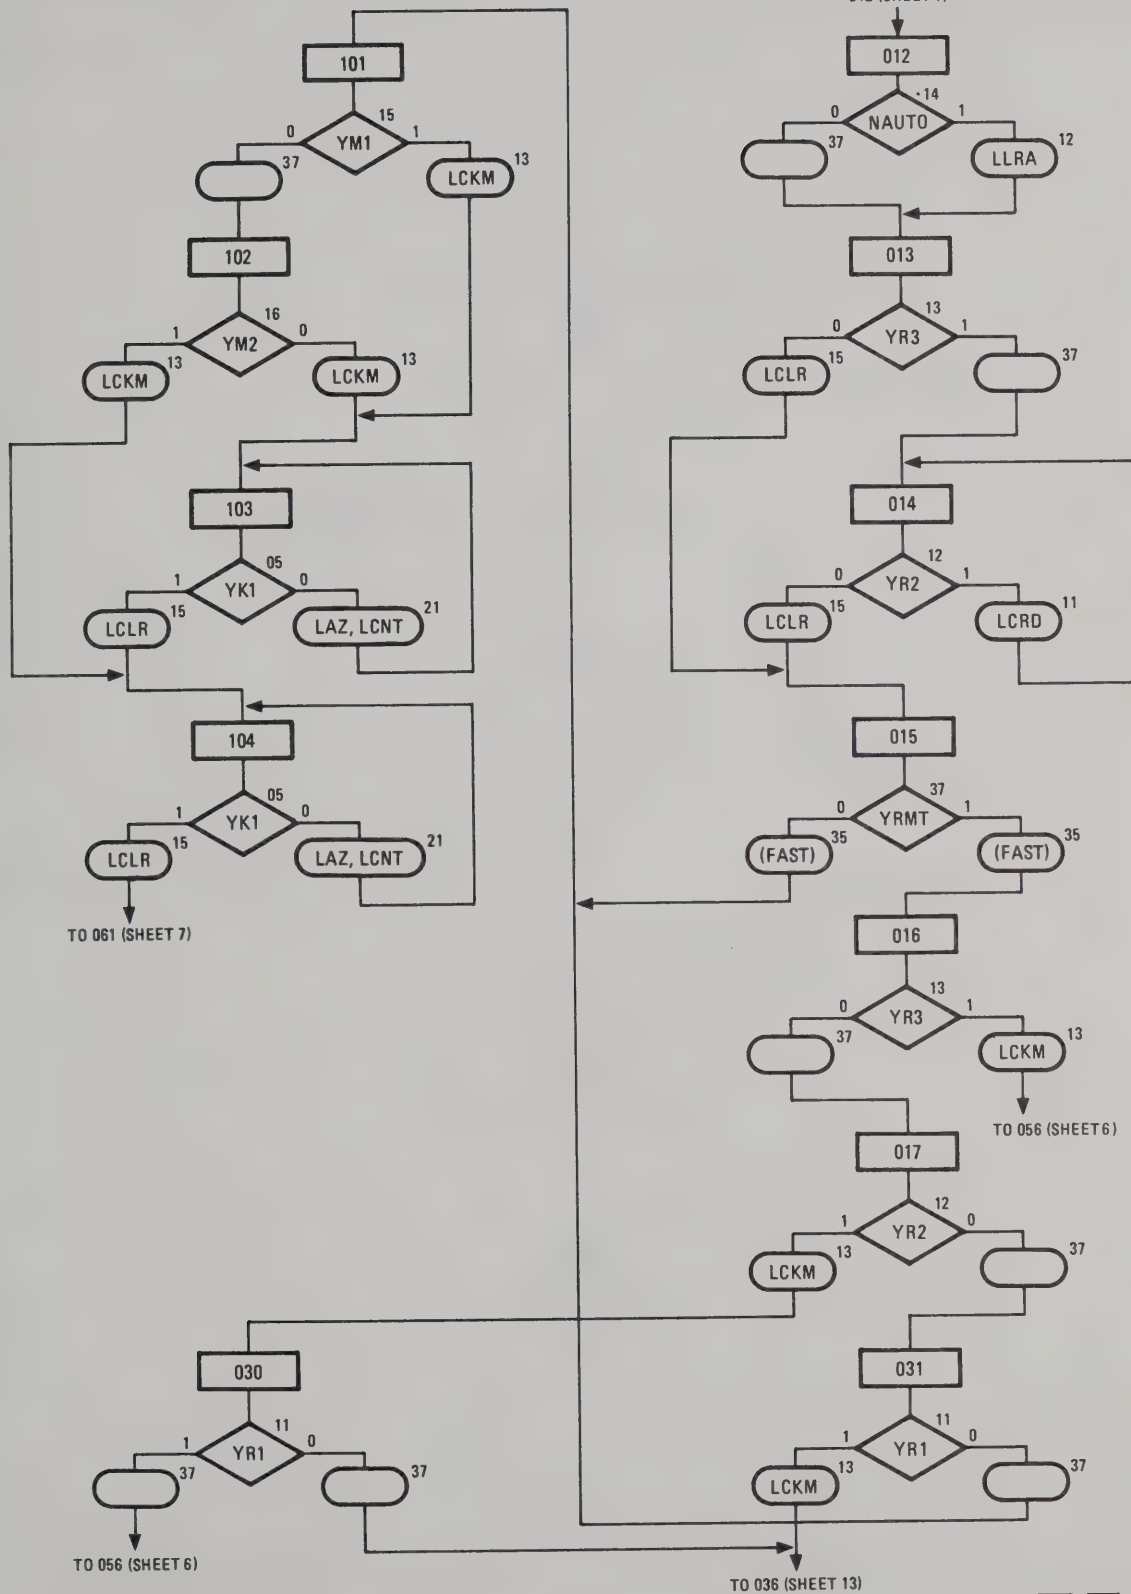


Figure 8-15. Operating Program Flow Chart (5B of 14)

6a

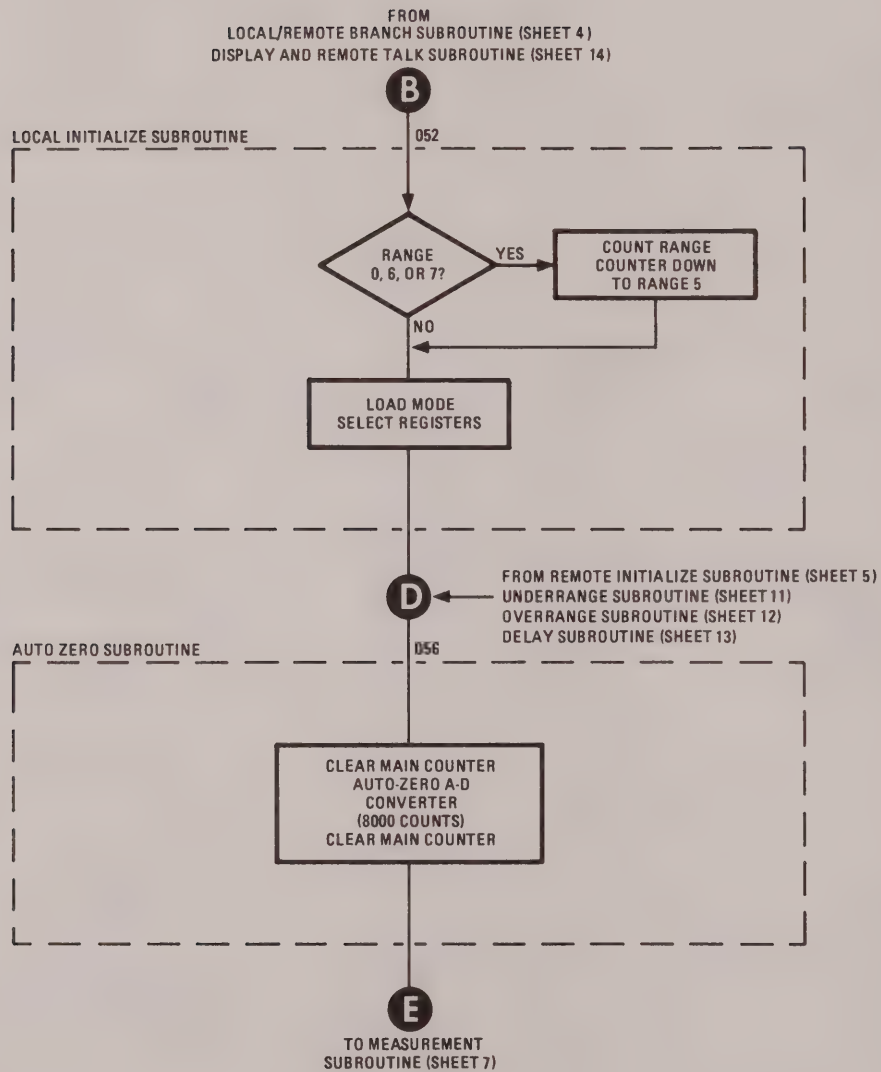


Figure 8-15. Operating Program Flow Chart (6A of 14)

6b

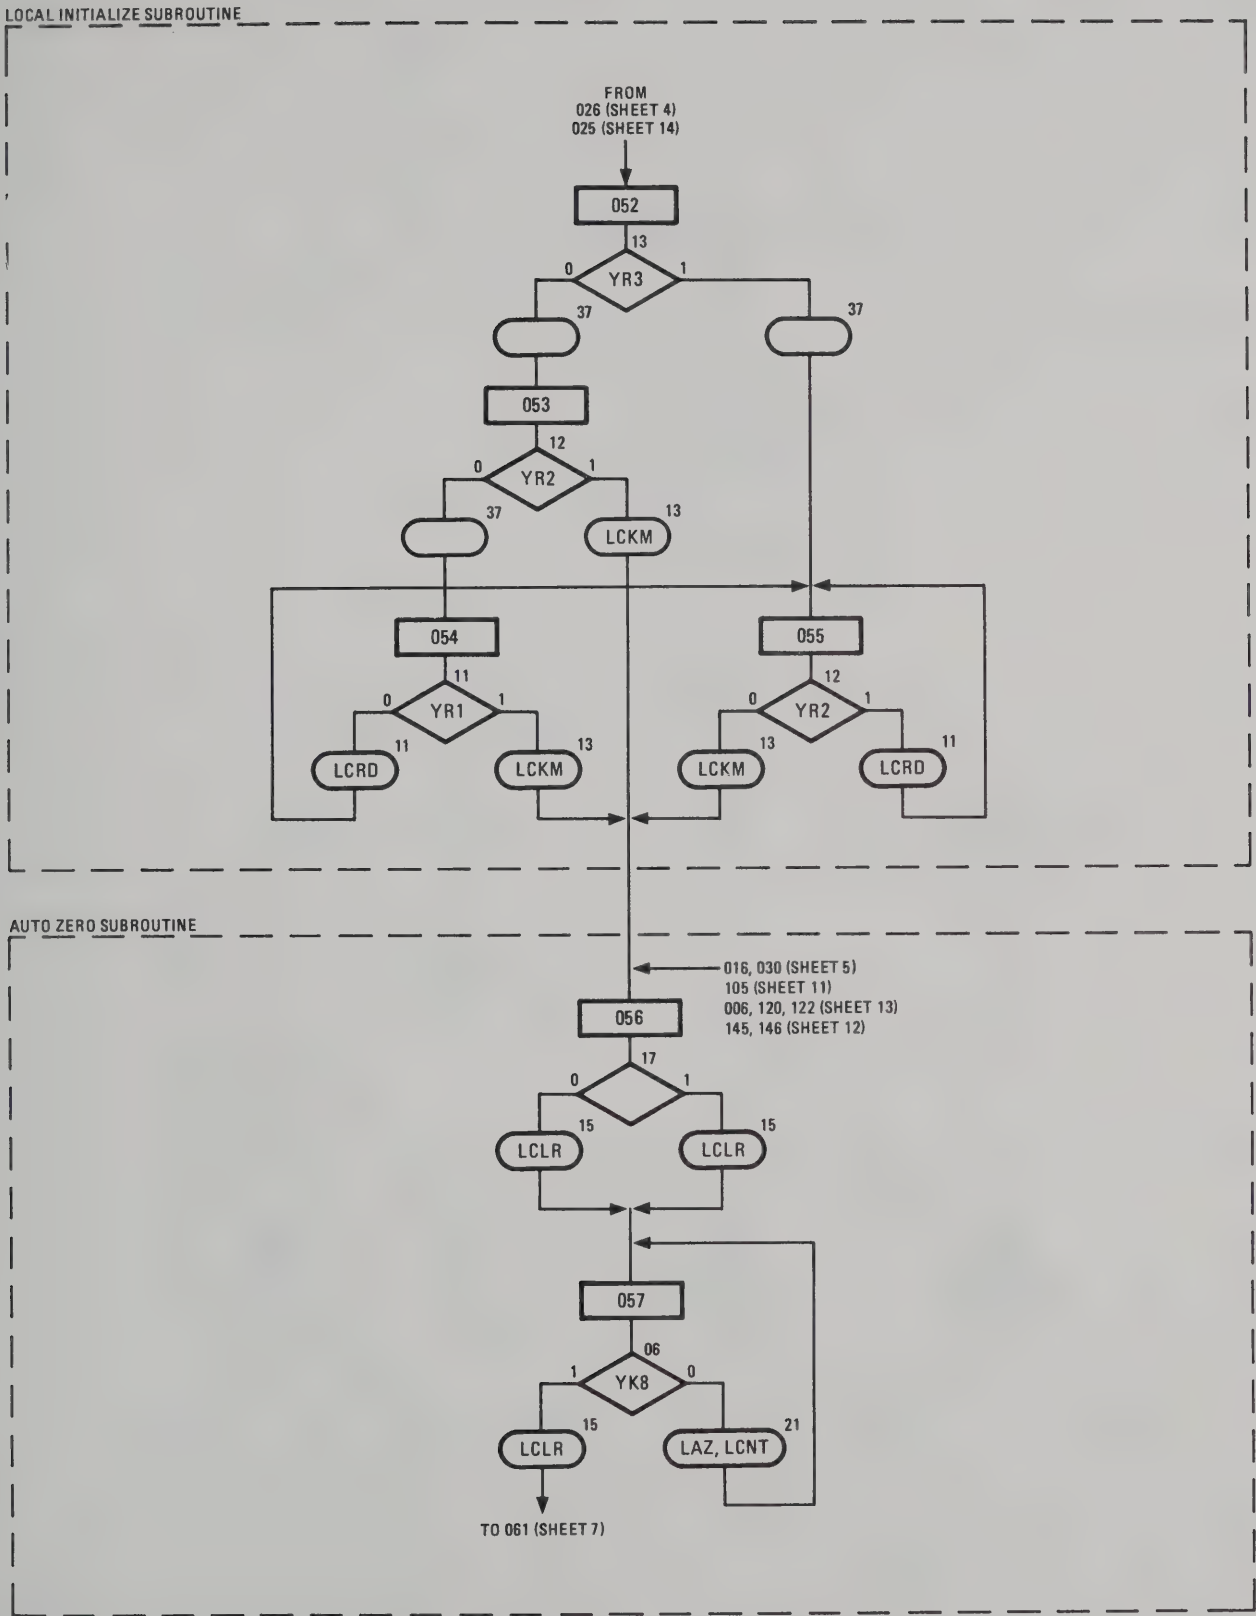


Figure 8-15. Operating Program Flow Chart (6B of 14)

7a

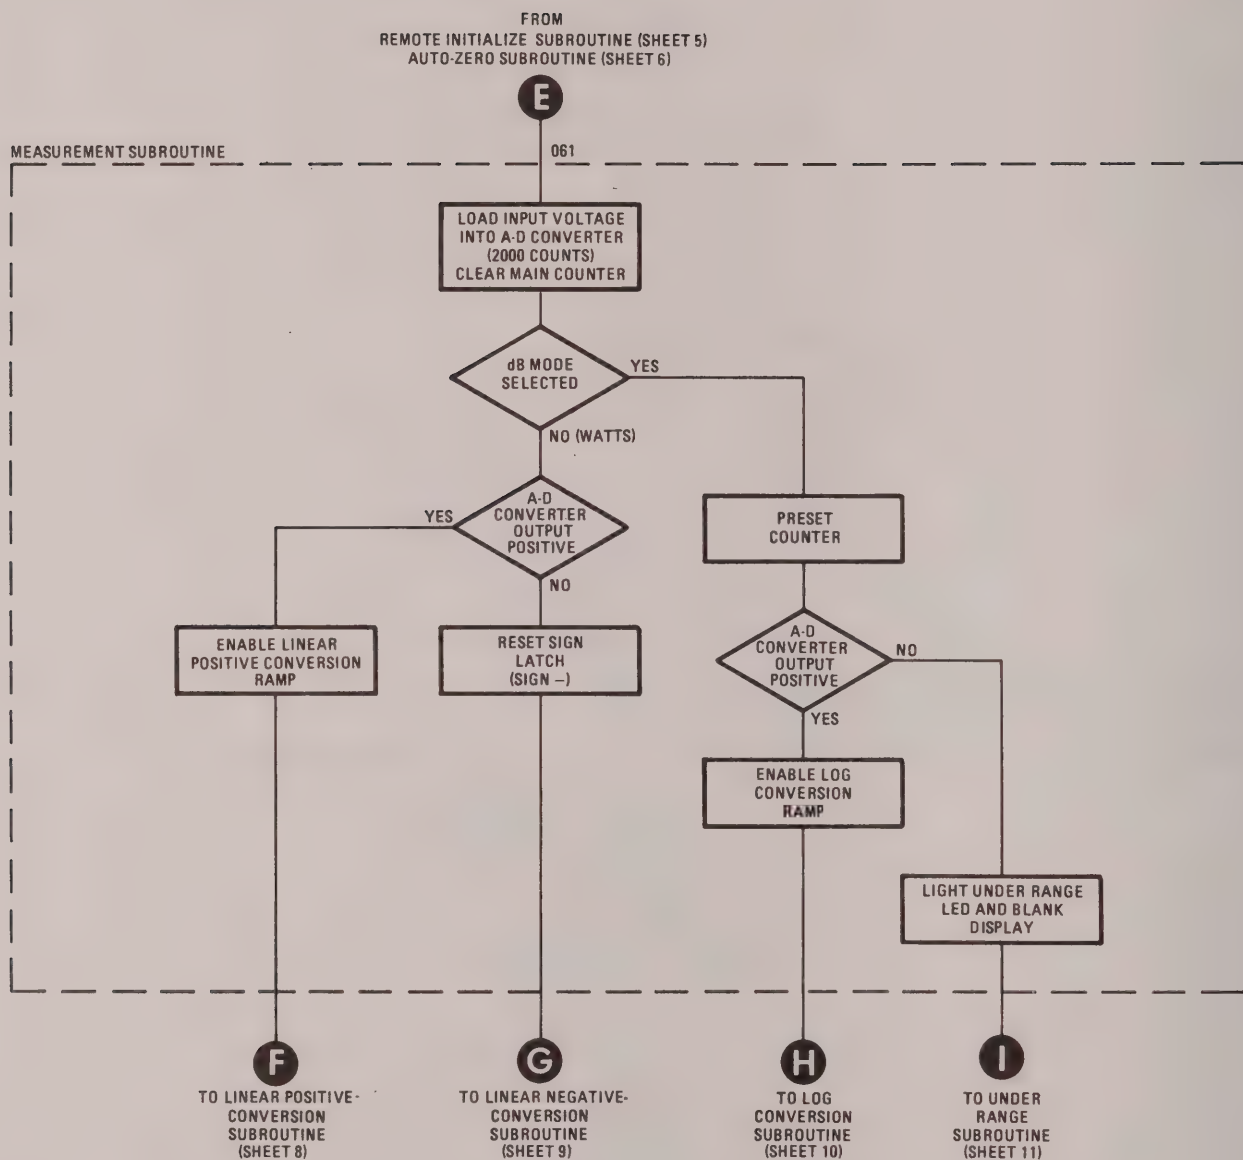


Figure 8-15. Operating Program Flow Chart (7A of 14)

7b

MEASUREMENT SUBROUTINE

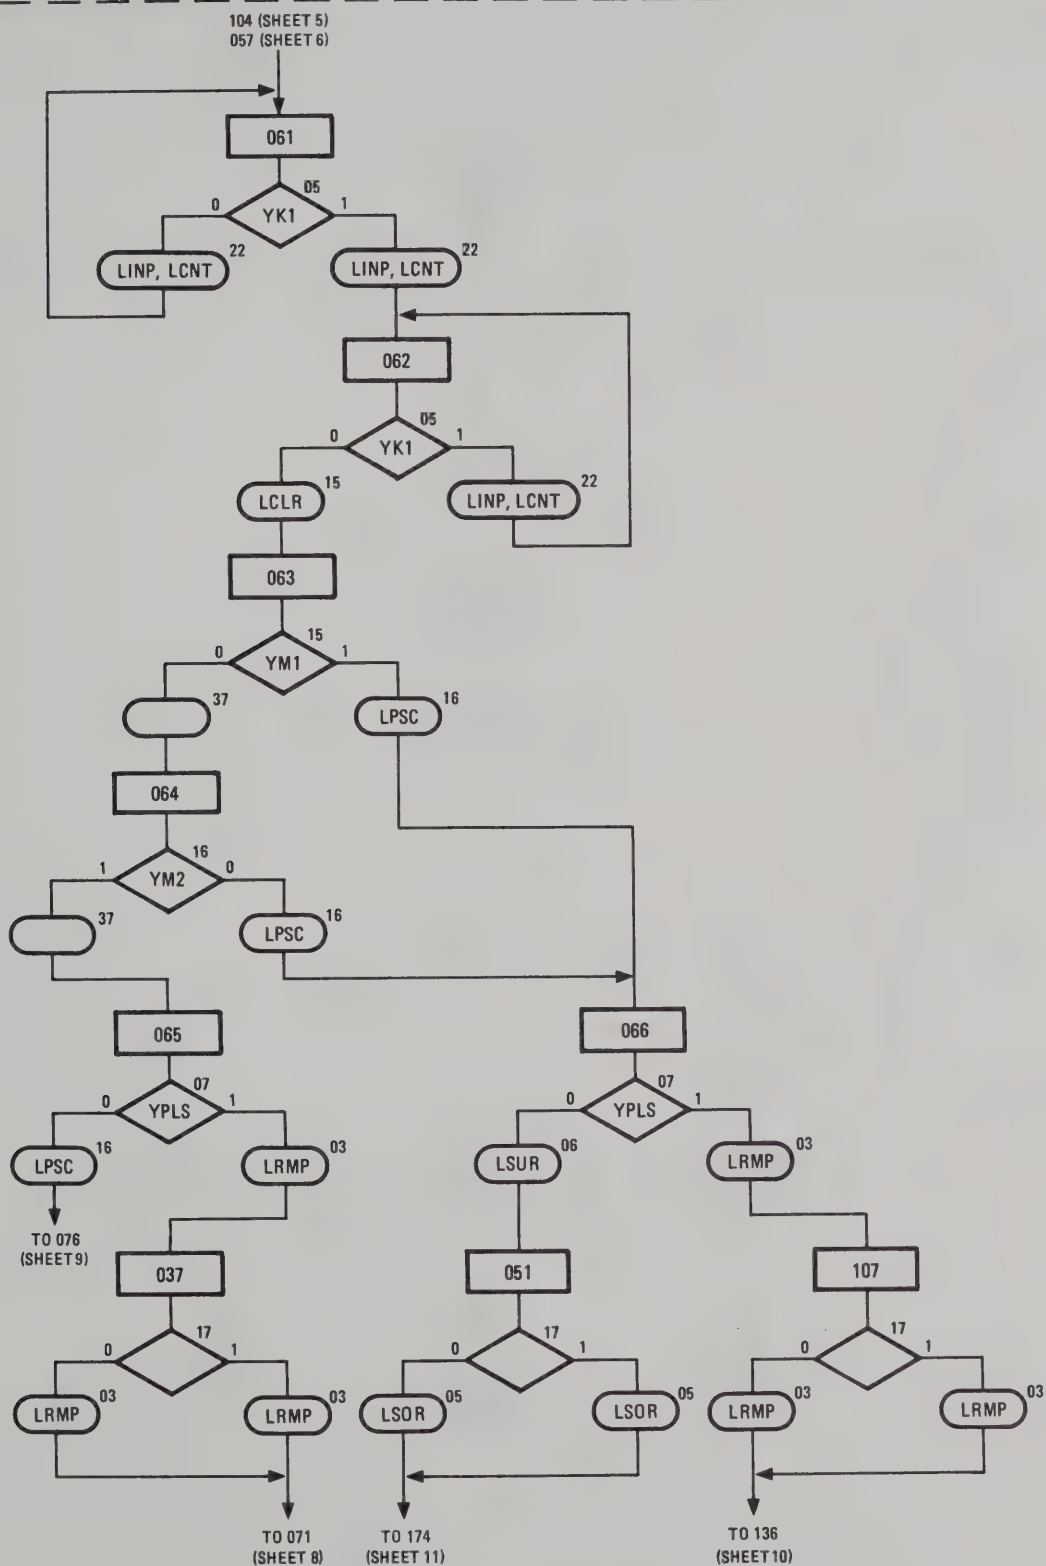


Figure 8-15. Operating Program Flow Chart (7B of 14)

8a

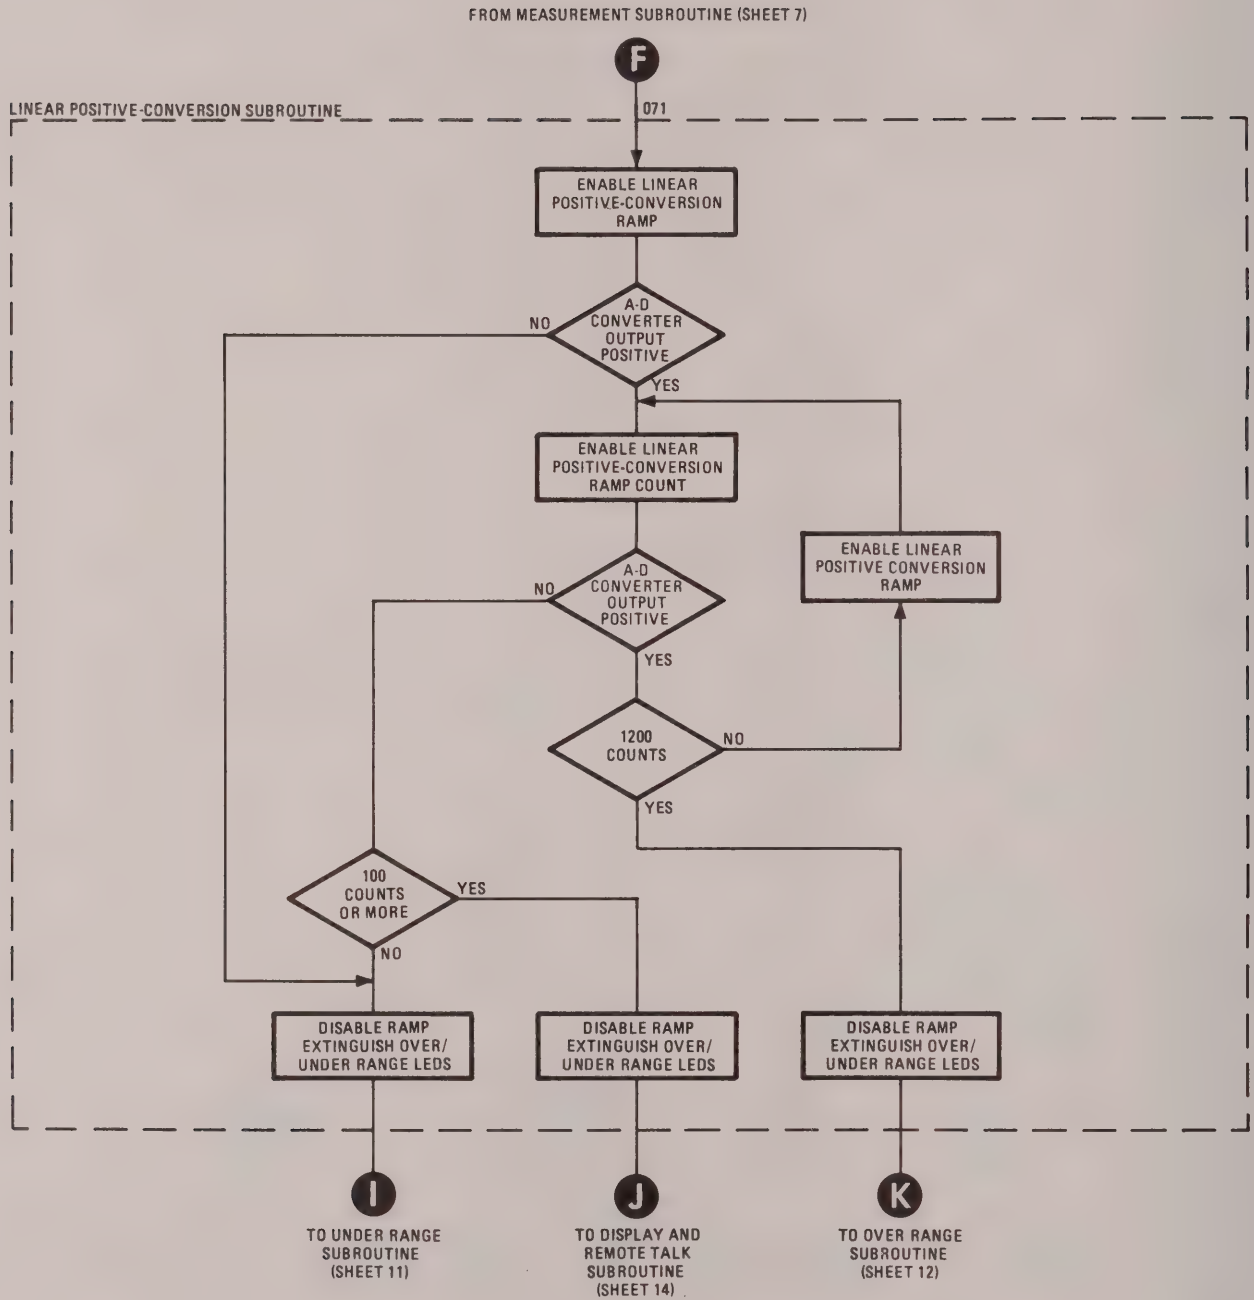


Figure 8-15. Operating Program Flow Chart (8A of 14)

8b

LINEAR POSITIVE CONVERSION SUBROUTINE

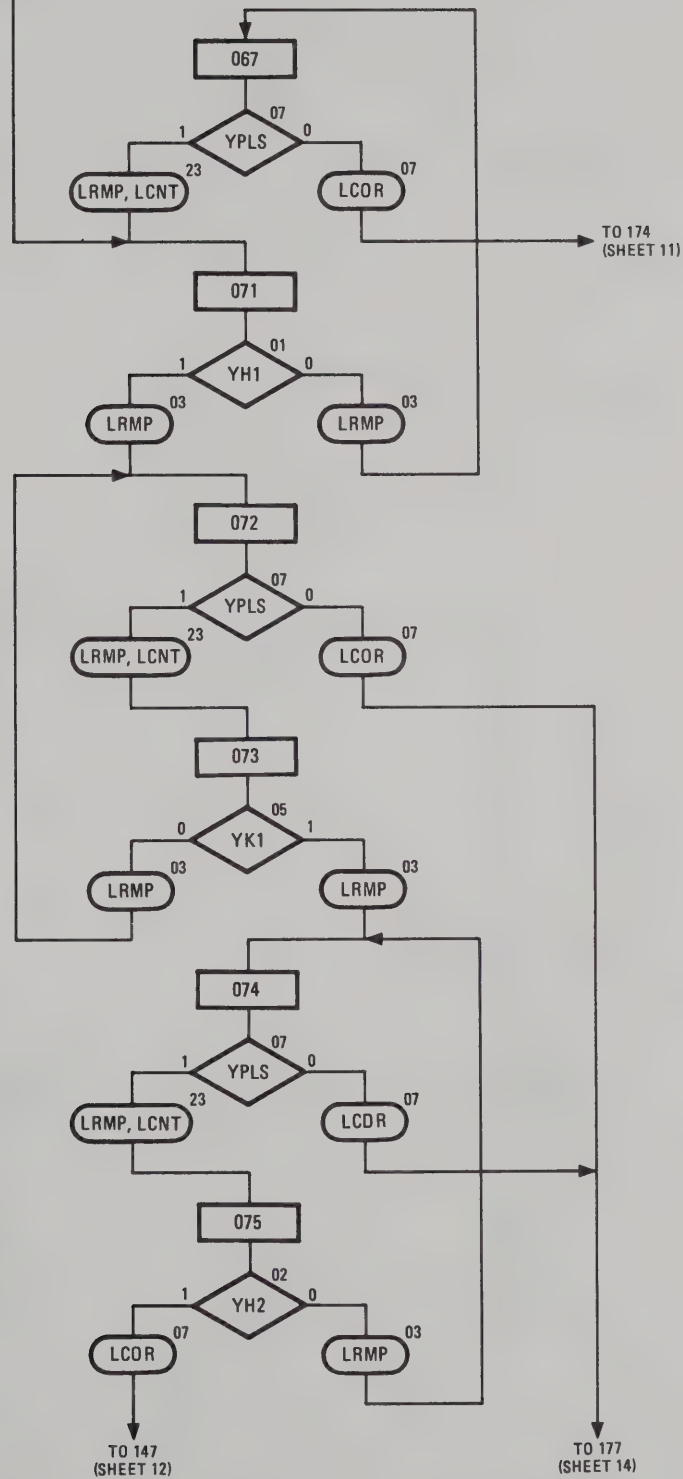
FROM 037
(SHEET 7)

Figure 8-15. Operating Program Flow Chart (8B of 14)

9a

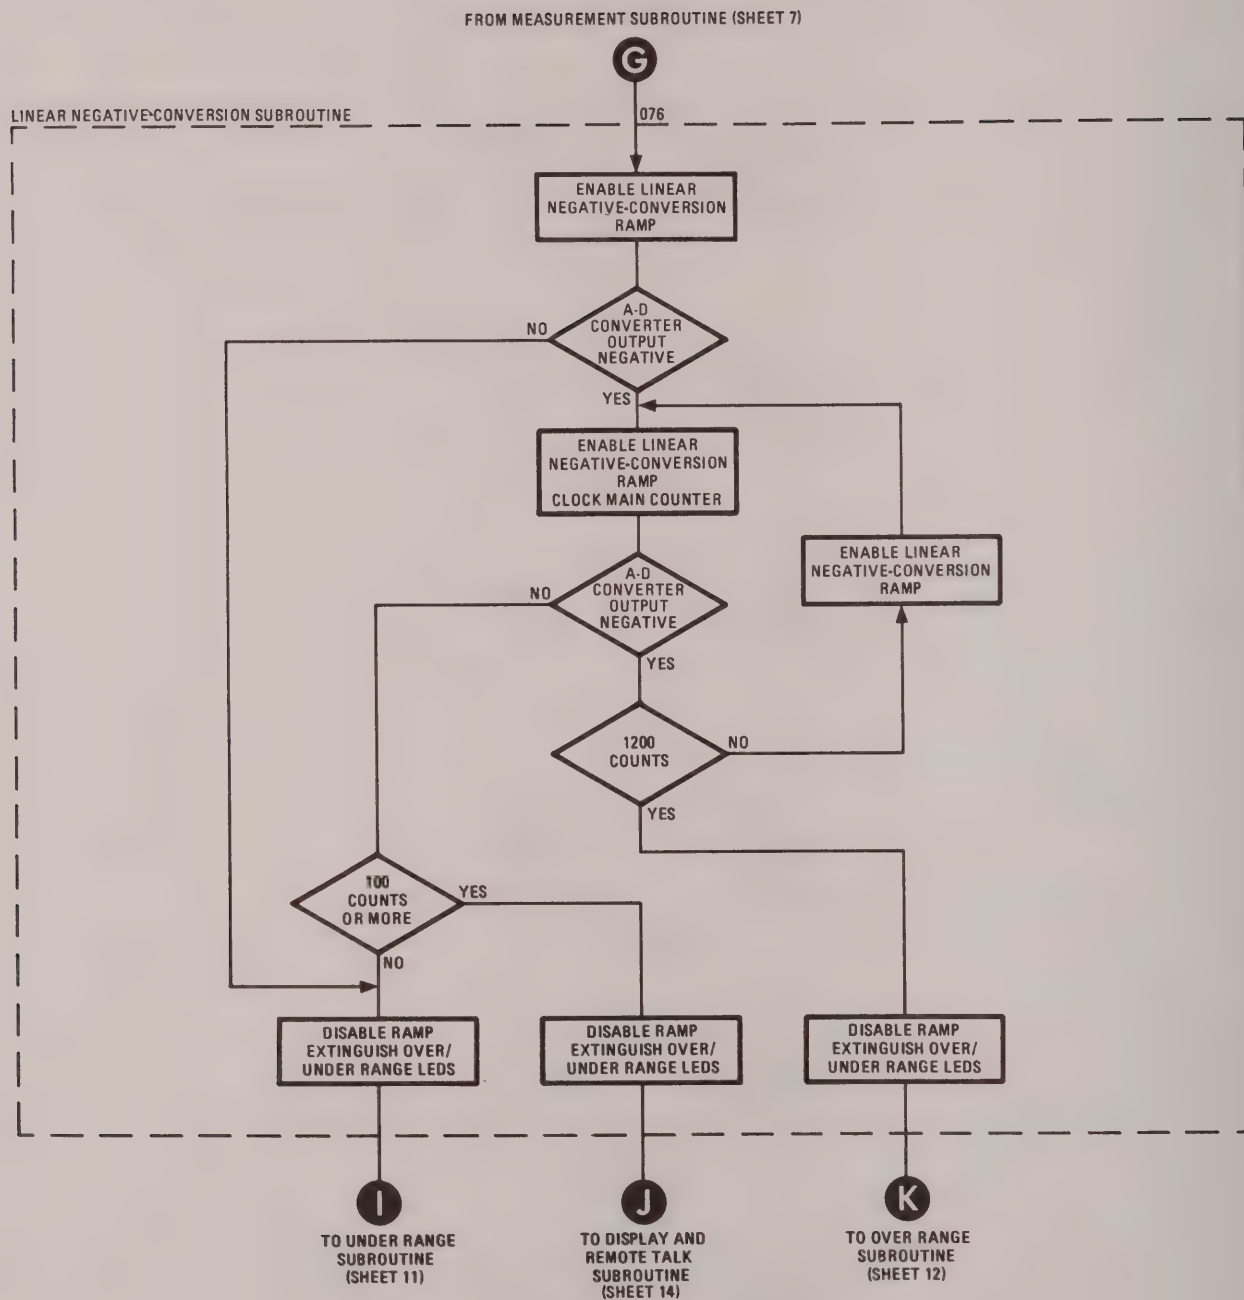


Figure 8-15. Operating Program Flow Chart (9A of 14)

9b

LINEAR NEGATIVE-CONVERSION SUBROUTINE

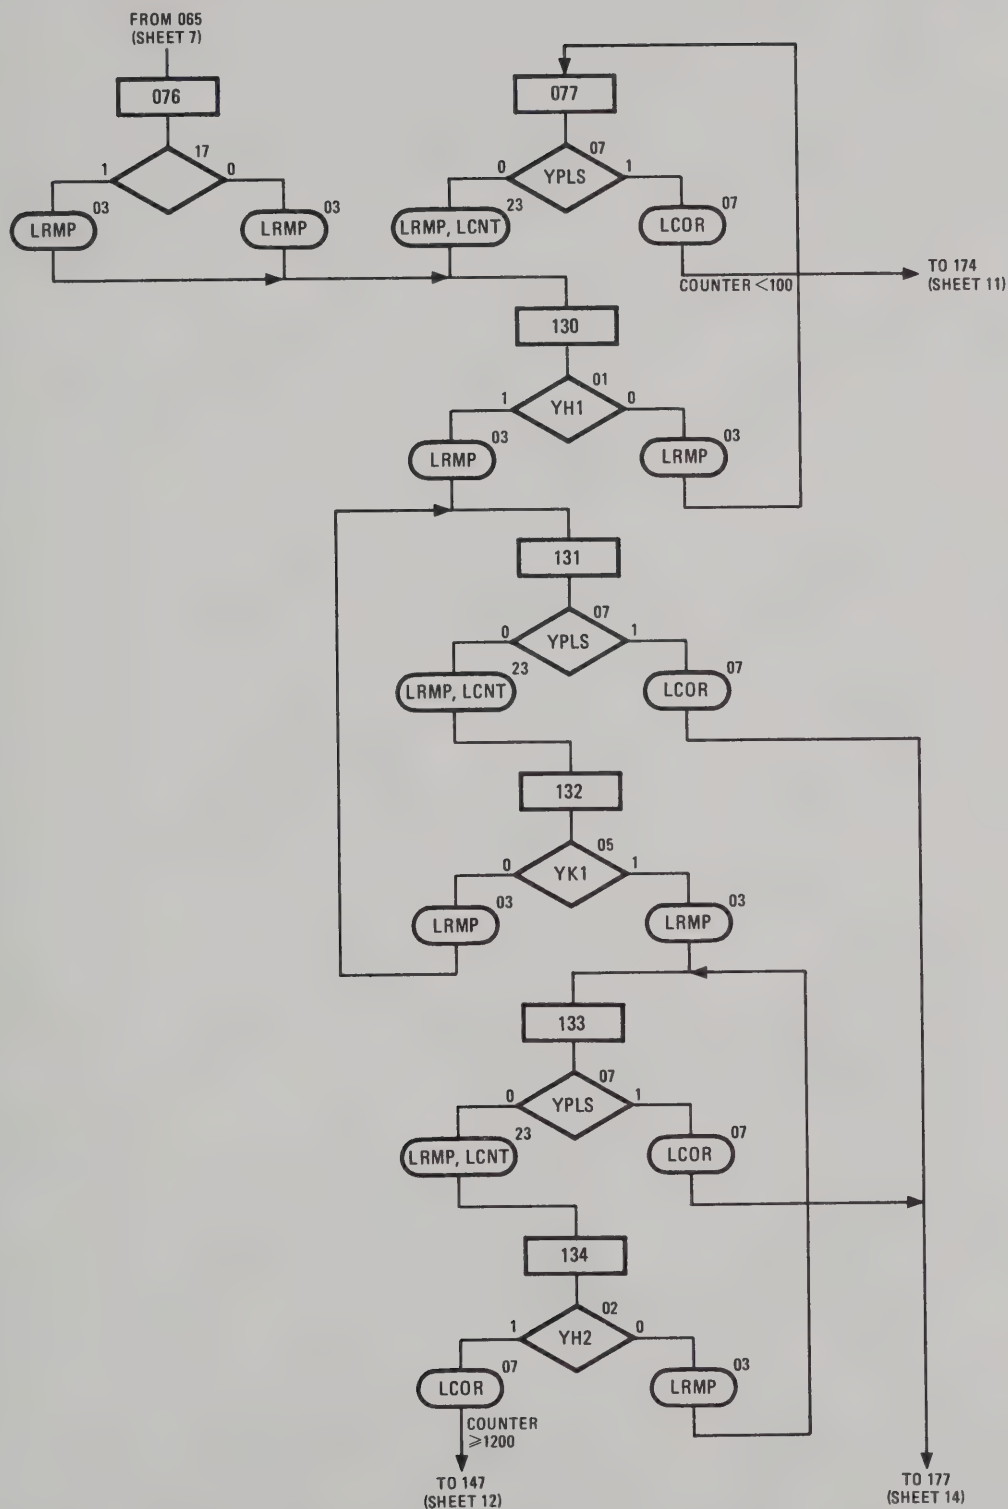


Figure 8-15. Operating Program Flow Chart (9B of 14)

10a

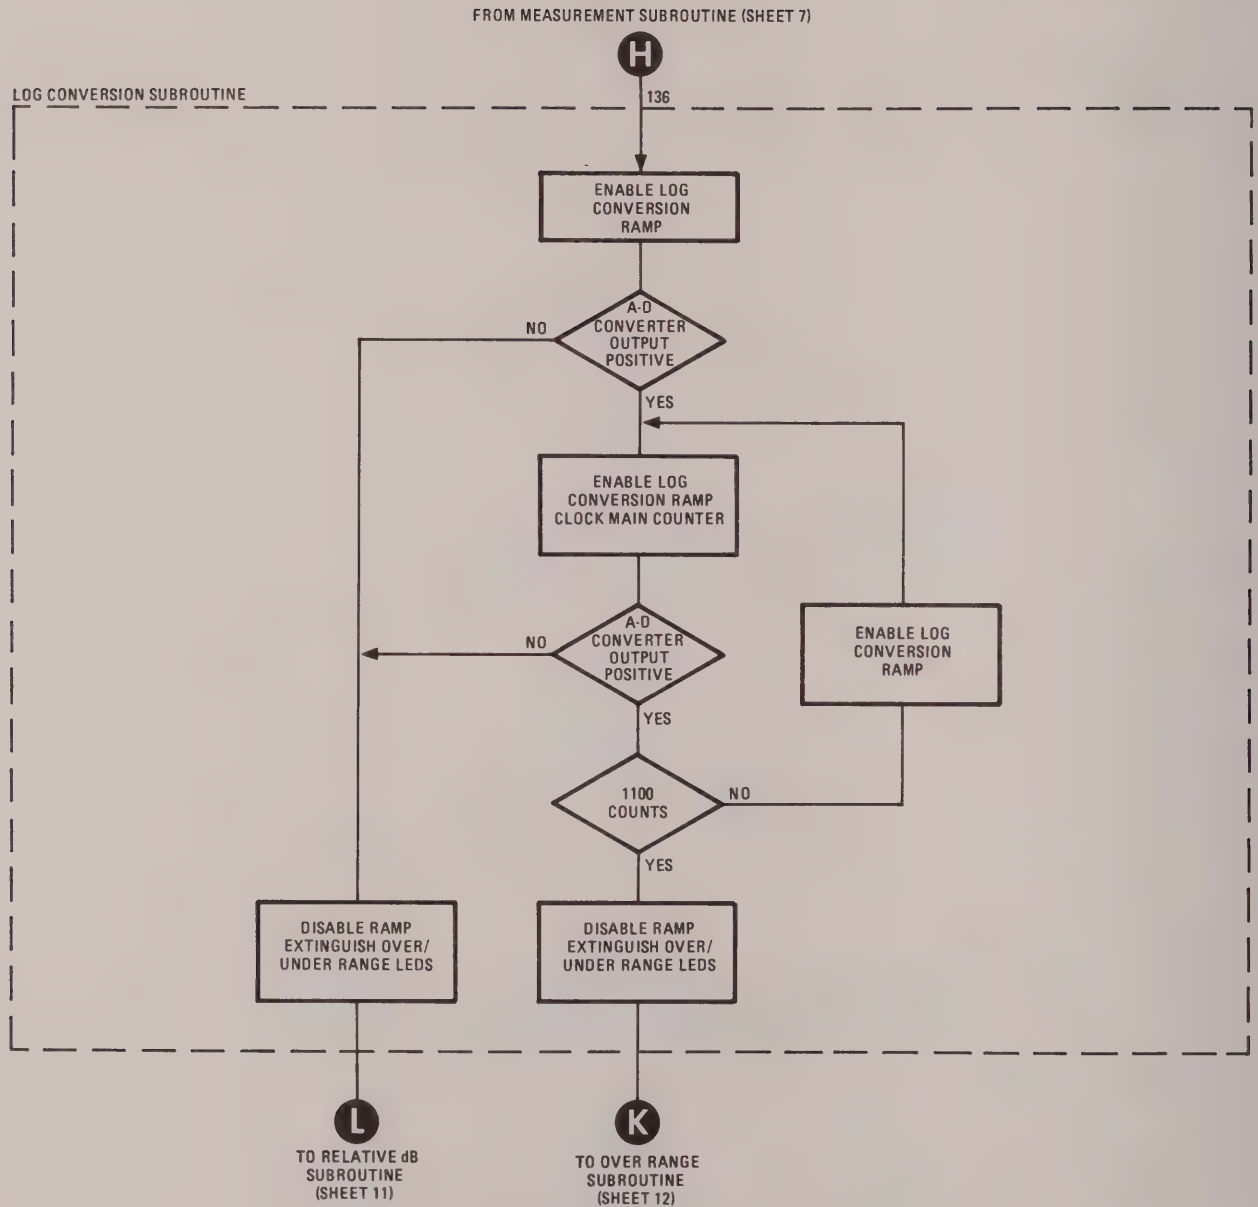


Figure 8-15. Operating Program Flow Chart (10A of 14)

LOG CONVERSION SUBROUTINE

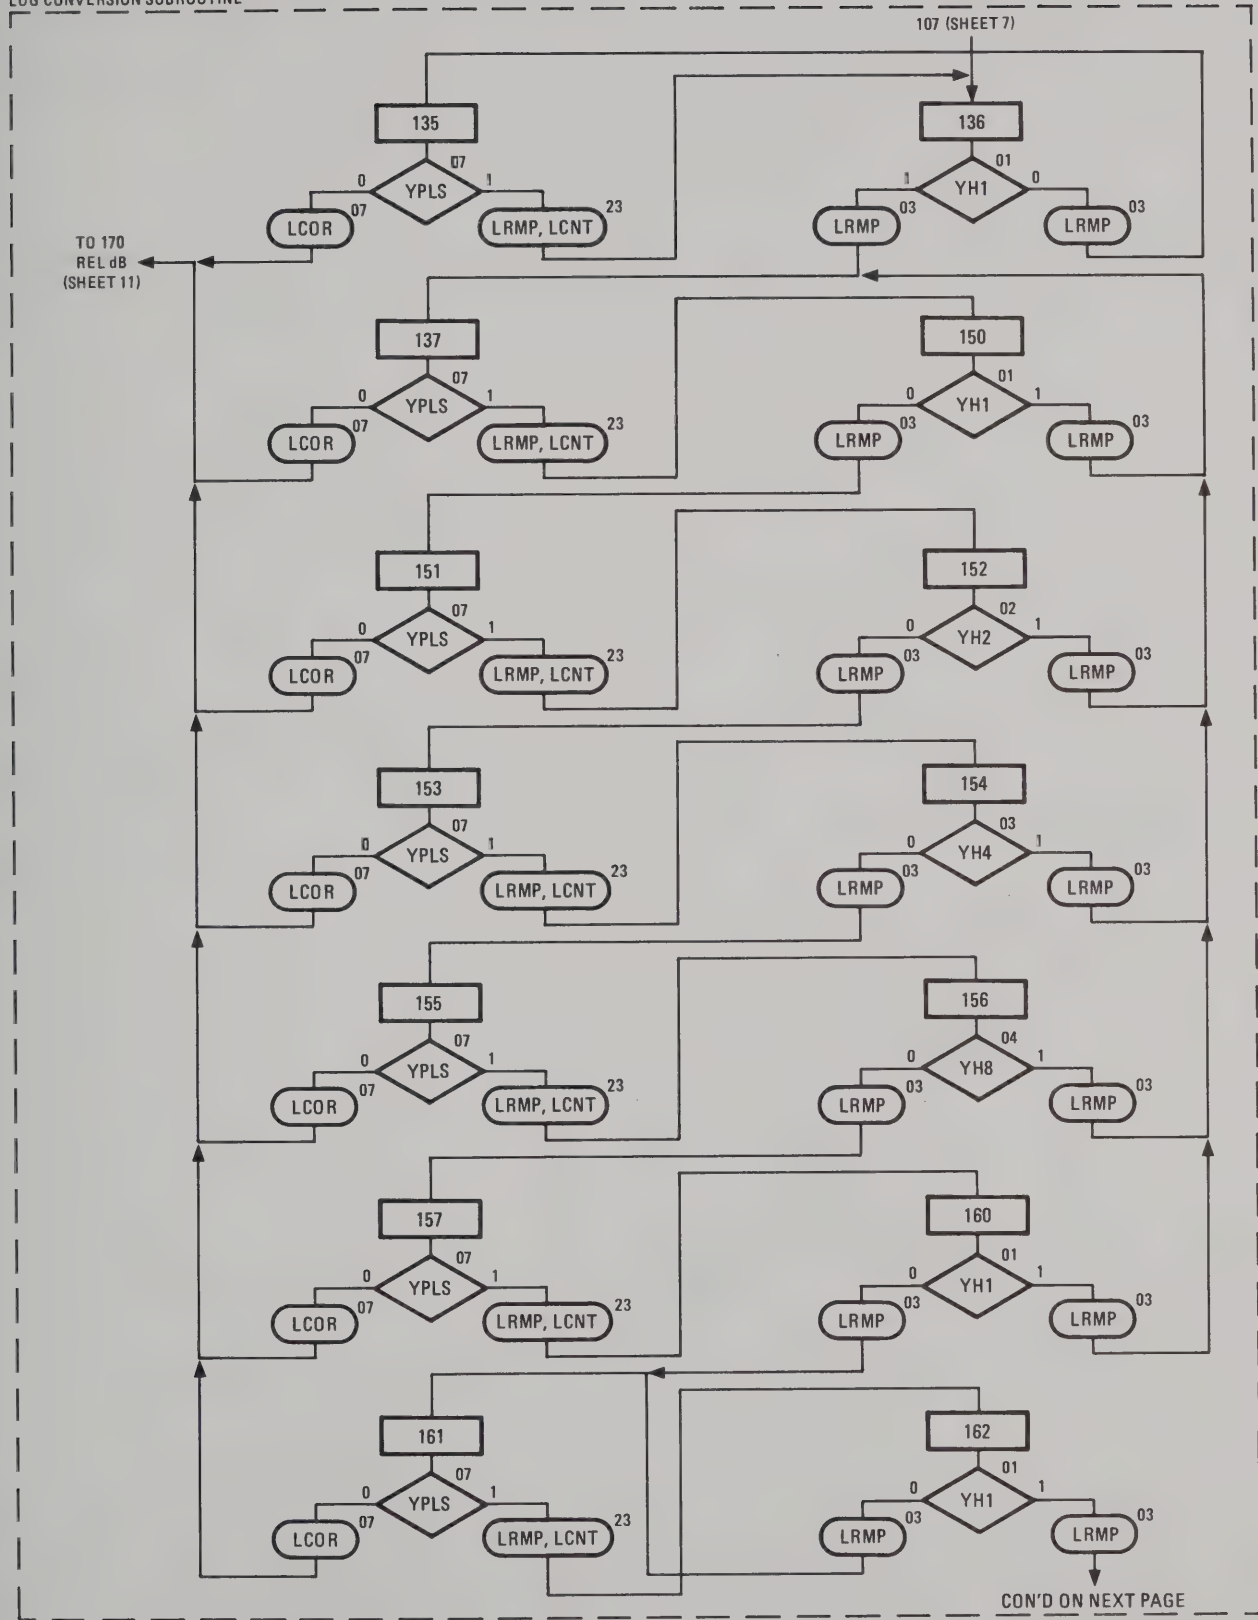


Figure 8-15. Operating Program Flow Chart (10B of 14)

10c

LOG CONVERSION SUBROUTINE Cont'd

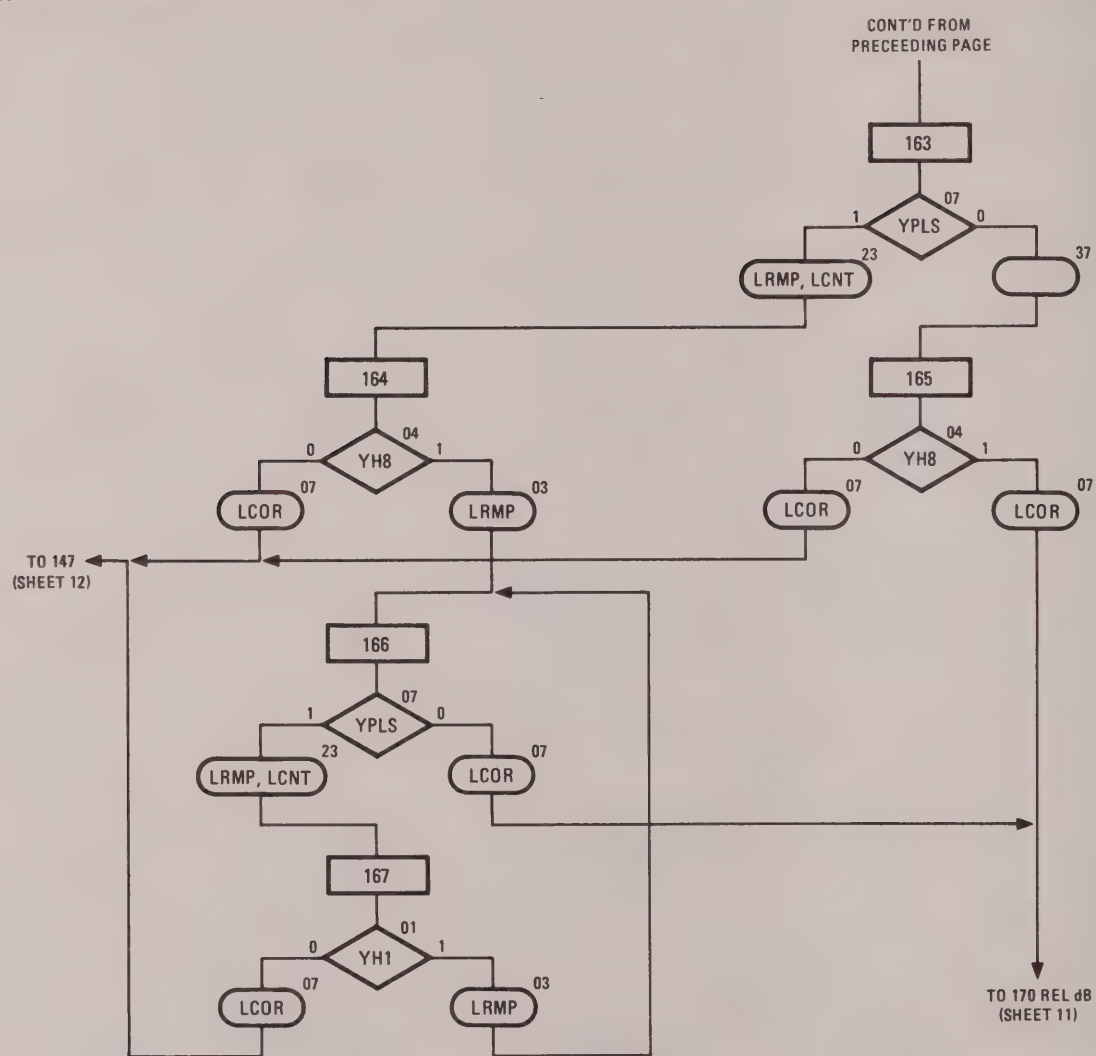


Figure 8-15. Operating Program Flow Chart (10C of 14)

(This page is intentionally left blank)

11a

FROM LOG CONVERSION SUBROUTINE (SHEET 10)


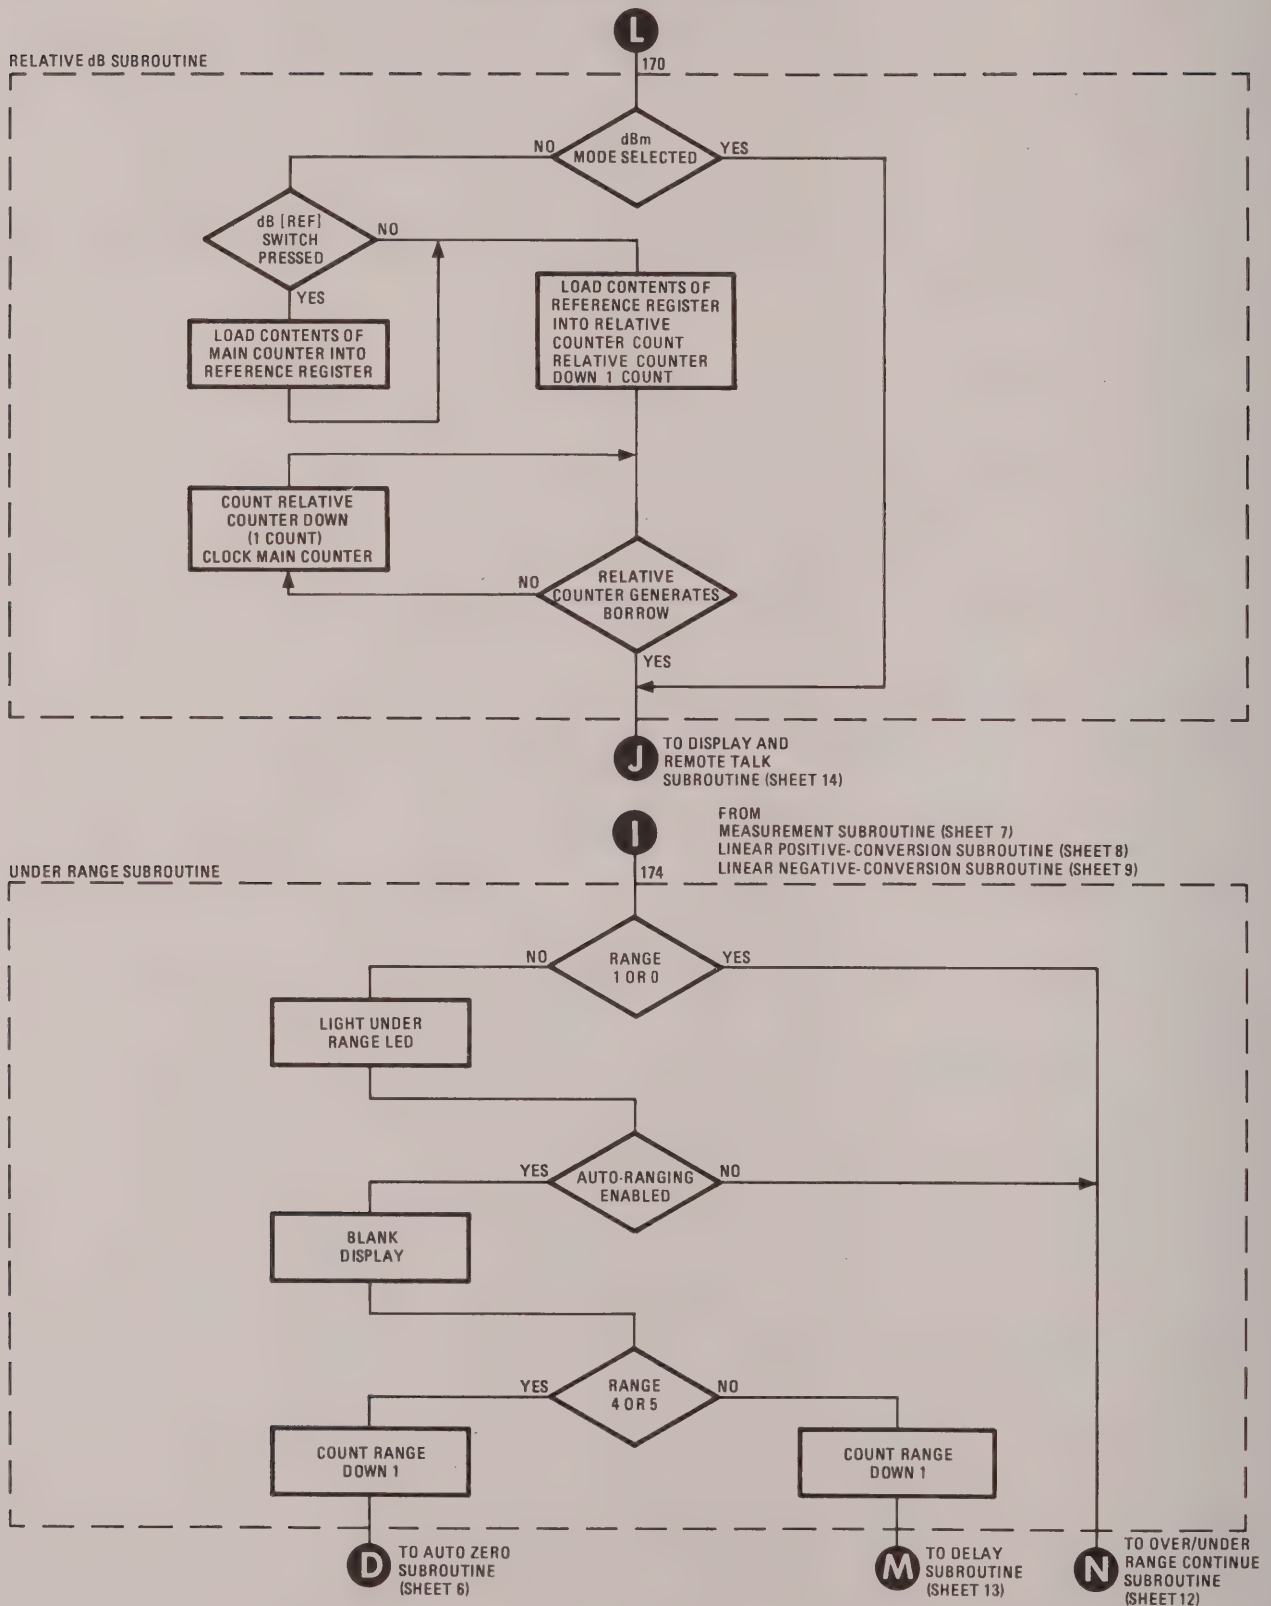


Figure 8-15. Operating Program Flow Chart (11A of 14)

11b

RELATIVE dB SUBROUTINE

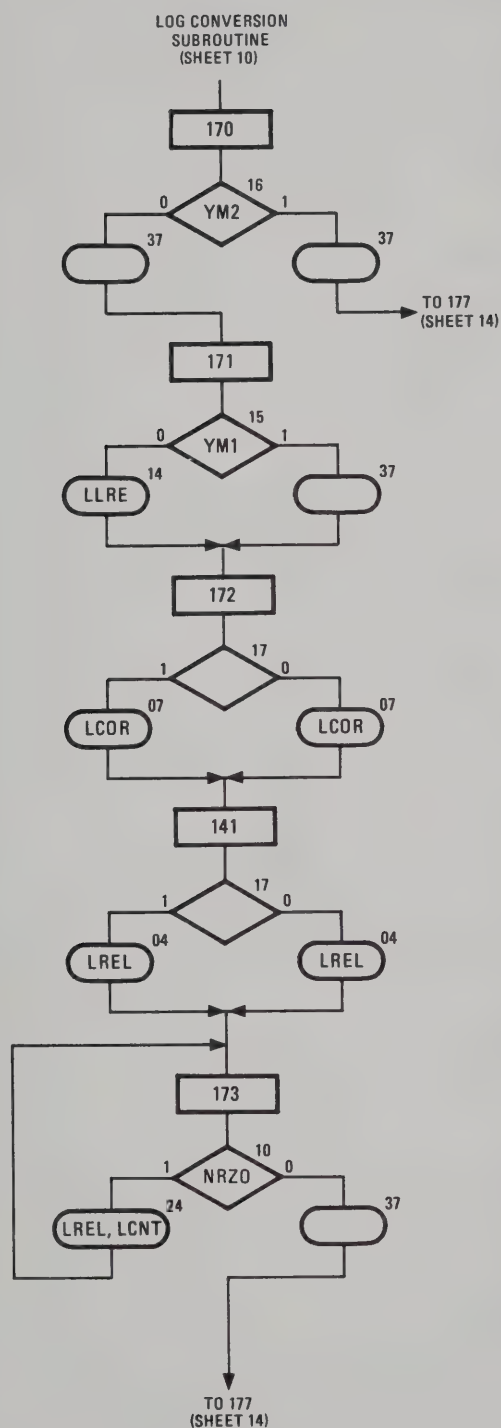

UNDER RANGE SUBROUTINE

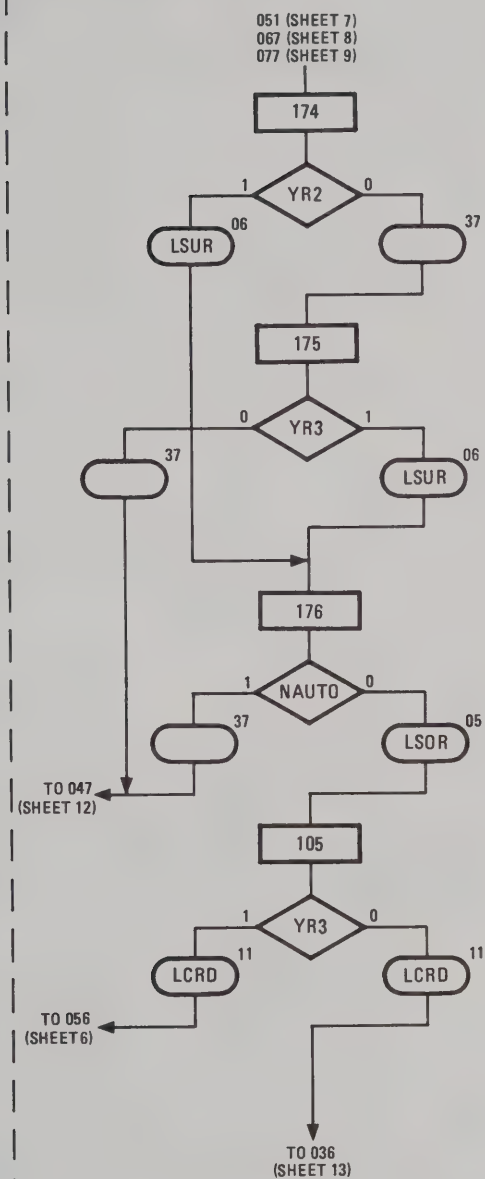


Figure 8-15. Operating Program Flow Chart (11B of 14)

12a

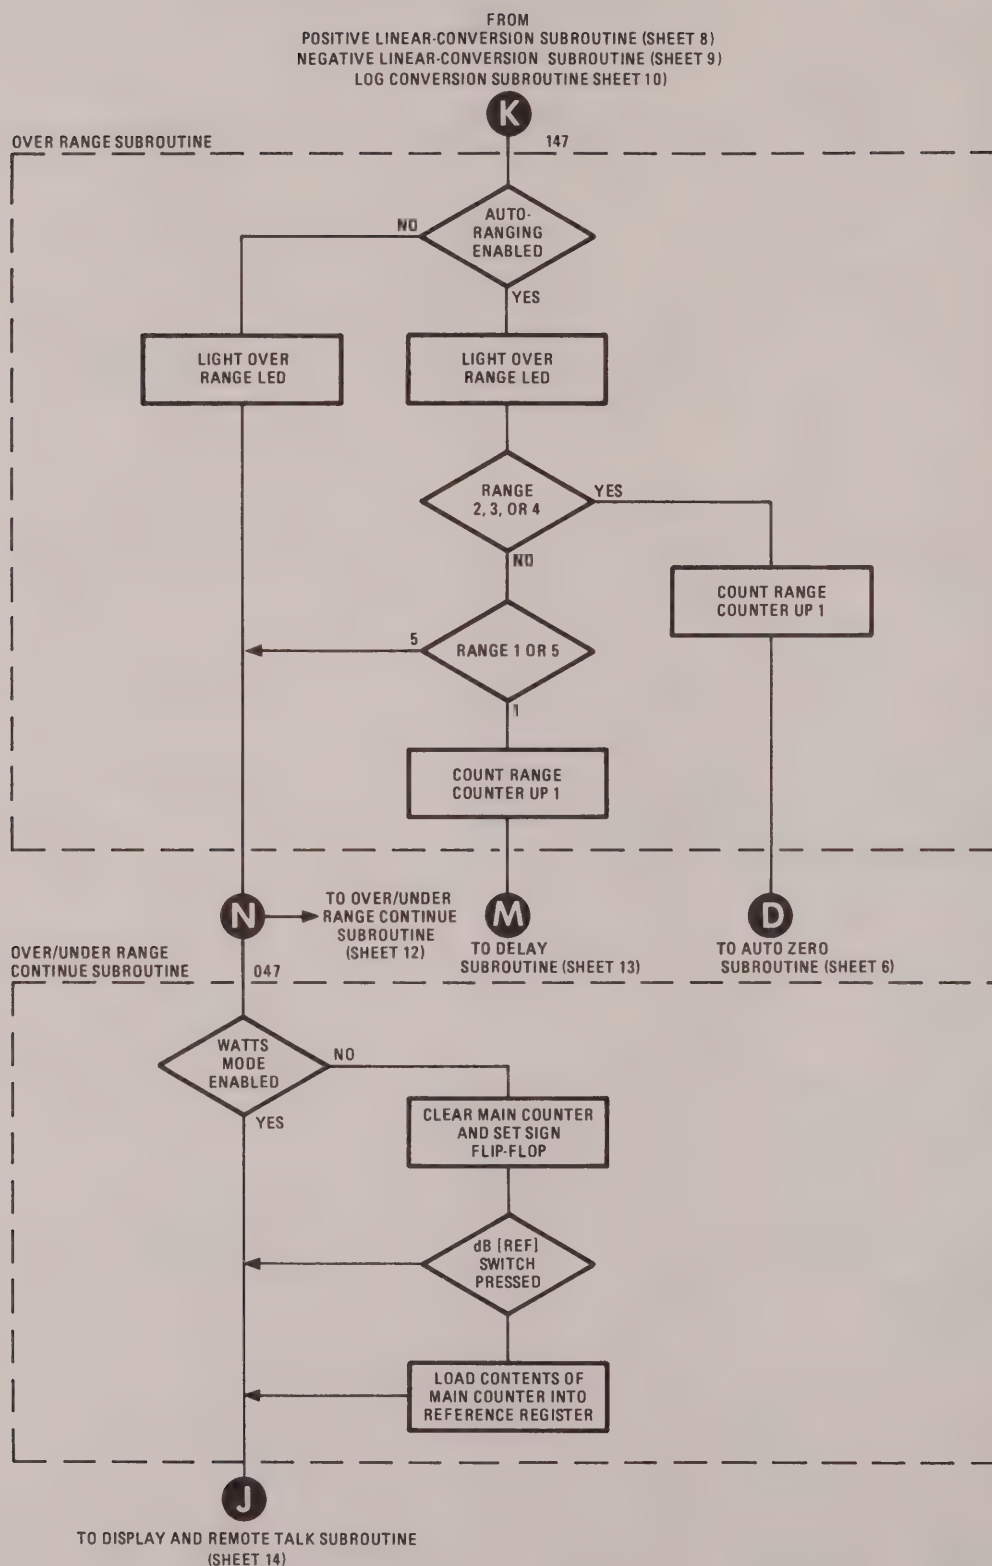


Figure 8-15. Operating Program Flow Chart (12A of 14)

12b

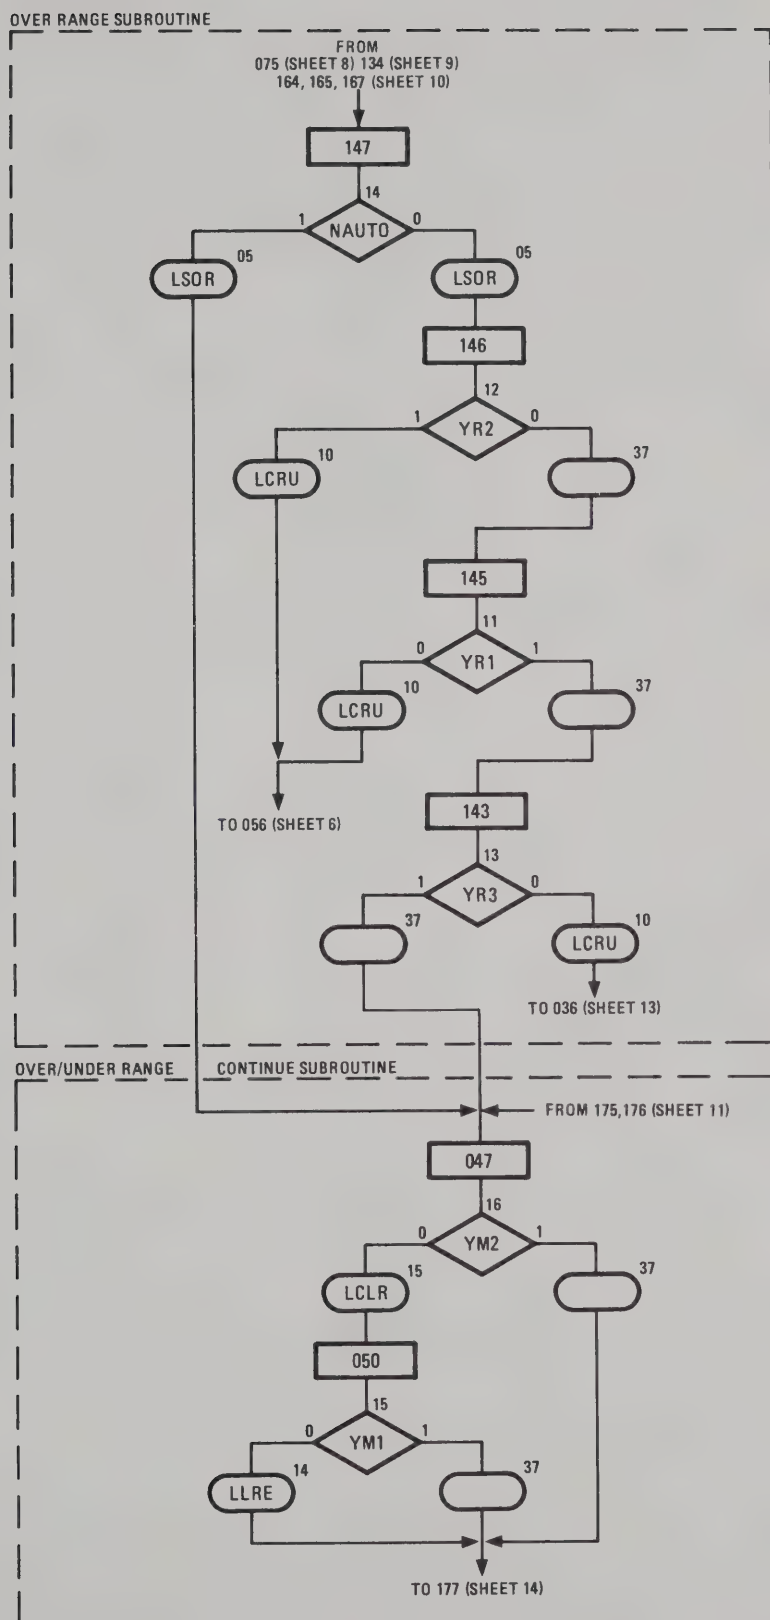


Figure 8-15. Operating Program Flow Chart (12B of 14)

13a

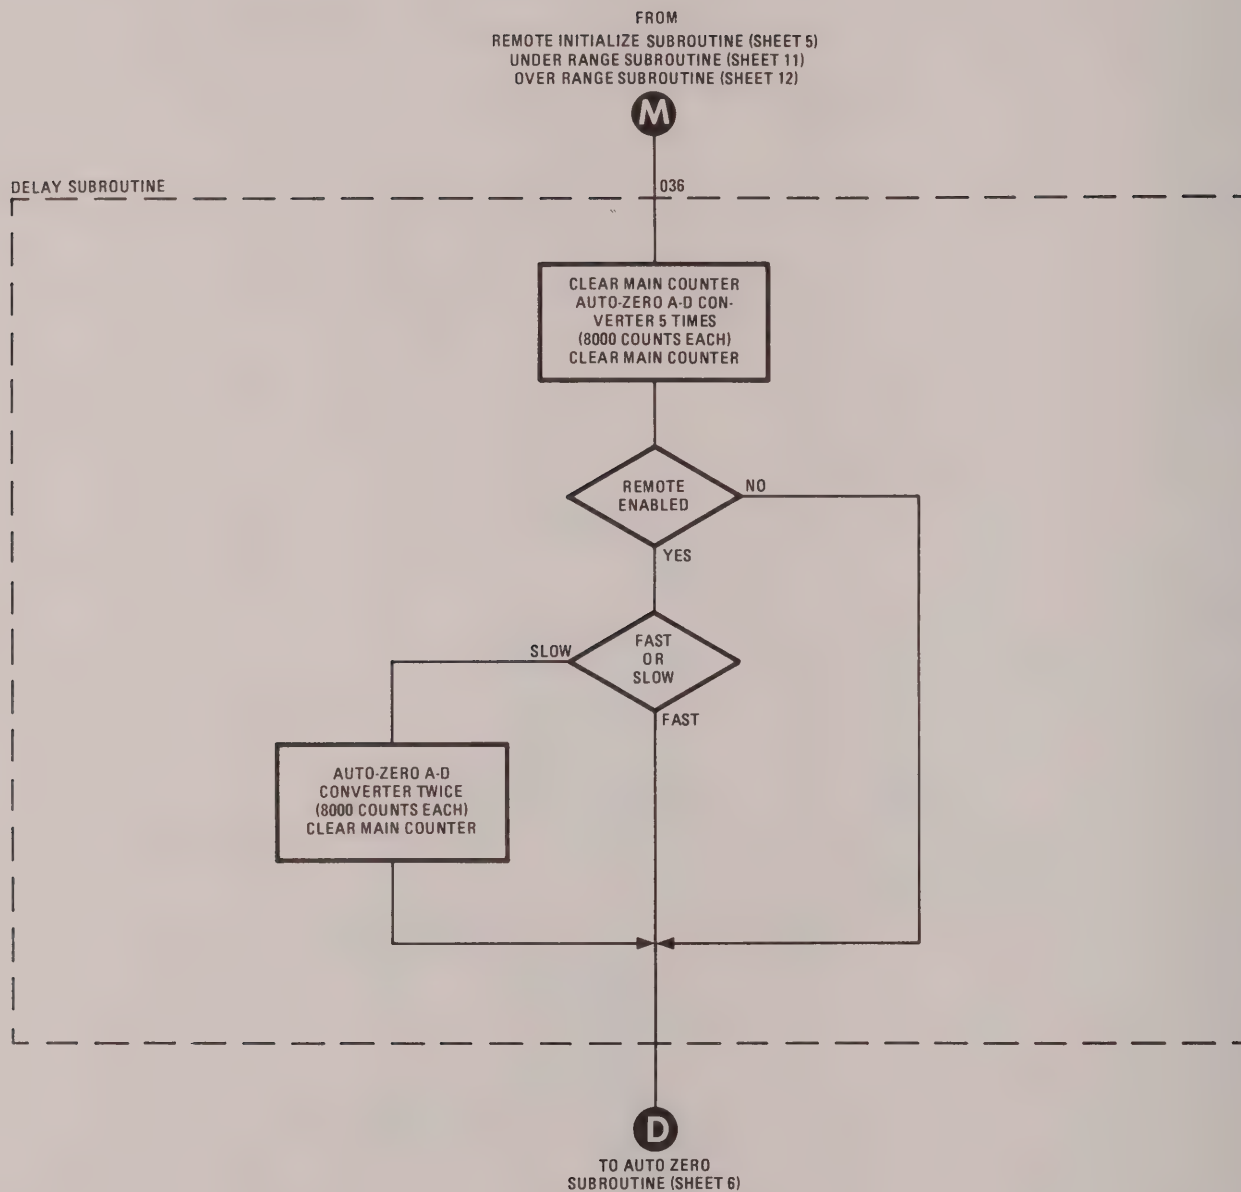


Figure 8-15. Operating Program Flow Chart (13A of 14)

13b

DELAY SUBROUTINE

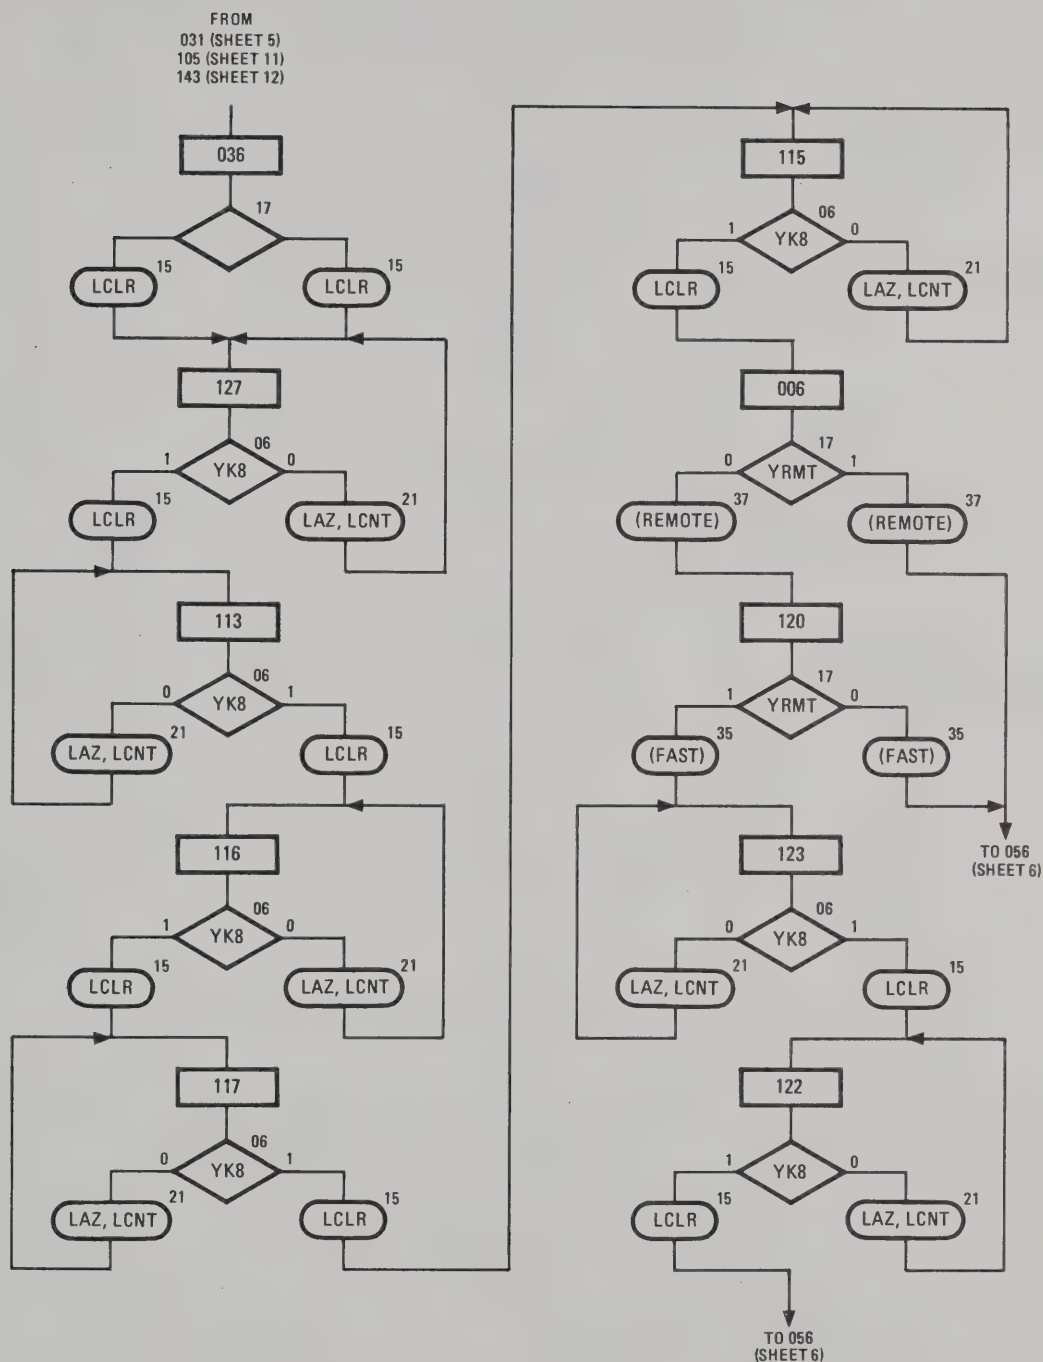


Figure 8-15. Operating Program Flow Chart (13B of 14)

14a

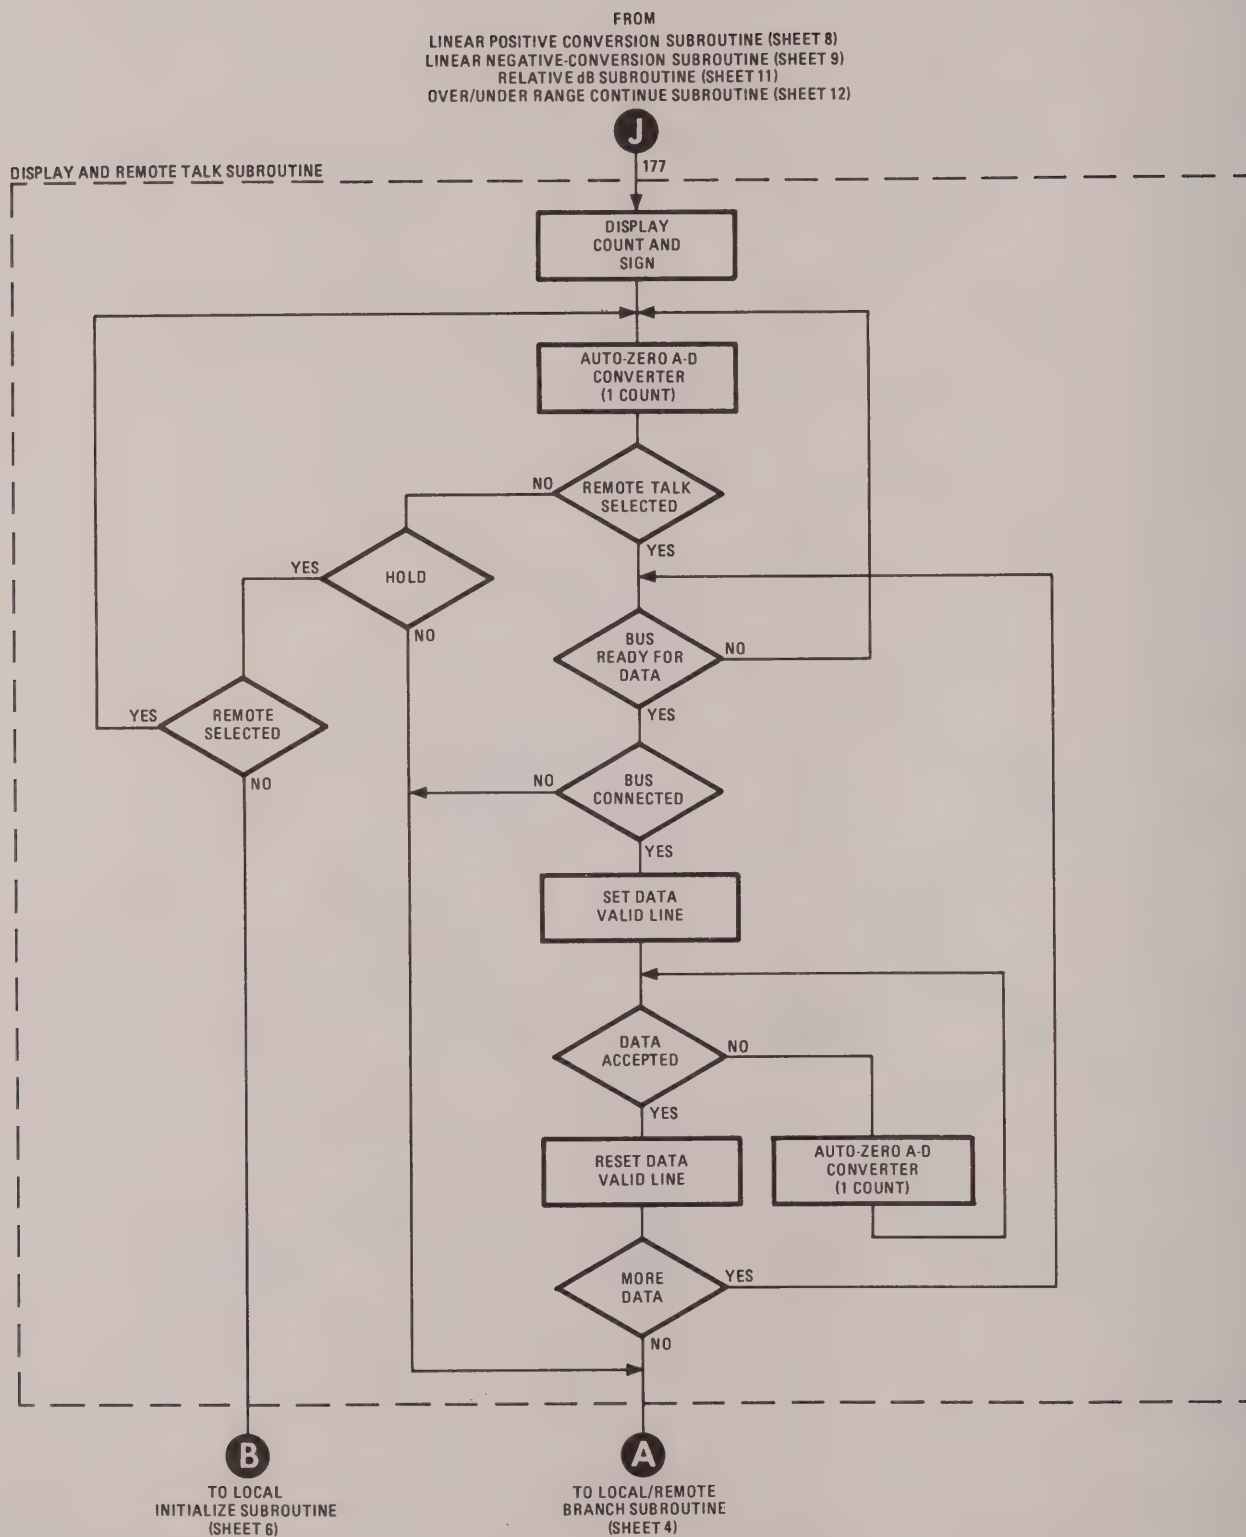


Figure 8-15. Operating Program Flow Chart (14A of 14)

14b

DISPLAY AND REMOTE TALK SUBROUTINE

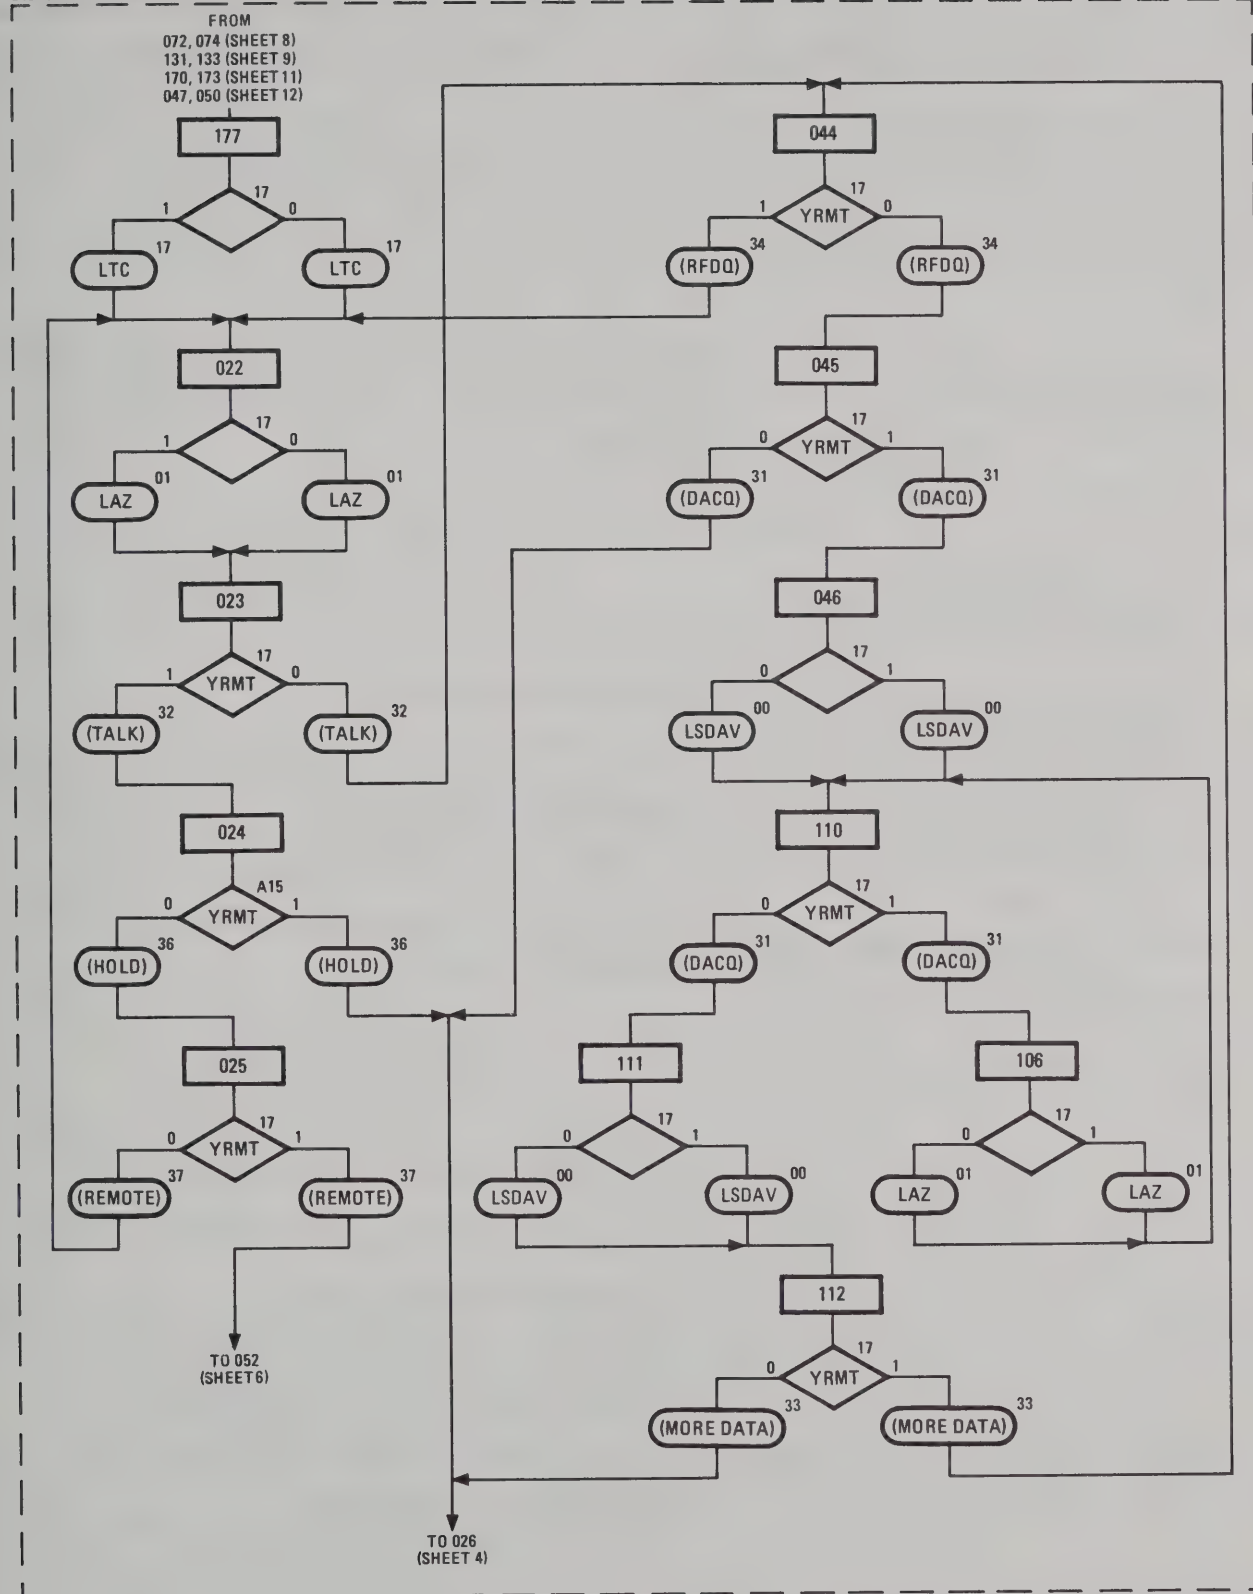


Figure 8-15. Operating Program Flow Chart (14B of 14)

Table 8-3. Standard Instrument Checkout (1 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
1	<p>Connect Range Calibrator to Power Meter and set equipment controls as follows:</p> <p>Range Calibrator</p> <p>FUNCTION CALIBRATE</p> <p>POLARITY NORMAL</p> <p>RANGE 30 mW</p> <p>LINE ON</p> <p>Power Meter</p> <p>CAL FACTOR % . . . 100</p> <p>POWER REF Off (out)</p> <p>MODE WATT</p> <p>RANGE HOLD . . . ON (in)</p> <p>LINE ON</p> <p>When power is first applied verify that digital readout is blanked. Then wait two seconds for display to stabilize and verify that:</p> <p>a. Power Supply outputs are:</p> <p>+15.0 \pm 0.5 Vdc; less than 0.01 Vac ripple and noise</p> <p>–15.0 \pm 0.5 Vdc; less than 0.01 Vac ripple and noise</p> <p>+5.00 \pm 0.25 Vdc; less than 0.01 Vac ripple and noise.</p> <p>b. Digital Readout indicates 31.6 \pm 8.0 mW.</p> <p>c. mW lamp is lit and all other front-panel lamps are not lit.</p>	<p>NOTE</p> <p><i>If the Power Meter is equipped with either remote interface option (002 or 024), remove both the A6 and A7 Assemblies before performing the standard checkout procedure.</i></p> <p>DESCRIPTION — This step verifies that the power supplies are operating properly, that the Power Meter powers up normally, and that the Power Meter is capable of displaying a WATT MODE, range 5 30% input power level.</p> <p>NOTE</p> <p><i>If Power Supply outputs are not within specifications, the ROMs used in the instrument may provide random outputs, thereby causing the Power Meter to operate erratically.</i></p> <p>KEY OPERATING SEQUENCE</p> <p>Power Up Subroutine Refer to Table 8-6, Operating Program Descriptions</p> <p>Local Initialize Subroutine Branch to Auto Zero Subroutine</p> <p>Auto Zero Subroutine Refer to Table 8-6, Operating Program Descriptions</p> <p>Measurement Subroutine</p> <p>NOTE</p> <p><i>A-D Converter input voltage at DC test point (A3TP4 should be stabilized at +0.316 \pm 0.080 Vdc at address 061.</i></p> <p>Load input voltage into A-D Converter (ramp amplitude at RMP test point A3TP2 is 2.24 \pm 0.57 Vp-p).</p> <p>Initiate linear positive-conversion and branch to Linear Positive-Conversion Subroutine.</p> <p>Linear Positive Conversion Subroutine</p> <p>Detect YPLS = 0 at address 072 (633 \pm 160 clock pulse, 10.5 \pm 2.7 ms after address 071).</p> <p>Clear OVER and UNDER RANGE indications</p> <p>Branch to Display and Remote Talk Subroutine</p> <p>Display and Remote Talk Subroutine</p> <p>Display main counter output (316 \pm 80) and positive sign (off)</p>

Table 8-3. Standard Instrument Checkout (2 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
2	Turn Power Meter CAL ADJ control slightly clockwise and counterclockwise and verify that indication on Digital Readout increases and decreases.	<p>DESCRIPTION — The previous step verified program execution up to the first address of the Display and Remote Talk Subroutine. This step verifies that the Power Meter CAL ADJ control is operational and that the program branches from the Display and Remote Talk Subroutine to the Local Initialize Subroutine, and then continues to cycle.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation verified in previous step except as indicated below.</p> <p>Display and Remote Talk Subroutine Branch to Local Initialize Subroutine .</p> <p>Measurement Subroutine</p> <p>NOTE</p> <p><i>Voltage at DC test point A3TP4 should vary as CAL ADJ control is rotated.</i></p> <p>Ramp amplitude at RMP test point A3TP2 changes in proportion to voltage change at DC test point A3TP4 (1 mV change at A3TP4 = 7.1 mV change in p-p ramp amplitude).</p>
3	Set Range Calibrator RANGE switch to 100 mW and adjust CAL ADJ control to obtain 100.1 indication on Digital Readout.	<p>DESCRIPTION — This step verifies that the Power Meter is capable of properly displaying a WATT MODE, Range 5 100% input power level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine Voltage at DC test point A3TP4 is adjustable to $1.001 \pm 0.003\text{V}$. Ramp amplitude at RMP test point A3TP2 is 7.1 Vp-p.</p> <p>Linear Positive Conversion Subroutine Detect YPLS = 0 at address 074 (2004 clock pulses, 33.4 ms, after address 071). Branch to Display and Remote Talk Subroutine.</p>
4	Turn Power Meter CAL ADJ control to obtain 100.0 mW indication, then set CAL FACTOR % switch, in turn, to each position. Verify that the indications given on the following page are obtained.	<p>DESCRIPTION — This step verifies that the CAL FACTOR % switch is operating properly and that the Power Meter is capable of properly displaying a WATT MODE, Range 5 117% input power level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated on the following page.</p>

Table 8-3. Standard Instrument Checkout (3 of 17)

Step	Instrument Setup and Test Procedure		Test Description and Key Operating Sequence		
4 (cont)	Position	Indication	CAL FACTOR % Switch Position	A-D Converter Input Voltage (DC test point A3TP4)	A-D Converter Ramp Amplitude (RMP test point A3TP2)
	99	101.0 \pm 0.2 mW			
	98	102.0 \pm 0.2 mW			
	97	103.1 \pm 0.2 mW			
	96	104.2 \pm 0.2 mW	99	1.010 \pm 0.002	7.171 \pm 0.014
	95	105.3 \pm 0.2 mW	98	1.020 \pm 0.002	7.242 \pm 0.014
	94	106.4 \pm 0.2 mW	97	1.031 \pm 0.002	7.320 \pm 0.014
	93	107.5 \pm 0.2 mW	96	1.042 \pm 0.002	7.398 \pm 0.014
	92	108.7 \pm 0.2 mW	95	1.053 \pm 0.002	7.467 \pm 0.014
	91	109.9 \pm 0.2 mW	94	1.064 \pm 0.002	7.554 \pm 0.014
	90	111.1 \pm 0.2 mW	93	1.075 \pm 0.002	7.633 \pm 0.014
	89	112.4 \pm 0.2 mW	92	1.087 \pm 0.002	7.718 \pm 0.014
	88	113.6 \pm 0.2 mW	91	1.099 \pm 0.002	7.803 \pm 0.014
	87	114.9 \pm 0.2 mW	90	1.111 \pm 0.002	7.889 \pm 0.014
	86	116.3 \pm 0.2 mW	89	1.124 \pm 0.002	7.980 \pm 0.014
	85	117.6 \pm 0.2 mW	88	1.136 \pm 0.002	8.066 \pm 0.014
			87	1.149 \pm 0.002	8.158 \pm 0.014
			86	1.163 \pm 0.002	8.257 \pm 0.014
			85	1.176 \pm 0.002	8.350 \pm 0.014
5	Turn Power Meter CAL ADJ control clockwise as required to obtain OVER RANGE indication; i.e., Digital Readout is blanked and OVER RANGE indicator is lit.		<p>DESCRIPTION — This step verifies that the Power Meter is capable of detecting and indicating an OVER RANGE indication.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine A-D Converter Input Voltage at DC test point A3TP4 is adjustable to greater than +1.200V. Ramp amplitude at RMP test point A3TP2 is greater than 8.4 Vp-p.</p> <p>Linear Positive-Conversion Subroutine Branch from address 075 to Over Range Subroutine (2403 clock pulses, 33.4 ms, after start address 071).</p> <p>Over Range Subroutine Light OVER RANGE indicator and blank Digital Readout (1_ . _) . Branch to Over/Under Range Continue Subroutine.</p> <p>Over/Under Range Continue Subroutine Branch to Display and Remote Talk Subroutine.</p>		

Table 8-3. Standard Instrument Checkout (4 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
6	Turn Power Meter CAL ADJ control counterclockwise until OVER RANGE lamp goes out and indication appears on Digital Readout.	<p>DESCRIPTION— This step verifies that the Power Meter is capable of detecting the end of an over range condition and resetting the front-panel display accordingly.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Over Range Subroutine Branch to Over/Under Range Continue Subroutine when over range condition exists.</p> <p>Over/Under Range Continue Subroutine Branch to Display and Remote Talk Subroutine when over range condition exists.</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 decreases to less than 1.200V. Ramp amplitude at RMP test point A3TP2 decreases to less than 8.5 Vp-p.</p> <p>Linear Positive-Conversion Subroutine Detect YPLS = 0 at address 074; reset OVER RANGE indication and clear blanked display.</p>
7	Set CAL FACTOR % switch to 100 and turn Power Meter CAL ADJ control counterclockwise until Digital Readout indicates 99.0 mW. Then set Range Calibrator RANGE switch to 10 mW and verify that Digital Readout indicates 9.8 ± 0.2 mW and that UNDER RANGE indicator lights.	<p>DESCRIPTION — This step verifies that the Power Meter is capable of detecting and indicating an under-range condition.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 is 0.098 ± 0.001 V. Ramp amplitude at RMP test point A3TP2 is 0.696 ± 0.014 Vp-p.</p> <p>Linear Positive Conversion Subroutine YPLS = 0 detected at address 067 (delay = 198 ± 2 clock pulses, 3.3 ms, after start address 071). Branch to Under Range Subroutine.</p> <p>Under Range Subroutine Light UNDER RANGE indicator. Branch to Over/Under Range Continue Subroutine.</p>

Table 8-3. Standard Instrument Checkout (5 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
8	<p>Set Power Meter RANGE HOLD switch to off (out) and verify that Power Meter auto-ranges to range 4 according to the following sequence:</p> <ol style="list-style-type: none"> mW lamp remains lit. Digital Readout blanks momentarily and decimal point moves one position to left. Digital Readout indication changes from blanked to 9.90 ± 0.08 mW and UNDER RANGE lamp goes out. 	<p>DESCRIPTION — This step verifies the capability of the Power Meter to auto-range from range 5 to range 4, and to display a range 4 100% input power level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Under Range Subroutine (RANGE HOLD switch set to on) Branch to Over/Under Range Continue Subroutine (previous step verified that LSUR instruction was generated but did not verify branch).</p> <p>Under Range Subroutine (RANGE HOLD switch set to off) Blank Digital Readout. Count range counter down one range. Branch to Auto Zero Subroutine.</p> <p>Auto Zero Subroutine A-D Converter input at DC test point A3TP4 stabilizes at 0.980 ± 0.020 Vdc prior to branch to Measurement Subroutine.</p>
9	<p>Set Range Calibrator RANGE switch to 100 mW and verify that Power Meter auto-ranges back to range 5 according to the following sequence:</p> <ol style="list-style-type: none"> mW lamp remains lit. Digital Readout blanks momentarily, decimal point moves one position to left, and OVER RANGE indicator lights momentarily. Digital Readout indication changes from blanked to 99.0 mW. 	<p>DESCRIPTION — This step verifies the capability of the Power Meter to auto-range from range 4 to range 5.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine (range 4) A-D Converter input voltage at DC test point A3TP4 rises to greater than +1.200V.</p> <p>Over Range Subroutine Blank Digital Readout and light OVER RANGE indicator. Count range counter up one range. Branch to Auto Zero Subroutine.</p> <p>Auto Zero Subroutine A-D Converter input voltage at DC test point A3TP4 stabilizes at 0.990 ± 0.005 V prior to branch to Measurement Subroutine.</p> <p>NOTE <i>As previously verified, OVER RANGE indicator is reset and Digital Readout is unblanked in subsequent Linear Positive-Conversion Subroutine.</i></p>

Table 8-3. Standard Instrument Checkout (6 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
10	Set Power Meter RANGE HOLD switch to on (in) and Range Calibrator FUNCTION switch to STANDBY. Adjust DC OFF potentiometer A3R2 as required to obtain 00.0 mW indication with blinking — sign.	<p>DESCRIPTION — This step adjusts DC OFF potentiometer A3R2 as required to remove any dc voltage introduced by the dc amplifier.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 is adjustable to 0.000. Branch randomly to Linear Positive- and Negative-Conversion Subroutines.</p> <p>Linear Positive-Conversion Subroutine (Reference; previously verified). Branch to Under Range Subroutine.</p> <p>Linear Negative-Conversion Subroutine Branch to Under Range Subroutine</p>
11	Set Range Calibrator RANGE switch to 100 mW and FUNCTION switch to CALIBRATE. Adjust FREQ potentiometer A3R69 to obtain maximum indication on Digital Readout and verify that frequency at A2TP5 is 220 ± 16 Hz.	<p>DESCRIPTION — This step adjusts the reference frequency of the Power Meter.</p> <p>KEY OPERATING SEQUENCE — Program execution previously verified; refer to Service Sheet 7 for circuit operation.</p>
12	Adjust Power Meter CAL ADJ control to obtain 1.000 Vdc indication at rear-panel RECORDER output and LIN potentiometer A3R37 to obtain 100.0 indication on Digital Readout. Then set Range Calibrator RANGE switch to 10 mW and verify that Digital Readout indicates 10.0 mW.	<p>DESCRIPTION — This step adjusts the linear positive-conversion slope of the A-D ramp.</p> <p>KEY OPERATING SEQUENCE — Program execution previously verified; refer to Service Sheet 8 for circuit operation.</p>
13	Set Range Calibrator RANGE switch to 3 mW and release Power Meter RANGE HOLD switch. Verify that Power Meter auto-ranges to range 4 (refer to step 8) and that Digital Readout indicates 3.16 ± 0.4 mW.	<p>DESCRIPTION — The primary purpose of this step is to set up reference conditions for the next step; it is essentially the same as step 8 except that a range 4 30% input power level is applied to cause auto-ranging.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for range 4 rise time of A-D Converter input voltage at DC test point A3TP4.</p> <p>Auto Zero Subroutine A-D Converter input voltage at DC test point A3TP4 stabilizes at 0.316 ± 0.002 V by end of Auto Zero Subroutine (delay of 8000 clock pulses, 133 ms, after start address 056).</p>

Table 8-3. Standard Instrument Checkout (7 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
14	<p>Set Range Calibrator RANGE switch to 300 μW and verify that Power Meter auto-ranges to range 3 (refer to step 8) and that Digital Readout indicates $.316 \pm .01$ mW.</p>	<p>DESCRIPTION — This step verifies that the Power Meter will auto-range from range 4 to range 3 when the input power level is changed from a range 4 30% level to a range 3 30% level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for range counter range 3 output and range 3 A-D Converter input voltage rise time at A3TP4.</p> <p>Measurement Subroutine (1st cycle after new input level) A-D Converter input voltage at DC test point A3TP4 decreases to less than 0.100V (range 4 selected).</p> <p>Under Range Subroutine Count range counter down one range to range 3.</p> <p>Local Initialize Subroutine Branch to Auto Zero Subroutine.</p> <p>Auto Zero Subroutine A-D Converter input voltage at DC test point A3TP4 stabilizes at 0.316 ± 0.002V by end of Auto Zero Subroutine (delay of 8000 clock pulses, 133 ms, after start address 056).</p>
15	<p>Set Range Calibrator RANGE switch to 30 μW and verify that Power Meter auto-ranges to range 2 according to the following sequence:</p> <ol style="list-style-type: none"> Digital Readout blanks (0__ . __) momentarily and UNDER RANGE lamp lights momentarily. mW lamp goes out, μW lamp lights, and decimal point moves two places to right while Digital Readout is blanked. Digital Readout indication changes from blanked to 31.6 ± 1.0 mW. 	<p>DESCRIPTION — This step verifies that the Power Meter will auto-range from range 3 to range 2 when the input power level is changed from a range 3 30% level to a range 2 30% level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine (1st cycle after new input level) A-D Converter input voltage at DC test point A3TP4 decreases to less than 0.100V (range 3 selected).</p> <p>Under Range Subroutine Light UNDER RANGE indicator (address 174). Blank Digital Readout (reference; previously verified). Branch to Delay Subroutine.</p> <p>Delay Subroutine Auto Zero A-D Converter (40,000 clock pulses, 666 ms). Branch to Auto Zero Subroutine.</p> <p>Auto Zero Subroutine A-D Converter input voltage (A3TP4) stabilizes at 0.316 ± 0.10V by end of Auto Zero Subroutine (delay of 8000 counts, 133 ms, after start address 056).</p> <p>NOTE</p> <p><i>As previously verified, UNDER RANGE indication is reset and Digital Readout is unblanked in first subsequent Linear Positive Conversion Subroutine.</i></p>

Table 8-3. Standard Instrument Checkout (8 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
16	Set Power Meter RANGE HOLD switch to on (in) and Range Calibrator FUNCTION switch to STANDBY. Press Power Meter SENSOR ZERO switch and verify that μW lamp remains lit and that ZERO lamp lights and remains lit for approximately four seconds. Adjust ZERO OFF potentiometer A3R47 as required to obtain 00.0 indication with blinking — sign when ZERO lamp is lit, and verify that indication remains at 00.0 ± 00.2 when ZERO lamp goes out.	<p>DESCRIPTION — This step is a course adjustment of the ZERO OFF potentiometer; it provides a proper reference for the spike balance adjustment performed in the next step.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Power Meter remains configured in WATT MODE (refer to Service Sheet 3, Mode Selection). Voltage at DC test point A3TP4 is adjustable to $\pm 0.010\text{V}$.
17	Set Range Calibrator FUNCTION switch to CALIBRATE and RANGE switch to $100\ \mu\text{W}$. Observe indication on Digital Readout and adjust Power Meter CAL ADJ control to obtain $100.0\ \mu\text{W}$ indication. Then press and hold SENSOR ZERO switch and adjust BAL potentiometer A3R65 as required to obtain $60.0 \pm 0.2\ \mu\text{W}$ indication while ZERO lamp is lit.	<p>DESCRIPTION — This step adjusts BAL potentiometer A3R65 to center the sensor zero circuit output voltage range (Service Sheet 8).</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Voltage at DC test point A3TP4 is adjustable to $1.000 \pm 0.002\text{V}$ when SENSOR ZERO switch is not pressed. Voltage at DC test point A3TP4 is adjustable to $0.600 \pm 0.002\text{V}$ with BAL potentiometer A3R65 when SENSOR ZERO switch is pressed.
18	Set Range Calibrator FUNCTION switch to STANDBY, then press and release Power Meter SENSOR ZERO switch. Verify that Digital Readout indication changes back to 00.0 with blinking — sign while ZERO lamp is lit and remains at 00.0 ± 00.2 when ZERO lamp goes out.	<p>DESCRIPTION — This step rezeros the Power Sensor to establish the proper reference conditions for the next step.</p>
19	Set Range Calibrator RANGE switch to $3\ \mu\text{W}$ and FUNCTION switch to CALIBRATE. Verify that an UNDER RANGE indication is observed, then release Power Meter RANGE HOLD switch and verify that Power Meter auto-ranges to range 1 according to the following sequence: <ol style="list-style-type: none"> μW lamp remains lit. Digital Readout blanks momentarily and UNDER RANGE lamp lights momentarily; decimal point moves one position to left while Digital Readout is blanked. Digital Readout indication changes from blanked to $3.16 \pm 1.0\ \text{mW}$. 	<p>DESCRIPTION — This step verifies the capability of the Power Meter to auto-range from range 2 to range 1 and to properly display a range 1 30% input power level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> A-D Converter input voltage at DC test point A3TP4 is $0.032 \pm 0.01\text{V}$ when RANGE HOLD switch is set to on (in). Range counter is counted down to range 1 during Under Range Subroutine when RANGE HOLD switch is set to off. Program branches from Local Initialize Subroutine (address 054) to Auto Zero Subroutine. A-D Converter input voltage at DC test point A3TP4 rises to $0.316 \pm 0.01\text{V}$ within ten seconds after range counter is counted down to range 1.

Table 8-3. Standard Instrument Checkout (9 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
20	<p>Set Range Calibrator FUNCTION switch to STANDBY, press Power Meter SENSOR ZERO switch, and adjust ZERO OFF potentiometer A3R47 as required to obtain 0.00 ± 0.02 indication with blinking — sign while ZERO lamp is lit. Verify that UNDER RANGE lamp does not light and that Digital Readout indication remains at 00.0 ± 0.02 when ZERO lamp goes out.</p> <p>NOTE</p> <p><i>Power Meter is now calibrated for WATT MODE operation and zeroed on the most sensitive range.</i></p>	<p>DESCRIPTION — This step provides fine adjustment of the ZERO OFF potentiometer.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> When A-D Converter input voltage at DC test point A3TP4 decreases to less than 0.100V after FUNCTION switch is set to STANDBY, operating program branches from Under Range Subroutine (address 175) to Over/Under Range Continue Subroutine. A-D Converter input voltage at DC test point A3TP4 is adjustable to $\pm 0.002V$.
21	<p>Set Range Calibrator RANGE switch to $30 \mu W$ and FUNCTION switch to CALIBRATE. Verify that Power Meter auto-ranges to range 2 (μW lamp is lit and decimal point is positioned immediately to left of least significant digit) and Digital Readout indicates $31.6 \pm 0.2 \mu W$.</p>	<p>DESCRIPTION — This step verifies that the Power Meter will auto-range from range 1 to range 2 when a range 2 28% input power level is applied.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> A-D Converter input voltage at DC test point A3TP4 rises to greater than 1.200V in less than 10 seconds. Range counter is counted up to range 2 during Over Range Subroutine and program branches to Delay Subroutine (address 143). A-D Converter input voltage at DC test point A3TP4 is stabilized at 0.316V by end of first Auto Zero Subroutine following Over Range Subroutine.
22	<p>Set Range Calibrator RANGE switch to $300 \mu W$ and verify that Power Meter auto-ranges to range 3 (μW lamp goes out and mW lamp lights; decimal point moves two positions to left) and that Digital Readout indicates $0.316 \pm 0.002 mW$.</p>	<p>DESCRIPTION — This step verifies that the Power Meter will auto-range from range 2 to range 3 when a range 3 28% input power level is applied.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> A-D Converter input voltage at DC test point A3TP4 rises to greater than 1.200V within one second after input level is changed. Range counter is counted up to range 3 during Over Range Subroutine and program branches to Auto Zero Subroutine (address 146). A-D Converter input voltage at DC test point A3TP4 is stabilized at 0.316V by end of Auto Zero Subroutine.

Table 8-3. Standard Instrument Checkout (10 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
23	<p>Set Range Calibrator RANGE switch to 3 mW and verify that Power Meter auto-ranges to range 4 (decimal point moves one place to right, mW lamp remains lit).</p>	<p>DESCRIPTION — This step verifies that the Power Meter will auto-range from range 3 to range 4 when a range 4 28% input signal level is applied.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ul style="list-style-type: none"> a. A-D Converter input voltage at DC test point A3TP4 rises to greater than 1.200V within 0.10 second after level is changed. b. Range counter is counted up to range 4 during Over Range Subroutine (program branching and instructions previously verified). c. A-D Converter input voltage at DC test point A3TP4 is stabilized at 0.316V by end of Auto Zero Subroutine.
24	<p>Set Power Meter RANGE HOLD switch to on (in) and Range Calibrator FUNCTION switch to STANDBY. Then set dBm MODE switch to on (in) and verify that indication changes as follows:</p> <ul style="list-style-type: none"> a. UNDER RANGE lamp remains lit. b. mW lamp goes out and dBm lamp lights. c. Digital Readout blanks (0_ . _). 	<p>DESCRIPTION:— This step verifies that the Power Meter can be configured for dBm MODE measurements.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Local Initialize Subroutine Mode Register loaded</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 is $0.000 \pm 0.002V$. Main counter is preset to 0000. Sign is preset positive. UNDER RANGE indicator is lighted. Digital Readout is blanked. Branch to Under Range Subroutine.</p>

Table 8-3. Standard Instrument Checkout (11 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence														
25	<p>Set Range Calibrator RANGE switch to 0 dBm and FUNCTION switch to CALIBRATE. Adjust Power Meter LZR potentiometer (A3R59) as required to obtain 0.00 dBm indication on Digital Readout.</p> <p style="text-align: center;">NOTE</p> <p><i>This step sets the A-D Converter log threshold. When the specified indication is obtained, the Digital Readout should be just on the verge of blanking, i.e., the Digital Readout may randomly alternate between 0.00 dBm and UNDER RANGE blanked (0_ . _).</i></p>	<p>DESCRIPTION — This step sets the A-D Converter Log Conversion threshold.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine</p> <p>A-D Converter input voltage at DC test point A3TP4 is 0.100 ± 0.002 Vdc.</p> <p>Ramp amplitude at RMP test point A3TP2 is 0.71 ± 0.144 Vp-p.</p> <p>LZR potentiometer can be adjusted so that YPLS qualifier alternates between 0 and 1 at address 066.</p> <p>When YPLS=0, branch to Under Range Subroutine (reference; previously verified).</p> <p>When YPLS=1, branch to Log Conversion Subroutine.</p> <p>Log Conversion Subroutine</p> <p>Detect YPLS=0 at address 135.</p> <p>Branch to Relative dB Subroutine.</p> <p>Relative dB Subroutine</p> <p>Branch to Display and Remote Talk Subroutine.</p>														
26	<p>Set Power Meter CAL FACTOR % switch to 85 and verify that Digital Readout indicates 0.70 ± 0.02 dBm. Then adjust CAL ADJ control as required to obtain the following indications:</p> <p>a. 1.01 dBm.</p> <p>b. 2.02 dBm.</p> <p>After verifying indications, set CAL FACTOR % switch to 100 and readjust CAL ADJ control to obtain 0.00 dBm indication.</p>	<p>DESCRIPTION — This step verifies the exponential slope of the log conversion ramp and the branching between various addresses in the Log Conversion Subroutine.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <table><thead><tr><th>A-D Converter Input Voltage (DC Test Point A3TP4)</th><th>Ramp Amplitude (RMP Test Point A3TP2)</th><th>Addresses Verified, Log Conversion Subroutine</th><th></th></tr></thead><tbody><tr><td>0.117 ± 0.002 (0.70 ± 0.02 dBm)</td><td>0.831 ± 0.014</td><td>135,136</td><td rowspan="3">} detect YPLS=0 and branch to dB Rel Sub- routine</td></tr><tr><td>0.126 ± 0.002 (1.01 dBm)</td><td>0.895 ± 0.014</td><td>137, 150</td></tr><tr><td>0.159 ± 0.002 (2.02 dBm)</td><td>1.129 ± 0.014</td><td>151, 152</td></tr></tbody></table> <p style="text-align: center;">NOTE</p> <p><i>If necessary, adjust LFS potentiometer A3R48 to obtain specified ramp amplitude.</i></p>	A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine		0.117 ± 0.002 (0.70 ± 0.02 dBm)	0.831 ± 0.014	135,136	} detect YPLS=0 and branch to dB Rel Sub- routine	0.126 ± 0.002 (1.01 dBm)	0.895 ± 0.014	137, 150	0.159 ± 0.002 (2.02 dBm)	1.129 ± 0.014	151, 152
A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine														
0.117 ± 0.002 (0.70 ± 0.02 dBm)	0.831 ± 0.014	135,136	} detect YPLS=0 and branch to dB Rel Sub- routine													
0.126 ± 0.002 (1.01 dBm)	0.895 ± 0.014	137, 150														
0.159 ± 0.002 (2.02 dBm)	1.129 ± 0.014	151, 152														

Table 8-3. Standard Instrument Checkout (12 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence															
27	Set Power Meter CAL FACTOR % switch to 100 and Range Calibrator RANGE switch to 5 dBm. Adjust CAL ADJ control to obtain 5.06 dBm indication, then readjust CAL ADJ control to obtain 5.00 dBm indication.	<p>DESCRIPTION — This step verifies the slope of the Log Conversion Ramp for a 46% input power level and the branching between various addresses in the Log Conversion Subroutine.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <table> <tr> <th>A-D Converter Input Voltage (DC Test Point A3TP4)</th><th>Ramp Amplitude (RMP Test Point A3TP2)</th><th>Addresses Verified, Log Conversion Subroutine</th></tr> <tr> <td>0.320 ± 0.003</td><td>2.272 ± 0.014 Vp-p</td><td>153, 154, (detect YPLS = 0 and branch to dB Rel Subroutine)</td></tr> </table> <p>NOTE <i>If necessary, adjust LFS potentiometer A3R48 to obtain specified ramp amplitude.</i></p>	A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine	0.320 ± 0.003	2.272 ± 0.014 Vp-p	153, 154, (detect YPLS = 0 and branch to dB Rel Subroutine)									
A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine															
0.320 ± 0.003	2.272 ± 0.014 Vp-p	153, 154, (detect YPLS = 0 and branch to dB Rel Subroutine)															
28	Set Range Calibrator RANGE switch to 10 dBm and adjust CAL ADJ control to obtain the following indications: a. 10.02 dBm b. 10.03 dBm c. 10.05 dBm d. OVER RANGE blanked Digital Readout (1_. _).	<p>DESCRIPTION— This step verifies the slope of the Log Conversion Ramp for a 91% input power level and the branching between various addresses in the Log Conversion Subroutine.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <table> <tr> <th>A-D Converter Input Voltage (DC Test Point A3TP4)</th><th>Ramp Amplitude (RMP Test Point A3TP2)</th><th>Addresses Verified, Log Conversion Subroutine</th></tr> <tr> <td>1.005 ± 0.002 (10.02 dBm)</td><td>7.136 ± 0.014 Vp-p</td><td>155, 156</td></tr> <tr> <td>1.007 ± 0.002 (10.03 dBm)</td><td>7.150 ± 0.014 Vp-p</td><td>157, 160</td></tr> <tr> <td>1.012 ± 0.002 (10.05 dBm)</td><td>7.185 ± 0.014 Vp-p</td><td>161, 162</td></tr> <tr> <td>>1.260V (OVER RANGE)</td><td>>8.946 Vp-p</td><td>162, 163, 164, 165</td></tr> </table> <p>NOTE <i>If necessary, adjust LFS potentiometer A3R48 to obtain specified ramp amplitude.</i></p>	A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine	1.005 ± 0.002 (10.02 dBm)	7.136 ± 0.014 Vp-p	155, 156	1.007 ± 0.002 (10.03 dBm)	7.150 ± 0.014 Vp-p	157, 160	1.012 ± 0.002 (10.05 dBm)	7.185 ± 0.014 Vp-p	161, 162	>1.260V (OVER RANGE)	>8.946 Vp-p	162, 163, 164, 165
A-D Converter Input Voltage (DC Test Point A3TP4)	Ramp Amplitude (RMP Test Point A3TP2)	Addresses Verified, Log Conversion Subroutine															
1.005 ± 0.002 (10.02 dBm)	7.136 ± 0.014 Vp-p	155, 156															
1.007 ± 0.002 (10.03 dBm)	7.150 ± 0.014 Vp-p	157, 160															
1.012 ± 0.002 (10.05 dBm)	7.185 ± 0.014 Vp-p	161, 162															
>1.260V (OVER RANGE)	>8.946 Vp-p	162, 163, 164, 165															

Table 8-3. Standard Instrument Checkout (13 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
29	<p>Readjust CAL ADJ control to obtain 10.00 dBm indication on Digital Readout. Then set WATT MODE switch to on and adjust CAL ADJ control as required to obtain 10.00 mW indication. After obtaining this indication, set dBm MODE switch to on and adjust LFS potentiometer A3R48 to obtain 10.00 dBm indication.</p> <p style="text-align: center;">NOTE</p> <p><i>Power Meter is now fully calibrated for both linear and log measurements.</i></p>	<p>DESCRIPTION — This step adjusts the slope of the Log Conversion Ramp.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for A-D Converter; refer to Service Sheet 8.</p>
30	<p>Set Range Calibrator RANGE switch to -15 dBm. Verify that UNDER RANGE indication is observed, set RANGE HOLD switch to off (out), and verify that Digital Readout indicates -15.00 ± 0.50 dBm. Then set Range Calibrator FUNCTION switch to STANDBY, press Power Meter SENSOR ZERO switch, return Range Calibrator FUNCTION switch to CALIBRATE when ZERO lamp goes out, and verify that Digital Readout indication is -15.00 ± 0.02 dBm.</p>	<p>DESCRIPTION — This step verifies that the main counter is preset properly and that it can be counted down normally for the negative dBm ranges.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for main counter preset and down counting; refer to Service Sheet 9.</p>
31	<p>Set Range Calibrator RANGE switch to -10.00 dBm and adjust Power Meter CAL ADJ control to obtain the following indications:</p> <ol style="list-style-type: none"> 9.99 dBm 9.97 dBm OVER RANGE blanked ($-0 _ . _$) <p>After verifying indications, readjust CAL ADJ control to obtain -10.00 dBm indication.</p>	<p>DESCRIPTION — This step verifies branching between various addresses in the Log Conversion Subroutine.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for branching between Log Conversion Subroutine addresses listed below:</p> <ol style="list-style-type: none"> 9.99 dBm indication verifies the following address branches: 163, 165, dB Rel Subroutine. 9.97 dBm indication verifies the following address branches: 164, 166, 167, branch to dB Rel Subroutine from address 166. OVER RANGE indication verifies the branch from address 167 to the Over Range subroutine.

Table 8-3. Standard Instrument Checkout (14 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
32	<p>Set Range Calibrator RANGE switch to -5 dBm, then press Power Meter dB [REF] MODE switch and hold for two seconds. Verify that dBm lamp goes out, dB (REL) lamp lights, and indication on Digital Readout changes to -0.00.</p>	<p>DESCRIPTION — This step verifies the capability of the Power Meter to store a dB reference level and to indicate input power levels with respect to the stored reference.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> Program execution and circuit operation when dB [REF] switch is pressed. <p>Local Initialize Subroutine Mode select inputs loaded into mode register; output of mode register indicates Power Meter configured for dB [REF] MODE.</p> <p>Measurement Subroutine Branch to Log Conversion Subroutine.</p> <p>Log Conversion Subroutine Branch to dB Relative Subroutine (reference; previously verified).</p> <p>dB Relative Subroutine Load sign and contents of main counter into reference register. Load contents of reference register into relative register. Count main and relative counters down until contents of relative counter = 0. Branch to Display and Remote Talk Subroutine.</p> <p>NOTE <i>Program execution and circuit operation when dB [REF] switch released is same as above except contents of main counter are not loaded into reference register.</i></p>
33	<p>Set Power Meter RANGE HOLD switch to off (out) and Range Calibrator RANGE switch, in turn, to -10 and $+5$ dBm. Verify that Digital Readout indication changes to -5.00 ± 0.02 and 10.00 ± 0.02 dBm, respectively. Then set Range Calibrator RANGE switch to -5 dBm and adjust CAL ADJ control as required to obtain 1.00 dBm indication on Digital Readout. After verifying 1.00 dBm indication, readjust CAL ADJ control for 0.00 indication.</p>	<p>DESCRIPTION — This step verifies the up/down counting of the main counter when a negative dB reference value is stored.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>NOTE <i>dB Relative Subroutine address 171 (YM1=1) not verified in previous step.</i></p> <ol style="list-style-type: none"> When RANGE switch is set to -10 dBm, main counter is counted down to obtain specified indication on Digital Readout. When RANGE switch is set to $+5$ dBm, main counter is counted up to obtain specified indication. When RANGE switch is set to -5 dBm and CAL ADJ control is adjusted for 1.00 dBm indication, main counter is first counted down to 0000 then up to 0100 to obtain indication (sign changes when main counter goes through 0).

Table 8-3. Standard Instrument Checkout (15 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
34	Set Range Calibrator RANGE switch to 5 dBm. Press dB [REF] MODE switch, and observe indication on Digital Readout change to 0.00 dBm. Then set Range Calibrator RANGE switch, in turn, to 10 and -5 dBm and verify that Digital Readout indication changes to $+5.00 \pm 0.02$ and -10.00 ± 0.02 dBm, respectively.	<p>DESCRIPTION — This step verifies the up/down counting of the main counter when a positive dBm reference value is stored.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> When RANGE switch is set to 10 dBm, main counter is counted down to obtain specified indication. When RANGE switch is set to -5 dBm, main counter is counted up to obtain specified indication.
35	Set Range Calibrator RANGE switch to 5 dBm and adjust CAL ADJ control to obtain -1.00 dBm indication on Digital Readout.	<p>DESCRIPTION — This step verifies the down/up counting of the main counter when a positive dBm reference value is stored and a slightly less positive input power level is applied.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for down/up counting of main counter (sign changes when main counter goes through 0 000); refer to Service Sheet 9.</p>
36	Set Range Calibrator RANGE switch to 20 dBm, press dB [REF] switch and observe that Digital Readout indication changes 0.00. Then turn CAL ADJ control clockwise to obtain OVER RANGE blanked indication and counterclockwise to clear OVER RANGE indication. Verify that when OVER RANGE indication is cleared, new indication on Digital Readout is with respect to stored reference of 20.00 dBm.	<p>DESCRIPTION — This step verifies that dB Relative Subroutine address branching is proper for a dB (REL) MODE OVER RANGE condition.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for addresses 047 (YM2=0) and 050 (YM1=1) of Over/Under Range Continue Subroutine.</p>
37	Repeat step 35 except press dB [REF] switch when OVER RANGE indication is present. Verify that when OVER RANGE indication is cleared, new indication is greater than 20.00 dBm.	<p>DESCRIPTION — This step verifies that the reference register is cleared when the dB [REF] switch is pressed while an OVER RANGE condition exists.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for address 050 (YM1=0) of Over/Under Range Continue Subroutine.</p>

Table 8-3. Standard Instrument Checkout (16 of 17)

Step	Instrument Setup and Test Procedure	Test Description and Key Operating Sequence
38	<p>Set Range Calibrator RANGE switch to 5 dBm and adjust Power Meter CAL ADJ control to obtain 5.00 indication on Digital Readout. Then set Power Meter MODE WATT switch to on and Range Calibrator POLARITY switch to REVERSE. Verify that Power Meter Digital Readout indicates -3.16 ± 6.3 mW.</p>	<p>DESCRIPTION — Negative Watt readout capability is provided to enable detection of high noise conditions. This step verifies that capability of the Power Meter to detect and indicate a 28% negative power level. (A negative WATT MODE measurement simulates a high noise condition at the input of the Power Sensor.)</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 $= -0.316 \pm 0.002$ V Preset counter and branch to Linear Negative-Conversion Subroutine (reference; previously verified).</p> <p>Linear Negative-Conversion Subroutine Initiate Linear Negative-Conversion Ramp and count main counter up. Detect YPLS=0 at address 131 (633 ± 126 clock pulses from address 077) and branch to Display and Remote Talk Subroutine.</p>
39	<p>Set Power Meter RANGE HOLD switch to on (in) and Range Calibrator RANGE switch to 10 mW. Verify that Digital Readout indicates 10 ± 2 mW, and record indication.</p>	<p>DESCRIPTION — This step verifies the capability of the Power Meter to indicate a 91% (of max) negative power level.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <p>Measurement Subroutine A-D Converter input voltage at DC test point A3TP4 $= 1.000 \pm 0.002$ V.</p> <p>Linear Negative-Conversion Subroutine Detect YPLS=0 and branch to Display and Remote Talk Subroutine at address:</p> <ol style="list-style-type: none"> 131 for minimum specified level (reference; verified in previous step). 133 for 10.00 mW or greater indication (delay $= 2201 \pm 200$ clock pulses from address 077).

Table 8-3. Standard Instrument Checkout (17 of 17)

Step	Instrument Setup and Test Porcedure	Test Description and Key Operating Sequence
40	Set Range Calibrator RANGE switch to 30 mW and verify that OVER RANGE indication is observed.	<p>DESCRIPTION — This step verifies that the Power Meter will detect and display a negative power level OVER RANGE condition.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except as indicated below:</p> <ol style="list-style-type: none"> A-D Converter input voltage at DC test point A3TP4 is greater than -1.200V. Program branches from address 134 of Linear Negative-Conversion Subroutine to Display and Remote Talk Subroutine.
41	Set Range Calibrator RANGE switch back to 10 mW and verify that Digital Readout indication returns to level observed in step 39.	<p>DESCRIPTION — This step verifies the capability of the Power Meter to reset a negative power level OVER RANGE condition when an in-range negative power level is applied.</p> <p>KEY OPERATING SEQUENCE — Program execution and circuit operation previously verified except for LCOR instruction associated with address 131 or 133 (refer to step 39).</p>
42	Rotate Power Meter CAL ADJ control as required to change Digital Readout indication from under 10.00 to over 10.00 or vice versa.	<p>DESCRIPTION — This step verifies the last remaining address branch of the Linear-Negative Conversion Subroutine.</p> <p>KEY OPERATING SEQUENCE — Refer to step 39.</p>
43	Set Range Calibrator POLARITY switch to NORMAL and readjust Power Meter CAL ADJ control to obtain 10.00 mW indication. Then verify Power Meter operation per Performance Tests of Section IV. If any indication is abnormal, adjust Power Meter as specified in Section V. If indication is still abnormal after performing adjustment procedure, refer to Table 8-6 for list of unverified instructions, and to analog circuit troubleshooting information provided on Service Sheets 7 and 8.	

TROUBLESHOOTING

8-64. HP-IB Instrument Checkout

8-65. Test programs for verifying the operation of an HP-IB equipped Power Meter are provided in Figures 8-16 and 8-17. The test program provided in Figure 8-16 is written for use on an HP 9830A Calculator, and the program in Figure 8-17 is written for use on an HP 9820A Calculator. The two programs are functionally identical; their only differences are in the specific programming statements required for each calculator.

The HP-IB Verification Program is also available on disk, for use with the HP 9836A, by ordering part number 00436-10047. A cassette is available for use with the HP 9825A, by ordering HP part number 00436-10007.

8-66. The test programs are designed to check out both the operation of the HP-IB circuitry, and that portion of the Power Meter operating program associated with remote operation. After the program is loaded into the calculator memory, it is executed by pressing the RUN and EXECUTE keys in sequence. If the Power Meter functions properly, the program will pause three times. Each pause will be indicated by a printout directing that the CAL ADJ control be adjusted to obtain a specific front-panel indication. (The first pause also directs that the Power Sensor be connected to the POWER REF OUTPUT.) When the proper indications are obtained for the first two pauses, the program will automatically continue. For the third pause, the operator must press the CONT and EXECUTE keys to restart the program after the CAL ADJ and CAL FACTOR % controls are adjusted to obtain the specified indication. The

test program will then cycle to the end and print out TESTS COMPLETE to indicate that the Power Meter is functioning properly.

8-67. If the Power Meter does not function properly for any of the tests contained in the program, the program will halt and print out an error number. Table 8-4 describes the specific problem associated with each error number, the test background, and rationale for the error, and a logical procedure for isolating the error. (Specific programming statements and references contained in Table 8-4 are applicable to the HP 9830A Diagnostic Program only; if an HP 9820A Calculator is used for the checkout of the Power Meter, it will be necessary to convert the programming statements and references to the 9820A equivalents.) The fault isolation procedure, in turn, is written in general terms and assumes an understanding of HP-IB circuit operation and Power Meter operating program execution. For information covering the Power Meter operating program, refer to Figure 8-16, Table 8-3, and Table 8-4. For information covering HP-IB circuit operation, refer to Service Sheet 4.

NOTE

A read byte subroutine is provided at the end of the diagnostic program to facilitate fault isolation. When this subroutine is used, the calculator display is two words behind the HP-IB ROM output (see Service Sheet 4); i.e., when the ROM is outputting word 2, word 1 is in the calculator's I/O register and word 0 is displayed.


```

10 231 4-01-75 436A HP-IB CHECKS COMBINED RRG
20 REM PROGRAM WILL RUN AFTER ERROR WITH CONT EXECUTE
30 REMOTE LOCAL CHECKS
40 T=E=Z=1
50 FORMAT 3B
60 FORMAT B
70 FORMAT 2B;"Y"
80 FORMAT 3B;F9.0
90 GOSUB 2410
100 CMD "9U"
105 OUTPUT (13,60)1424
107 GOSUB 2340
110 CMD "9M5"
120 WAIT 5000
130 IF (STAT13#0) THEN 150
140 GOTO 160
150 GOSUB 2310
160 CMD "9U"
170 OUTPUT (13,60)7681
180 GOSUB 2340
190 CMD "9U-";"KC"
200 CMD "9U"
210 OUTPUT (13,60)1424
220 GOSUB 2340
230 T=T+1
240 E=2
250 GOSUB 2370
260 IF M=61 THEN 280
270 GOTO 290
280 GOSUB 2310
290 IF T=2 THEN 330
300 E=3
310 CMD "9U"
320 OUTPUT (13,60)7681
330 GOSUB 2340
340 CMD "9U-";"T"
350 T=T+1
360 GOSUB 2370
370 IF T=4 THEN 340
380 IF M#67 THEN 400
390 GOTO 410
400 GOSUB 2310
410 E=T=4
415 REMOTE ZERO CHECKS
420 CMD "9U-";"Z2T"
430 GOSUB 2370
440 IF S#85 THEN 460
450 GOTO 470
460 GOSUB 2310
470 IF E=4.5 THEN 510
480 E=4.5
490 GOTO 420

```

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (1 of 25)

```

510 CMD "?U-","Z1T"
520 T=T+1
530 E=5
540 GOSUB 2370
550 IF T=16 THEN 2310
560 IF ABS(D*10^8)>1.5 THEN 510
570 CMD "?U-","AT"
580 GOSUB 2370
590 E=T=6
600 IF S#84 THEN 620
610 GOTO 630
620 GOSUB 2310
630 WAIT 10000
640 CMD "?U-","AT"
650 E=7
660 GOSUB 2370
680 IF S#80 THEN 2310
690 Z=Z+1
700 E=8
710 IF Z=5 THEN 730
720 GOTO 740
730 GOSUB 2310
740 CMD "?U-","T"
750 GOSUB 2370
760 IF ABS(D<4*10^(-8) THEN 780
770 GOTO 410
780 REM 436A MODE CHECKS
790 M=64
800 M=M+1
810 FOR I=1 TO 6
820 DATA 49,73,-30,50,74,-20,51,75,-10,52,76,0,53,77,10,57,73,-30
830 READ R,R1,D1
840 CMD "?U-"
850 OUTPUT (13,70)R,M
860 GOSUB 2340
870 E=E+1
880 CMD "?M5"
890 ENTER (13,80)S,R2,M1,D
900 IF R1#R2 THEN 980
910 IF M1#M THEN 980
920 IF M#68 THEN 940
930 IF D#D1 THEN 990
940 NEXT I
950 RESTORE
960 IF M=68 THEN 1040
970 GOTO 800
980 IF M#68 THEN 1000
990 PRINT "DATA IS";D"SHOULD BE";D1
1000 PRINT "MODE PRGM";M,"RECEIVED";M1"RANGE PRGM";R,
1005 PRINT "IS";R2"STATUS";S
1010 GOSUB 2310
1020 PRINT "*****"
1030 GOTO 940

```

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (2 of 25)

```

1040 REM DEVICE CLEAR CHECKS
1050 CMD "?U-","5DR"
1060 GOSUB 2410
1070 CMD "?U-","T"
1080 GOSUB 2370
1090 E=33
1100 IF S#80 THEN 1140
1110 IF R#73 THEN 1140
1120 IF M#65 THEN 1140
1130 GOTO 1150
1140 GOSUB 2310
1150 E=34
1160 RESTORE 1190
1170 CMD "?U-","DI"
1180 FOR I=1 TO 7
1190 DATA 4,16,21,22,29,52,84
1200 READ V
1210 OUTPUT (13,56)256,V,512;
1220 GOSUB 2340
1230 NEXT I
1240 CMD "?U-","I"
1250 CMD "?M5"
1260 ENTER (13,80)S,R,n,D
1270 IF M#68 THEN 1290
1280 GOTO 1300
1290 GOSUB 2310
1300 GOSUB 2410
1310 E=35
1320 WAIT 200
1330 CMD "?U-","D3I"
1340 GOSUB 2370
1350 IF S#83 THEN 1390
1360 IF R#75 THEN 1390
1370 IF M#68 THEN 1390
1380 GOTO 1400
1390 GOSUB 2310
1400 REM ADDRESS CHECKS
1410 E=36
1420 CMD "?U-","AI"
1430 GOSUB 2370
1440 CMD "?U-","DI"
1450 CMD "?U-","I"
1460 GOSUB 2370
1470 IF M#65 THEN 1490
1480 GOTO 1500
1490 GOSUB 2310
1500 REM CHECKS FAST/SLOW
1510 GOSUB 2410
1520 E=37
1530 CMD "?U-","A2I"
1540 GOSUB 2370
1550 CMD "?U-","T"

```

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (3 of 25)

```

1560 CMD "PM5"
1570 WAIT 200
1580 IF (STAT13#2) THEN 1600
1590 GOTO 1610
1600 GOSUB 2310
1610 ENTER (13,80)S,R,M,D
1620 E=38
1630 CMD "?U-","1"
1640 CMD "PM5"
1650 WAIT 200
1660 IF (STAT13#3) THEN 1680
1670 GOTO 1700
1680 GOSUB 2310
1700 REM 436A POWER ON CHECKS WITH 8681 MOUNT 2-10-75
1710 T=1
1720 CMD "?U-","3R+"
1730 PRINT "CONNECT MOUNT TO POWER REF, POWER REF ON"
1740 PRINT "SET CAL ADJ FOR .799MW"
1750 PRINT
1760 E=39
1770 T=T+1
1780 IF T=301 THEN 2310
1790 GOSUB 2370
1800 DISP "DATA=";D*10+6
1810 IF D#0.000799 THEN 1770
1820 PRINT ".799 MW RECEIVED"
1830 PRINT "SET CAL ADJ FOR .866 MW"
1840 PRINT
1850 T=1
1860 E=40
1870 T=T+1
1880 IF T=301 THEN 2310
1890 GOSUB 2370
1900 DISP "DATA=";D*10+6
1910 IF D#0.000866 THEN 1870
1920 PRINT ".866MW RECEIVED"
1930 PRINT
1940 CMD "?"
1950 PRINT "ADJ 436A DISPLAY FOR 1.000 MW +/- .001"
1960 PRINT "THEN SET CAL FACTOR TO 85%"
1970 PRINT "CONT EXECUTE"
1980 PRINT
1990 STOP
2000 CMD "?U-","-"
2010 GOSUB 2410
2020 E=41
2030 CMD "?U-","T"
2040 GOSUB 2370
2050 IF 0.000997<D<0.001003 THEN 2070
2060 GOTO 2080
2070 GOSUB 2310
2080 RESTORE 2050

```

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (4 of 25)


```
2090 DATA 81,53,65,83,53,62,82,50,65
2100 READ S1,R,M
2110 E=E+1
2120 CMD "?U-"
2130 OUTPUT (13,70)R,M
2140 GOSUB 2340
2150 GOSUB 2370
2160 IF S#S1 THEN 2180
2170 GOTO 2190
2180 GOSUB 2310
2190 IF E#44 THEN 2100
2200 CMD "?U-";"A3-T"
2210 E=45
2220 GOSUB 2370
2230 IF 0.001168<D<0.001184 THEN 2250
2240 GOTO 2260
2250 GOSUB 2310
2260 CMD "?U"
2270 OUTPUT (13,60)1024;
2280 OUTPUT (13,60)768;
2290 PRINT "TESTS COMPLETE"
2300 STOP
2310 PRINT "ERROR #1E"
2320 STOP
2330 RETURN
2340 REM ADDS PRINT FOR TRACE
2350 DISP "RUNNING"
2360 RETURN
2370 REM ENTER DATA
2380 CMD "?M5"
2390 ENTER (13,80)S,R,M,D
2400 RETURN
2410 REM DEV CLR
2420 CMD "?U"
2430 OUTPUT (13,50)256,20,512;
2440 GOSUB 2340
2450 RETURN
2460 END
5000 CMD "?U-";"R"
5010 CMD "?M5"
5020 A=REYTE13
5030 PRINT A
5040 GOTO 5020
5050 END
```

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (5 of 25)

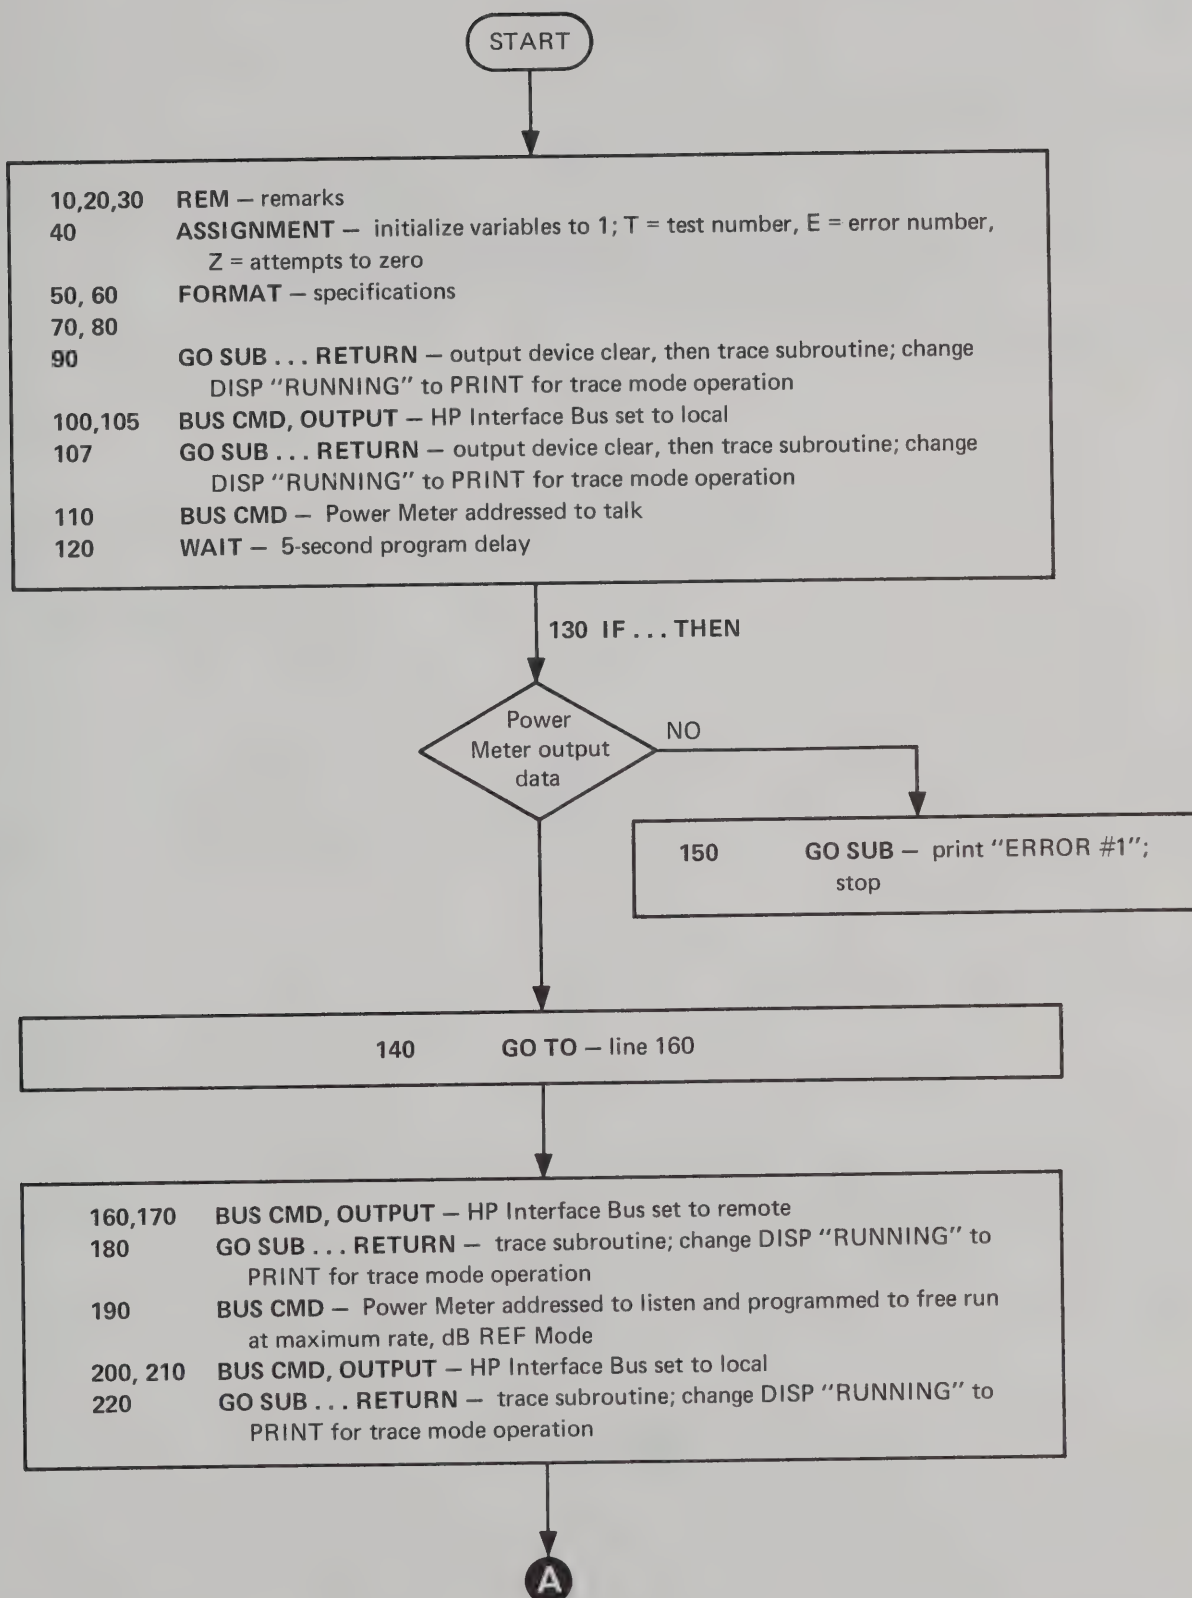


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (6 of 25)

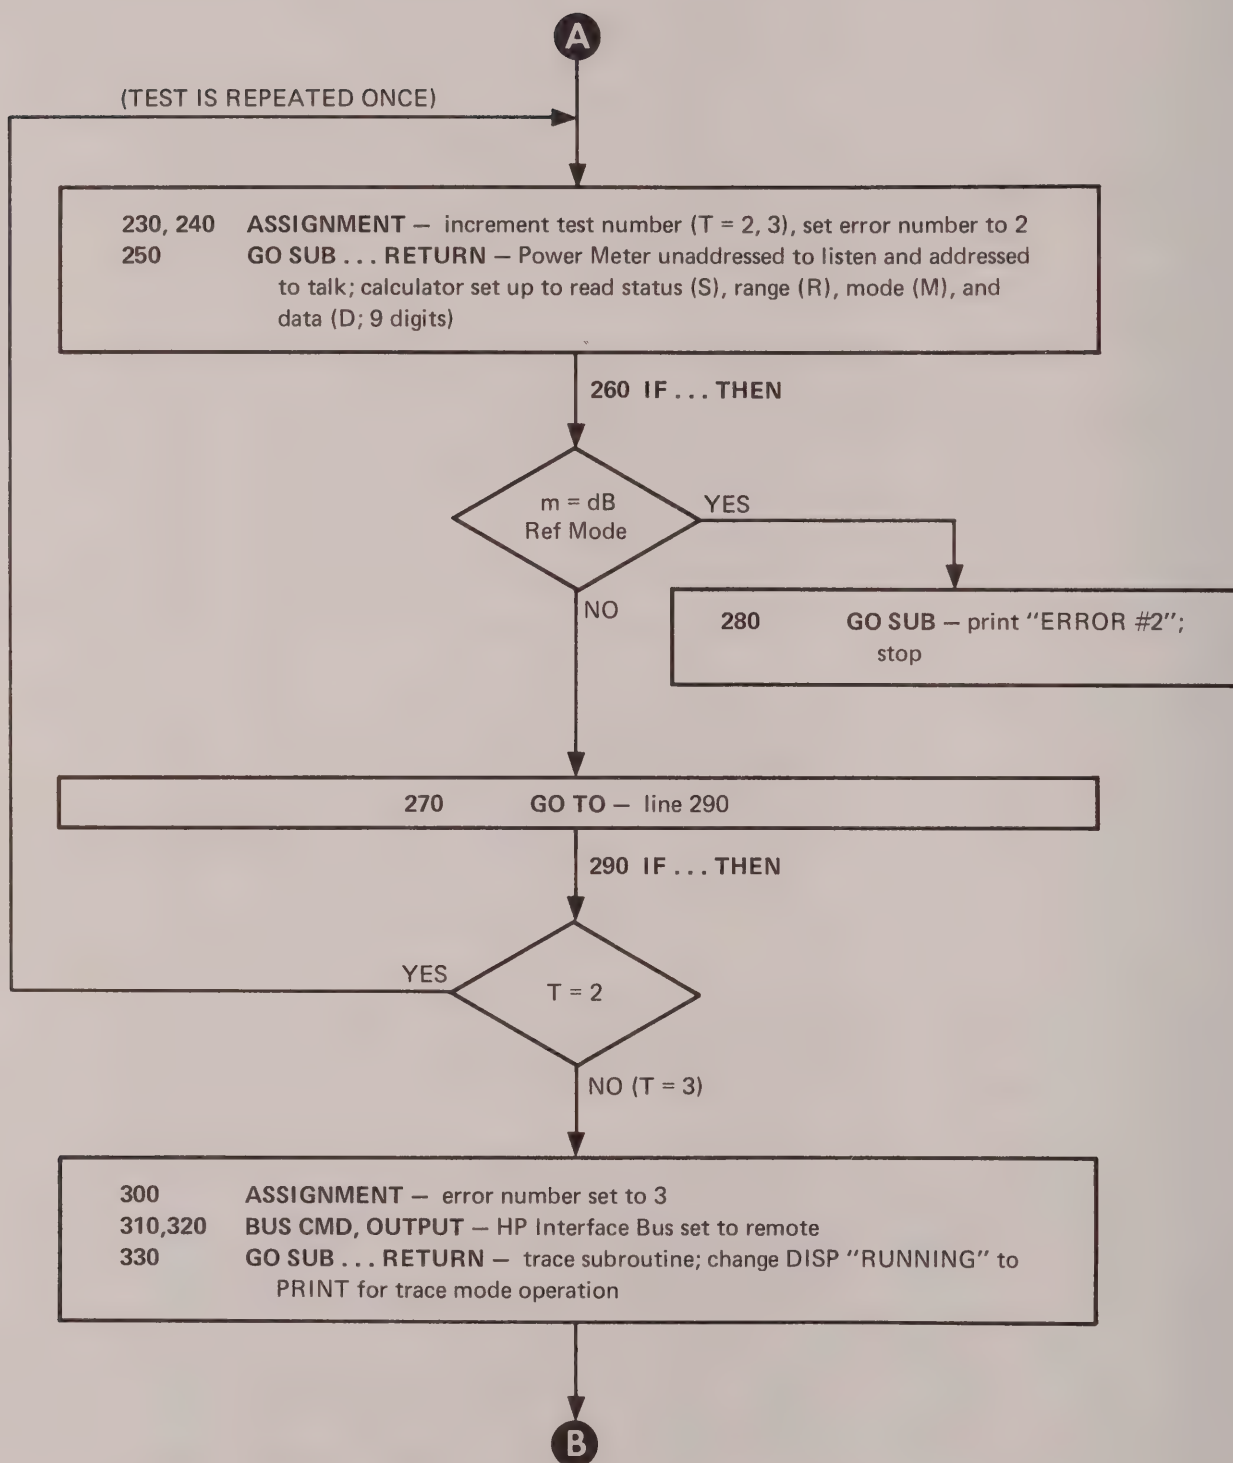


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (7 of 25)

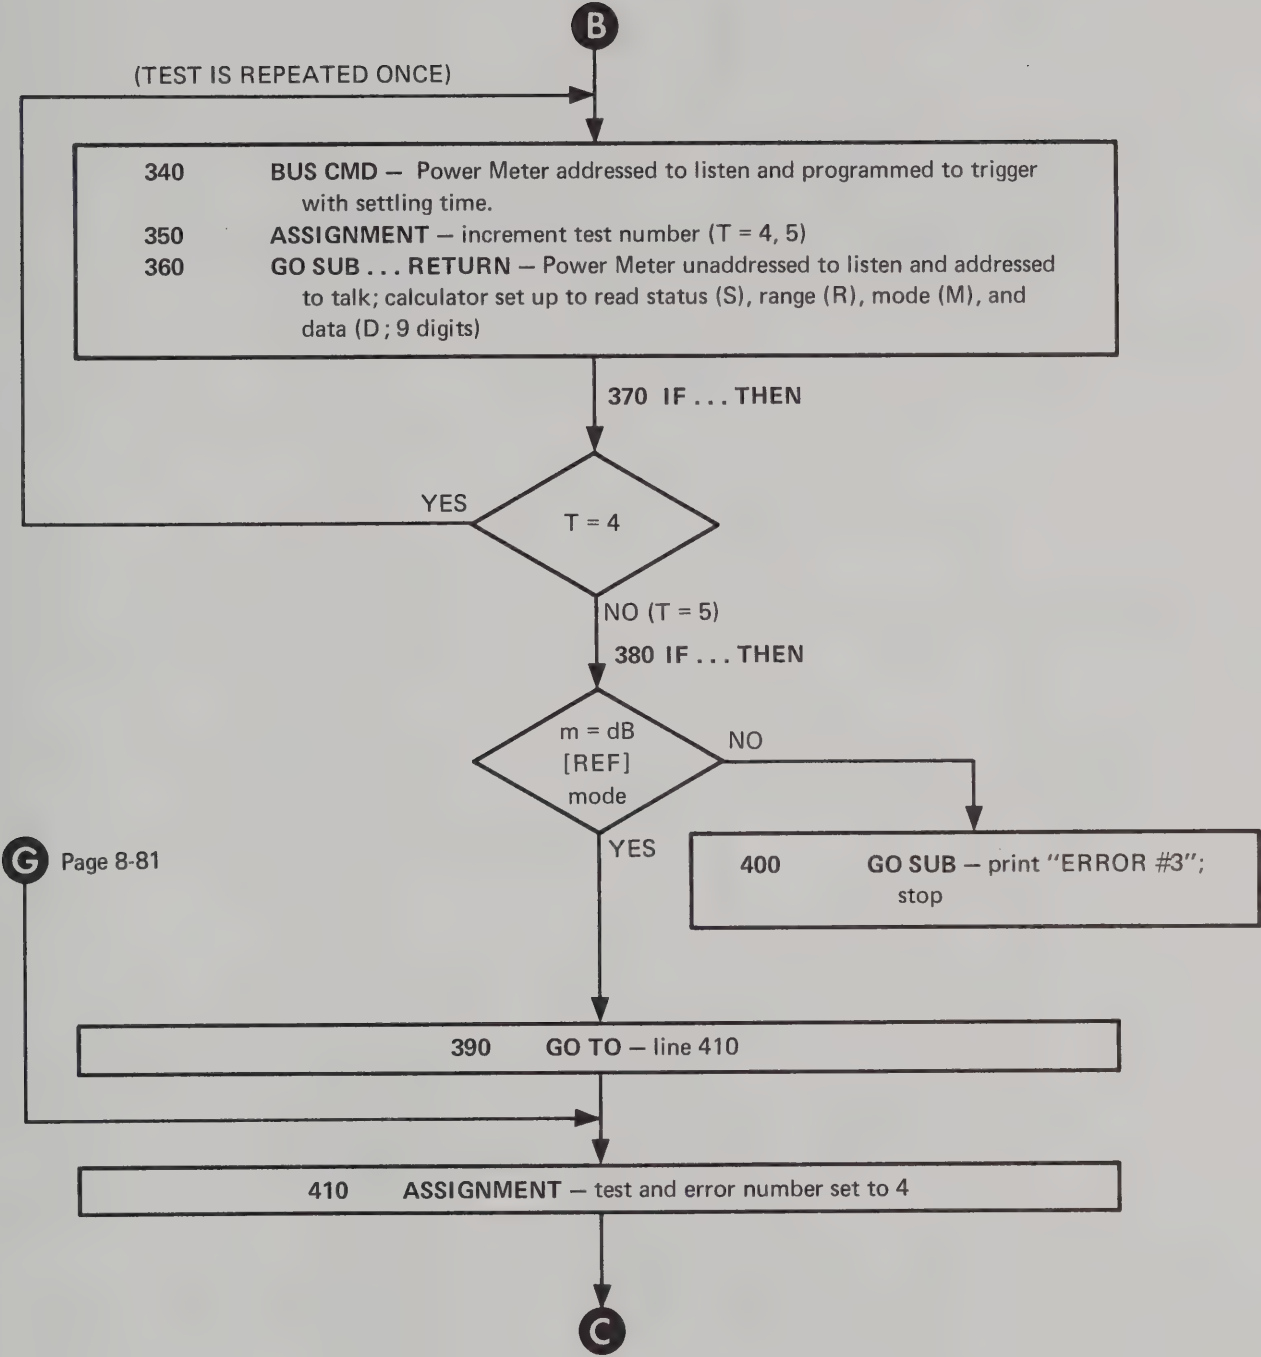


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (8 of 25)

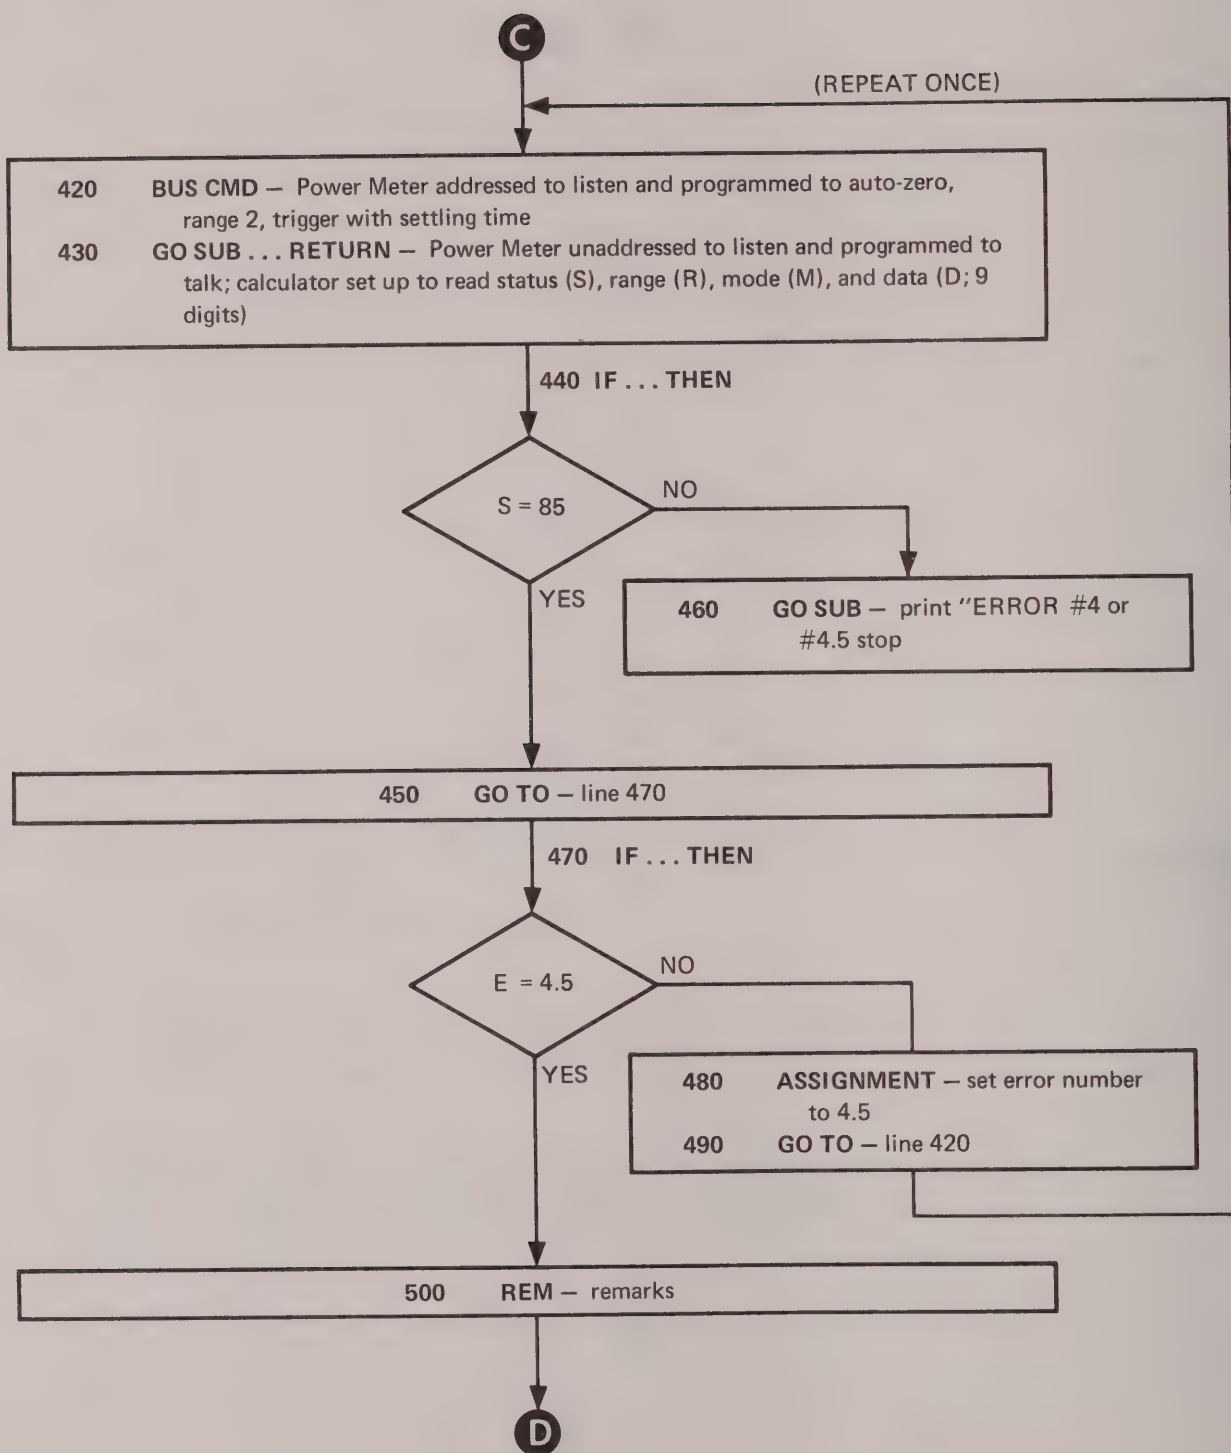


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator)(9 of 25)

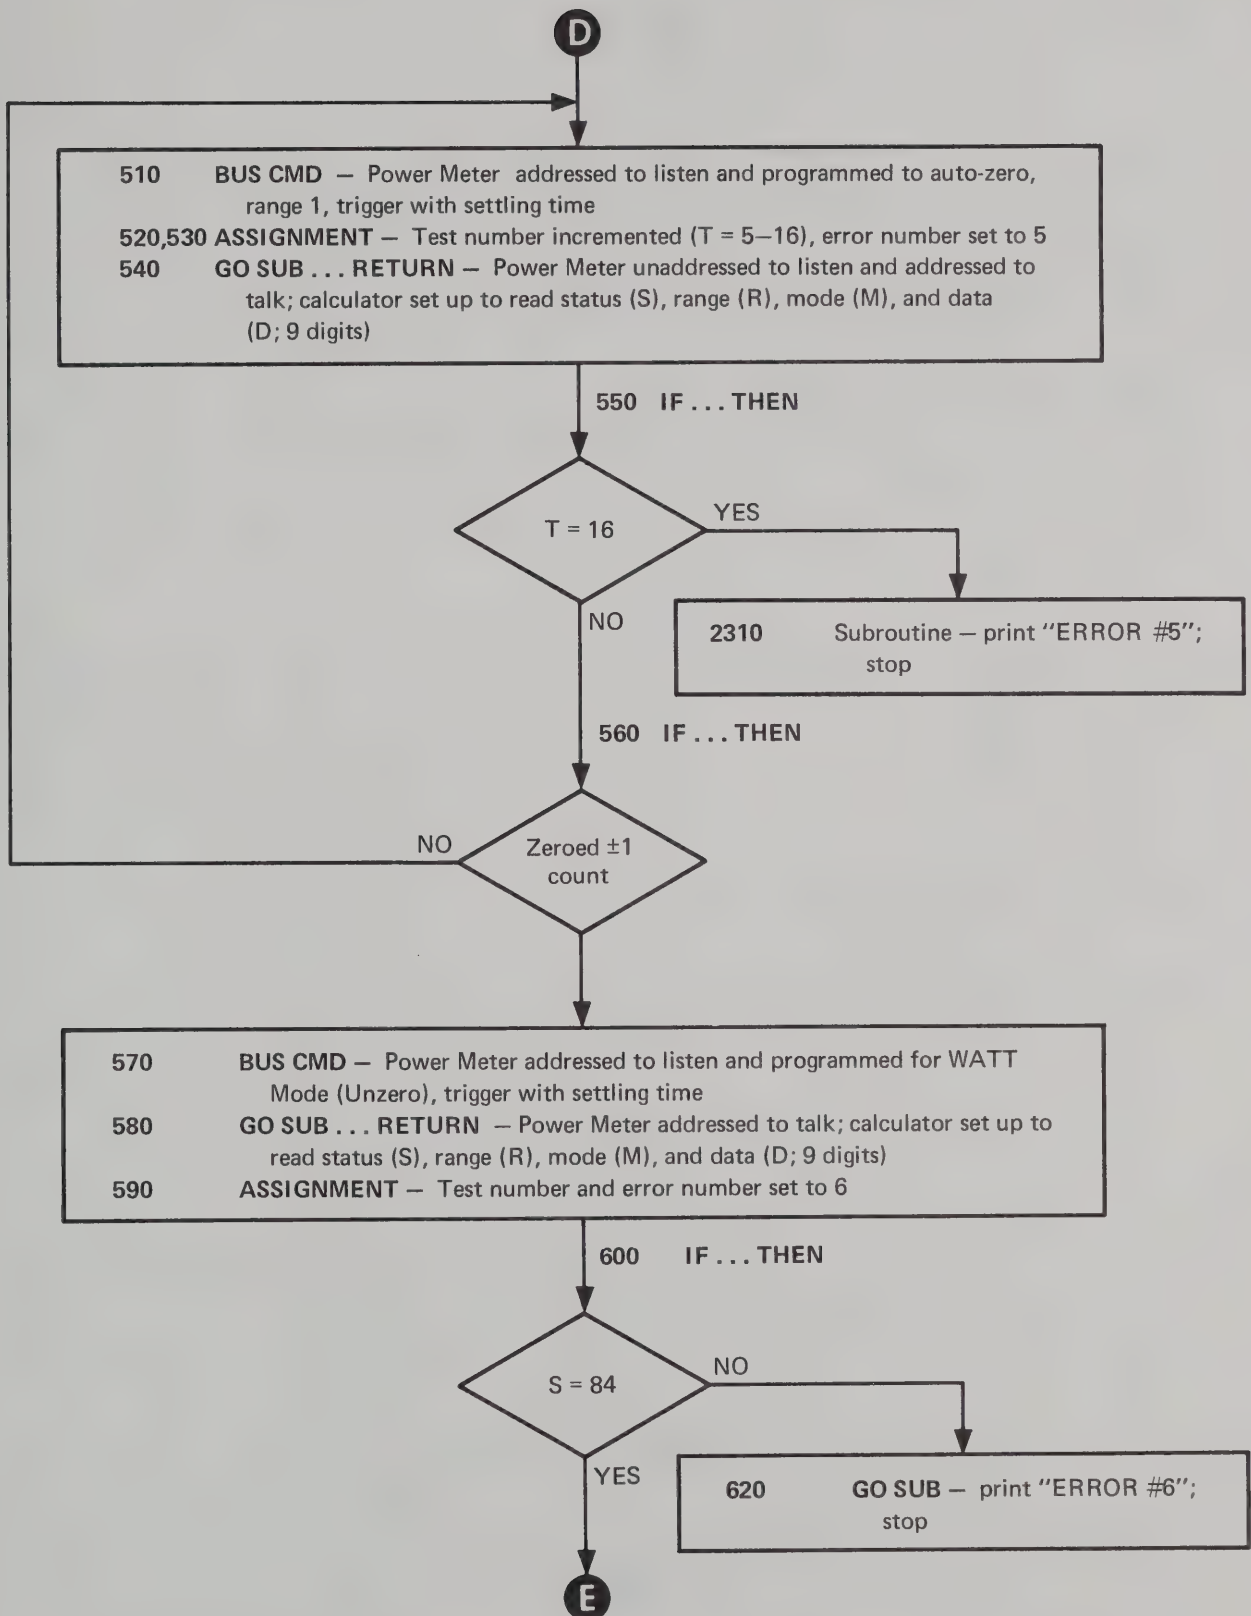


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (10 of 25)

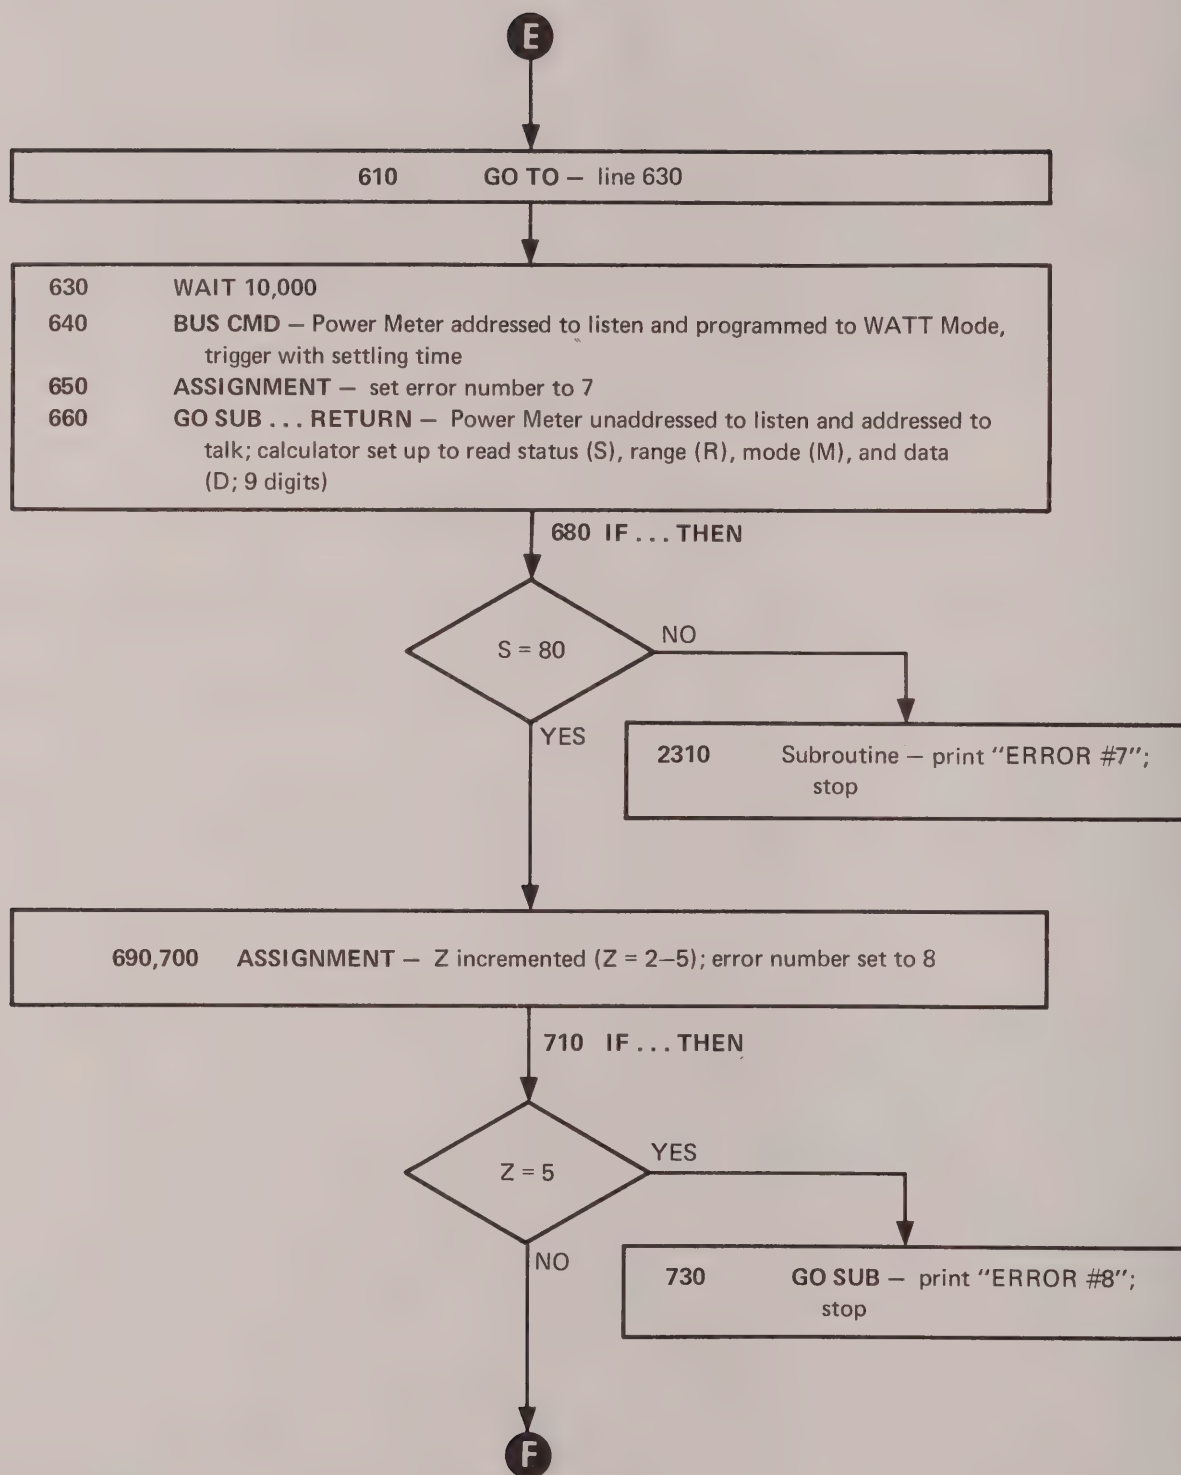
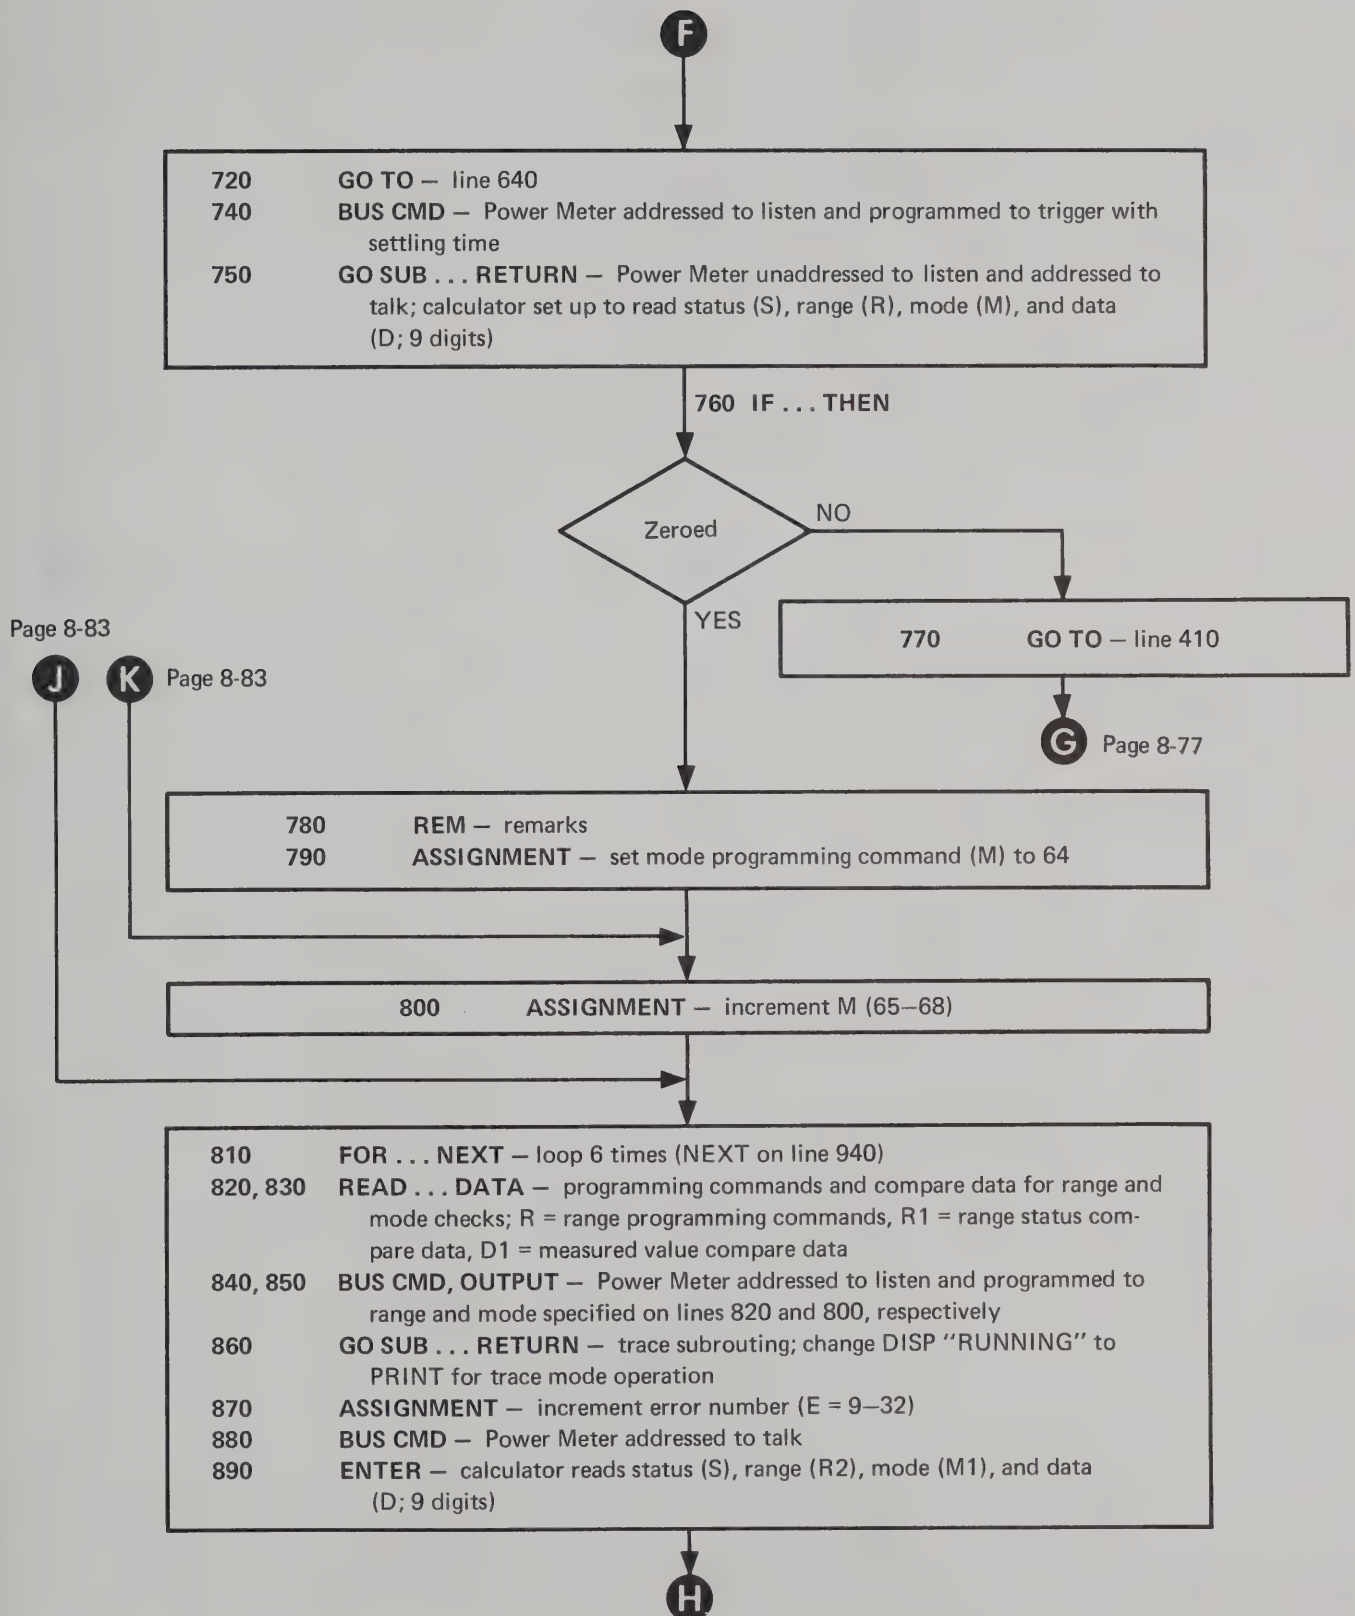


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator)(11 of 25)



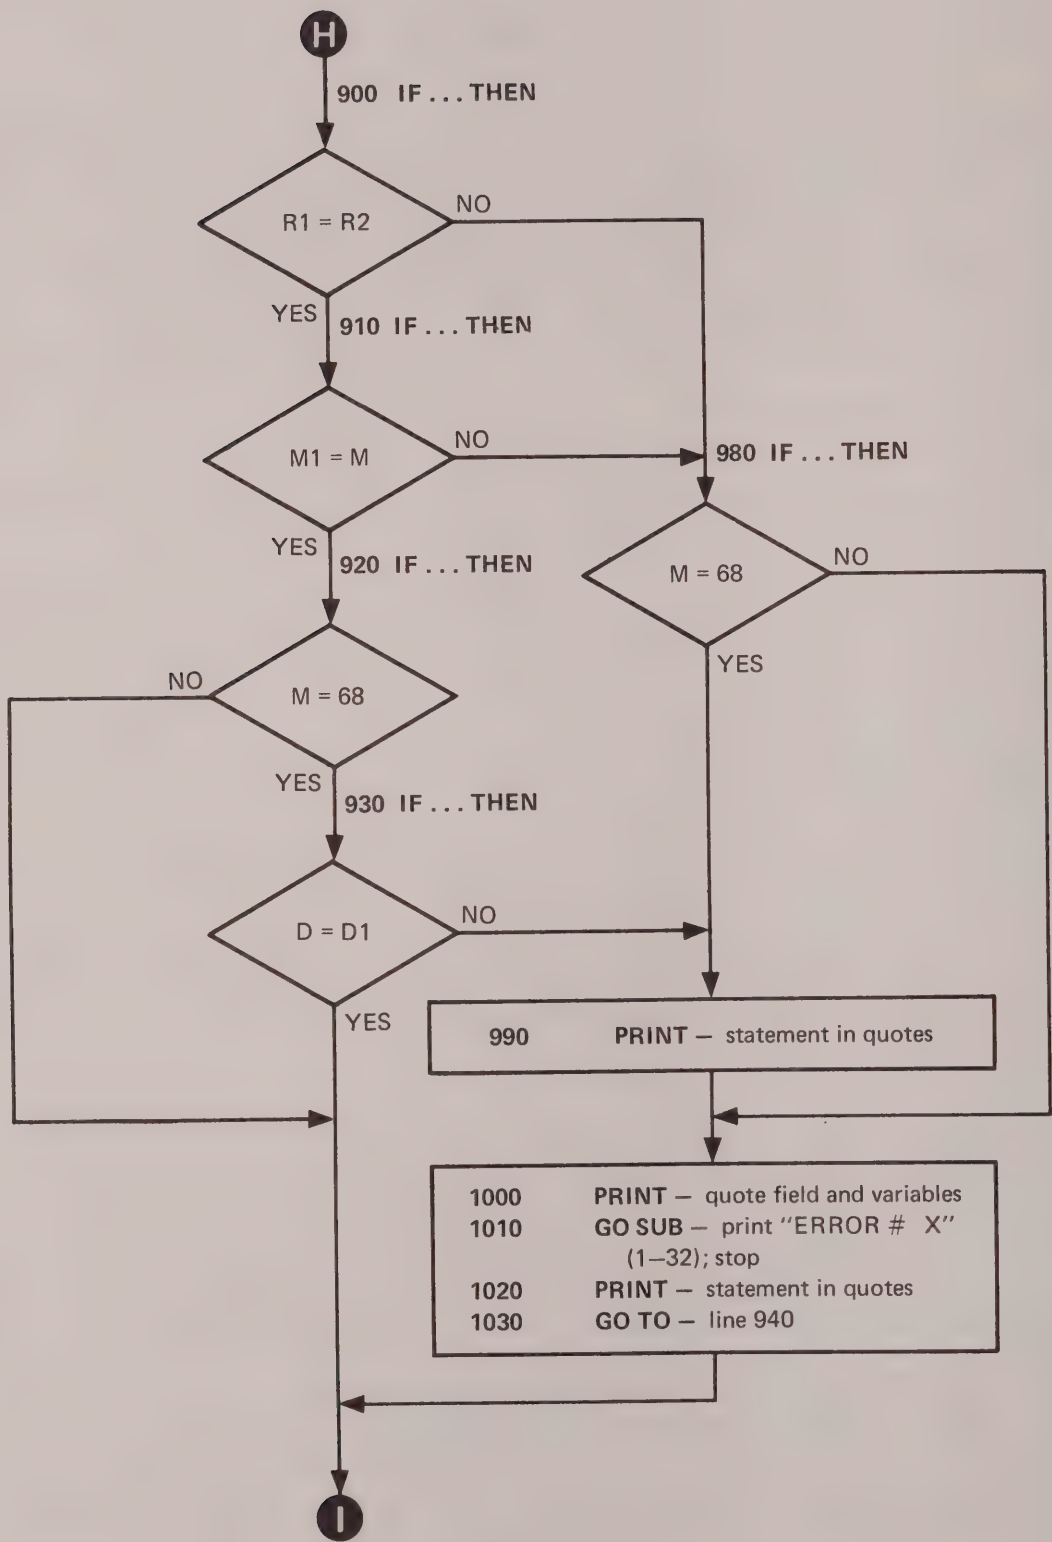


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (13 of 25)

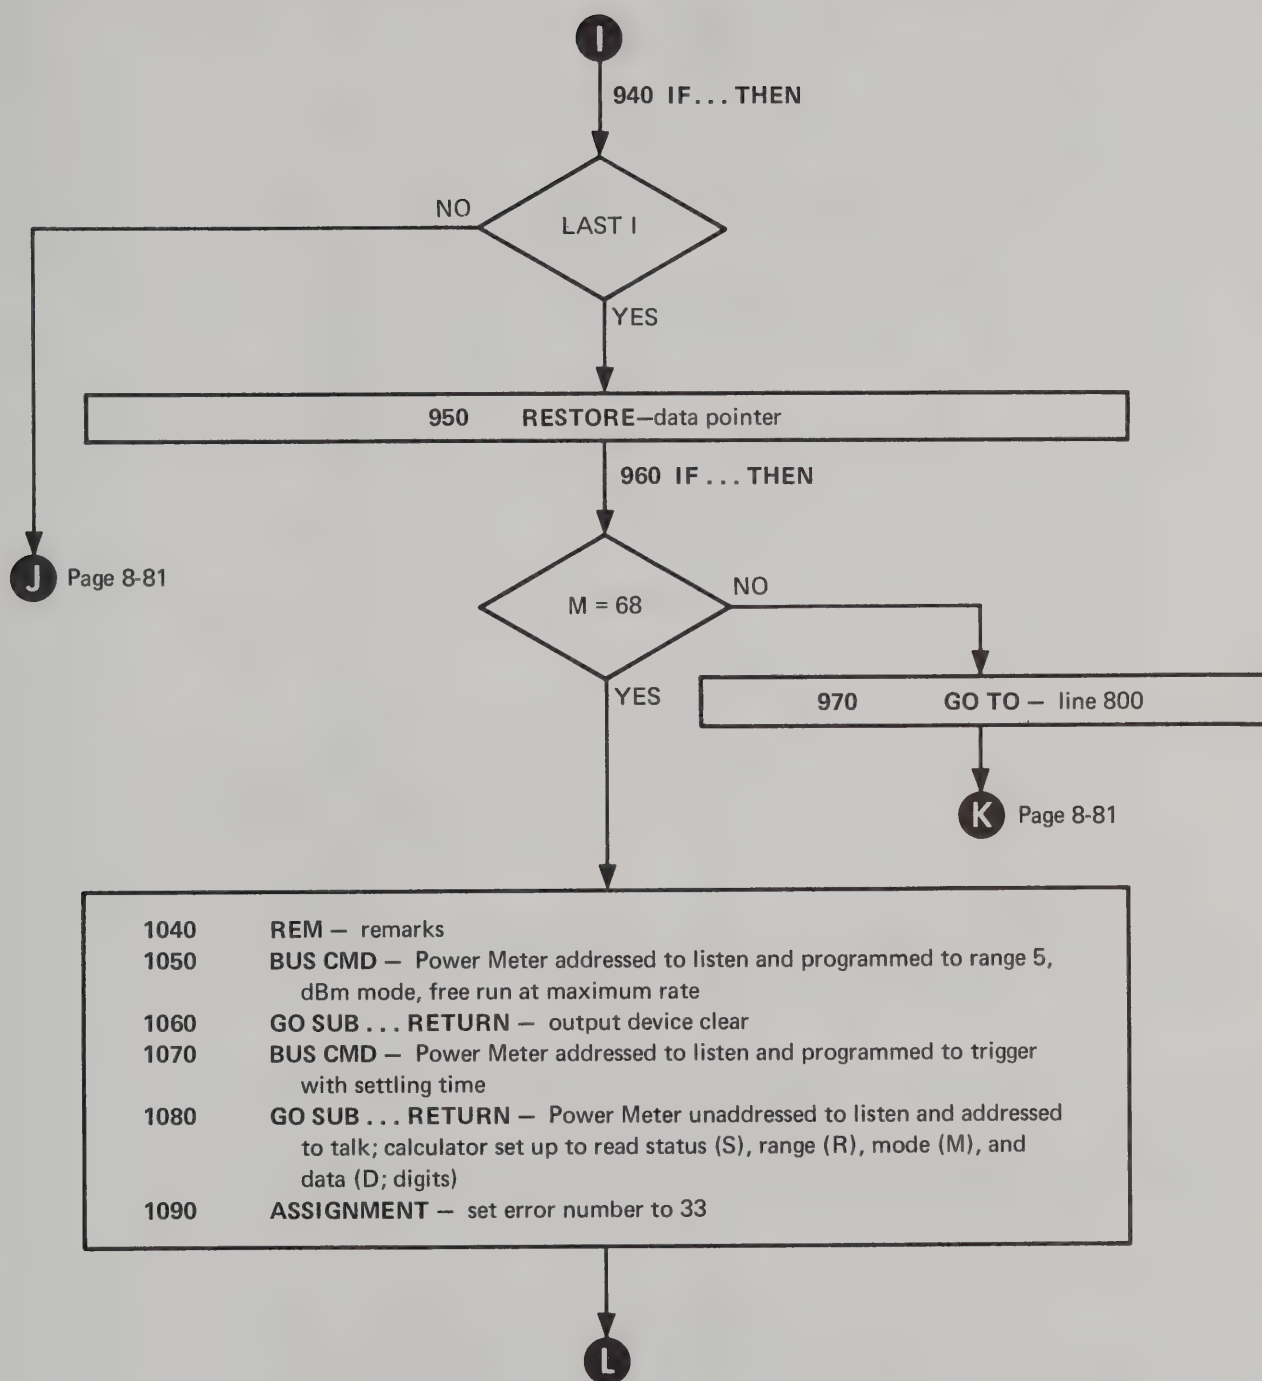


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (14 of 25)

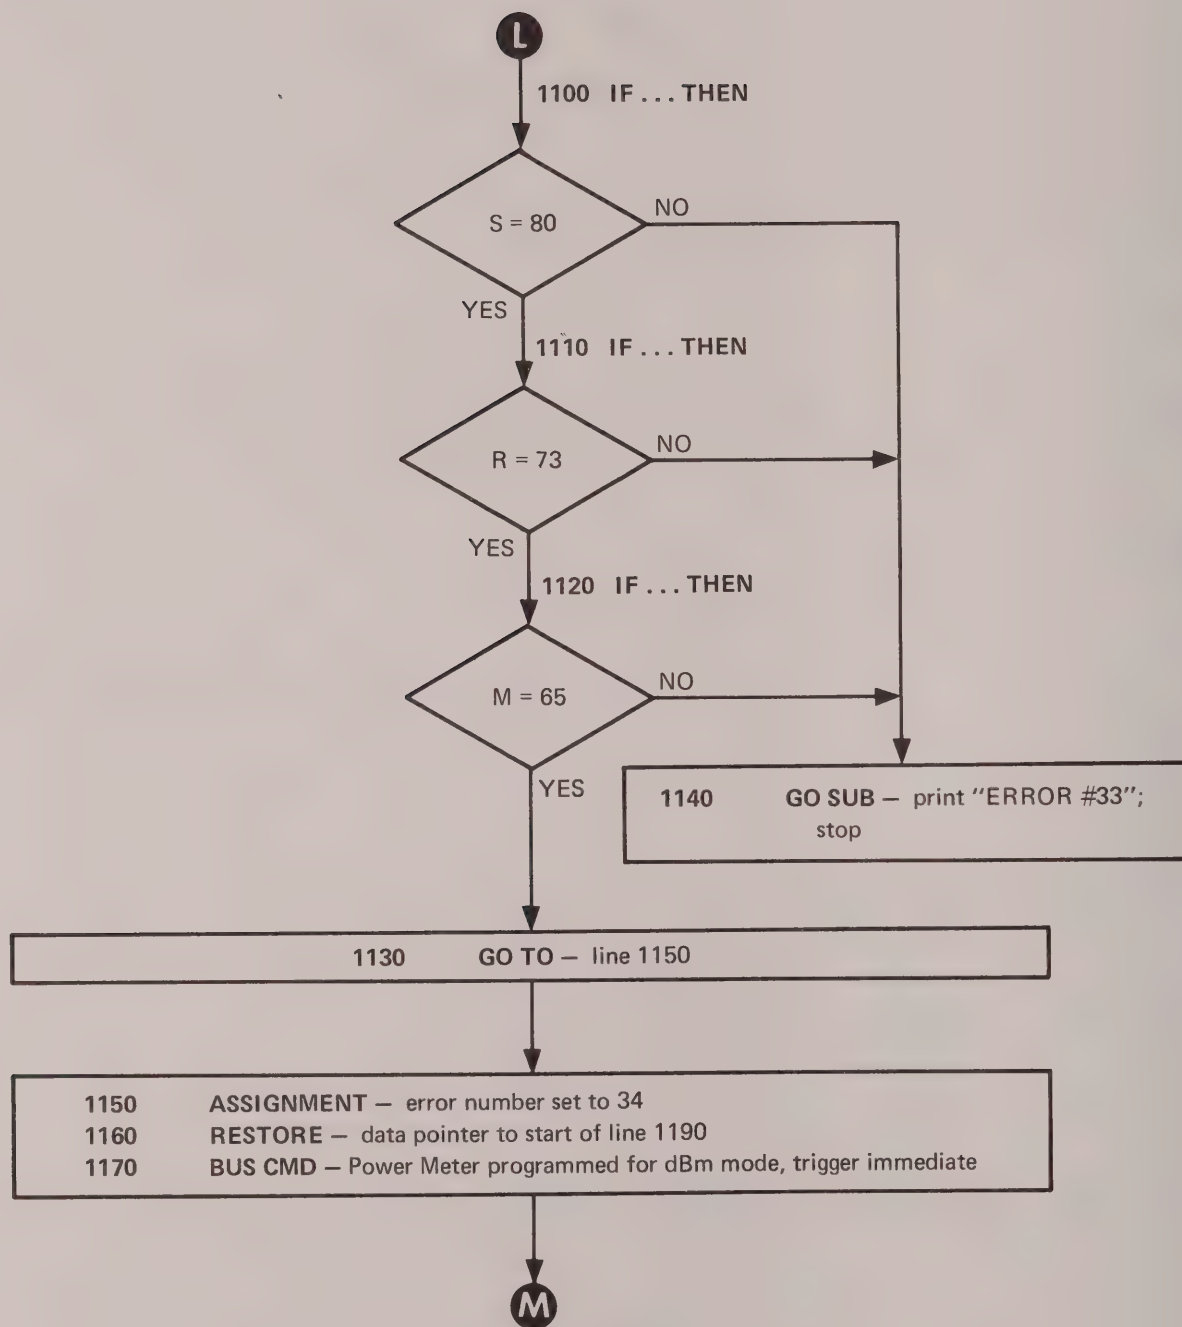


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (15 of 25)

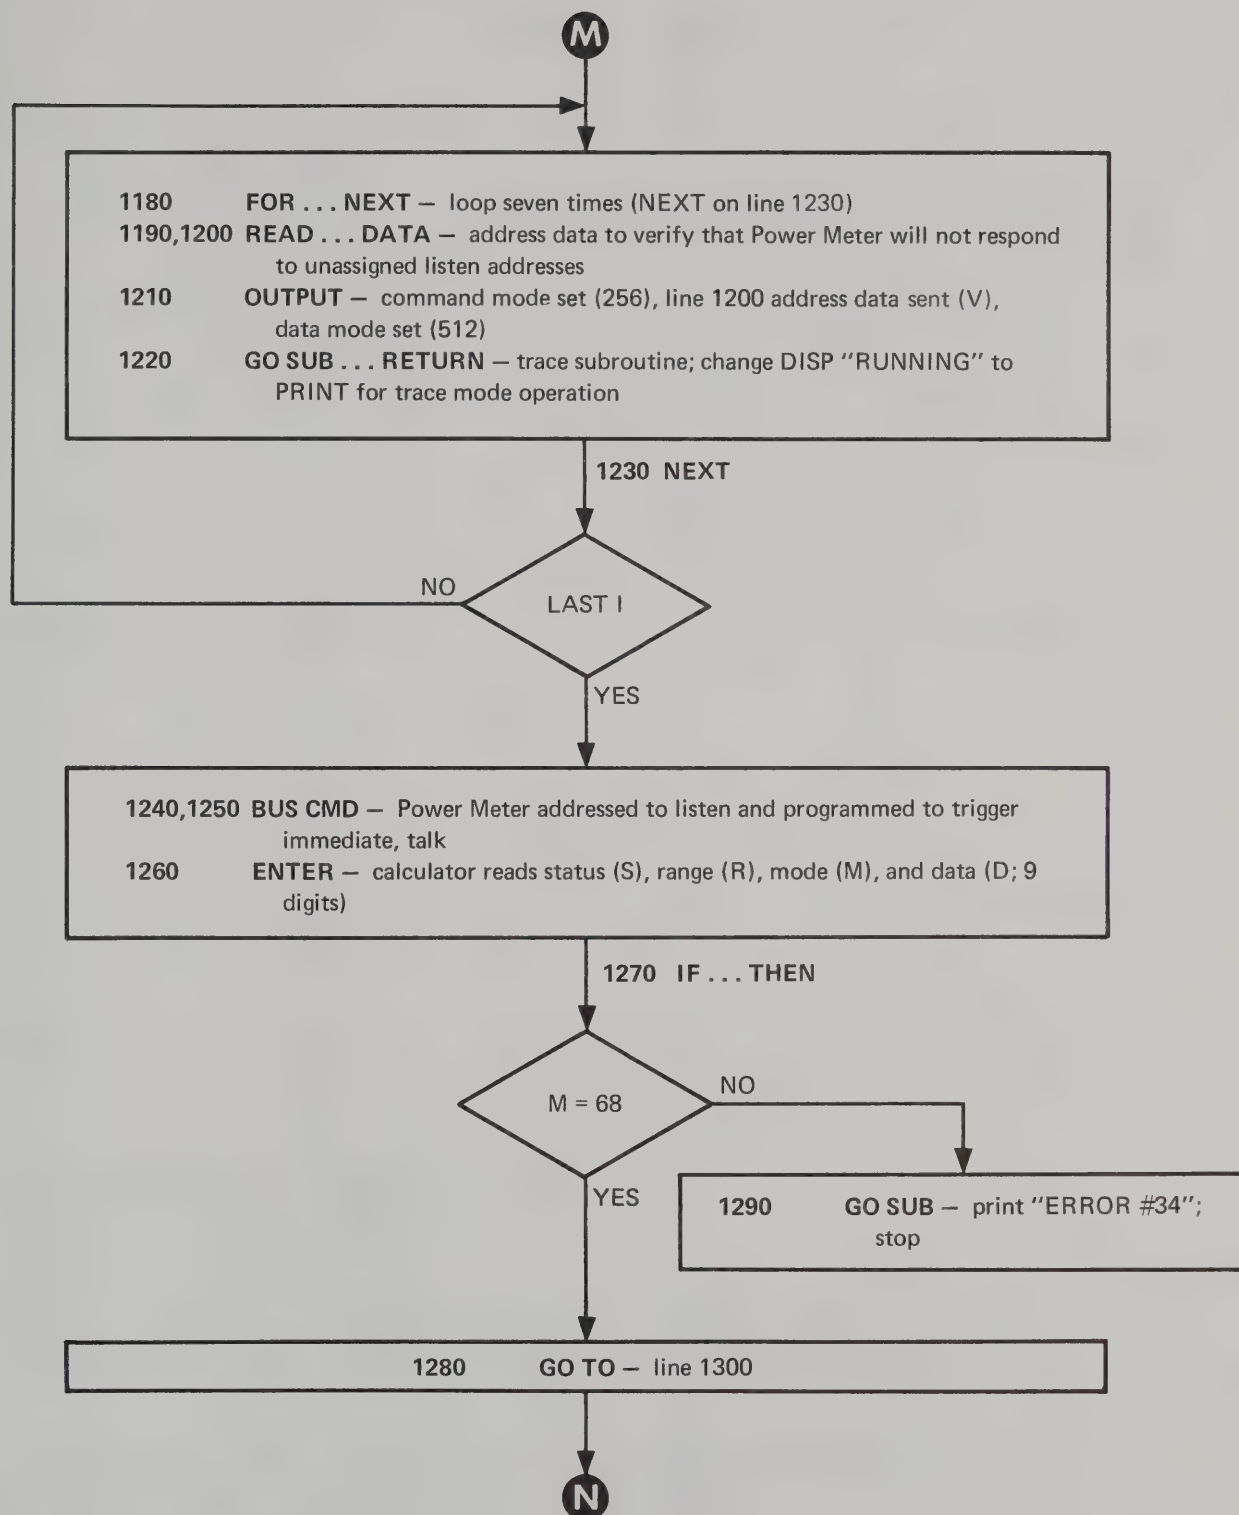


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (16 of 25)

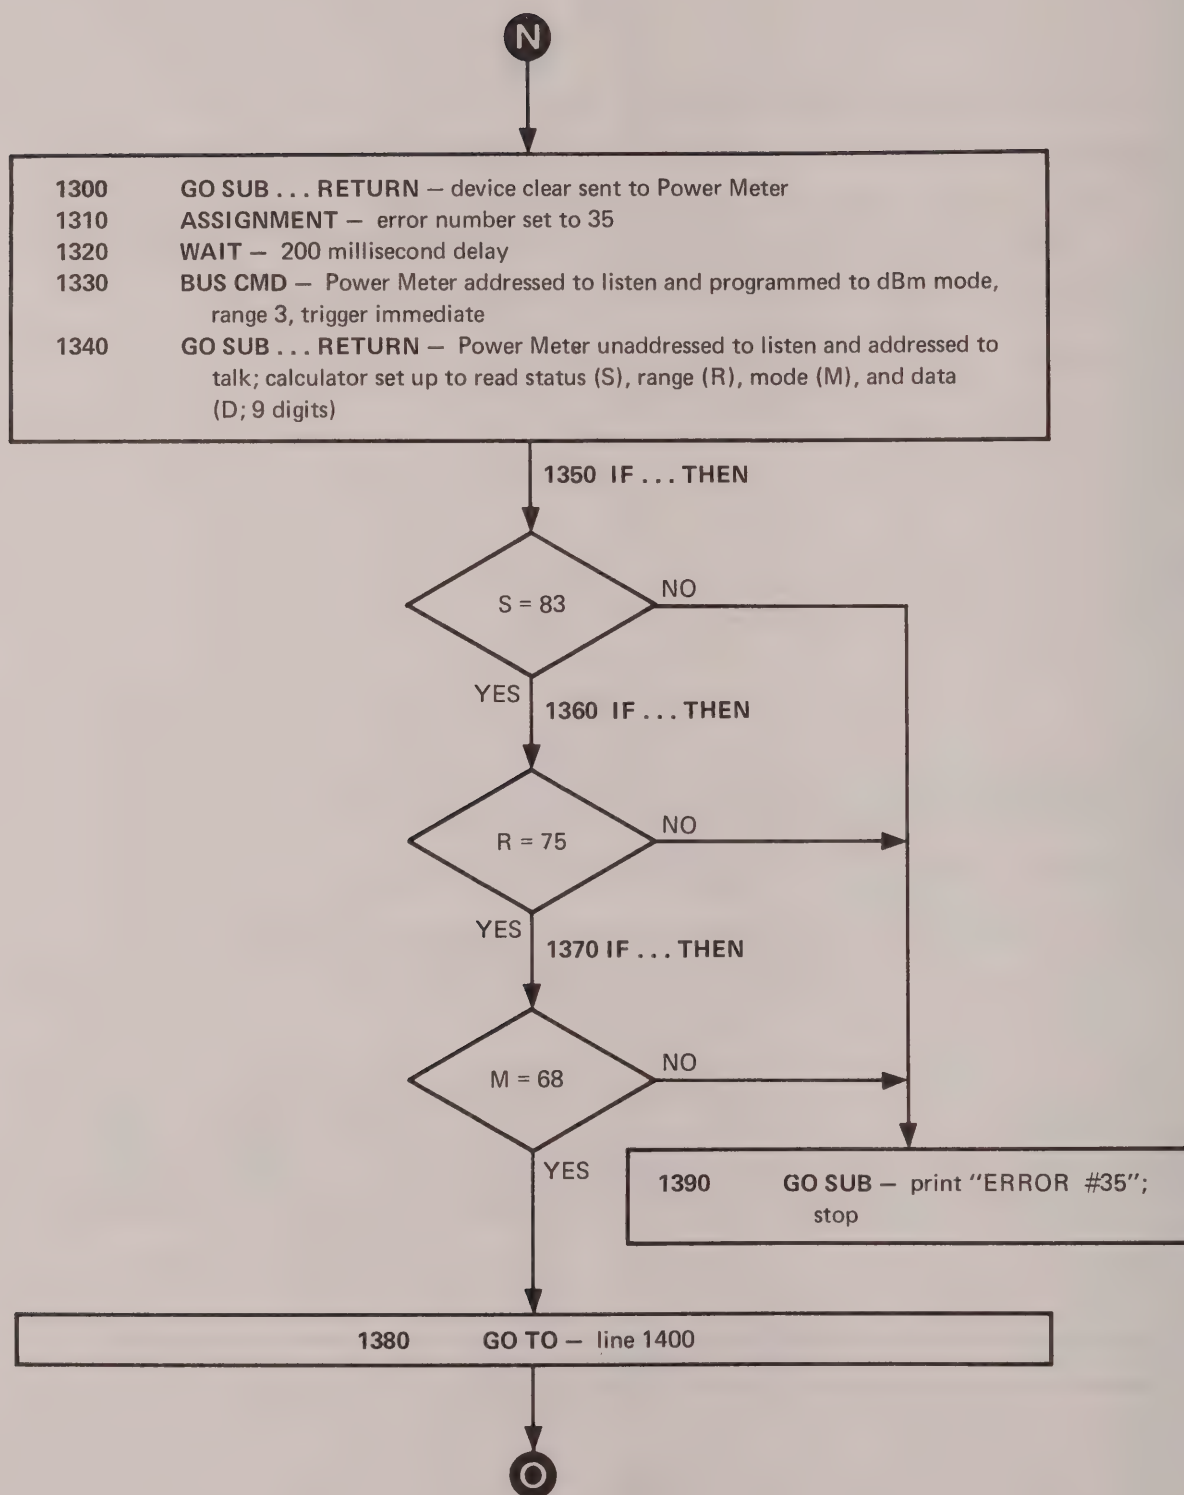


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (17 of 25)

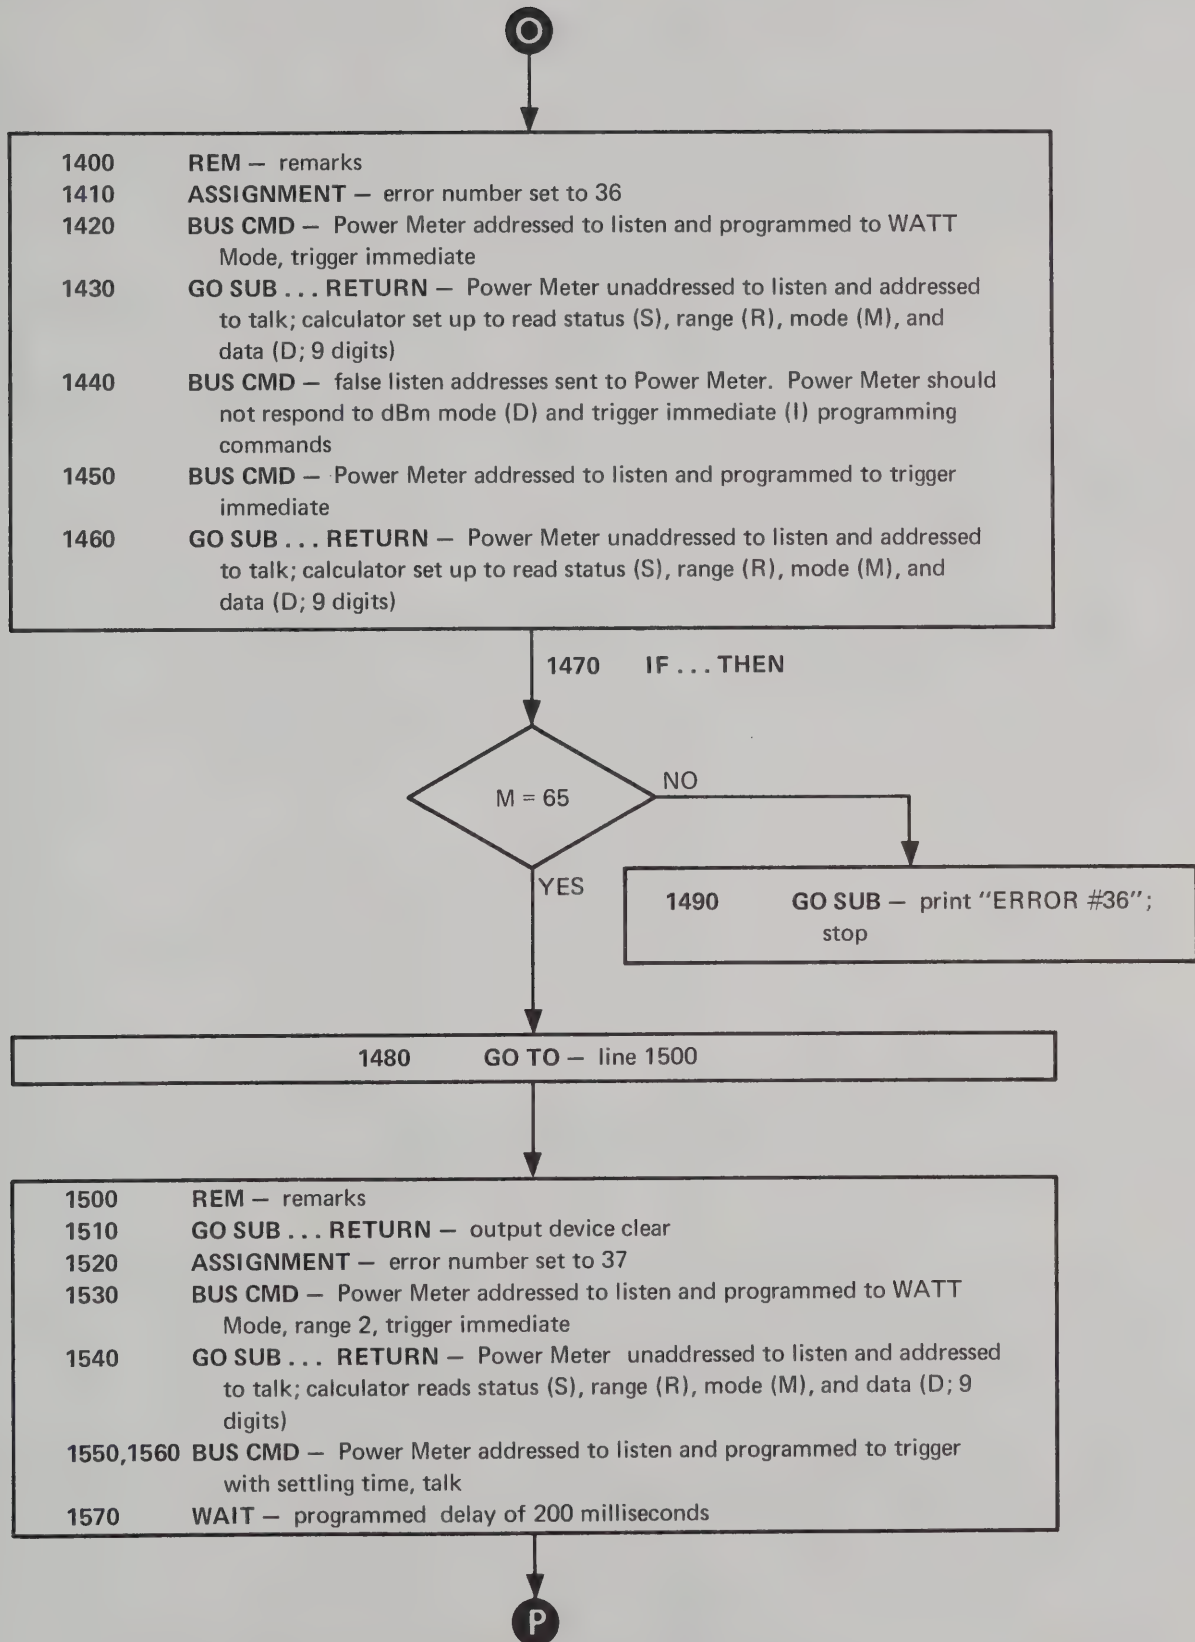


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (18 of 25)

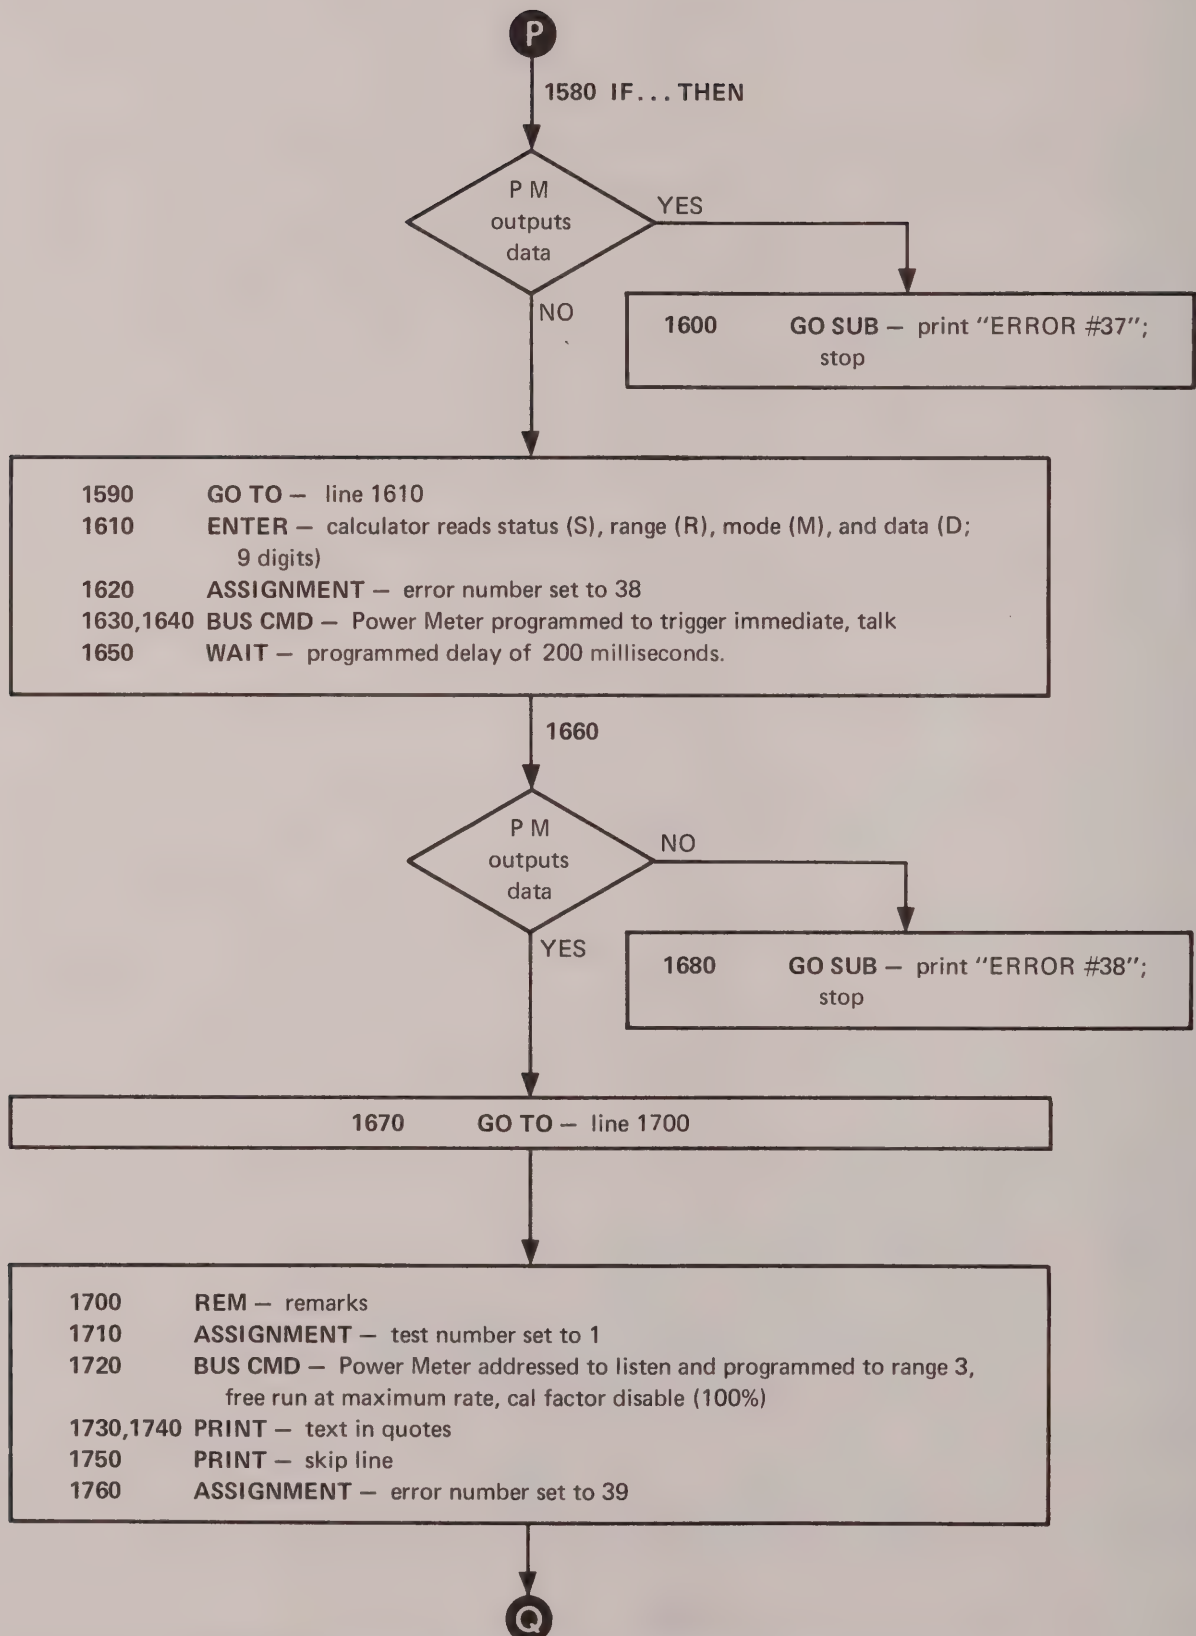


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (19 of 25)

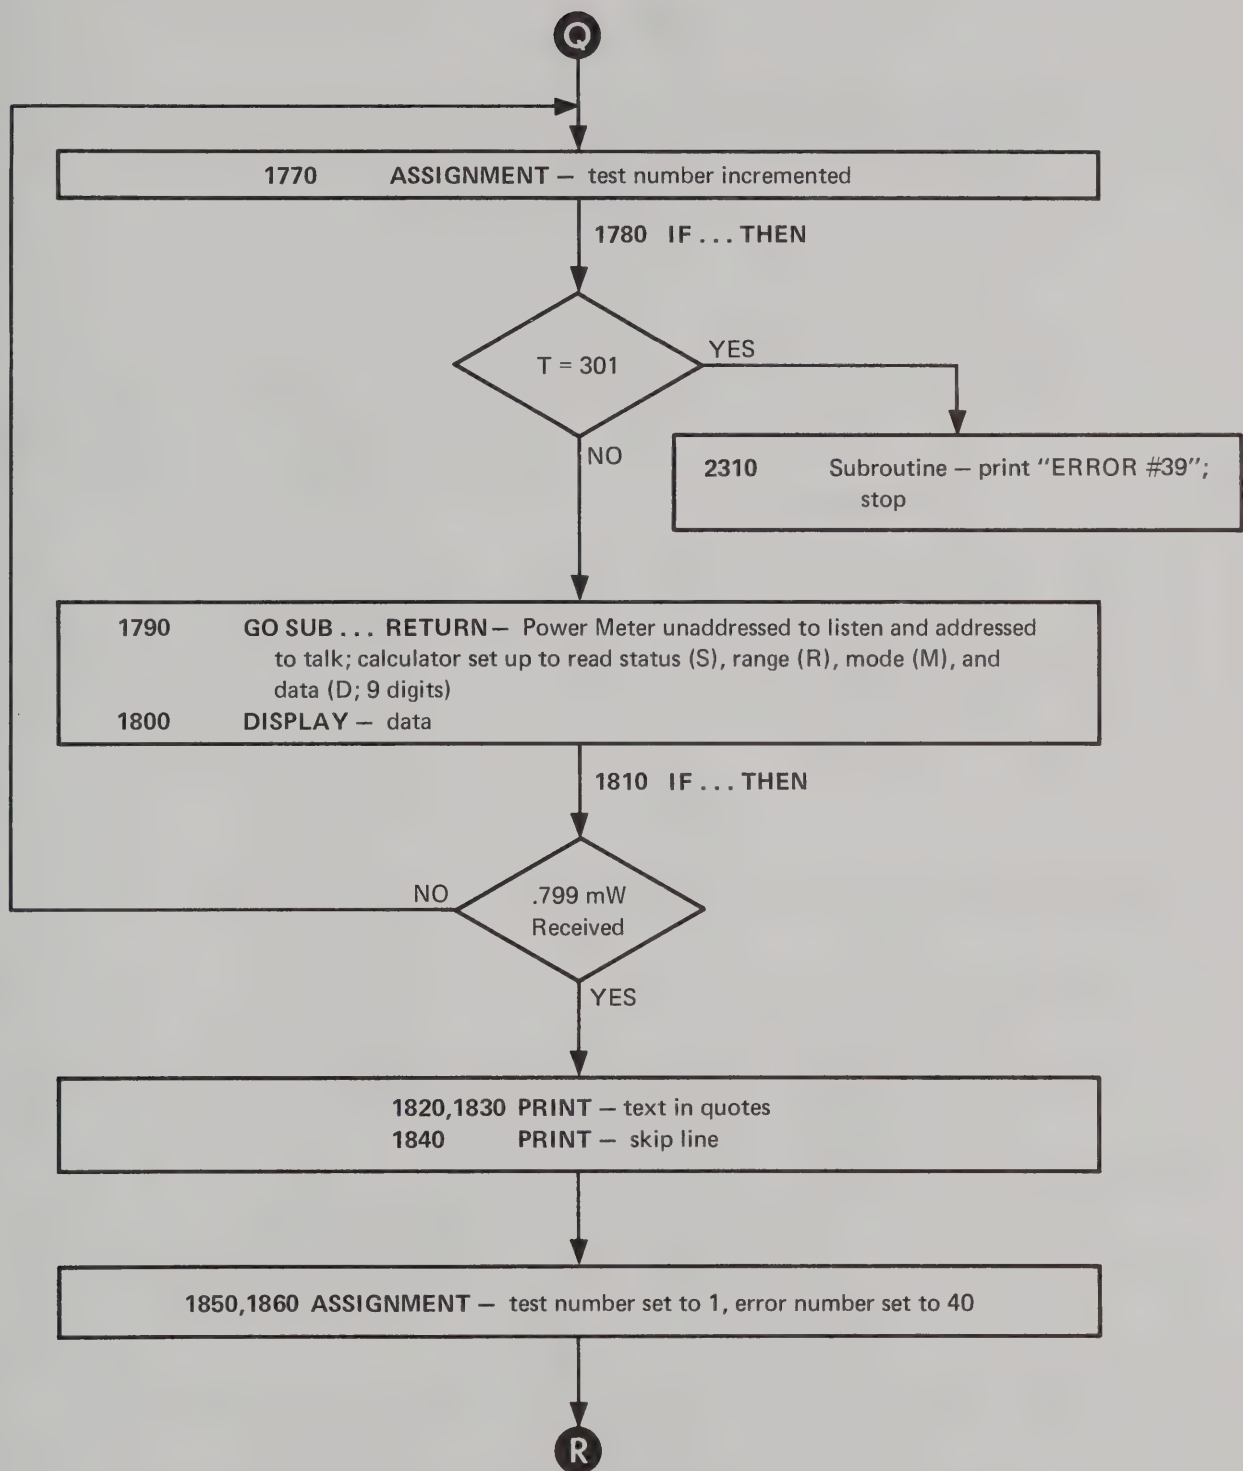


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (20 of 25)

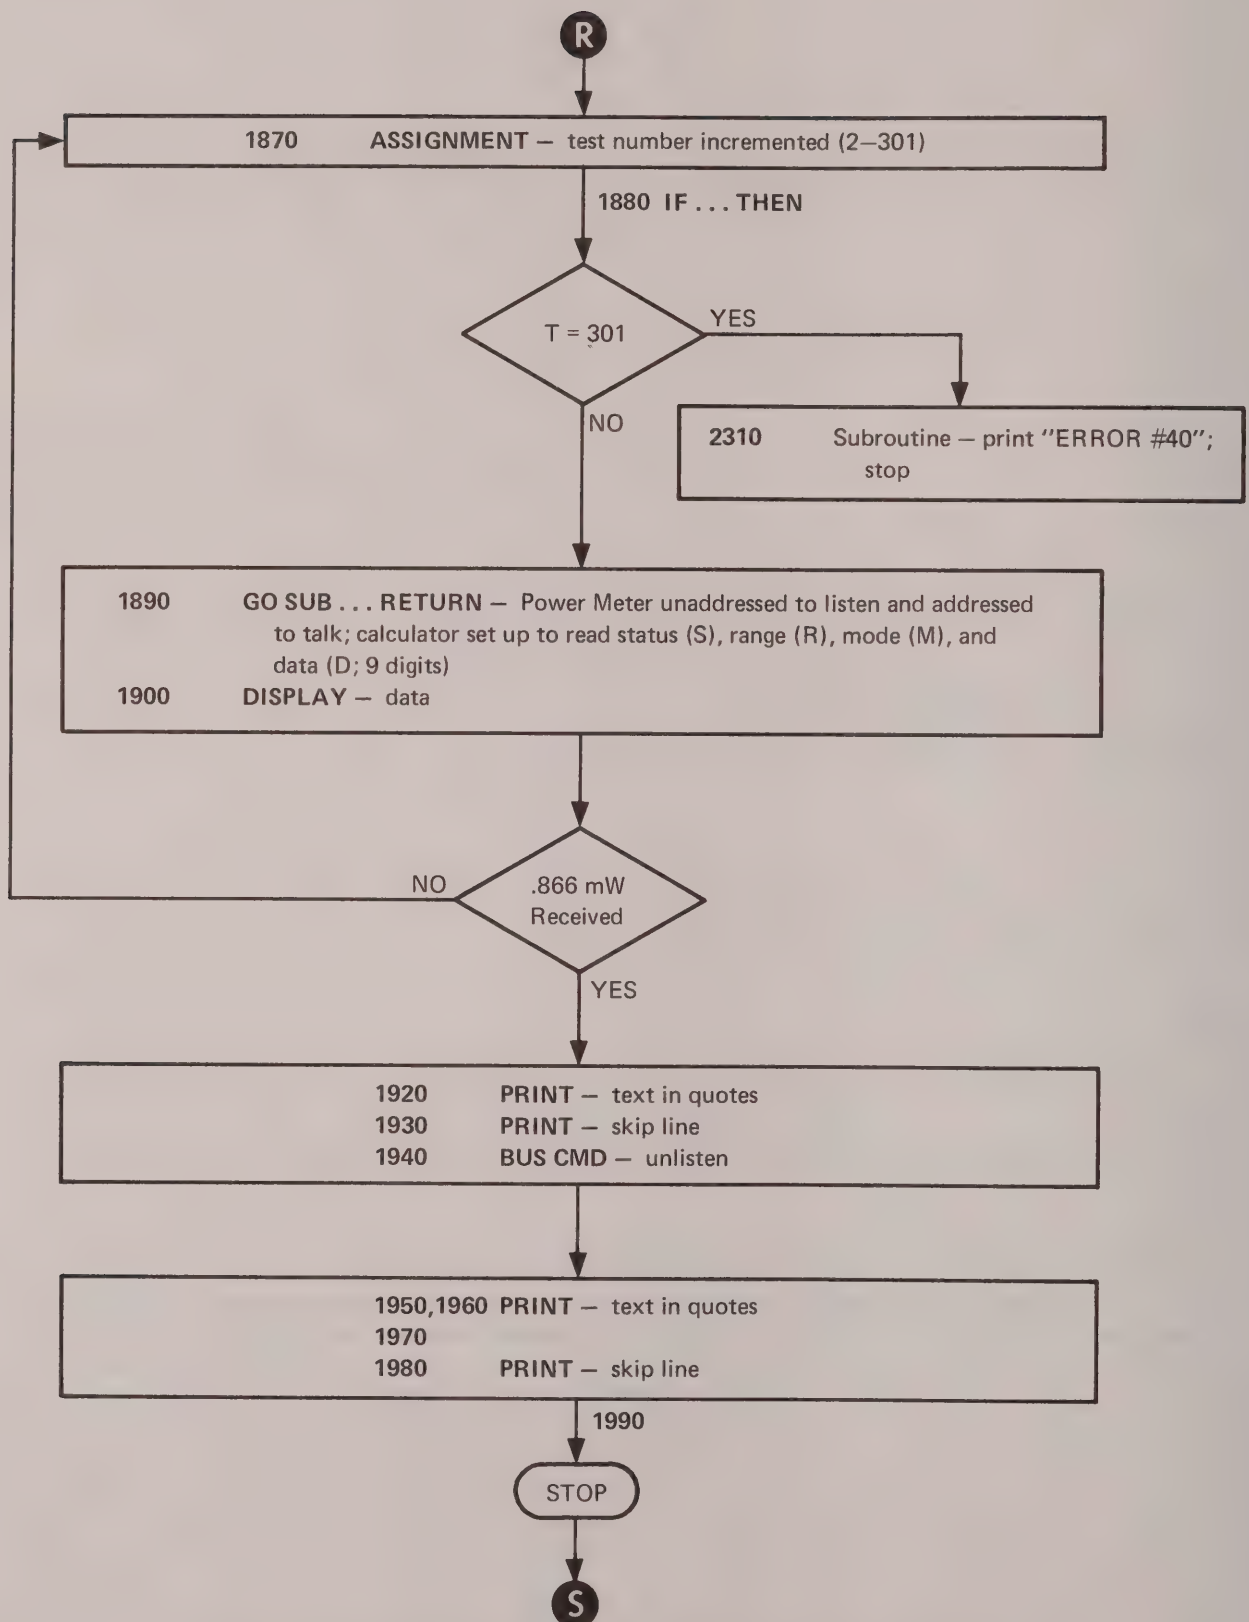


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (21 of 25)

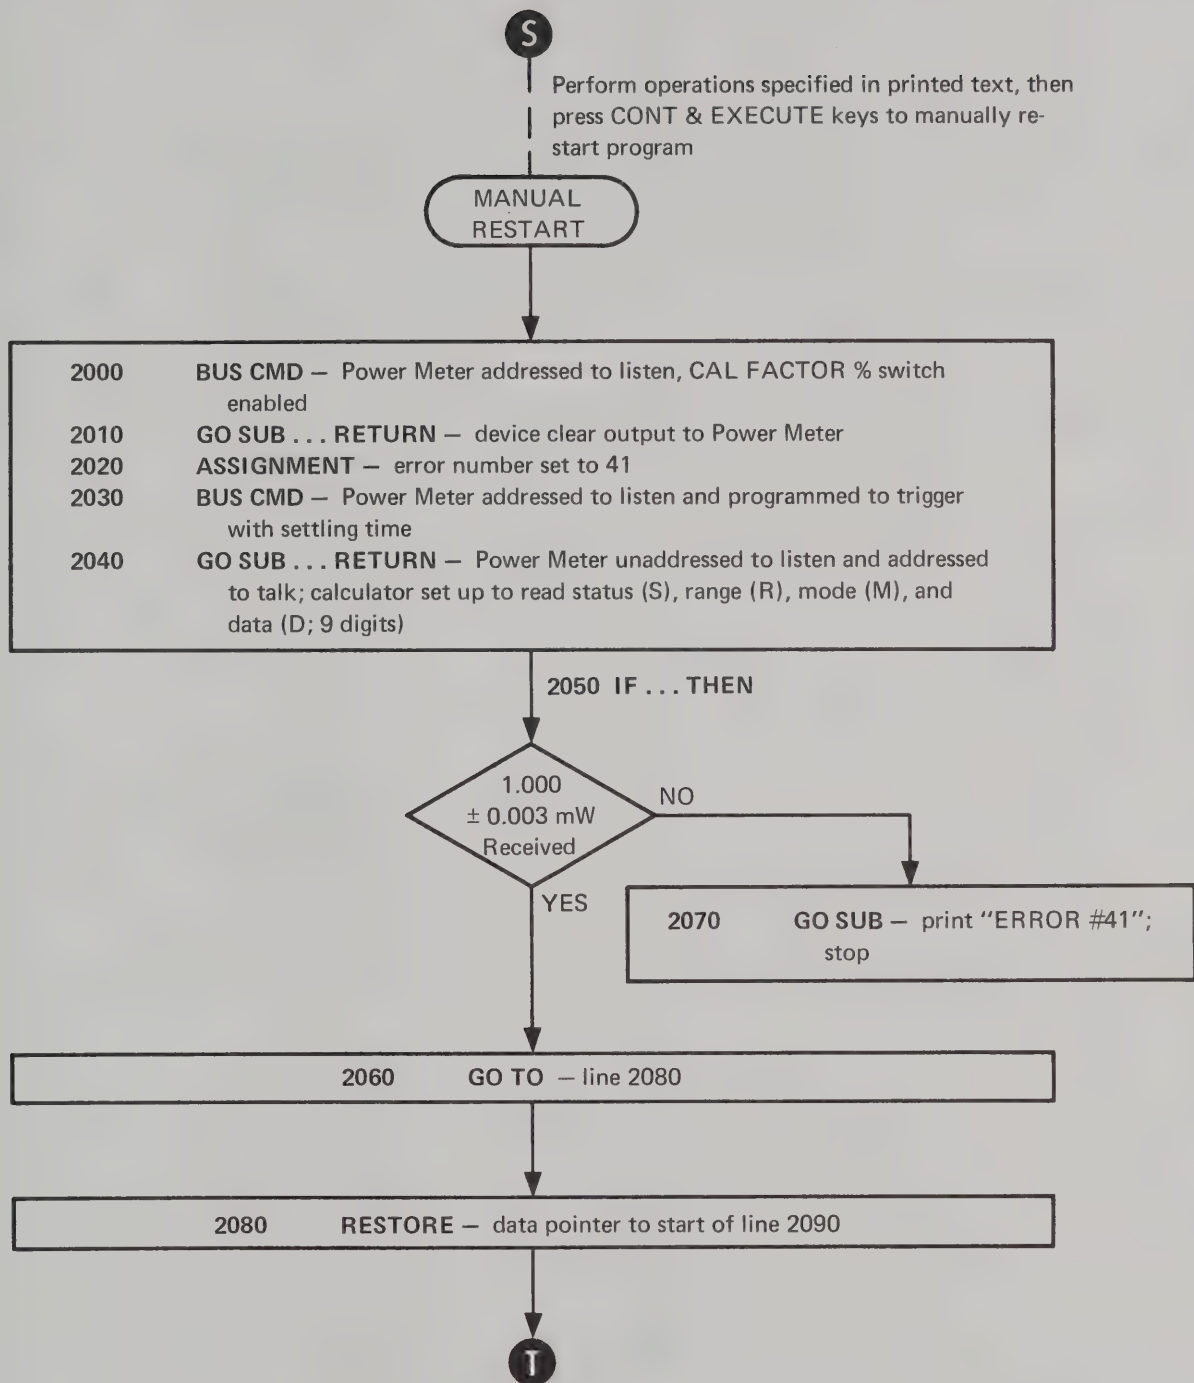


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (22 of 25)

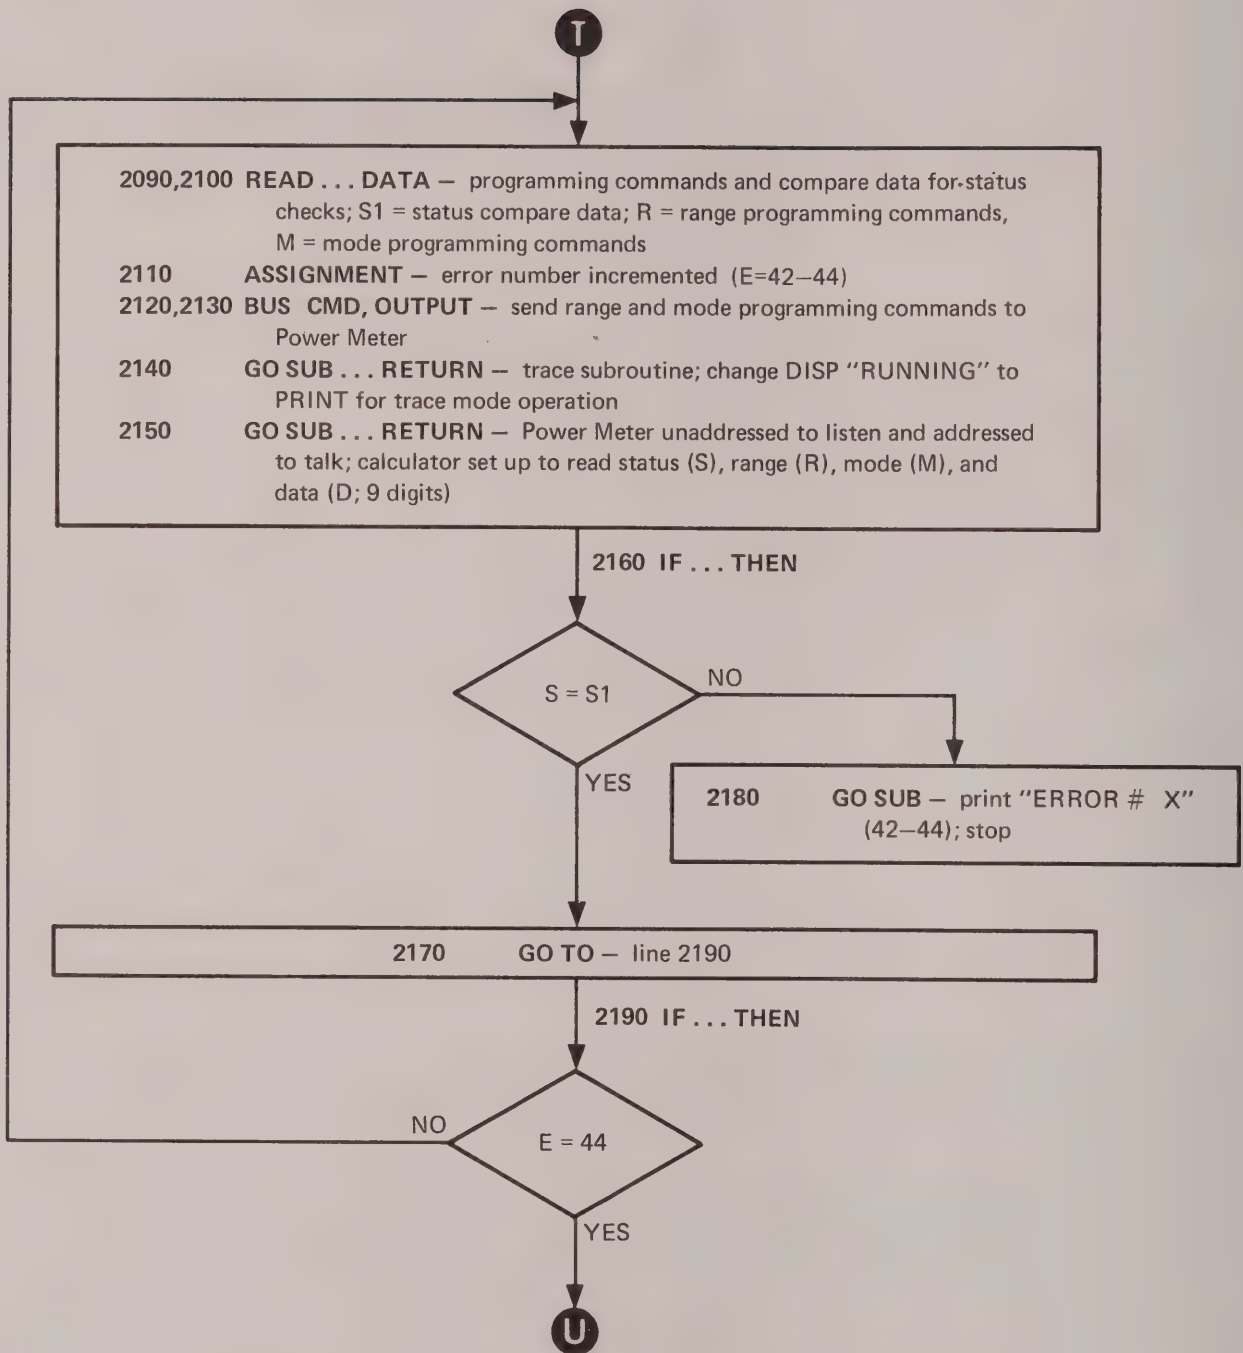


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (23 of 25)

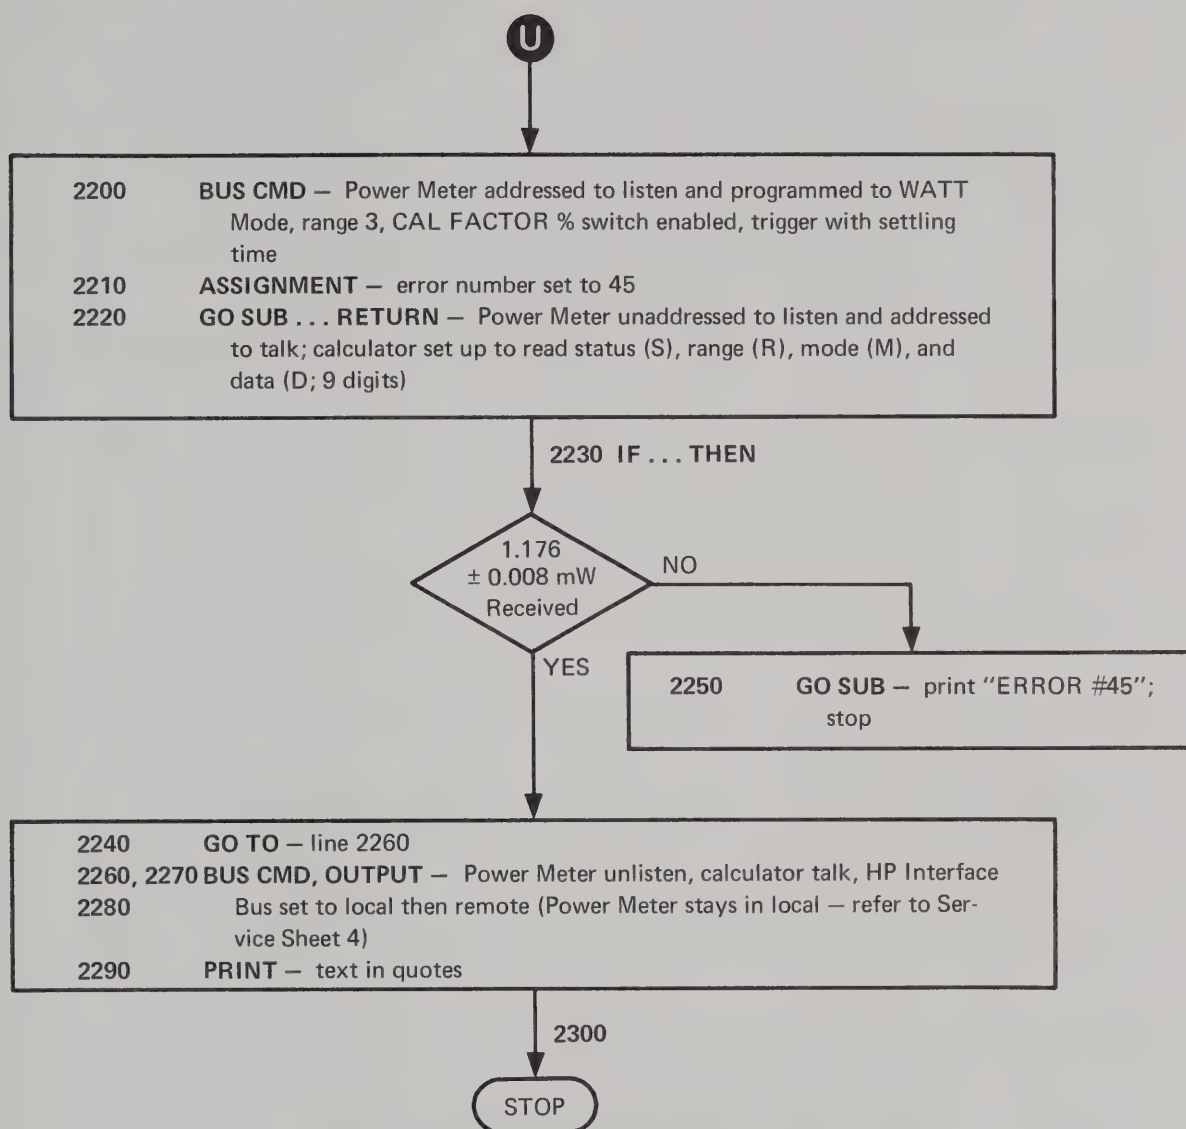


Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (24 of 25)

Print Error Subroutine

2310	PRINT — error number
2320	STOP — (press CONT EXECUTE to restart program at line 2330 or RUN EXECUTE to restart program at line 10). (Line 2320 may be eliminated to run listing all Errors).
2330	RETURN — to line following GO SUB branch to subroutine

Trace Subroutine

2340	REM — Adds PRINT for TRACE
2350	DISPLAY — "RUNNING"
2360	RETURN — to line following GO SUB branch to subroutine

Enter Data Subroutine

2370	REM — enter data
2380	BUS CMD — Power Meter programmed to talk, calculator to listen
2390	ENTER — calculator set up to read status (S), range (R), mode (M), and data (D; 9 digits)
2400	RETURN — to line following GO SUB branch to subroutine

Device Clear Subroutine

2410	REM — DEV CLR
2420	BUS CMD — Power Meter unlistening calculator talk
2430	OUTPUT — Set HP Interface Bus to command mode, output device clear, then set HP Interface Bus to data mode
2440	GO SUB — trace subroutine

2450	RETURN—to line following GO SUB reference to subroutine
2460	END

Figure 8-16. HP-IB Verification Program (HP 9830A Calculator) (25 of 25)

```

0:
CMD "E"
1:
CMD "?U-", "R";
CMD "?M5"
2:
GSB "WR111"
3:
1+R1+R2+R3
4:
IF RDS 13=3;GTO
"ERROR"
5:
CMD "?U"
6:
FMT Y3,Z;WRT 13
7:
CMD "?U-", "RC"
8:
CMD "?U"
9:
FMT Y4,Z;WRT 13
10:
"TEST1";R1+1+R1;
2+R2
11:
CMD "?M5"
12:
GSB "RDB"
13:
IF C=67;GTO "ERR
OR"
14:
IF R1=2;GTO "TES
T1"
15:
3+R2;CMD "?U-";
FMT Y3,Z;WRT 13
16:
"TEST2";CMD "?U-
","T","?M5"
17:
R1+1+R1
18:
GSB "RDB"
19:
IF R1=4;GTO "TES
T2"
20:
IF C=67;GTO "ERR
OR"
21:
4+R1+R2
22:
"TEST3";CMD "?U-
","22T","?M5"
23:
GSB "RDB"
24:
IF A=05;GTO "ERR
OR"
25:
"TEST4";CMD "?U-
","21T","?M5"
26:
R1+1+R1;5+R3
27:
GSB "RDB"
28:
IF R1=16;GTO "ER
ROR"
29:
IF AB(N7*1000000
00)>1.5;GTO "TES
T4"
30:
"TEST5";CMD "?U-
","AT","?M5"
31:
GSB "RDB"
32:
6+R2+R1
33:
IF A=84;GTO "ERR
OR"
34:
"TEST6";CMD "?U-
","AT"
35:
R1+1+R1
36:
CMD "?M5"
37:
7+R2
38:
GSB "RDB"
39:
IF R1=17;GTO "ER
ROR"
40:
IF A=80;GTO "TES
T6"
41:
"TEST7";R3+1+R3;

```

Figure 8-17. HP-IB Verification Program (HP 9820A Calculator) (1 of 4)

```

3→R2F
42:
IF R3=51G→D "ERR
OR"F
43:
"TEST3":CMD "PU-
" "T" "NM5"F
44:
GSB "RDB"F
45:
IF R14=0.0000000
1→GTO 47F
46:
GTO "TEST4"F
47:
PRT "MODE CHECKS
"F
48:
48→R512→R2F
49:
CMD "T"F
50:
64→R619→R01P511→
R5F
51:
CMD "PU-":FXD 0.
21UTB 131P51FMT
"TI"URT 13F
52:
R6+11R61R5111P3F
53:
CMD "PU-":A=1
FXD 0.21UTB 121P
61FMT "TI"URT 13
1FMT Y21Z1URT 13
F
54:
CMD "?M5"F
55:
GSB "RDB"F
56:
IF R6=C1GTO "ERR
OR"F
57:
IF R8=41GTO 52F
58:
IF B=771GTO 49F
59:
PRT "DEVICE CLEA
R"F
60:
PRT "CHECKS"F
61:
CMD "PU-": "5DR"F
62:
CMD "T"F
63:
CMD "PU-": "T" " "
M5:F
64:
33→R2F
65:
GSB "RDB"F
66:
IF A=801GTO "ERR
OR"F
67:
IF B=731GTO "ERR
OR"F
68:
IF C=651GTO "ERR
OR"F
69:
34→R2F
70:
CMD "PU-": "DI"F
71:
CMD "G"F
72:
CMD "?M5"F
73:
GSB "RDB"F
74:
IF C=681GTO "ERR
OR"F
75:
35→R2F
76:
CMD "T"F
77:
CMD "PU-": "D3I":
"?M5"F
78:
GSB "RDB"F
79:
IF A=801GTO "ERR
OR"F
80:
IF B=751GTO "ERR
OR"F
81:

```

Figure 8-17. HP-IB Verification Program (HP 9820A Calculator) (2 of 4)

```

IF C#68;GTO "ERR
OR"␣
82:
PRT "ADDRESS CHE
CKS"␣
83:
36→R2␣
84:
CMD "?U-","5A1",
"?M5"␣
85:
GSB "RDB"␣
86:
CMD "?U%)=/" ,"DI
"␣
87:
CMD "?U-","I","?
M5"␣
88:
GSB "RDB"␣
89:
IF C#65;GTO "ERR
OR"␣
90:
PRT "TRIGGER CHE
CKS"␣
91:
PRT "FAST/SLOW"␣
92:
CMD "Z"␣
93:
37→R2␣
94:
CMD "?U-":"A2I",
"?M5"␣
95:
GSB "RDB"␣
96:
CMD "?U-","T","?
M5"␣
97:
GSB "WAIT2"␣
98:
IF RDS 13#2;GTO
"ERROR"␣
99:
CMD "?M5"␣
100:
GSB "RDB"␣
101:
38→R2␣
102:
CMD "?U-","I","?
M5"␣
103:
GSB "WAIT2"␣
104:
IF RDS 13#3;GTO
"ERROR"␣
105:
PRT "436 POWER "
␣
106:
PRT "CONNECTED";
1→R8␣
107:
CMD "?U-","3R+"␣
108:
PRT "CONNECT SEN
SOR "␣
109:
PRT "POWER REF O
N"␣
110:
PRT "SET CAL ADJ
FOR"␣
111:
PRT ".799MW"␣
112:
39→R2;R8+1→R8␣
113:
IF R8=301;GTO "E
RROR"␣
114:
CMD "?M5"␣
115:
FMT *;RED 13,X␣
116:
DSP "DATA=";X␣
117:
IF X#0.000799;
GTO 114␣
118:
PRT ".799MW RECE
IVED"␣
119:
PRT "SET CAL ADJ
.866MW"␣
120:
40→R2;1→R8␣
121:
R8+1→R8␣
122:
IF R8=301;GTO "E

```

Figure 8-17. HP-IB Verification Program (HP 9820A Calculator) (3 of 4)


```

RBD R "F
123:
CMD "9M5" F
124:
FMT #1R1: 12,X:
125:
DSP "DATA =" ,Y F
126:
IF X=0.008866:
GTO 123 F
127:
PRT ".966 MW REC
EIVED" F
128:
CMD "9" F
129:
PRT "ADJ 436A FO
R" F
130:
PRT ".1.900MW" F
131:
PRT "SET CAL FAC
TUR" F
132:
PRT "TO 85" F
133:
STP F
134:
CMD "9U- ", "T" F
135:
CMD "E" F
136:
41+R2 F
137:
CMD "9U- ", "T", "9
M5" F
138:
GSB "RDB" F
139:
IF X>0.001003:
GTO "ERROR" F
140:
IF X<0.000997:
GTO "ERROR" F
141:
CMD "E" FMT Y3,Z
:WRT 13 F
142:
81+R4:53+R5:65+R
6:42+R2 F
143:
CMD "9U- " F
144:
FMT FXD 0.2:YB
13:R5:W1B 10:R6:
FMT "T":WRT 13 F
145:
CMD "9M5" F
146:
GSB "RDB" F
147:
IF A#R4:GTO "ERR
OR" F
148:
IF R2=42:GTO 151
F
149:
IF R2=43:GTO 152
F
150:
IF R2=44:GTO 153
F
151:
82+R4:50+R5:43+R
2:GTO 143 F
152:
83+R4:53+R5:68+R
6:44+R2:GTO 143 F
153:
CMD "9U- ", "R3-T"
,"9M5" F
154:
45+R2 F
155:
GSB "RDB" F
156:
IF X>0.001184:
GTO "ERROR" F
157:
IF X<0.001168:
GTO "ERROR" F
158:
CMD "9U- " F
159:
FMT 4,Z:WRT 13 F
160:
FMT 3,Z:WRT 13 F
161:
PRT "TEST COMPLE
TE" F
162:
END F
163:
"RDB":RDB 13+A:
RDB 13+B:RDB 13+
C:FMT #1RED 13,X
F
164:
FXD 0.2:PRT A,B,
C:FXD 6.6:PRT X F
165:
RET F
166:
"ERROR":FXD 0.2:
PRT "ERROR=" ,R2 F
167:
"STOP" F
168:
"WAIT1":10+Y F
169:
Y+1+Y F
170:
IF Y#270:GTO 169
F
171:
RET F
172:
"WAIT2":10+Y F
173:
Y+1+Y F
174:
IF Y#11:GTO 173 F
175:
RET F
176:
END F
R67

```

Figure 8-17. HP-IB Verification Program (HP 9820A Calculator) (4 of 4)

Table 8-4. HP-IB Circuit Troubleshooting (1 of 18)

Error No.	Problem and Description	Corrective Action																																																																
None	<p>Problem — Program hangs up without printing out error number. (RUNNING does not flash periodically on calculator display.)</p> <p>Description — Signal output from Power Meter causes calculator to lock up.</p>	<p>A. Check that IFC input to Power Meter (Service Sheet 11) is not being held low by some circuit in Power Meter.</p> <p>B. Check that Power Meter DAV output (Service Sheet 12) is not held low, indicating that Power Meter has data output for calculator.</p> <p>C. Turn power on and off to Power Meter, restart program at line 10 (STEP PROGRAM) and verify handshake timing (refer to Service Sheet 4).</p>																																																																
1	<p>Problem — Power Meter does not output data after being addressed to talk.</p> <p>Description — HP Interface Bus is set to local. (Remote Enable line false), and Power Meter is addressed to talk. Calculator I/O status is then checked to verify that Power Meter outputs data character during Display and Remote Talk Subroutine.</p>	<p>Turn power on and off to Power Meter. Then initialize test program (INIT key) and use STEP key to execute test program line-by-line. Check that the following indications are obtained for line 110:</p> <p>A. Power Meter is addressed to talk.</p> <p>B. The following display is obtained with logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 044₈ (Display and Remote Talk Subroutine Address).</p> <table><tr><td>00</td><td>010</td><td>011</td><td>15</td><td>00</td><td>010</td><td>010</td><td>7</td></tr><tr><td>00</td><td>100</td><td>100</td><td>16</td><td>00</td><td>010</td><td>011</td><td>8</td></tr><tr><td>10</td><td>100</td><td>101</td><td>1</td><td>10</td><td>100</td><td>100</td><td>9</td></tr><tr><td>00</td><td>100</td><td>110</td><td>2</td><td>00</td><td>010</td><td>010</td><td>10</td></tr><tr><td>01</td><td>001</td><td>000</td><td>3</td><td>00</td><td>010</td><td>011</td><td>11</td></tr><tr><td>01</td><td>001</td><td>001</td><td>4</td><td>10</td><td>100</td><td>100</td><td>12</td></tr><tr><td>11</td><td>001</td><td>010</td><td>5</td><td>00</td><td>010</td><td>010</td><td>13</td></tr><tr><td>10</td><td>100</td><td>100</td><td>6</td><td>00</td><td>010</td><td>011</td><td>14</td></tr></table>	00	010	011	15	00	010	010	7	00	100	100	16	00	010	011	8	10	100	101	1	10	100	100	9	00	100	110	2	00	010	010	10	01	001	000	3	00	010	011	11	01	001	001	4	10	100	100	12	11	001	010	5	00	010	010	13	10	100	100	6	00	010	011	14
00	010	011	15	00	010	010	7																																																											
00	100	100	16	00	010	011	8																																																											
10	100	101	1	10	100	100	9																																																											
00	100	110	2	00	010	010	10																																																											
01	001	000	3	00	010	011	11																																																											
01	001	001	4	10	100	100	12																																																											
11	001	010	5	00	010	010	13																																																											
10	100	100	6	00	010	011	14																																																											
2	<p>Problem — Power Meter data output indicates dB [REF] mode selected.</p> <p>Description —</p> <p>1. HP Interface Bus is set to remote, then Power Meter is addressed to listen and programmed to free run at maximum rate, dB [REF] mode.</p> <p>2. HP Interface Bus is set to local to disable remote operation of Power Meter.</p> <p>3. Power Meter is addressed to talk and calculator enters data. Since local operation is enabled, the Power Meter mode output should indicate the mode selected by the front panel switches.</p>	<p>Turn power on and off to Power Meter. Go to line 110 and use STEP key to execute program line-by-line. Check that the following indications are obtained.</p> <p>a. Line 160</p> <p>1) Power Meter is unaddressed to talk.</p> <p>2) Operating program branches from Display and Remote Talk Subroutine to Local/Remote Branch Subroutine. Program then continues to free run as previously verified for local operation.</p> <p>b. Line 190</p> <p>1) Power Meter is addressed to listen and configured for remote operation.</p> <p>2) Measurement rate select logic stores programming command and provides low H HOLD and high H FAST outputs.</p> <p>3) Mode Select logic stores programming command and provides dB [REF] mode output.</p>																																																																

Table 8-4. HP-IB Circuit Troubleshooting (2 of 18)

Error No.	Problem and Description	Corrective Action																																																																
2 (cont)		<p>4) Operating program branches from Local/Remote Branch Subroutine to Remote Initialize Subroutine.</p> <p>5) The following display is observed with logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012_g (Remote Initialize Subroutine Address).</p> <table><tr><td>00</td><td>001</td><td>010</td><td>1</td><td>01</td><td>000</td><td>011</td><td>9</td></tr><tr><td>00</td><td>001</td><td>011</td><td>2</td><td>01</td><td>000</td><td>011</td><td>10</td></tr><tr><td>00</td><td>001</td><td>101</td><td>3</td><td>01</td><td>000</td><td>011</td><td>11</td></tr><tr><td>01</td><td>000</td><td>001</td><td>4</td><td>01</td><td>000</td><td>011</td><td>12</td></tr><tr><td>01</td><td>000</td><td>010</td><td>5</td><td>01</td><td>000</td><td>011</td><td>13</td></tr><tr><td>01</td><td>000</td><td>011</td><td>6</td><td>01</td><td>000</td><td>011</td><td>14</td></tr><tr><td>01</td><td>000</td><td>011</td><td>7</td><td>01</td><td>000</td><td>011</td><td>15</td></tr><tr><td>01</td><td>000</td><td>011</td><td>8</td><td>01</td><td>000</td><td>011</td><td>16</td></tr></table> <p>6) Operating program branches from Remote Initialize Subroutine to Measurement Subroutine, then continues to cycle normally as previously verified.</p> <p>c. Line 210 — Power Meter configured for local operation.</p> <p>d. Line 250/2380 — Power Meter is addressed to talk.</p> <p>e. Line 250/2390 — Power Meter outputs complete data message. Verify data message per Read Byte Subroutine starting at line 5000.</p>	00	001	010	1	01	000	011	9	00	001	011	2	01	000	011	10	00	001	101	3	01	000	011	11	01	000	001	4	01	000	011	12	01	000	010	5	01	000	011	13	01	000	011	6	01	000	011	14	01	000	011	7	01	000	011	15	01	000	011	8	01	000	011	16
00	001	010	1	01	000	011	9																																																											
00	001	011	2	01	000	011	10																																																											
00	001	101	3	01	000	011	11																																																											
01	000	001	4	01	000	011	12																																																											
01	000	010	5	01	000	011	13																																																											
01	000	011	6	01	000	011	14																																																											
01	000	011	7	01	000	011	15																																																											
01	000	011	8	01	000	011	16																																																											
3	<p>Problem — Power Meter data output does not indicate dB[REF] mode selected.</p> <p>Description — The Power Meter was programmed to the dB [REF] mode in the previous test. Then the HP Interface Bus was set to local. For this test, the HP Interface Bus is set to remote and the Power Meter is programmed to take a triggered measurement with settling time. Thus, the dB [REF] output of the mode select logic should be loaded into the mode register during the operating program Remote Initialize Subroutine and the Power Meter should output MODE data character C during the Display and Remote Talk Subroutine.</p>	<p>Turn Power on and off to Power Meter. Then GO TO line 140, and use STEP key to execute program line-by-line. Check that the following indications are obtained:</p> <p>a. Line 160</p> <p>1) Power Meter is unaddressed to talk.</p> <p>2) Operating program branches from Display and Remote Talk Subroutine to Local Remote Branch Subroutine. Program then continues to free run as previously verified for local operation.</p> <p>b. Line 190</p> <p>1) Power Meter is addressed to listen and configured for remote operation.</p> <p>2) Measurement rate select logic stores programming command and provides low H HOLD and high H FAST outputs.</p> <p>3) Mode select logic stores programming command and provides dB [REF] mode output.</p> <p>4) Operating program branches from Local/Remote Branch Subroutine to Remote Initialize Subroutine.</p>																																																																

Table 8-4. HP-IB Circuit Troubleshooting (3 of 18)

Error No.	Problem and Description	Corrective Action
3 (cont)		<p>5) The following display is observed with logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 00 001 010 1 01 000 011 9 00 001 011 2 01 000 011 10 00 001 101 3 01 000 011 11 01 000 001 4 01 000 011 12 01 000 010 5 01 000 011 13 01 000 011 6 01 000 011 14 01 000 011 7 01 000 011 15 01 000 011 8 01 000 011 16 </pre> <p>6) The output of the mode select logic is loaded into the mode register (Service Sheet 3 during the Remote Initialize Subroutine).</p> <p>7) Operating program branches from Remote Initialize Subroutine to Measurement Subroutine, then continues to cycle normally as previously verified.</p> <p>c. Lines 210, 250, and 260 — previously verified.</p> <p>d. Line 340 — (first pass)</p> <ol style="list-style-type: none"> 1) Power Meter is addressed to listen and configured for remote operation. 2) H HOLD output of measurement rate select logic is set high by LTC instruction. 3) Operating program enters Display and Remote Talk Subroutine hold loop (addresses 022₈, 023₈, 024₈, 025₈). <p>e. Line 360/2390 — (first pass)</p> <ol style="list-style-type: none"> 1) Power Meter outputs complete data message (ignore data) then branches to Local/Remote Branch Subroutine. 2) Power Meter enters Local/Remote Branch Subroutine hold loop. <p>f. Line 340 — (second pass)</p> <ol style="list-style-type: none"> 1) Measurement rate select logic provides low H HOLD output to initiate program cycle. Program branches to Remote Initialize Subroutine. 2) The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address).

Table 8-4. HP-IB Circuit Troubleshooting (4 of 18)

Error No.	Problem and Description	Corrective Action
3 (cont)		<p>00 001 010 1 01 010 111 9</p> <p>00 001 011 2 01 010 111 10</p> <p>10 001 101 3 01 010 111 11</p> <p>00 001 110 4 01 010 111 12</p> <p>00 001 111 5 01 010 111 13</p> <p>10 011 001 6 01 010 111 14</p> <p>10 011 110 7 01 010 111 15</p> <p>01 010 111 8 01 010 111 16</p> <p>3) Operating program branches from Delay Subroutine to Auto Zero Subroutine and cycles to Display and Remote Talk Subroutine.</p> <p>4) Power Meter enters Display and Remote Talk Subroutine hold loop.</p> <p>g. Line 360/2390 — (second pass) — Power Meter outputs complete data message. Verify data message per Read Byte Subroutine starting at line 5000.</p>
4, 4.5	<p>Error — If “ERROR #4” is printed, the Power Meter operating cycle is not synced to the trigger with settling time programming command.</p> <p>If “ERROR #4” and “ERROR #4.5” are printed, the Power Meter did not respond properly to one or more of the programming commands.</p> <p>Description —</p> <p>1. The error number is set to 4 and the Power Meter is programmed to auto zero, range 2, and trigger with settling time. Thus the Power Meter should output STATUS character U during the Display and Remote Talk Subroutine, thereby indicating that the auto zero loop is enabled, that it is operating on some range other than one, and that the input signal level is UNDER RANGE.</p>	<p>A. Turn power on and off to Power Meter, then manually send the following program command: CMD“?U—”, “T”. Check that the programming command configures Power Meter for remote operation and causes operating program to enter Display and Remote Talk Subroutine hold loop (addresses 022₈, 023₈, 024₈, 025₈).</p> <p>NOTE</p> <p><i>H HOLD output of measurement rate select logic is set low by programming command and reset high by LTC instruction generated at start of Display and Remote Talk Subroutine.</i></p> <p>B. GO TO line 410 and use STEP key to execute program line-by-line. Check that the following indications are obtained.</p> <p>a. Line 420—</p> <p>1) Auto zero enable logic stores auto zero programming command and provides auto zero enable output.</p> <p>2) Range select logic stores range programming command and provides range 2 output.</p> <p>3) H HOLD output of measurement rate select logic set low by trigger with settling time programming command.</p> <p>4) Operating program branches from Display and Remote Talk Subroutine to Local/Remote Branch Subroutine.</p> <p>5) Operating program branches to Remote Initialize Subroutine and the following display is observed with logic analyzer connected normally and set up for single</p>

Table 8-4. HP-IB Circuit Troubleshooting (5 of 18)

Error No.	Problem and Description	Corrective Action																																																																
4, 4.5 (cont)	<p>Description (cont'd)</p> <p>2. The error number is set to 4.5 and the programming commands and status check are repeated. Thus, if error number 4 is detected and error number 4.5 is not detected, it indicates that the first Power Meter data output occurred before the remote programming commands were accessed by the operating program during the Remote Initialize Subroutine. (Power Meter free runs instead of entering hold loop until trigger input is received.) If both error numbers 4 and 4.5 are detected, it indicates that the Power Meter did not respond properly to the programming commands or that the Power Meter is improperly coding the STATUS output character.</p>	<p>B. a. Line 420 (cont'd) sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address).</p> <table><tr><td>10</td><td>001</td><td>010</td><td>1</td><td>01</td><td>010</td><td>111</td><td>9</td></tr><tr><td>00</td><td>001</td><td>011</td><td>2</td><td>01</td><td>010</td><td>111</td><td>10</td></tr><tr><td>10</td><td>001</td><td>101</td><td>3</td><td>01</td><td>010</td><td>111</td><td>11</td></tr><tr><td>00</td><td>001</td><td>110</td><td>4</td><td>01</td><td>010</td><td>111</td><td>12</td></tr><tr><td>10</td><td>001</td><td>111</td><td>5</td><td>01</td><td>010</td><td>111</td><td>13</td></tr><tr><td>00</td><td>011</td><td>000</td><td>6</td><td>01</td><td>010</td><td>111</td><td>14</td></tr><tr><td>10</td><td>011</td><td>110</td><td>7</td><td>01</td><td>010</td><td>111</td><td>15</td></tr><tr><td>01</td><td>010</td><td>111</td><td>8</td><td>01</td><td>010</td><td>111</td><td>16</td></tr></table> <p>6) Range counter (Service Sheet 3) is preset to range 2 and output of mode select logic is loaded into mode register during Remote Initialize Subroutine time.</p> <p>7) Operating program branches from Remote Initialize Subroutine and cycles to Display and Remote Talk Subroutine hold loop (address 022₈, 023₈, 024₈, 025₈).</p> <p>b. Line 430/2390 — Power Meter outputs complete data message. Verify data message per Read Byte Subroutine starting at line 5000.</p> <p>NOTE <i>Status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Mode Selection and Log Under-Range Registration.</i></p>	10	001	010	1	01	010	111	9	00	001	011	2	01	010	111	10	10	001	101	3	01	010	111	11	00	001	110	4	01	010	111	12	10	001	111	5	01	010	111	13	00	011	000	6	01	010	111	14	10	011	110	7	01	010	111	15	01	010	111	8	01	010	111	16
10	001	010	1	01	010	111	9																																																											
00	001	011	2	01	010	111	10																																																											
10	001	101	3	01	010	111	11																																																											
00	001	110	4	01	010	111	12																																																											
10	001	111	5	01	010	111	13																																																											
00	011	000	6	01	010	111	14																																																											
10	011	110	7	01	010	111	15																																																											
01	010	111	8	01	010	111	16																																																											
5	<p>Error — Power Meter does not auto zero after ten tries.</p> <p>Description — The Power Meter is programmed to auto zero, range 1, trigger with settling time. Then the DATA output is checked to verify that it indicates 0.000 ± 0.001 μW. If the DATA output exceeds this value, the test number is incremented and the programming commands and DATA checks are repeated. If the DATA output still exceeds 0.000 ± 0.001 μW after ten tries (7=16), "ERROR # 5" is detected.</p>	<p>Change line 5000 to CMD "U", "ZIV". Then turn power on and off to Power Meter and check that RF power is not applied to Power Sensor. GO TO line 5000 and use STEP key to manually execute Read Byte Subroutine. Check that:</p> <p>NOTE <i>Program execution and circuit operation previously verified by local checkout procedure and preceding error checks except as specified below:</i></p> <p>A. Range counter (Service Sheet 3) accepts range programming command and outputs range 1.</p>																																																																

Table 8-4. HP-IB Circuit Troubleshooting (6 of 18)

Error No.	Problem and Description	Corrective Action																																
5 (cont)		<p>B. Remote Initialize Subroutine address branching is as follows:</p> <table><tr><td>10</td><td>001</td><td>010</td><td>1</td><td>00</td><td>001</td><td>111</td><td>5</td></tr><tr><td>00</td><td>001</td><td>011</td><td>2</td><td>10</td><td>011</td><td>001</td><td>6</td></tr><tr><td>10</td><td>001</td><td>101</td><td>3</td><td>00</td><td>011</td><td>110</td><td>7</td></tr><tr><td>00</td><td>001</td><td>110</td><td>4</td><td>01</td><td>010</td><td>111</td><td>8</td></tr></table> <p>C. Range counter (Service Sheet 3) is preset to range 1 during Remote Initialize Subroutine.</p> <p>D. Operating program branches from Remote Initialize Subroutine to Delay Subroutine.</p> <p>E. Power Meter outputs correct data characters</p>	10	001	010	1	00	001	111	5	00	001	011	2	10	011	001	6	10	001	101	3	00	011	110	7	00	001	110	4	01	010	111	8
10	001	010	1	00	001	111	5																											
00	001	011	2	10	011	001	6																											
10	001	101	3	00	011	110	7																											
00	001	110	4	01	010	111	8																											
6	<p>Error — Power Meter status output does not indicate auto zeroing, range 1.</p> <p>Description — The Power Meter was programmed to auto zero on range 1 for the previous test. For this test, the Power Meter is programmed to the Watt Mode and a measurement is triggered. Then the Power Meter output status is checked to ensure that the auto-zero timer circuit (Service Sheet 10) holds the Power Meter in an auto zero loop for a period of approximately four seconds after the auto zero function is terminated.</p>	<p>Check Power Meter status output per Read Byte Subroutine starting at line 2500.</p> <p>NOTE</p> <p><i>Status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Mode Selection and Linear Under-Range Registration.</i></p>																																
7	<p>Error — Power Meter status output does not indicate measured value valid.</p> <p>Description — For this test, the Power Meter was programmed to the Watt Mode, and a measurement was triggered. 10 seconds were allowed for the auto zero loop to clear, then the Power Meter was addressed to talk and the output status character was checked. Since range 1 was previously programmed, the Power Meter should output status character P, indicating that a valid measurement was taken. (For Watt Mode, range 1, an UNDER RANGE indication is not generated during the Under-Range Subroutine.)</p>	<p>GO TO line 640 and use STEP key to execute program line-by-line. Check that the following indications are obtained:</p> <p>a. Line 640</p> <p>1) Auto zero enable logic is reset.</p> <p>2) Mode enable logic outputs Watt mode.</p> <p>b. Line 660 — Power Meter outputs correct status. Status output can be verified per Read Byte Subroutine starting at line 5000.</p> <p>NOTE</p> <p><i>Status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Mode Selection and Linear Under-Range Registration .</i></p>																																

Table 8-4. HP-IB Circuit Troubleshooting (7 of 18)

Error No.	Problem and Description	Corrective Action
8	<p>Error — Power Meter does not hold 0 after being auto zeroed five consecutive times.</p> <p>Description — For the previous test, the Power Meter was programmed to the Watt Mode, thereby clearing the auto zero loop. For this test the Power Meter data output is checked to ensure that the Power Meter remains zeroed while configured for Watt Mode Operation.</p>	<p>Check Power Meter data output per Read Byte Subroutine starting at line 5000. (Data output should correspond to front-panel digital readout which was previously verified for local operation.)</p>
9	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to Watt Mode, range 1, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Turn Power Meter on and off, then manually program Power Meter to Watt Mode, Range 1, trigger with settling time. (CMD “?U—”, “A1T”).</p> <p>B. Verify Power Meter Mode and Range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range Select Logic outputs range 1. 3) Range Counter is preset to range 1 during Remote Initialize Subroutine.
10	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to Watt Mode, range 2, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Turn Power Meter on and off, then manually program Power Meter to Watt Mode, range 2, trigger with settling time (CMD “?U—” “A2T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutines starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range select logic outputs range 2. 3) Range counter is preset to range 2 during Remote Initialize Subroutine.
11	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to Watt Mode, range 3, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to Watt Mode, range 3, trigger with settling time (CMD “?U—”, “A3T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range select logic outputs range 3. 3) Range counter is preset to range 3 during Remote Initialize Subroutine. 4) Operating program branches from address 030₈ to address 056₈ (Remote Initialize Subroutine to Auto Zero Subroutine).

Table 8-4. HP-IB Circuit Troubleshooting (8 of 18)

Error No.	Problem and Description	Corrective Action
12	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to watt mode, range 4, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to Watt Mode, range 4, trigger with settling time (CMD “?U—”, “A4T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range select logic outputs range 4. 3) Range counter is preset to range 4 during Remote Initialize Subroutine. 4) The following display is obtained with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address). <pre> 10 001 010 1 10 001 110 5 10 001 011 2 00 101 110 6 00 001 100 3 00 101 111 7 10 001 101 4 00 101 111 8 </pre>
13	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to Watt Mode, range 5, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Turn power on and off to Power Meter. Then manually program Power Meter to Watt Mode, range 5, trigger with settling time (CMD “?U—”, “A5T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range select logic outputs range 5. 3) Range counter is preset to range 5 during Remote Initialize Subroutine.
14	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to Watt Mode, auto range, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Turn power on and off to Power Meter. Then manually program Power Meter to Watt Mode, auto range, trigger with settling time (CMD “?U—”, “A9T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs Watt Mode. 2) Range select logic sets NAUTO output true. 3) Operating program branches from Remote Initialize Subroutine to Auto Zero Subroutine (Address 012₈ Q=1 not previously verified). 4) Range counter is counted down to range 1 during Power Meter operating program cycle.

Table 8-4. HP-IB Circuit Troubleshooting (9 of 18)

Error No.	Problem and Description	Corrective Action
15	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB (Rel) mode, range 1, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, range 1, trigger with settling time (CMD “?U—”, “B1T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 2500.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode and resets NAUTO output. 2) Range select logic outputs range 1. 3) Range counter is preset to range 1 and output of mode select logic is loaded into mode register during Remote Initialize Subroutine.
16	<p>Error — Power Meter range or mode output character checked.</p> <p>Description — Power Meter programmed to dB (REL) mode, range 2, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, range 2, trigger with settling time (CMD “?U—”, “B2T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB (REL) mode. 2) Range select logic outputs range 2. 3) Range counter is preset to range 2 during Remote Initialize Subroutine.
17	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB (REL) mode, range 3, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, range 3, trigger with settling time (CMD “?U—”, “B3T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB (REL) mode. 2) Range select logic outputs range 3. 3) Range counter is preset to range 3 during Remote Initialize Subroutine.
18	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB (REL) mode, range 4, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, range 4, trigger with settling time (CMD “?U—”, “B4T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic output dB (REL) mode. 2) Range select logic output range 4. 3) Range counter is preset to range 4 and output of mode select logic is loaded into mode register during Remote Initialize Subroutine.

Table 8-4. HP-IB Circuit Troubleshooting (10 of 18)

Error No.	Problem and Description	Corrective Action
19	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB (REL) mode, range 5, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, range 5, trigger with settling time (CMD “?U—”, “B5T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic output dB (REL) mode. 2) Range select logic output range 5. 3) Range counter is preset to range 5 during Remote Initialize Subroutine.
20	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB (REL) mode, auto range, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB (REL) mode, auto range, trigger with settling time (CMD “?U—”, “B9T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB (REL) mode. 2) Range select logic sets NAUTO output true. 3) Range counter is counted down to range 1 during Power Meter operating program cycle.
21	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, range 1, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB [REF] mode, range 1, trigger with settling time (CMD “?U—”, “C1T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode. 2) Range select logic outputs range 1 and resets NAUTO output. 3) Range counter is preset to range 1 and output of mode select logic is loaded into mode register during Remote Initialize Subroutine.
22	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, range 2, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB [REF] mode, range 2, trigger with settling time (CMD “?U—”, “C2T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode. 2) Range select logic outputs range 2. 3) Range counter is preset to range 2 during Remote Initialize Subroutine.

Table 8-4. HP-IB Circuit Troubleshooting (11 of 18)

Error No.	Problem and Description	Corrective Action
23	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, range 3, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB [REF] mode, range 3, trigger with settling time (CMD “?U—”, “C3T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode. 2) Range select logic outputs range 3. 3) Range counter is preset to range 3 during Remote Initialize Subroutine.
24	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, range 4, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power meter to dB [REF] mode, range 4, trigger with settling time (CMD “?U—”, “C4T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode. 2) Range select logic outputs range 4. 3) Range counter is preset to range 4 during Remote Initialize Subroutine.
25	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, range 5, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB [REF] mode, range 5, trigger with settling time (CMD “?U—”, “C5T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB [REF] mode. 2) Range select logic outputs range 5. 3) Range counter is preset to range 5 during Remote Initialize Subroutine.
26	<p>Error — Power Meter range or mode output characters wrong.</p> <p>Description — Power Meter programmed to dB [REF] mode, auto range, trigger with settling time. Then Power Meter addressed to talk and range and mode output characters checked.</p>	<p>A. Manually program Power Meter to dB [REF] mode, auto range, trigger with settling time (CMD “?U—”, “C9T”).</p> <p>B. Verify Power Meter mode and range character output per Read Byte Subroutine starting at line 5000.</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dB (REL) mode. 2) Range select logic sets NAUTO output true. 3) Range counter is counted down to range 1 during Power Meter operating program cycle.

Table 8-4. HP-IB Circuit Troubleshooting (12 of 18)

Error No.	Problem and Description	Corrective Action
27	<p>Error — Power Meter range, mode, or data output wrong.</p> <p>Description — Power Meter programmed to dBm mode, range 1, trigger with settling time. Then Power Meter addressed to talk and range, mode, and data output checked. (Data output corresponds to minimum threshold of dBm range 1, -30 dBm.)</p>	<p>A. Manually program Power Meter to dBm mode, range 1, trigger with settling time (CMD “?U—”, “D1T”).</p> <p>B. Verify Power Meter mode, range and data character output per Read Byte Subroutine starting at line 5000. (Data output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic outputs range 1 and resets NAUTO output. 3) Range counter is preset to range 1 during Remote Initialize Subroutine.
28	<p>Error — Power Meter range, mode, or data output wrong.</p> <p>Description — Power Meter programmed to dBm mode, range 2, trigger with settling time. Then Power Meter addressed to talk and range mode and data output checked. (Data output should correspond to minimum threshold of dBm range 2, -20 dBm.)</p>	<p>A. Manually program Power Meter to dBm mode, range 2, trigger with settling time (CMD “?U—”, “D2T”).</p> <p>B. Verify Power Meter mode data and range character output per Read Byte Subroutine starting at line 5000. (Data output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic outputs range 2. 3) Range counter is preset to range 2 during Remote Initialize Subroutine.
29	<p>Error — Power Meter range, mode, or data output wrong.</p> <p>Description — Power Meter programmed to dBm mode, range 3, trigger with settling time. Then Power Meter addressed to talk and range mode and data output checked. (Data output should correspond to minimum threshold of dBm range 3, -10 dBm.)</p>	<p>A. Manually program Power Meter to dBm mode, range 3, trigger with settling time (CMD “?U—”, “D3T”).</p> <p>B. Verify Power Meter mode, data, and range character output per Read Byte Subroutine starting at line 5000. (Data output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic outputs range 3. 3) Range counter is preset to range 3 during Remote Initialize Subroutine.

Table 8-4. HP-IB Circuit Troubleshooting (13 of 18)

Error No.	Problem and Description	Corrective Action
30	<p>Error — Power Meter range or mode output character wrong.</p> <p>Description — Power Meter programmed to dBm mode, range 4, trigger with settling time. Then Power Meter addressed to talk and range, mode, and data output checked. (Data output should correspond to minimum threshold of dBm range 4, 0 dBm.)</p>	<p>A. Manually program Power Meter to dBm mode, range 4, triggered with settling time (CMD “?U—”, “D4T”).</p> <p>B. Verify Power Meter mode data, and range character output per Read Byte Subroutine starting at line 5000. (Data output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic outputs range 4. 3) Range counter is preset to range 4 during Remote Initialize Subroutine.
31	<p>Error — Power Meter range, mode, or data output wrong.</p> <p>Description — Power Meter programmed to dBm mode, range 5, trigger with settling time. Then Power Meter addressed to talk and range, mode, and data output checked. (Data output should correspond to minimum threshold of dBm range 5, 10 dBm.)</p>	<p>A. Manually program Power Meter to dBm mode, range 5, trigger with settling time (CMD “?U—”, “D5T”).</p> <p>B. Verify Power Meter mode, data, and range character output per Read Byte Subroutine starting at line 5000. (Data output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic outputs range 5. 3) Range counter is preset to range 5 during Remote Initialize Subroutine.
32	<p>Error — Power Meter range, mode, or data output wrong.</p> <p>Description — Power Meter programmed to dBm mode, auto range, trigger with settling time. Then Power Meter addressed to talk and range, mode, and data output checked. (Data output should correspond to minimum threshold of dBm range 1, -30 dBm.)</p>	<p>A. Manually program Power Meter to dB [REF] mode, auto range, trigger with settling time (CMD “?U—”, “D9T”).</p> <p>B. Verify Power Meter mode, range, and data character output per Read Byte Subroutine starting at line 5000. (Data character output should correspond to indication on Digital Readout previously verified for local operation.)</p> <p>C. Check that:</p> <ol style="list-style-type: none"> 1) Mode select logic outputs dBm mode. 2) Range select logic sets NAUTO output true. 3) Range counter is counted down to range 1 during Power Meter operating program cycle.

Table 8-4. HP-IB Circuit Troubleshooting (14 of 18)

Error No.	Problem and Description	Corrective Action																																
33	<p>Error — Power Meter does not respond properly to device clear.</p> <p>Description — The Power Meter is first programmed to range 5, dBm mode, free run at maximum rate. Then a device clear is sent to the Power Meter to select Watt mode, auto range, hold operation. Following the device clear, a measurement is triggered, the Power Meter is addressed to talk, and the Power Meter status, range, and mode outputs are checked to verify proper response to the device clear.</p>	<p>Turn power on and off to Power Meter. Then GO TO line 1040 and use STEP key to manually execute program line-by-line. Check that the following indications are observed.</p> <p>a. Line 1050 —</p> <ol style="list-style-type: none">1) Power Meter configured for remote operation.2) The following display is observed with logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈. <table><tr><td>10</td><td>001</td><td>010</td><td>1</td><td>11</td><td>000</td><td>001</td><td>5</td></tr><tr><td>10</td><td>001</td><td>011</td><td>2</td><td>01</td><td>000</td><td>011</td><td>6</td></tr><tr><td>00</td><td>001</td><td>100</td><td>3</td><td>01</td><td>000</td><td>011</td><td>7</td></tr><tr><td>00</td><td>001</td><td>101</td><td>4</td><td>01</td><td>000</td><td>011</td><td>8</td></tr></table> <ol style="list-style-type: none">3) dBm output of mode select logic is loaded into mode register. <p>b. Line 1060/2430 —</p> <ol style="list-style-type: none">1) Device clear decoder (Service Sheet 11) generates LPU output in response to device clear command.2) Mode select logic outputs Watt mode in response to LPU input.3) Range select logic sets auto range qualifier true in response to LPU input.4) Measurement rate select logic sets H HOLD output true in response to LPU input.5) Operating program initialized to starting address 000₈ by LPU signal. Program then cycles to Local/Remote Branch Subroutine hold loop (026₈, 042₈, 043₈) when LPU signal is terminated. (During Power Up Subroutine, watt mode output of mode select logic is loaded into mode register.) <p>c. Line 1070 — Measurement triggered and operating program cycles to hold loop in Display and Remote Talk Subroutine. During program cycle, range counter is counted down to range 1.</p> <p>d. Line 1080/2380 — Power Meter outputs correct status, mode, and range characters. Power Meter output can be verified per Read Byte Subroutine starting at line 5000.</p>	10	001	010	1	11	000	001	5	10	001	011	2	01	000	011	6	00	001	100	3	01	000	011	7	00	001	101	4	01	000	011	8
10	001	010	1	11	000	001	5																											
10	001	011	2	01	000	011	6																											
00	001	100	3	01	000	011	7																											
00	001	101	4	01	000	011	8																											
34	<p>Error — Power Meter incorrectly decodes address data as device clear.</p> <p>Description — The Power Meter is programmed to the dBm mode and a measurement is triggered to load the mode select registers. Then a number of ASCII characters are sent to the Power Meter to ensure that it will not erroneously decode these characters as a device clear command. After the last character is</p>	<p>GO TO line 1150 and use STEP key to manually execute test program line-by-line. Check LPU output of device clear decoder (Service Sheet 11) for each ASCII character sent.</p>																																

Table 8-4. HP-IB Circuit Troubleshooting (15 of 18)

Error No.	Problem and Description	Corrective Action
34 (cont)	sent, the Power Meter is programmed to trigger immediate, talk and the mode output is checked to ensure that the Power Meter is still operating in the dBm mode.	
35	<p>Error — Power Meter doesn't go into hold after receiving device clear.</p> <p>Description — A device clear is sent to the Power Meter to select watt mode, auto range operation. Then a 200 ms delay is provided after which the Power Meter is programmed to the dBm mode, range 3, trigger immediate. Following these programming commands, a talk cycle is enabled and the calculator checks Power Meter output status, range, and mode data. The purpose of this test is to verify that the device clear command causes the Power Meter to enter a hold condition while awaiting a trigger command. If the device clear doesn't cause the Power Meter to enter the hold loop, the talk cycle will be enabled before the programming commands are loaded into the mode register and range counter. Thus the Power Meter will output the mode, range, and status selected by the preceding device clear command.</p>	<p>Turn power on and off to Power Meter. Then send the following programming command to configure the Power Meter for remote operation CMD "?U—". After the Power Meter is configured for remote operation, GO TO line 1300 and use STEP key to manually execute program line-by-line. Check that the following indications are observed:</p> <ol style="list-style-type: none"> Line 1300/2430 — Operating program is initialized to starting address 000g by LPU output of device clear decoder. Operating program then cycles to Local/Remote Branch Subroutine hold loop when LPU signal is terminated. Line 1330 — H HOLD output of measurement rate select logic is set false by trigger immediate programming command and operating program cycles to Display and Remote Talk Subroutine hold loop. Line 1340/2380 — Power Meter outputs connect status, range and mode characters. Power Meter output can be verified per Read Byte Subroutine starting at line 5000.
36	<p>Error — Power Meter responds to invalid listen address.</p> <p>Description — The Power Meter is programmed to the watt mode, and a measurement is triggered to load the mode select registers. Then a Power Meter talk cycle is enabled to unaddress the Power Meter to listen. After the talk cycle, false listen addresses are sent to the Power Meter followed by a dBm mode programming command. If the Power Meter is functioning properly it will not respond to the dBm mode programming command because it should not be addressed to listen. Thus, it should output mode character A, thereby indicating that it is operating in the watt mode.</p>	<p>GO TO line 1410 and use STEP key to manually execute program line-by-line. Check that Power Meter is unaddressed to listen in line 1430 and is not addressed to listen in line 1440 (H LSTN test point A11TP4 remains low). If Power Meter is addressed to listen in line 1440 use the following program to isolate the malfunction:</p> <p>CMD "?MS" — (H LSTN test point goes low) CMD "?U—" — (H LSTN test point goes high) CMD "?MS" — (H LSTN test point goes low) CMD "?U%" — (H LSTN test point remains low) CMD "?U)" — (H LSTN test point remains low) CMD "?U," — (H LSTN test point remains low) CMD "?U—" — (H LSTN test point remains low) CMD "?U/" — (H LSTN test point remains low)</p> <p>NOTE</p> <p>Address 102g Q = 0 of Remote Initialize Subroutine has not been previously verified. To verify this address, turn power on and off to Power Meter, set front-panel MODE switch to dBm, then manually program Power Meter to remote mode and then to watt mode, range 3, trigger immediate (CMD "?U—" (CMD "?U—" , "A3I") and check that the following indications are obtained.</p>

Table 8-4. HP-IB Circuit Troubleshooting (16 of 18)

Error No.	Problem and Description	Corrective Action
36 (cont)		<p>1) The following display is obtained with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine address).</p> <pre> 10 001 010 1 11 000 010 5 00 001 011 2 01 000 100 6 00 001 101 3 01 000 100 7 01 000 001 4 01 000 100 8 </pre> <p>2) The watt mode output of the mode select logic is loaded into the mode register during the Remote Initialize Subroutine.</p>
37	<p>Error — Power Meter takes trigger immediate measurement when programmed to trigger with settling time.</p> <p>Description — The Power Meter is first programmed to watt mode, range 2, trigger immediate, then a talk cycle is enabled to cause the Power Meter to enter the Remote Initialize Subroutine hold loop. Following the talk cycle a trigger with settling time programming command is sent to the Power Meter and the calculator checks I/O status after a 200 ms delay. Since the Power Meter is programmed to range 2, access time to the first data character is approximately 1130 ms. Thus, the calculator should detect STAT 13 = 2.</p>	<p>GO TO line 1530 and use STEP key to manually execute program line-by-line. Check that the following indications are obtained:</p> <p>a. Line 1530 —</p> <ol style="list-style-type: none"> 1) L HOLD output of measurement rate select logic is set false by trigger immediate programming command. 2) Operating program branches from Local/Remote Branch Subroutine Hold Loop to Remote Initialize Subroutine. 3) The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address). <pre> 10 001 010 1 11 000 010 5 00 001 011 2 01 000 100 6 00 001 101 3 01 000 100 7 01 000 001 4 01 000 100 8 </pre> <p>b. Line 1550 — The following display is observed with the logic analyzer connected normally (refer to troubleshooting example) and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 10 001 010 1 10 001 111 5 00 001 011 2 00 011 000 6 10 001 101 3 10 011 110 7 00 001 110 4 01 010 111 8 </pre>
38	<p>Error — Power Meter takes trigger with settling time measurement when programmed to trigger immediate.</p> <p>Description — A talk cycle is first enabled to complete the output data transfer initiated for the previous test. Then a trigger immediate programming command is sent to the Power Meter to initiate the next talk cycle and the calculator checks I/O status after a 200 ms delay. Since the Power Meter is programmed to the Watt Mode, worst case access time to the first output data character is 70 ms. Thus, the calculator should detect STAT 13 = 3.</p>	<p>GO TO line 1610 and use STEP key to manually execute program line-by-line. Check that the following display is obtained with the logic analyzer connected normally and set up for single sweep, TRIGGER WORD 012₈ (Remote Initialize Subroutine Address).</p> <pre> 10 001 010 1 11 000 010 5 00 001 011 2 01 000 100 6 00 001 101 3 01 000 100 7 01 000 001 4 01 000 100 8 </pre>

Table 8-4. HP-IB Circuit Troubleshooting (17 of 18)

Error No.	Problem and Description	Corrective Action
39	<p>Error — Power Meter data output wrong when CAL ADJ control is adjusted to obtain .799 mW indication on front-panel Digital Readout.</p> <p>Description — The test number is set to 1 and the Power Meter is programmed to range 3, free run at maximum rate. CAL FACTOR % switch disabled (100%). Then the Power Meter is addressed to talk and the output data is checked after each talk cycle. If the output data does not indicate .799 mW within 300 talk cycles, an error is detected.</p>	<p>NOTE</p> <p><i>Operating program execution and circuit operation previously verified per local checkout procedure except as indicated below.</i></p> <p>Check Power Meter data output per Read Byte Subroutine starting at line 5000.</p>
40	<p>Error — Power Meter data output wrong when CAL ADJ control is adjusted to obtain .866 mW indication on front-panel Digital Readout.</p> <p>Description — The test number is set to 1 and the Power Meter continues to free run at the maximum rate on watt mode range 3. Since the Power Meter is still addressed to talk, it outputs data during each talk cycle and the calculator checks to see if the data indicates .866 mW. If the output data does not indicate .866 mW within 300 talk cycles, an error is detected.</p>	<p>NOTE</p> <p><i>Operating program execution and circuit operation previously verified per local checkout procedure except as indicated below.</i></p> <p>Check Power Meter data output per Read Byte Subroutine starting at line 5000.</p>
41	<p>Error — Device clear command does not disable CAL FACTOR % switch.</p> <p>Description — The verification program halts and the CAL ADJ control is adjusted to obtain a 1.000 mW indication on the front panel digital readout (Power Meter is free running per previous programming commands.) Then the verification program is manually restarted and a cal factor enable programming command is sent to the Power Meter followed by a device clear command. After the programming commands are sent, a talk cycle is enabled and the calculator checks the data output to ensure that the device clear command disabled the CAL FACTOR % switch.</p>	<p>Program Power Meter to free run (CMD “?U—”, “R”). Then GO TO line 2000 and use STEP key to manually exercise program line-by-line. Check that the following indications are obtained:</p> <ol style="list-style-type: none"> Line 2000 — Cal Factor Disable Logic sets Cal Factor Disable output false (front-panel digital readout indication changes from 1.00 mW to 1.17 ± 0.01 mW). Line 2010/2430 — Cal Factor Disable Logic sets Cal Factor Disable output true in response to LPU output of device clear generator. (Device clear places operating program in hold loop; since measurement is not triggered, display does not change.) Line 2030 — Measurement is triggered and front-panel digital readout indication changes to 1.00 mW). 2040/2390 — Power Meter outputs correct data characters. Power Meter data output can be verified per Read Byte Subroutine starting at line 5000.

Table 8-4. HP-IB Circuit Troubleshooting (18 of 18)

Error No.	Problem and Description	Corrective Action
42	<p>Error — Power Meter does not provide under range, watt mode status output.</p> <p>Description — The Power Meter is programmed to range 5, watt mode, and a measurement is triggered. Then a talk cycle is enabled and the calculator checks the Power Meter status output. Since a 1 mW RF level is applied to the Power Sensor, the status output should indicate under range, watt mode.</p>	<p>Manually program Power Meter CMD “?U—”, “A5R”. Check Power Meter status output per Read Byte Subroutine starting at line 5000.</p> <p>NOTE</p> <p><i>Power Meter status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Block Diagram Description, Mode Selection and Linear Under Range Registration.</i></p>
43	<p>Error — Power Meter does not provide under range log mode status output.</p> <p>Description — The Power Meter is programmed to range 5, dBm mode and a measurement is triggered. Then a talk cycle is enabled and the calculator checks the Power Meter output status. Since a 1 mW RF level is applied to the Power Sensor, the status output should indicate under range, log mode.</p>	<p>Manually program Power Meter CMD “?U—”, “D5R”. Check Power Meter status output per Read Byte Subroutine starting at line 5000.</p> <p>NOTE</p> <p><i>Power Meter status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Block Diagram Description, Mode Selection and Log Under-Range Registration.</i></p>
44	<p>Error — Power Meter does not provide over range status output.</p> <p>Description — The Power Meter is programmed to range 2, watt mode, and a measurement is triggered. Then a talk cycle is enabled and the calculator checks the Power Meter status output. Since a 1 mW RF level is applied to the Power Sensor, the status output should indicate an over range condition.</p>	<p>Manually program Power Meter CMD “?U—”, “A2R”. Check Power Meter status output per Read Byte Subroutine starting at line 5000.</p> <p>NOTE</p> <p><i>Power Meter status output is generated by buffering HOR and HUR outputs of over/under range decoder and YM3 output of mode select logic. For a description of circuit operation for this test, refer to Service Sheet 3, Block Diagram Description, Mode Selection and Linear Over-Range Registration.</i></p>
45	<p>Error — Cal factor enable programming command does not enable CAL FACTOR % switch.</p> <p>Description — The Power Meter is programmed to watt mode, range 3, CAL FACTOR. % switch enabled, trigger with settling time. Then a talk cycle is enabled and the calculator checks Power Meter data output. Since CAL FACTOR % switch is now enabled in the 85% position, the data output should be 1.176 ± 0.008 mW. (CAL ADJ control was previously adjusted to obtain a 1.000 mW indication with CAL FACTOR % switch disabled. Disabling the switch is the same as setting it to 100% when it is enabled.)</p>	<p>Manually program Power Meter CMD “?U—”, “+R”. GO TO line 2200 and use STEP key to manually execute program line-by-line. Check that the following indications are obtained:</p> <p>a. Line 2200 — Cal Factor Disable output of Cal Factor Disable logic is set false by programming command (front-panel Digital Readout indication changes from 1.000 mW to 1.176 mW).</p> <p>b. Line 2220/2380 — Power Meter outputs correct data character. Power Meter data character output can be verified per Read Byte Subroutine starting at line 5000.</p>

CIRCUIT DESCRIPTIONS

Paragraphs 8-68, 8-69 and Table 8-5 were deleted.

8-70. BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**8-71. Service Sheet 1**

8-72. The Model 436A is a digital readout Power Meter which can be operated locally via front-panel controls or remotely via the HP-IB Interface Bus (Option 022). The overall power range and frequency response of the Power Meter is determined by the Power Sensor to which it is connected.

8-73. When the Power Meter is operated locally, the Push-Button Switch Assembly enables selection of the measurement mode (dB, watts) and the auto-ranging circuits normally select the most sensitive range for measurement of input power. Should the operator desire to make all measurements on a specific range, however, a RANGE HOLD switch allows the Power Meter to be locked in any one of the five measurement ranges.

8-74. When the Power Meter is operated remotely, the front-panel controls are disabled, and measurement mode and range are selected by programming inputs from the remote interface. Remote operation can only be enabled via the remote interface; it cannot be enabled via the front panel.

8-75. As shown on Service Sheet 1, all of the Power Meter operating functions are enabled and/or sequenced by the outputs of the Controller. These outputs, in turn, are generated by processing the qualifier, mode, and range select inputs according to an operating program stored in a MOS memory chip. Thus, in order to understand the functions of the circuits shown on the block diagram, it is first necessary to consider their relationship to the operating program. An overall flow chart of the operating program is illustrated in Figure 8-15, Sheet 1. As shown in the figure, the operating program is divided into subroutines with each subroutine providing some dedicated function. When the Power Meter is first turned on, the operating program is preset to its power up address and the power up subroutine is executed to initialize the Power Meter circuits. After the power up subroutine is executed, the program cycles normally with one measurement being taken and the results displayed for each cycle. During each cycle, the circuits shown on the block diagram operate as described in the following paragraphs.

a. **Power Sensor, Amplifier, Demodulator, Filter, and True-Range Decoder.** The inputs to these circuits from the Controller are allowed to change only once during each program cycle. Thus, the circuits are, in effect, continuously enabled and provide constant outputs. The outputs of the Amplifier, Filter, and Demodulator Circuits are dc representations of the RF input power level applied to the Power Sensor. The outputs of the True-Range Decoder are reference values which account for the different sensitivities of the various types of Power Sensors that can be used with the Power Meter.

b. **Counters, Clock Generator, and Analog-to-Digital Converter.** The Clock Generator provides program clock outputs which enable sequencing of the operating program and counting of the Up/Down Counters. The Counters are enabled by the Controller to provide timing references for execution of the operating program and to function in conjunction with the Analog-to-Digital (A-D) Converter to convert the dc output of the Amplifier, Demodulator, and Filter Circuit to an equivalent BCD number.

c. **Display.** The Display is updated during each program cycle as required to indicate current range, mode, input power level, and/or over/under-range status. After each update the new indications are continuously maintained until the next update.

d. **Controller.** The Controller provides the necessary hardware/software interface between the operating program and the remainder of the Power Meter circuits.

e. **Pushbutton Switch Assembly.** The Push-button Switch Assembly is enabled when the Power Meter is configured for local operation and is disabled when the Power Meter is configured for remote operation. When enabled, the switches provide continuous mode select and auto-range qualifier outputs which are processed by the Controller once during each operating cycle to enable the desired Power Meter operation.

f. **Remote Interface Circuits.** The Remote Interface Circuits enable the Power Meter to be interfaced to a remote controller via an HP-IB or BCD format. Thus, when remote operation is enabled, these circuits essentially take over the

CIRCUIT DESCRIPTIONS

Service Sheet 1 (cont'd)

functions of the Pushbutton Switch Assembly and the Display in that they provide for remote control of Power Meter operation and remote display of the results. When remote operation is enabled, the Pushbutton Switch Assembly is disabled; the Display, however, remains enabled and provides a local display of the output data transmitted to the remote controller.

g. Power Reference Oscillator. The Power Reference Oscillator is enabled when the front-panel POWER REF ON switch is depressed and provides 1 mW at 50 MHz output for calibration purposes.

h. Power Supply Assembly. The Power Supply Assembly is enabled when the LINE ON-OFF switch is set to the ON position and provides +5, +15, and -15 Vdc outputs necessary for operation of the Power Meter circuits.

8-75. Service Sheet 2

8-76. Amplifier, Demodulator, and Filter Circuit.

The Amplifier, Demodulator and Filter Circuits convert RF input power levels applied to the Power Sensor into proportional dc outputs. The basic operation of these circuits is described in the following paragraphs.

a. The Power Sensor dissipates RF input power into a 50-ohm termination and generates a dc voltage proportional to the RF input power level.

b. The 220 Hz Multivibrator provides the 220 Hz drive signals to the Power Sensor to switch the dc voltage and thereby generate a modulated 220 Hz signal which is proportional in amplitude to the RF input power level and in phase with the 220 Hz reference signal applied to the phase detector.

c. The Power Sensor's Input Amplifier and the Power Meter's First Amplifier function together to amplify the modulated 220 Hz signal by a factor of 600.

d. The overall gain factor of the Second and Third Amplifiers is determined by the RANGE SELECT input to the Range and Filter Control

ROM and the setting of the front-panel CAL ADJ control. The CAL ADJ control is normally set as required to calibrate the Power Sensor and the Power Meter to a known standard. When the CAL ADJ control is set properly, the outputs of the ROM configure the Attenuators such that the minimum and maximum signal levels at A2TP3 (AC) are the same for each range. (For either Watts or dB measurements an in-range input power level corresponds to a 0.3 to 3.6 Vp-p signal level at A2TP3.)

e. The Phase Detector functions as a chopper-stabilized amplifier to remove any noise riding on the modulated 220 Hz input. Thus, the output of the Phase Detector is an unfiltered dc signal which is proportional to the true amplitude of the modulated 220 Hz input signal.

f. The Meter Driver Amplifier buffers the ϕ DET output and applies it to the front-panel Meter (M1) via an RC filter and a diode limiter network. Since the response of the meter is not limited by the Variable Low-Pass Filter, the meter serves to provide relatively instantaneous indications of changes in input power level. Calibration of the meter to the front-panel Digital Readout is accomplished via the METER ADJ control.

g. The diode limiter clips over range outputs of the Phase Detector to reduce the time that it takes for the Variable Low-Pass Filter to respond to a full-scale change in input signal level. The response time of the Filter varies with the bandpass selected by the outputs of the ROM. For ranges 5, 4, and 3, the bandpass is 17 Hz. For ranges 2 and 1, the bandpass is reduced by factors of ten to 1.7 Hz and 0.17 Hz, respectively. These bandpass values represent the optimum tradeoff between filter response time and signal-to-noise ratio. On the higher ranges, the gain of the Power Meter is relatively low and the 17-Hz bandpass enables the Filter to respond to a full-scale change in input signal level in 0.1 second (see Figure 3-7). On the lower ranges, the gain of the Power Meter increases and a higher noise level is present at the output of the Phase Detector. Thus, a narrower bandpass is required to maintain the desired signal-to-noise ratio at the input of the A-D Converter. The time required for the Filter to respond to a full-scale change in input signal level is 1 second on range 2 and ten seconds on range 1.

CIRCUIT DESCRIPTIONS

Service Sheet 2 (cont'd)

h. The DC Amplifier buffers the output of the Filter and applies it to the A-D Converter for conversion to a BCD number. The gain of the DC Amplifier is 1 when the CAL FACTOR % switch is set to 100. The gain increases by approximately 1% for each lower-numbered position. The switch is normally set to the position specified on the Power Sensor's CAL FACTOR curve. When the switch is set properly, the output of the DC Amplifier in millivolts indicates the numeric value of the RF input power level. The decimal point and multiplier are provided by the True Range Decoder.

8-77. Auto-Zero Assembly. The Auto-Zero Assembly's function is to remove any dc offset voltage associated with the Power Sensor. When the front-panel SENSOR ZERO switch is pressed, the Controller activates the Sensor Auto-Zero Enable input for a period of approximately four seconds. While this input is active, a feedback loop is configured between the Auto-Zero Assembly and the Power Sensor to allow a capacitor in the Auto-Zero circuit to charge to a value that cancels the dc offset of the Power Sensor. Loop stability is achieved when the Mount Auto-Zero output of the Auto-Zero Assembly holds the dc level at A3TP4 (DC) at $0.000 \pm 0.002V$. After the Sensor Auto-Zero Enable input is terminated, the feedback loop is broken, and the capacitor is held at the charged value. Thus the Mount Auto-Zero output continues to cancel the dc offset of the Power Sensor, thereby allowing accurate measurement of RF input power levels.


8-78. Analog-to-Digital (A-D) Converter. The Analog-to-Digital Converter (Figure 8-18) operates together with the Counters (see Service Sheet 3) to convert the dc output of the Amplifier, Demodulator, and Filter Circuits to a four-digit BCD number which indicates the numeric value of the RF input power level applied to the Power Sensor. Operation of the A-D Converter can be divided into three basic functions, auto-zero function, measurement function, and conversion function. As shown in Figure 8-15, Sheet 1, a subroutine is dedicated to each of these functions and the functions are performed in sequence during every program cycle. (Additional auto-zero functions may be enabled at other times in the program cycle if various predetermined operating conditions are detected.) During the auto-zero subroutine, a feedback loop is

closed to remove any dc offset voltage present at the reference (+) input of the Ramp Generator. During the measurement subroutine, the Ramp Generator is charged to -7 times the dc input value. During the conversion subroutine, the Ramp Generator is discharged at a linear or exponential rate and the Counters are clocked to measure the time that it takes for the Ramp Generator to discharge through threshold.

8-79. A-D Converter Auto-Zero Function. The auto-zero function is enabled when the Controller activates the AUTO-ZERO ENABLE input to the A-D Converter. During the Auto-Zero subroutine, this input is maintained for 133 ms (the Controller enables the main Counter when the input is activated, and terminates the input when the count reaches 8000). For auto-zero functions generated at other points in the program cycle, the auto-zero timing interval varies according to the instantaneous conditions detected. While the AUTO-ZERO ENABLE input is active, the Auto-Zero Switch is closed and a feedback loop is configured from the output of the Comparator to the positive input of the Ramp Generator. Loop stability is achieved when capacitor C1 charges such that the output of the Comparator is 2.00 Vdc. When the Auto-Zero Enable input is terminated, the Auto-Zero Switch is opened and the charge on C1 holds the output of the Comparator at 2.00 Vdc which is the appropriate mid-range value for initiating the measurement function.


8-80. A-D Converter Measurement Function. The measurement function is initiated when the Controller activates the Load DC INPUT. This input is then maintained active for approximately 33 ms. (The Controller enables the Main Counter when the input is activated and terminates the input when the output of the Main Counter reaches 2000.) While the input is active, the DC Input Switch is closed to allow C3 to charge to -7 times the DC Input level. When the input is terminated, the DC Input Switch is opened and the Controller enables a linear or log conversion to discharge C3.

8-81. A-D Converter Linear Conversion. A linear conversion function is selected to discharge C3 when the Power Meter is configured for WATT MODE operation. During the conversion, C3 is discharged at the rate of 3 mV per clock pulse, and the Main Counter is counted up from 0000 on

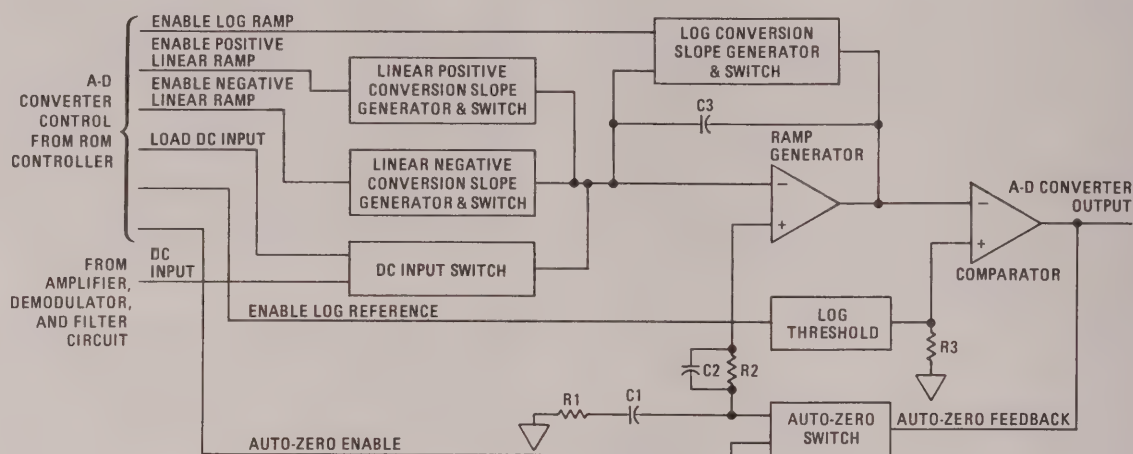

A. A-D CONVERTER FUNCTIONAL BLOCK DIAGRAM

B. LINEAR POSITIVE CONVERSION WAVEFORMS

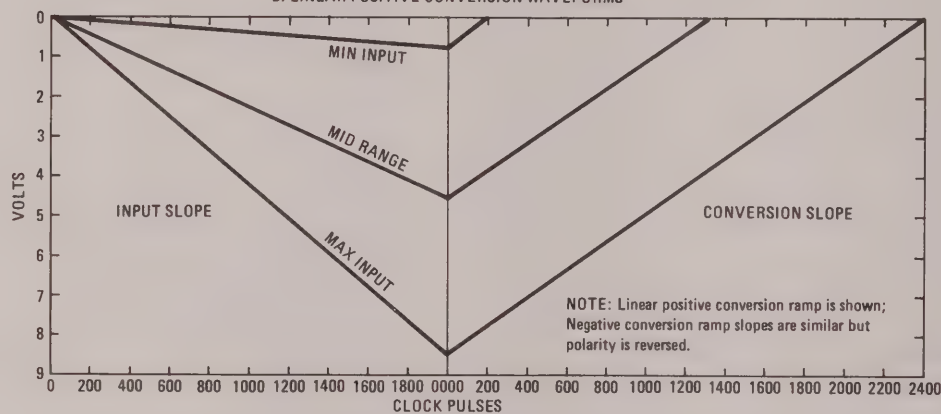

C. LOG CONVERSION WAVEFORMS

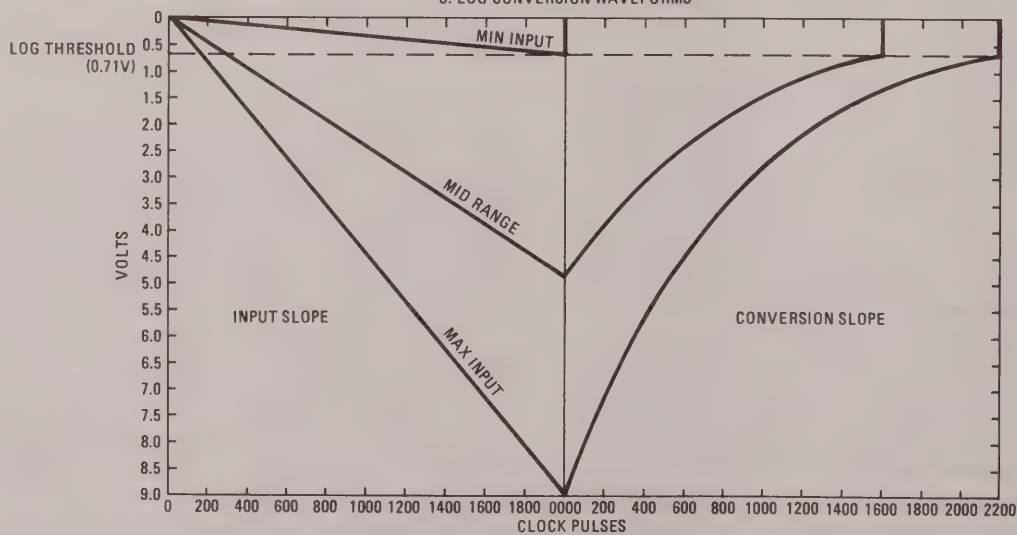


Figure 8-18. Analog-to-Digital Converter Simplified Diagram and Waveforms

CIRCUIT DESCRIPTIONS

Service Sheet 2 (cont'd)

every other clock pulse. Thus, the Main Counter is incremented each time that C3 is discharged by 7 mV. Since C3 was charged to -7 times the dc input level during the measurement function, each count represents a 1 mV dc input level. When C3 is fully discharged, then the output of the Main Counter is equal to the original dc input in millivolts. As stated previously, this number represents the RF input power level applied to the Power Sensor.

8-82. The operating sequence for the linear conversion function is described in the following paragraphs.

a. The Controller first checks the A-D qualifier output of the Comparator. If the qualifier is a logic one, the Controller activates the LRP input to enable a positive conversion. If the qualifier is a logic 0, the Controller activates the LRM input to enable a negative conversion. The LRP or LRM input is then held active for the duration of the conversion.

b. After the LRP or LRM input is activated, the Controller alternately monitors the qualifier outputs of the Comparator and the Main Counter to detect completion of the conversion when the Comparator qualifier changes state, or when the output of the Main Counter reaches 1200. If the Comparator's output changes state before the output of the Main Counter reaches 0100, an under-range conversion is detected. If the output of the Comparator does not change state by the time the output of the Main Counter reaches 1200, an over-range conversion is detected. If the output of the Comparator changes state anywhere between these two points in time, the Controller detects an in-range conversion.

c. When the Controller detects that the conversion is completed, it terminates the LRP or LRM input and updates the front-panel status and Digital Readout indications as described in Service Sheet 3.

8-83. A-D Converter Log Conversion. A log conversion function is selected to discharge C3 when the Power Meter is configured for dB operation. This function is similar to a linear conversion except as noted below.

a. The LRL input is activated to discharge C3 at an exponential rate so that the output of the counter indicates the RF input power level in dB.

b. The LLGR input is activated to change the Comparator's threshold input to -0.71V so that an under-range condition is detected if C3 charges to less than this value during the measurement function. (The negative linear conversion mentioned above serves to indicate high noise levels at the input to the Power Sensor. Any true input power level will cause a positive dc input to be applied to the A-D Converter.)

c. An over-range conversion is detected if the A-D qualifier does not change state before 1100 counts ($> +1.26\text{ Vdc}$ input).

d. The Controller may cause the Instruction Decoder to execute a dB relative conversion before updating the front-panel Digital Readout indication. During the dB relative conversion, the output of the counter is changed to indicate the RF input power level with respect to a reference value stored previously (refer to Service Sheet 3).

8-84. True-Range Decoder. The function of the True-Range Decoder is to indicate the power level represented by the dc voltage at A3TP4 (DC) and, if the power level is to be displayed in dB, to preset the Main Counter to the minimum threshold of the range selected. The Power Meter has five measurement ranges. Each range covers a power of ten ($1\text{--}12\mu\text{W}$, $10\text{--}120\mu\text{W}$, $100\mu\text{W}\text{--}1.2\text{ mW}$, etc.) and slightly overlaps the previous range to prevent ambiguous measurements. The exponents assigned to the five ranges vary according to the sensitivity of the Power sensor in use. Thus, the indication displayed for any range is only relative until the sensitivity of the Power Sensor is factored in. The True-Range Decoder accomplishes this by determining the sensitivity of the Power Sensor from the Mount Resistor Input, then combining this information with the Range Select and Log Mode outputs of the Controller to address a ROM. The resulting outputs of the ROM are described in the following paragraphs.

a. **True-Range Exponent:** This output is provided for both linear and dB operation of the Power Meter and consists of a five-bit binary code which indicates the input power level as 10^{-X}

CIRCUIT DESCRIPTIONS

Service Sheet 2 (cont'd)

b. Watts Mode, True Range: This output is provided only for linear operation of the Power Meter (LOG Mode input inactive) and lights a front-panel lamp to indicate that the Digital Readout is in Watts (W), milliwatts (mW), microwatts (μ W), or nanowatts (nW).

c. True-Range Counter and Sign Preset: This output is provided only for dB operation of the Power Meter (Log Mode input active) and presets the Main Counter to the predetermined value assigned as the starting point for the particular dB range selected. (For any A-D conversion, the Main Counter is always preset to the lowest value associated with a particular range and then counted in the direction of increasing power. When WATT Mode operation of the Power Meter is selected, the starting value for each range is ± 0000 . When dB mode operation of the Power Meter is selected, the starting point for each range depends on the sensitivity of the Power Sensor; e.g. for the -10 dB range the Main Counter is preset to 2000 and the sign is preset to $-$, for the 20 dB range, the Main Counter is preset to 1000 and the sign is preset to $+$).

d. Decimal Point Select: This output is provided for both linear and dB operation of the Power Meter and lights the appropriate decimal point on the Digital Readout to indicate the true sensitivity of the range selected (e.g., 1.000 mW, 10.00 mW, 20.00 dB, etc.).

8-85. Display Assembly. The Display Assembly indicates the Power Meter's operating mode and range status, and displays the sign and numeric value of the RF input power level applied to the Power Sensor. The status indications are provided via individual light emitting diode (LED) indicators that are turned on and off independently by the inputs from the Controller and the True-Range Decoder. The power level indications are displayed via numeric segment indicators (Digital Readout). The sign indication is controlled directly by the output of the Controller. When the Display Sign $-$ (minus) input is active, the center segment of the first indicator is lighted to display a minus ($-$) sign; when the input is not active, the segment is turned off to indicate a positive sign.

8-86. The numeric value indication is effected by clocking the BCD output of the Main Counter into

the Display Drivers on the positive-going edge of the Display Count Strobe. The Display Drivers then convert the BCD input into a format that lights individual segments of the numeric indicators to form a decimal number. (Decimal point positioning is controlled by the Decimal Point Select output of the True-Range Decoder.) The LBLANK input to the Display Drivers is activated to blank all but the most significant digit for various under and over-range conditions. Similarly, the Display Drivers also employ a ripple blanking capability to turn off the most significant digit when it is a zero.

8-87. Service Sheet 3

8-88. General. In order to understand the operation of the circuits shown on the block diagram, it is necessary to consider Power Meter operation in terms of the operating program stored in the State Controller. As stated previously, the program is executed on a cyclic basis with one measurement taken and the results displayed per cycle. On Figure 8-15, Sheet 1, it is shown that each cycle starts when the program enters the Local/Remote Branch or Local Initialize Subroutines and ends when the program exits the Display and Remote Talk Subroutine. Between these two points in time a number of additional subroutines are executed to control circuit operation on a step-by-step basis. Each step is a two-way communication between the program and one or more circuits. The talk lines are the outputs of the Instruction Decoder, and the listen lines are the qualifier inputs to the Line Selector. To effect the communication, each step occupies two addresses to allow an either/or decision and to select the next step (refer to paragraph 8-94, Program Execution). Since the decisions are made in series, each subroutine can be viewed as a sequential logic circuit charged with the responsibility of controlling one or more operating functions.

8-89. For purposes of definition, the Power Meter operating functions can be divided into two classes, fixed and variable. Fixed functions are basic to each measurement and are performed during each cycle. Variable functions are associated with a particular mode, measurement status, etc. They are performed only when a predetermined condition is detected during execution of the program cycle. On Figure 8-15, Sheet 1, fixed functions are

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

indicated by a single-line exit from a subroutine; variable functions are indicated by multi-line exits.

8-90. For maintenance purposes, it is convenient to think of each operating function as a window that can be opened or closed at some point in the program cycle. In some cases the program opens the window for a fixed amount of time to enable the function, then closes the window to terminate that function. In other cases the program opens the window and latches a circuit to keep it open for the remainder of the cycle. This type of window is then checked at the start of each future program cycle. If the type of operation selected does not change, the circuit is relatched to keep the window open for another cycle. If the type of operation changes, the circuit is unlatched and a new circuit is latched to keep a different window open during the program cycle.

8-91. In order to understand Power Meter operation to the level required for troubleshooting, it is necessary to know exactly when, why, and how a window is opened or closed to enable or terminate an operating function. Table 8-6 is provided as an aid to this understanding. This table describes the function(s) of each address or group of addresses, and references a signal flow description which indicates how the hardware circuits operate to perform the function. To close the theory/trouble-

shooting loop, an additional reference is made to a checkout procedure which can be used to verify that the function was performed properly.

8-92. The best way to use the information in Table 8-6 is in small segments. Refer to Figure 8-15 and follow program execution starting at the Power Up Subroutine. If circuit operation is obvious, go on to the next subroutine. If it is not obvious, refer to Table 8-6 and proceed to the Block Diagram Description referenced. The Block Diagram Descriptions are written in terms of hardware operation. They summarize qualifier/instruction communication and concentrate on explaining how the instruction is processed to enable the function, and on how the qualifier is generated to indicate status. After a general understanding of hardware operation is gained, go back to Figure 8-15 and trace out the address branching required to effect the qualifier/instruction communications talked about in the Block Diagram Description. When a logic analyzer is available, each of these address branches serve as a valuable tool for troubleshooting. Overall circuit operation can be rapidly analyzed by looking at key addresses within the subroutines (refer to example provided under TROUBLESHOOTING, Table 8-3, Standard Instrument Checkout.) When the problem is isolated to a circuit, additional addresses can be selected as sync points for checking circuit operation on a step-by-step basis.

Table 8-6. Operating Program Descriptions (1 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer to	Block Diagram Description	
					Service Sheet	Title
Power Up	000	Blank Display (LSOR; UNDER RANGE or OVER RANGE indicator will light depending on whether under/over range decoder powers up in set or reset mode).	Address 001 ₈	Table 8-3, Step 1	2 3	Display Assembly Program and Remote Interface Circuit Initialization.
	001, 032, 033	a. Count to range counter down to range 0 (LCRD)	Address 034 ₈	Table 8-3, Step 1	10	Range Counter
		b. Clear main counter and set sign positive (LCLR)		Table 8-3, Step 1	9	Main Counter
		c. Load contents of main counter (0000) into reference register to clear register (LLRE)		Table 8-3, Step 1	9	Reference Register
		d. Display blanked count and sign (0_ . _ _) (LTC) Note: _ indicates blanked digit		Table 8-3, Step 1	6	Display Assembly
	034	a. Auto zero A-D converter for 8000 counts (LAZ, LCNT)	Address 035 ₈	Table 8-3, Step 1	2 3	A-D Converter, Auto-Zero Function A-D Converter Auto-Zeroing
		b. Count range counter down to range 7 (LCRD)			10	N/A (Circuit Operation covered under Digital Integrated Circuits and Symbols)
	035	a. Count range counter down to range 5 (LCRD)	Local/Remote Branch Subroutine Address 026 ₈	Table 8-3, Step 1	10	Digital Integrated Circuits and Symbols)
		b. Load mode select input into mode register (LCKM)			3	
	026	Check whether local or remote operation is selected (Remote, 037 ₈)	a. Local initialize subroutine, address 052 for local operation.	Table 8-3, Step 1	3	Program Execution
			b. Address 042 for remote operation	Table 8-4, Error #3 (HP-IB Opt.)	4	Remote Enable

Table 8-6. Operating Program Descriptions (2 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Local/ Remote Branch (cont'd)	042	Check whether free run or triggered operation is selected	a. Branch to Remote Initialize sub-routine, Address 012 for free run or if trigger is received to initiate program cycle b. 043 if trigger not received	Table 8-4, Error #3 (HP-IB Option)	3 4	Program Execution Measurement Rate Programming Command Processing
	043	Auto-zero A-D Converter one count (LAZ)	Address 026	Table 8-4, Error #3, (HP-IB Option)	2, 3	A-D Converter Auto-Zero Function
Remote Initialize	012	a. Hold range selected in previous program cycle if autoranging selected (Blank Instruction) b. Load remote range select inputs into range counter if autoranging not selected (LLRA)	Address 013 Address 013	Table 8-4, Error #3 (HP-IB Opt.) Table 8-4, Error #4 and 4.5 (HP-IB Option)	3 4	Range Selection Range Programming Command Processing
	013, 014	a. Count range counter down to range 5 if range 6 or 7 selected (LCRD) b. Clear main counter (LCLR)	Address 015 Address 015	Not verified Table 8-4, Error #4, 4.5 & 12 (HP-IB Option)	3 4 9	Range Selection Range Programming Processing N/A (Circuit Operation covered under Digital Integrated Circuits & Symbols)
	015	a. Check whether delayed or immediate measurement enabled (FAST, 035 _g)	Address 016 for delayed measurement Address 101 for immediate measurement	Table 8-4, Error #3 (HP-IB Option) Table 8-4, Error #33 (HP-IB Option)	3 4	Program Execution Measurement Rate Programming Command Processing

Table 8-6. Operating Program Descriptions (3 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Remote Initialize (Cont'd)	016, 017, 030, 031	a. Determine Range (YR1, YR2, YR3)	Auto-Zero subroutine, Address 056, for range 3,4,or 5	Table 8-4, Error #11 and 12 (HP-IB Option)	3	Range Selection,
		b. Load mode select inputs into mode register	Delay subroutine, Address 036, for range 1 or 2	Table 8-4, Errors #4, 4.5 and 5 (HP-IB Option)		Mode Selection
	101, 102	a. Determine mode selected for previous program cycle	Address 104 if Watts mode was selected for previous program cycle	Table 8-4, Error #36 (HP-IB Option)	3	Mode Selection
		b. Load mode select inputs into mode register to select mode for current program cycle (LCKM)	Address 103 if Watts mode was not selected for previous program cycle	Table 8-4, Errors #3 and 33 (HP-IB Option)		
	103	a. Auto-zero A-D converter for 1000 counts (LAZ, LCNT)	Address 104	Table 8-4 Error #33 (HP-IB Option)	2, 3	A-D Converter Auto-Zero Function
		b. Clear main counter (LCLR)				
	104	a. Auto-zero A-D converter for 1000 counts (LAZ, LCNT)	Measurement Sub-routine Address 061	Table 8-4, Error #33 (HP-IB Option)	2, 3	A-D Converter Auto-Zero Function
		b. Clear main counter (LCLR)				
Local Initialize	052, 053, 054, 055	a. Count range counter down to range 5 if range 0, 6, or 7 is selected (LCRD) b. Load mode select inputs into mode register	Auto-Zero Sub-routine, Address 056	Table 8-3, Step 1 (range 5 branch) Step 14 (range 3 branch) Step 19 (range 1 branch) Step 24 (mode register loaded)	3	Range Selection, Mode Selection

Table 8-6. Operating Program Description (4 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Auto-Zero Subroutine	056	Clear main counter (LCLR)	Address 057	Table 8-3, Step 1	2, 3	A-D Converter Auto-Zero Function
	057	a. Auto-zero A-D converter for 8000 Counts (LAZ, LCNT) b. Clear main counter (LCLR)	Measurement Sub-routine Address 061			
Measurement Subroutine	061, 062	a. Load dc input voltage into A-D converter for 2000 counts (LINP, LCNT) NOTE <i>Ramp charges to -7.09 times dc input.</i> b. Clear main counter (LCLR)	Address 063	Table 8-3, Step 1	2, 3	A-D Converter Measurement Function
	063, 064	a. Check mode selected b. Load outputs for true-range decoder into sign detector and main counter if dBm, dB [REF], or dB (REL) mode selected.	Address 065 for WATT mode Address 066 for dBm dB [REF] or dB (REL) mode	Table 8-3, Step 1 Table 8-3, Step 24 (dBm mode) Step 32 (dB [REF] mode)	3 3	Mode Selection A-D Converter Log Conversion
	065, 037	a. Check whether A-D ramp has changed to negative or positive dc input b. Load outputs of true-range decoder (-sign, 0000 count) into sign detector and main counter (LPSC) if dc input was negative, indicating negative power (noise) input c. Enable A D ramp positive-conversion slope (LRMP) is dc; input was positive	Linear Negative Conversion Subroutine, Address 076, for negative dc input Linear Positive Conversion Subroutine, Address 071, for positive dc input	Table 8-3, Step 10 Table 8-3, Step 1	2, 3	A-D Converter Linear Conversion
	066, 051, 107	a. Check whether dc input is under range (A-D ramp input slope does not exceed log threshold) b. Light UNDER RANGE lamp (LSUR) and blank display (LSOR) if dc input under range	Under Range Subroutine, Address 174 if dc input under range Log Conversion Subroutine, Address 136 if dc input not under range	Table 8-3, Step 24 Table 8-3, Step 25	2, 3	A-D Converter Log Conversion

Table 8-6. Operating Program Description (5 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Measurement Subroutine (cont'd)	066, 051, 107 (cont'd)	c. Enable A-D ramp log-conversion slope (LRMP) if dc input not under range.				
Linear Positive-Conversion Subroutine	067, 071, 072, 073, 074, 075	a. Enable linear positive-conversion ramp (LRMP) and count main counter up on every other clock pulse (LCNT) b. Check A-D converter output qualifier prior to each count to detect under-range, in-range or over-range condition c. Detect under-range (address 067) if A-D converter output qualifier changes state before main counter is counted up 100 counts d. Detect in-range condition (address 072 or 074) if A-D converter output qualifier changes state between 100 and 1199 counts e. Detect over-range condition (address 075) if A-D converter output qualifier does not change state before 1200 counts f. Clear over/under range decoder (LCOR)	Under-Range Subroutine Address 174 if <100 counts Display and Remote Talk Subroutine Address 177, if between 100 and 1199 counts Over Range Subroutine, Address 147, if 1200 counts	Table 8-3, Step 7 Table 8-3, Step 1 (addresses 071, 067, 072, 073) Step 3 (addresses 074, 075) Step 6 (address 074 LCOR instruction) Table 8-3, Step 5	2, 3	A-D Converter Linear Conversion
Linear Negative-Conversion Subroutine	076, 077, 130, 131, 132, 133	a. Enable linear negative conversion ramp (LRMP) and count main counter up on every other clock pulse (LCNT) b. Check A-D Converter output qualifier prior to each count to detect under-range, in-range or over-range condition c. Detect under range (address 077) if A-D converter output qualifier changes before main counter is counted up to 100 counts.	Under Range Subroutine Address 174 if < 100 counts Display and Remote Talk Subroutine, Address 177, if between 100 and 1199 counts	Table 8-3, Step 10 (addresses 076, 130, 077) Table 8-3, Step 38 (addresses 130, 131) Steps 39 and 42 (addresses 131, 132, 133) Step 41 (address 131, LCOR instruction)	2, 3	A-D Converter Linear Conversion

Table 8-6. Operating Program Description (6 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Linear Negative-Conversion Sub-routine (cont'd)		d. Detect in range condition (address 131 or 133) if A-D converter output qualifier changes between 100 and 1199 counts. e. Detect over range condition (address 134) if A-D converter output qualifier does not change state before 1200 counts f. Clear over/under range decoder (LCOR)	Over Range Sub-routine, address 147 if 1200 counts	Table 8-3, Step 40		
Log Conversion	135, 136, 137, 150, 151, 152, 153, 154, 155, 156, 157, 160, 161, 162, 163, 164, 165, 166, 167	NOTE <i>For log (dB) conversion, the main counter can be preset to a negative number and counted down, or it can be preset to a positive number and counted up. In addition, if the output of the main counter reaches 0000 when it is being counted down, a borrow pulse is generated to change the direction of counting. The count decoding of this subroutine is such that an in-range measurement is detected whenever the A-D converter output qualifier changes state before 1100 clocks are applied to the main counter regardless of the direction of counting.</i> a. Enable log-conversion ramp (LRMP) and count main counter up or down on every other clock pulse (LCNT) b. Check A-D converter output qualifier prior to each count to detect in-range or over-range condition c. Detect in-range condition (address 135, 137, 151, 153, 155, 157, 161, 165), if A-D Converter output qualifier changes state before 1100 counts	dB Relative Sub-routine, address 170, if <1100 counts Over range sub-routine, address 147, if >1100 counts	Table 8-3, Step 25 (address 135) Table 8-3, Step 26 (address 135, 136 137, 150, 151, 152) Step 27 (address 153, 154) Step 28 (address 155, 156, 157, 160, 161, 162, 163, 164, 165)	2, 3	A-D Converter Log Conversion

Table 8-6. Operating Program Description (7 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer to	Block Diagram Description	
					Service Sheet	Title
Log Conversion (cont'd)		d. Detect over-range condition (address 164 or 167) if A-D converter output does not change state by 1100 counts e. Clear over/under-range decoder (LCOR)		Step 31 (addresses 163, 164 165, 166, 167)		
Relative dB	170	Check whether dBm mode selected	Display and Remote Talk Subroutine, Address 177, if dBm mode selected Address 171 if dBm mode not selected	Table 8-3, Step 25 Table 8-3, Step 32	3	Mode Selection
	171,172, 141, 173	a. Store contents of main counter in reference register (LLRE) if dB [REF] mode selected b. Load contents of reference register into relative counter (LCOR) and set NRZO qualifier logic 1 c. Count relative counter down (LREL) to 0000 (NRZO=0) and count main counter up or down (LCNT) as required to algebraically subtract reference from measured power level.	Display and Remote Talk Subroutine Address 177	Table 8-3, Step 32 (except address 171, YMI branch) Step 33 (address 171, YMI branch)	3	dB Relative Conversion
Under-Range	174,175	Light UNDER RANGE lamp (LSUR) if measurement was taken on ranges 2 through 5	Address 176 if measurement was taken on ranges 2 through 5 Over/Under Range Continue Subroutine Address 047 if measurement was taken on ranges 0 or 1	Table 8-3, Step 7 (range 5) Step 15 (range 3) Table 8-3, Step 20	2 3	Display Assembly A-D Converter Linear Under-Range Conversion A-D Converter Log Under-Range Conversion Range Selection
	176	Blank display (LSOR) if auto-ranging enabled	Address 105 if auto ranging enabled Over/Under Range Continue Subroutine Address 047 if auto-ranging not enabled	Table 8-3, Step 8 Table 8-3, Step 7		

Table 8-6. Operating Program Description (8 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Under-Range (cont'd)	105	Count range counter down one range (LCRD)	Auto Zero Sub-routine Address 056 if measurement was taken on range 4 or 5 Delay Subroutine, Address 036, if measurement was taken on range 2 or 3	Table 8-3, Step 8 Table 8-3, Step 15		
Over-Range	147	Blank Display (LSOR)	Over/Under Range Continue Sub-routine, Address 047, if auto-ranging is not enabled Address 146 if auto-ranging is enabled	Table 8-3, Step 5 (LSOR instruction) Step 6 (branch to address 047) Table 8-3, Step 9	2 3	Display Assembly A-D Converter Linear Over-Range Conversion
	145, 146	Count range counter up one range if measurement was taken on range 2, 3, or 4	Auto-Zero Sub-routine, Address 056, if measurement was taken on range 0, 2, 3, or 4 Address 143 if measurement was taken on range 0, 1 or 5	Table 8-3, Step 9 (range 4) Step 22 (range 2) Table 8-3, Step 21		A-D Converter Log Over-Range Conversion Range Selection
	143	Count range counter up one range if measurement was taken on range 1	Delay Subroutine, Address 036, if measurement was taken on range 1. Over/Under Range Continue Sub-routine, Address 047, if measurement was taken on range 5	Table 8-3, Step 21 Table 8-3, Step 36		
Over/Under Range Continue	047	Clear main counter (LCLR) if dB [REF] or dB (REL) mode selected	Display and Remote Talk Subroutine Address 177, if Watt or dBm Mode Selected Address 040 if dB [REF] or dB (REL) mode selected	Table 8-3, Step 6 Table 8-3, Step 36	3	dB Relative Conversion
	050	Load contents of main counter into reference register (LLRE) if dB [REF] mode selected	Display and Remote Talk Subroutine, Address 177	Table 8-3, Step 36 (dB (REL) mode) Step 37 (dB [REF mode)		

Table 8-6. Operating Program Description (9 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Delay	036, 127, 113, 116, 117, 115	Auto-Zero A-D Converter for 666 ms (main counter is cleared by LCLR instruction, auto-zeroing is enabled by LAZ and LCNT instructions. Auto zero period is 8000 counts for each address) NOTE <i>This subroutine is associated with range 1 and 2 measurements. It essentially serves as a program pause to allow the output of the variable low-pass filter to settle.</i>	Address 006	Table 8-3, Step 15	2 2, 3	Amplifier, Demodulator & Filter Circuits A-D Converter Auto-Zero Function
	006	Check whether local or remote operation is enabled (REMOTE 37 ₈)	Auto-Zero Subroutine, Address 056 for local operation Address 120 for remote operation	Table 8-3, Step 15	3 4 5	Program Execution Remote Enable General Description
	120	Check whether immediate or delayed measurement is enabled	Auto-zero subroutine, Address 056 for immediate measurement Address 123 for delayed measurement		3 4 5	Program Execution Measurement Rate Programming Command Processing Measurement Rate Programming, Remote Qualifier/Program Interface and Talk Cycle
	123, 122	Auto-zero A-D Converter for 267 ms (main counter is cleared by LCLR instruction; auto-zeroing is enabled by LAZ and LCNT instructions. Auto-zero period is 8000 counts for each address)	Auto-Zero subroutine, address 056	Table 8-4, Errors # 4, and 4.5 (HP-IB Option) Table 8-5, Step 3 (BCD Option)	2, 3	A-D Converter Auto-Zero Function
Display and Remote Talk	177	Transfer count and sign to front panel display and inform remote interface circuits that measurement completed (LTC)	Address 022	Table 8-3 Step 1	2 2, 3	Display Assembly True-Range Decoder A-D Converter Linear Conversion A-D Converter Log Conversion

Table 8-6. Operating Program Description (10 of 11)

Sub-Routine	Address	Function	Branch To	Troubleshooting Refer To	Block Diagram Description	
					Service Sheet	Title
Display and Remote Talk (cont'd)	022	Auto-zero A-D converter for one count (LAZ)	Address 023	Table 8-3, Step 2	2, 3	A-D Converter Auto-Zero Function
	023	Check whether remote talk selected (TALK 32 ₈)	Address 024 if remote talk not selected. Address 044 if remote talk selected	Table 8-3, Step 2	3 4	Program Execution Talk Cycle
					5	Measurement Rate, Programming, Remote Qualifier/Program Interface, and Talk Cycle
	024	Check whether free-run or triggered operation is selected (HOLD 036 ₈)	Local/Remote Branch Subroutine, Address 026, for free-run or if trigger is received to initiate new program cycle Address 025 if trigger is not received	Table 8-3, Step 2	3 4	Program Execution Measurement Rate Programming Command Processing
					5	Measurement Rate Programming, Remote Qualifier/Program Interface, and Talk Cycle
	025	Check whether local or remote operation is selected (REMOTE 037 ₈)	Local Initialize Subroutine, Address 052 for local operation Address 022 for remote operation	Not Verified	3 4	Program Execution Remote Enable
					5	General Description
	044	Check whether remote listener ready for data (RFDQ, 34 ₈)	Address 022 if remote listener not ready for data Address 045 if remote listener ready for data	Table 8-4, Error #1 (HP-IB Option); (N/A for BCD Option)	3 4	Program Execution Talk Cycle
					5	Measurement Rate Programming, Remote Qualifier/Program Interface and Talk Cycle
	045	Check whether data accepted line set (DACQ, 31 ₈)	Local/Remote Branch Subroutine Address 045, if line set Address 046 if line reset	Not Verified Table 8-4, Error #1 (HP-IB Option) Table 8-5, Step 2 (BCD Option)	3 4	Program Execution Talk Cycle
					5	Measurement Rate Programming, Remote Qualifier/Program Interface and Talk Cycle

Table 8-6. Operating Program Description (11 of 11)


Sub-Routine	Address	Function	Branch To	Troubleshooting Refer to	Block Diagram Description	
					Service Sheet	Title
Display and Remote Talk (cont'd)	046	Set data valid line to enable output data transfer (LSDAV)	Address 110	Table 8-4, Error #1 (HP-IB Option) Table 8-5, Step 2 (BCD Option)	3 4 5	Program Execution Talk Cycle Measurement Rate Programming, Remote Qualifier/ Program Interface and Talk Cycle
	110	Check whether data accepted line set to indicate data received OK (DACQ, 31 ₈)	Address 111 if data accepted	Table 8-4, Error #1 (HP-IB Option) Table 8-5, Step 2 (BCD Option)	3 4 5	Program Execution Talk Cycle
			Address 106 if data not accepted	Table 8-5, Step 3 (BCD Option) (N/A for HP-IB Option)		
	106	Auto-zero A-D converter one count (LAZ)	Address 110	Table 8-5, Step 3 (BCD Option); (N/A for HP-IB Option)	2	Analog-to-Digital Converter Auto-Zero Function
	111	Reset data valid line to indicate data transferred (LSDAV)	Address 112	Table 8-4, Error #1 (HP-IB Option) Table 8-5, Step 3 (BCD Option)	3 4 5	Program Execution Talk Cycle Measurement Rate Programming, Remote Qualifier/ Program Interface, and Talk Cycle
	112	Check whether Power Meter has more data for remote listener (MORE DATA 33 ₈)	Address 110 if more data	Table 8-4, Error #1 (HP-IB Option) (N/A for BCD Option)	3 4 5	Program Execution Talk Cycle Measurement Rate Programming, Remote Qualifier/ Program Interface, and Talk Cycle
			Local/Remote Branch Subroutine Address 026 if no more data	Table 8-4, Error #2 (HP-IB Option) Table 8-5, Step 3 (BCD Option)		

CIRCUIT DESCRIPTIONS

8-93. Program and Remote Interface Circuit Initialization. When power is turned on, a Master Reset (LPU) is generated by the Power Up Detector to select local operation of the Power Meter (refer to Service Sheets 4 and 5) and to initialize the operating program to power up address 000₈. If the Power Meter is subsequently configured for remote operation and a device clear input is received, the remote interface circuits also generate a power up reset. The power up reset output of the Remote Interface Circuits reinitializes the operating program to power up address 000₈ but it does not terminate remote operation. Instead, it presets the Remote Interface Circuits to select the following operating conditions: WATT MODE, Range 6 (counted down to range 5 before measurement), Autoranging enabled, CAL FACTOR % switch disabled.

8-94. Program Execution. The operating program consists of a group of 16-bit data words stored in the State Controller. The words are designated by address with 000₈ being the lowest address and 377₈ being the highest address. As stated previously, a power up reset signal (LPU) is generated by the Controller when power is turned on to initialize the program to starting address 000₈. From then on the program is self-executing with branching between the words being controlled by the Power Meter operating conditions detected. Thus, the program is essentially a sequential logic circuit which interfaces with the Power Meter hardware circuits to control their operation. General processing of the operating program by the Controller is illustrated in Figure 8-15, Sheets 2 and 3. In the following examples, specific words are used to illustrate Controller circuit operation associated with local and remote qualifier selection.

A. Example 1. Local Qualifier Selection; Starting Address 000₈.

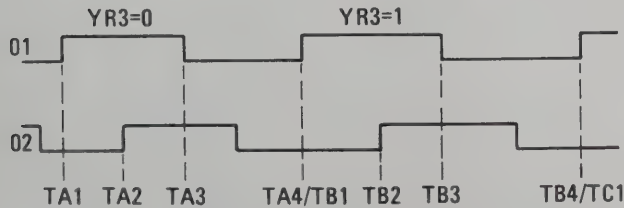

BIT	Qualifier Select Code				Instruction Select Code				Next Address Select Code							
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Word 000 ₈	X	X	X	X	1	0	1	0	1	0	0	0	0	0	0	1
No qualifier associated with word 000 ₈					05 ₈ (LSOR)				001 ₈							

1. TA1 — Leading edge of first 01 Clock following termination of Power Up Reset (LPU).
 - a. Address 001₈ clocked into State Register and applied to State Controller.
 - b. State Controller produces word 001₈:

	Qualifier				Instruction				Next Address							
	Select Code				Select Code				Select Code							
BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Word 001 ₈	1	0	1	1	0	1	1	0	1	0	0	1	1	0	1	0
	13 ₈ (YR3)				15 ₈ (LCLR)				032 ₈							

- c. Line Selector produces qualifier 13₈ (YR3).
2. TA2.
 - a. YR3 qualifier (logic 1) clocked into Qualifier Register and applied to State Controller (State Controller address changed to 201₈). Qualifier Register not clocked again until TB2.
 - b. State Controller produces word 201₈.

	Qualifier Select Code				Instruction Select Code				Next Address Select Code							
BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Word 201 ₈	1	0	1	1	0	1	0	0	0	0	0	0	0	0	0	1
	13 ₈ (YR3)				10 ₈ (LCRU)				(001 ₈ +Q=1) = 201 ₈							

3. TA3 — Instruction Decoder enabled; LCRU instruction generated to count down Range Counter.

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

4. TA4/TB1

- Address 001 clocked into State Register and applied to State Controller.
- Qualifier Register output still high (logic 1) so State Controller produces word 201₈.

5. TB2

- YR3 qualifier (logic 0) clocked into Qualifier Register and applied to State Controller. Qualifier Register not clocked again until TC2.

b. State Controller produces word 001₈.

6. TB3 — Instruction Decoder enabled; LCLR instruction generated to clear Main Counter.

7. TB4/TC1


- Address 032₈ clocked into State Register and applied to State Controller (A=logic 0).

b. State Controller produces word 032₈.

8. TC2/TC3, etc. — Cycle continues as described in steps 1 through 7.

B. Example 2. Remote Qualifier Selection; Starting Address 035₈

	Qualifier Select Code				Instruction Select Code				Next Address Select Code							
BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Word 035 ₈	1	0	1	0	0	1	0	1	1	0	0	1	0	1	1	0
	12 ₈ (YR2)				13 ₈ (LCKM)				(026 ₈ + Q=0) = 026 ₈							

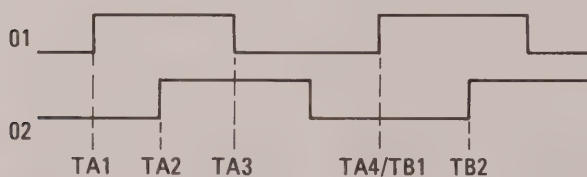

1. TA1

- Address 026₈ clocked into State Register and applied to State Controller.
- Qualifier Register output is logic 0, so State Controller produces word 026₈.
- Remote Qualifier (YRMT) is input to Line Selector via Multiplexer in Remote Interface Circuits. When Instruction Code 30₈

through 37₈ and Qualifier Select Code is 17₈, Instruction Decoder is disabled and Remote Qualifier is applied to State Controller via Line Selector.

2. TA2

- Remote Qualifier clocked into Qualifier Register and applied to State Register.
- If qualifier is low (logic 0), State Controller continues to output word 026₈; if qualifier is high (logic 1), then word 226₈ is produced.

	Qualifier Select Code				Instruction Select Code				Next Address Select Code								
BIT	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Word 226 ₈	X	X	X	X	1	1	1	1	1	0	1	0	1	0	1	0	
	37 ₈									(052 ₈ + Q=1) = 252 ₈							

3. TA3 — No operation, Instruction Decoder disabled by Instruction Select Code.

4. TA4/TB1

- Next Address Select Code locked into State Register.
- State Controller produces word 042₈ or 252₈.

5. TB2, etc. — Cycle repeated as described in steps 1 through 4.

8-95. As illustrated in the examples, the operating program is not addressed in numerical order. To simplify the understanding of how the program causes the circuits to operate, Figure 8-15 is arranged so that all of the words associated with a particular function are grouped together and designated a subroutine. After the power up subroutine is completed, a complete program cycle is executed for each measurement. The cycle is considered to start at the Local Initialize or Local/Remote Branch subroutine and to end at the Display and Remote Talk Subroutine. (When auto-ranging is enabled and an out-of-range measurement is obtained, a measurement sub-loop is enabled to prevent completion of the program

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

cycle until an in-range measurement is obtained on any range, or an out-of-range measurement is obtained on the last range.) When local operation is selected, the program is allowed to free run and measurements are taken asynchronously to changes in the RF input power level. When remote operation is selected, an additional capability is provided to enable the start of each program cycle to be triggered by an external input. Thus, for remote operation, measurements can be taken synchronously or asynchronously to changes in the RF input power level.

8-96. Mode Selection. The Mode Select inputs are applied to the Controller in a "WIRED OR" configuration to enable either Local or Remote mode selection. When the Power Meter is configured for Local Operation, the Remote Enable input to the Pushbutton Switch Assembly is high and the Mode Select outputs of the Remote Interface Circuits are set to the logic 1 (+5V) state. Thus, the Pushbutton Switch Assembly is enabled to select the operating mode for the Power Meter. When the Power Meter is configured for remote operation, the Remote Enable input is low, the outputs of the Pushbutton Switch Assembly are held at logic 1, and the Mode Select outputs of the Remote Interface Circuits select the operating mode of the Power Meter.

8-97. The Mode Select inputs (IYM1 and IYM2) are coded as indicated below to select the operating mode of the Power Meter. These inputs are clocked into the Mode Register at the start of each program cycle by the LCKM output of the Instruction Decoder. The resultant outputs of the Mode Register are then gated together for the duration of the program cycle to provide the following signals as required to implement the operating mode selected.

Mode	IYM2	IYM1
WATT	1	0
dB (REL)	0	1
dB [REF]	0	0
dBm	1	1

a. **Mode Qualifiers.** These outputs are coded as listed above to indicate the operating mode

selected. They are accessed at various points in the program cycle to control program branching and/or instruction generation.

b. **dBm Mode Selected.** When the dBm Mode is selected, this output is active and lights the front-panel dBm indicator.

c. **Log Mode and YLog.** These outputs are active when either the dBm, dB [REF], or dB (REL) Mode is selected. The Log Mode signal forms part of the address applied to the True-Range Decoder. The YLOG signal is gated with other inputs by the Up/Down Count Control Logic to control the direction in which the Main Counter counts when enabled by the Controller.

d. **Mode Bits 1 and 2.** Mode Bits 1 and 2 are coded as listed previously to indicate to the Remote Interface Circuits which operating mode is selected for the Power Meter. Additionally, the NM2 signal is also applied to the Display Assembly to light the dB (REL) indicator when the dB Relative Mode is selected.

8-98. When the front-panel SENSOR ZERO switch is pressed, the NZR input to the Auto-Zero Timer enables the Sensor Zero output to be activated for a period of approximately four seconds. While this signal is active it overrides the Mode Select inputs to the Buffers and sets the IYM2 and the IYM1 outputs to 1 and 0, respectively. Thus if the Power Meter was not configured for Watts Mode operation when the SENSOR ZERO switch was pressed, Watts operation will be enabled at the start of the first program cycle after the Sensor Zero signal is activated. The Power Meter will then return to the operating mode selected by the Mode Select inputs at the start of the first program cycle following termination of the Sensor Zero signal. While the Sensor Zero signal is active, the remaining outputs of the Buffers are active and provide the following functions:

a. **Sensor Auto-Zero Enable.** This output is applied to the Auto-Zero circuits to close the feedback loop to the Power Sensor.

b. **Sensor Auto-Zero Status.** This output is applied to the Display Assembly to light the ZERO indicator.

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

c. RF Blanking. This output is available at a rear panel connector for suppression of an external instrument's RF output.

8-99. Range Selection. The Auto-Range Qualifier input is applied to the Controller in a "WIRED OR" configuration to enable local or remote control of this function (Remote Enable line high or low, respectively). When this input is low, the operating program is enabled to count the Range Counter up (LCRU instruction) or down (LCRD instruction) as required to obtain an in-range measurement. When the input is high, the operating program is inhibited from changing the range upon detection of an under-range or an over-range condition. Thus, for local operation a high Auto-Range Qualifier input causes the Power Meter to hold the last range previously selected in the Power Up Subroutine or during execution of the operating program. For remote operation, a high Auto-Range Qualifier input causes the Remote Range Select inputs to be loaded into the Range Counter at the start of each program cycle to select a specific range for each measurement.

8-100. In addition to checking the Auto-Range Qualifier at various points in the program cycle, the operating program also checks for an invalid range selection at the start of each cycle. When remote operation is selected, ranges 6 and 7 are considered invalid; when local operation is selected, range 0 is also considered invalid. Upon detection of an invalid range, the operating program generates LCRD instructions as required to count the Range Counter down to range 5.

8-101. A-D Converter Auto-Zero Function. The Controller and Main Counter operating cycle associated with auto-zeroing the A-D Converter is described in the following paragraphs.

a. The Controller first generates an LCLR instruction to set the output of the Main Counter to 0000 and to store a positive sign in the Sign Latch (YSPL high, NSPL low).

b. The Controller then generates LAZ and LCNT instructions on the trailing edge of every 01 Clock Pulse while monitoring the Count Qualifier outputs of the Main Counter. The LCNT instructions are processed by the Up/Down Count

Control Logic as indicated in Table 8-7 to provide Up Clock outputs to the Main Counter. The LAZ instructions are clocked into the A-D Control Register by the HPLS 2 clock, thereby maintaining a continuous LAZO output to the A-D Converter.

c. When the Count Qualifier outputs equal a predetermined value stored in the operating program, the Controller terminates the LAZ and LCNT instructions and generates an LCLR instruction. The LCLR instruction returns the output of the Main Counter to 0000 and stores a positive sign in the Sign Latch (YSPL high; NSPL low). The absence of the LAZ instruction causes the HPLS 2 clock pulse to reset the LAZO output of the A-D Control Register, thereby terminating the Auto-Zero function.

8-102. A-D Converter Measurement Function. The Controller and the Main Counter operating cycle associated with the measurement function is the same as described before for the Auto-Zero Function except that an LINP instruction is generated in lieu of an LAZ instruction. The LINP instruction enables the LRIN output of the A-D Control Register. This output is then maintained for 33.32 mS (Main Counter is counted up to 2000) to allow the A-D ramp to charge to -7 times the dc input voltage.

8-103. A-D Converter Linear Conversion. An A-D converter linear conversion is enabled following the measurement function when the Power Meter is configured for WATT MODE operation. The Controller and Main Counter operating cycle associated with a linear conversion is described in the following paragraph.

a. The Controller checks the A-D Converter qualifier to ascertain whether it represents a positive or negative input power level. (A negative power level indicates a high noise condition at the input to the Power Sensor). If it represents a negative power level, an LPSC instruction is generated to load the True-Range Counter and Sign Preset inputs into the Main Counter and Sign Latch, respectively. For WATT MODE operation these inputs are such that the output of the Main Counter remains at 0000 and the output of the Sign Latch changes to indicate a negative sign.

Table 8-7. Up/Down Count Control Logic Steering

Function	Inputs to Up/Down Count Control Logic							Output	Notes
	LCNT	LREL	YLOG	YSPL	NSPL	YSPL-Ref	NSPL Ref		
A-D Converter Auto-Zeroing and DC Input Loading	Pulse	High	X	High	X	X	X	Up Clock	1
A-D Converter Linear Conversion	Pulse	X	Low	X	X	X	X	Up Clock	1
A-D Converter dB Conversion	Pulse	High	High	High	X	X	X	Up Clock	1, 2
	Pulse	High	High	Low	X	X	X	Down Clock	1, 2
Counter dB Rel Conversion	Pulse	Pulse	High	High	Low	High	Low	Up Clock	3
	Pulse	Pulse	High	High	Low	Low	High	Down Clock	3
	Pulse	Pulse	High	Low	High	High	Low	Down Clock	3
	Pulse	Pulse	High	Low	High	Low	High	Up Clock	3

NOTES:

1. X indicates don't care.
2. Main Counter is always preset to minimum threshold of range selected (−20.00 dBm, +10.00 dBm, etc.) and counted in direction of increasing power. Thus, if Sign Latch is preset positive, Main Counter is counted up; if Sign Latch is preset negative, Main Counter is counted down. If Main Counter is counted through 0000 Borrow output toggles Sign Latch thereby causing output and count direction to reverse.
3. The purpose of the dB Relative function is to indicate an input power level with respect to a reference value stored in the Reference Register. This function is effected as follows:
 - a. First the dB value of the RF input power level is acquired via an A-D conversion.
 - b. The reference number stored in the Reference Register is loaded into the Relative Counter.
 - c. The Relative Counter is counted down to 0000.
 - d. The sign of the stored reference is compared with the sign of the RF input power level. If the signs are the same the Main Counter is counted down to "subtract" the reference value from the measured value; if the signs are not the same, the Main Counter is counted up to "add" the reference value to the measured value.
 - e. If the Main Counter is counted down through 0000, the Borrow output resets the Sign Latch and the count direction is reversed.
 - f. When the Relative Counter output is 0000, the Main Counter output indicates the measured value with respect to the stored reference.

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

b. The Controller then monitors the count and A-D qualifier inputs while generating an LRMP instruction on the negative alternation of every 01 clock pulse and an LCNT instruction on the negative alternation of every other 01 clock pulse. The LCNT instructions are processed by the Up/Down Count Control Logic as indicated in Table 8-7 to provide up clock inputs to the Main Counter. The LRMP instructions are clocked into the A-D Control Register by the HPLS 2 clock, thereby providing a continuous Ramp Enable output to the A-D Control Gates. This signal is then gated with the outputs of the Sign Latch and the YLOG signal to provide a continuous LRP output when the sign of the input power level is positive, and a continuous LRM output when the sign of the input power level is negative.

c. The continuous LRP or LRM input causes the A-D ramp to be discharged at a constant rate. If the ramp discharges through threshold in less than 0100 counts, an under-range condition is detected. If the ramp does not reach threshold by 1200 counts, an over-range condition is detected. If the ramp reaches threshold between these two points in time, an in-range condition is detected.

8-104. A-D Converter Linear Under-Range Registration. Registration of a linear under-range conversion is described in the following paragraphs.

a. The LRMP instruction is disabled, causing the HPLS 2 clock to reset the LRP or LRM output of the A-D Control Register and gates. With this signal reset, the LRP or LRM output of the A-D Control Gates is disabled, thereby terminating the conversion.

b. The LCNT instruction is also terminated to "freeze" the number in the Main Counter.

c. An LCOR instruction is generated to reset the outputs of the Over/Under Range Decoder.

d. If the measurement was taken on range 1, and LTC instruction is generated to transfer the output of the Sign Latch to the Sign Display Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Registers, and to indicate to the Remote Interface Circuits that the measurement is completed.

e. If the measurement was taken on ranges 2 through 5 with Auto-Ranging disabled, an LSUR instruction is generated prior to the LTC instruction to enable the UR LED and HUR status outputs of the Over/Under Range Decoder. The UR LED output lights the front-panel UNDER RANGE indicator. The HUR output is gated with the HOR output by the Remote Interface Circuits to provide one of four possible status outputs to the Remote Interface Control Circuit.

f. If the measurement was taken on ranges two through five with Auto-Ranging enabled, an LTC instruction is not generated. Instead, an LSOR instruction is generated to enable the LBLANK output of the Over/Under Range Decoder and thus blank the front panel display. (An LCOR instruction resets all outputs of the Over/Under Range Decoder. An LSOR instruction enables the LBLANK, HOR, and OR LED outputs. An LSUR instruction enables the HUR and UR LED outputs and resets the OR LED output; it does not affect the LBLANK or HOR outputs. The Over/Under Range Decoder outputs are not processed by the Remote Interface Circuits until an LTC instruction is generated.) Following the LSOR instruction, and LCRD instruction is generated to count the Range Counter down one range, then another measurement is taken. This cycle is repeated until either an in range measurement is obtained, or the Range Counter is counted down to range 1. Registration of an in-range condition is accomplished the same as for a range 1 under-range condition.

8-105. A-D Converter Linear In-Range Registration. Registration of a linear in-range conversion is accomplished as previously described for an under-range, range 1 condition.

8-106. A-D Converter Linear Over-Range Registration. Registration of an over-range conversion is described in the following paragraphs.

a. The LRMP instruction is disabled, causing the HPLS 2 clock to reset the LRP or LRM output of the A-D Control Register and gates and thereby terminating the conversion.

b. The LCNT instruction is also terminated to "freeze" the number in the Main Counter.

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

c. An LCOR instruction is generated to reset the outputs of the Over/Under Range Decoder.

d. If the measurement was taken on ranges 5 or on ranges one through four with Auto-Ranging disabled, an LSOR instruction is generated to enable the OR LED, HOR, and LBLANK outputs of the Over/Under Range Decoder. The OR LED output lights the front-panel OVER RANGE indicator, the LBLANK output blanks the front-panel numeric display, and the HOR output is gated with the HUR output by the Remote Interface Circuits to provide one of four status outputs to the Remote Interface Controller. After the LSOR instruction is generated, an LTC instruction is generated to transfer the output of the Sign Latch to the front-panel Sign Display Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Registers, and to indicate to the Remote Interface Circuits that the measurement is completed. Since the LBLANK output is active at this time, only the most significant digit of the Main Counter output is displayed on the front-panel.

e. If the measurement was taken on ranges one through four with Auto-Ranging enabled, an LTC instruction is not generated after the LSOR instruction. Instead, an LCRU instruction is generated to count the Range Counter up one range, then another measurement is taken. This cycle is repeated until either an in-range measurement is obtained, or the Range Counter is counted up to range five.

8-107. A-D Converter Log Conversion. A log conversion is enabled following the measurement function when the Power Meter is configured for dBm, dB [REF], or dB (REL) Mode operation. The Controller and Main Counter operating cycle associated with this conversion is described in the following paragraphs.

NOTE

An LCLR instruction is generated following the measurement function to set the output of the Main Counter to 0000, and to store a positive sign in the Sign Latch.

a. The Controller generates an LPSC instruction to load the True-Range Counter and Sign

Preset outputs of the True-Range Decoder into the Main Counter and Sign Latch, respectively. As stated on Service Sheet 2, these inputs correspond to the minimum threshold of the range selected. The threshold can be either a positive or negative number (−1000, +2000, etc.) and, for any given range, it is determined by the overall sensitivity of the Power Sensor in use.

b. The Controller checks the state of the A-D qualifier input to determine whether the dc input has caused the A-D ramp to exceed the value of the log threshold. (When the YLOG input to the A-D Control Gates is active, the LLGR output is enabled to select the log threshold whenever the A-D Converter is not being auto-zeroed.) If the A-D qualifier input is 0V, indicating that the ramp has not charged through threshold, the Controller detects an under-range conversion. Registration of the under-range conversion is described below.

c. If the A-D qualifier is +5V, indicating that the ramp has charged through threshold, the Controller alternately monitors the count and A-D qualifier inputs while generating an LRMP instruction on the negative alternation of each 01 clock pulse and an LCNT instruction on the negative alternation of every other 01 clock pulse. The LCNT instructions are processed by the Up/Down Count Control Logic as indicated in Table 8-7 to provide up or down clock outputs to the Main Counter. The LRMP instructions are clocked into the A-D Control Register by the HPLS 2 clock, thereby providing a continuous ramp enable output to the A-D Control Gates. Since the YLOG input to the A-D Control Gates is also active, the gates provide a continuous LRL output along with the LLGR output to enable the log conversion slope of the A-D ramp.

d. The continuous LRL output causes the A-D ramp to be discharged at an exponential rate. If the ramp discharges through threshold in less than 1100 counts, an in-range conversion is detected. If the ramp does not reach threshold by 1100 counts, an over-range conversion is detected. Registration of in-range and over-range conditions is covered in the following paragraphs.

8-108. A-D Converter Log Under-Range Registration. Registration of a log under-range conversion is described in the following paragraphs.

CIRCUIT DESCRIPTIONS

a. The Controller generates an LSUR instruction followed by an LSOR instruction to enable the UR LED, HUR, HOR, and LBLANK outputs of the Over/Under Range Decoder. The UR LED output lights the front-panel UNDER RANGE indicator and the LBLANK output blanks the front-panel display. The HUR and HOR outputs are gated together by the Remote Interface Circuits to provide one of four possible status outputs to the Remote Interface Controller.

b. If the measurement was taken on ranges 2 through 5 with Auto-Ranging enabled, and LCRD instruction is generated to count the Range Counter down one range, then another measurement is taken. This cycle is repeated until an in-range measurement is obtained or the Range Counter is counted down to range 1.

c. If the measurement was taken on range 1, or on ranges 1 through 5 with Auto-Ranging disabled, an LCRD instruction is not generated to count the Range Counter down. Instead, the Mode Qualifier Bits are checked to determine whether dBm, dB (REL), or dB [REF] operation is selected. If dBm operation is selected, an LTC instruction is generated to transfer the output of the Sign Latch to the front-panel Sign Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Registers, and to indicate to the Remote Interface Circuits that the measurement is completed. If dB (REL) operation is selected, an LCLR instruction is generated prior to the LTC instruction to set the output of the Main Counter to 0000. If dB [REF] operation is selected, an LLRE instruction is generated after the LCLR instruction and before the LTC instruction to load the 0000 output of the Main Counter into the Reference Register, thereby clearing any reference value previously stored. (Refer to the paragraph dB (REL) Conversion.)

8-109. A-D Converter In-Range Registration. Registration of an in-range conversion is described in the following paragraphs.

a. The LRMP instruction is terminated, causing the HPLS 2 clock to reset the LRMP output of the A-D Control Register. With this signal reset, the LRL output of the A-D Control Gates is disabled, thereby terminating the conversion.

b. The LCNT instruction is also terminated to "freeze" the number in the Main Counter.

c. An LCOR instruction is generated to reset the outputs of the Under/Over Range Decoder.

d. The Mode Qualifier Bits are checked to determine whether dBm, dB (REL), or dB [REF] operation is selected. If dBm operation is selected, an LTC instruction is generated to transfer the output of the Sign Latch to the front-panel Sign Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Registers, and to indicate to the Remote Interface Circuits that the measurement is completed. If dB [REF] or dB (REL) operation is selected, a relative dB conversion is performed as described below before the LTC instruction is generated.

8-110. A-D Converter Log Over-Range Registration. Registration of an over-range conversion is described in the following paragraph.

a. The LRMP instruction is terminated, causing the HPLS 2 clock to reset the LRMP output of the A-D Control Register. With this signal reset, the LRL output of the A-D Control Gates is disabled, thereby terminating the conversion.

b. The LCNT instruction is also terminated to "freeze" the number in the Main Counter.

c. An LCOR instruction is generated to reset the outputs of the Over/Under Range Decoder.

d. If the measurement was taken on range 1 through 4 with Auto-Ranging enabled, an LCRU instruction is generated to count the Range Counter up one range, then another measurement is taken. This cycle is repeated until an in-range measurement is obtained or the Range Counter is counted up to range 5.

e. If the measurement was taken on range 5, or on ranges 1 through 4 with Auto-Ranging disabled, an LCRU instruction is not generated to count the Range Counter up. Instead, the Mode Qualifier Bits are checked to determine whether dBm, dB (REL) or dB [REF] operation is selected. If dBm operation is selected, an LTC instruction is generated to transfer the output of the Sign Latch

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

to the front-panel Sign Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Register, and to indicate to the Remote Interface Circuits that the measurement is completed. If dB (REL) operation is selected, an LCLR instruction is generated prior to the LTC instruction to set the output of the Main Counter to 0000. If dB [REF] operation is selected, an LLRE instruction is generated after the LCLR instruction and before the LTC instruction to load the 0000 output of the Main Counter into the Reference Register, thereby clearing any reference value previously stored. (Refer to paragraph dB (REL) Conversion.)

8-111. A-D Converter dB (REL) Conversion. A dB (REL) conversion is performed after an in-range log conversion when the Power Meter is configured for dB [REF] or dB (REL) Mode operation. The purpose of this conversion is to indicate the RF input power level with respect to a stored reference. The reference is selected by pressing the dB [REF] switch when the desired level is applied to the Power Meter. While the dB [REF] switch is pressed, the reference is updated during each program cycle. When the dB [REF] switch is released, the reference is "frozen" and the Power Meter is automatically configured for dB (REL) operation on the next program cycle. The Power Meter will then remain configured for dB (REL) operation until WATT or dBm MODE operation is subsequently selected.

8-112. When the Mode Qualifier Bits indicate that the dB [REF] mode is selected, an LLRE instruction is generated after an in-range log conversion to load the outputs of the Main Counter and the Sign Latch into the Reference Register. (Power Meter accuracy specifications apply to in-range measurements. If the dB [REF] mode is selected and an out-of-range log conversion is detected, an LCLR instruction is generated prior to the LLRE instruction to set the output of the Main Counter to 0000 and to store a positive sign in the Sign Latch. Thus, the Reference Register is effectively cleared to prevent an inaccurate reference from being used as the basis of future dB (REL) indications.) After the measured value is stored in the Reference Register, a dB (REL) conversion is enabled to indicate the measured value with respect to the stored reference. At the end of this conversion the

output of the Main Counter will be 0000 because the measured value and the reference value were equal at the start of the conversion. The Controller then continues to enable one log and one dB [REF]/dB(REL) conversion per program cycle until the dB [REF] switch is released and the Mode Qualifier Bits change to indicate that the dB (REL) Mode is enabled. Following each dB [REF]/dB(REL) conversion, the outputs of the Main Counter (0000) are loaded into the front-panel Display Register by the LTC instruction.

8-113. When the dB [REF] switch is released, the new Mode Select Code is loaded into the Mode Register at the start of the next program cycle to enable the dB (REL) mode. For this mode an LLRE instruction is not generated after an in-range log conversion. Thus, the reference stored during the last program cycle is used for each dB relative conversion. The Controller and Main Counter operating cycle associated with the dB relative conversion is described in the following paragraphs.

a. An LCOR instruction is generated to load the output of the Reference Register into the Relative Counter and to set the Relative Counter = 0 (NRZ0) qualifier to logic one. When this qualifier subsequently changes state, the Controller will detect that the conversion is completed.

b. The Controller generates an LREL instruction to count the Relative Counter down one count. This is necessary because the Relative Counter has to be clocked one count past 0000 to change the state of the Relative Counter = 0 (NRZ0) qualifier.

c. The Controller monitors the Relative Counter = 0 qualifier (set to logic 1 by LCOR instruction) while generating LREL and LCNT instructions on the trailing edge of every negative alternation of the 01 clock pulse. The LREL instructions serve as down clocks to the Relative Counter and are gated with the LCNT instruction by the Up/Down Count Control Logic to provide up or down clock outputs to the Main Counter as indicated in Table 8-7. Note that up clocks are provided when the signs of the input and reference power levels are different and down clocks are provided when the signs are same. Note also that if the Main Counter is counted down through 0000, the Borrow output of the Main Counter toggles the

CIRCUIT DESCRIPTIONS

Service Sheet 3 (cont'd)

Sign Latch, causing the sign outputs and, thus, the direction of counting to change. As illustrated in the examples below, this counting technique comprises an algebraic subtraction with the input power level representing the minuend and the reference power level representing the subtrahend.

Input Power Level	+5.00 dB	+5.00 dB	+5.00 dB
	—	—	—
Reference Level	+3.00 dB	+7.00 dB	—5.00 dB
Result	+2.00 dB	—2.00 dB	+10.00 dB
Input Power Level	—5.00 dB	—5.00 dB	—5.00 dB
	—	—	—
Reference Level	—3.00 dB	—7.00 dB	+5.00 dB
Result	—2.00 dB	+2.00 dB	—10.00 dB

d. When the Relative Counter = 0 qualifier changes state, the Controller detects that the conversion is completed and terminates the LREL and LCNT instructions. At this point, the outputs of the Main Counter and the Sign Latch indicate the input power level with respect to the stored reference.

e. After terminating the LREL and LCNT instructions, the Controller generates an LTC instruction to transfer the output of the Sign Latch to the front-panel Sign Indicator via the Display Sign Latch, to load the output of the Main Counter into the Display Register, and to indicate to the Remote Interface Circuits that the measurement is completed.

8-114. Service Sheet 4

8-115. General. The Hewlett-Packard Interface Bus circuits (Option 022) add talker/listener capability to the Power Meter. When the listener function is selected, the Power Meter accepts programming inputs asynchronously to the operating program and stores the data so that it can be accessed during each program cycle. When the talker function is selected, the Power Meter outputs measurement and status data in a bit-parallel, word-serial format during the display and remote talk subroutine.


8-116. The descriptions which follow assume a basic understanding of Hewlett-Packard Interface Bus (HP-IB) operation. For additional information

covering HP-IB operation, refer to "Hewlett-Packard Interface Bus Users Guide" (HP Part No. 59300-90001 for HP 9820, and 59300-90002 for HP 9830) and "Condensed Description of the Hewlett-Packard Interface Bus" (HP Part No. 59401-90030).

8-117. Command Mode Operation.

8-118. The HP-IB circuits are placed in the command mode when the Remote Interface Controller sets the command mode enable (ATN) line low. In this mode the HP-IB circuits will respond to a listen address, a talk address, an unlisten command, a universal device clear command, an interface clear (IFC) input, and a remote enable (REN) input.

8-119. Handshake Timing. When the HP-IB circuits are in the command mode, the LATN output of the Clock Generator is held low to disable the Function Decoder and to enable the Listen Transfer Control Gates. (The LATN input to the Listen Transfer Control Gates is OR'ed with the L Listen input so that the gates are also enabled when the bus is in the data mode and the Power Meter is addressed to listen.) While the Listen Transfer Control Gates are enabled, they function in conjunction with the Clock Generator to generate the NRFD and NDAC outputs necessary to complete each Remote Interface Controller initiated data transfer cycle. (When the gates are disabled, the NRFD and NDAC outputs are set high so that they will not interface with HP Interface Bus operation.) When the Remote Interface Controller has data available, it sets the DAV line low, thereby enabling the Clock Generator to set the Data Accept Clock low a short time later as shown in Figure 8-19. The Listen Transfer Control Gates, in turn, process the low Data Accept Clock to set the NRFD line low (Not Ready For Data) and the NDAC line high (Data Accepted). These outputs are then maintained until all instruments on the HP Interface Bus indicate that they have accepted the data. When this occurs, the Remote Interface Controller sets the DAV line high, thereby terminating the Data Accept Clock a short time later. With the Data Accept Clock terminated, the NRFD output of the Listen Transfer Control Gates is set high (ready for data) and the Data Accept line is reset low to enable the next data transfer initiated by the Remote Interface Controller.

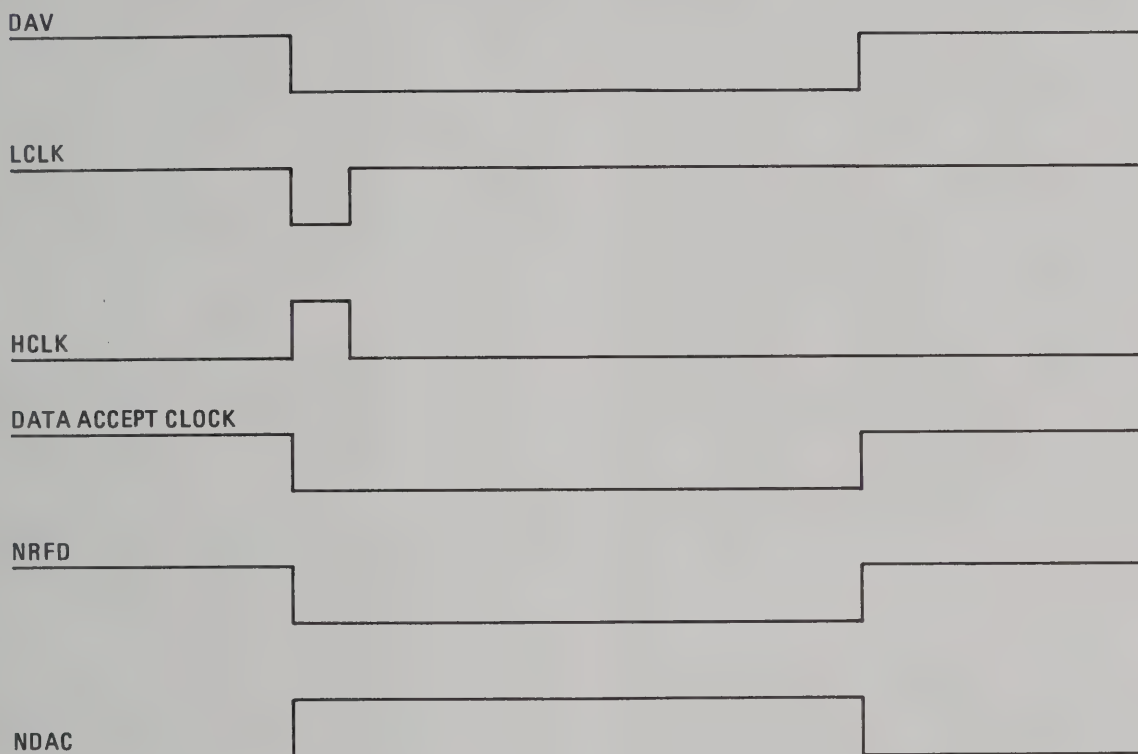**NOTES:**

1. The HCLK output of the clock generator is enabled only during the command mode; the LCLK and data accept clocks are enabled in both the command and data modes.
2. The listen transfer control gates process the data accept clock to generate the NRFD and NDAC handshake signals in the command mode and, when the Power Meter is addressed to listen, in the data mode also. If the Power Meter is not addressed to Listen in the data mode, both signals are set high so that they do not affect HP-IB operation.

Figure 8-19. HP-IB Listen Handshake Timing

CIRCUIT DESCRIPTIONS

Service Sheet 4 (cont'd)

8-120. Talker and Listener Addressing. Factory installed jumpers select talk address "M" and listen address "—" for the Power Meter. (Instructions for reconnecting the jumpers to change the talk and listen addresses are provided in Section II, Installation.) In Table 2-2, it is shown that the binary code for both of these addresses is the same except for data bits 6 and 7. Thus, when either of these addresses is present on the data lines, the Address Decoder is enabled by data bits 1–5 and provides an Address Enabled output to the Listen and Talk Registers. Discrimination between the addresses is accomplished by the Talk Decoder and the Listen/Unlisten Decoder. For talk address "M", the Talk Decoder is enabled by data bits 6 and 7 and generates a Talk Clock output in response to the HCLK input. For listen address "—", the Listen/Unlisten Decoder is enabled by data bits 6 and 7 and generates a Listen Clock output in response to the HCLK input. (The data bits 1 through 5 inputs to the Listen/Unlisten Decoder enable it to produce an Unlisten output when the Remote Interface Controller generates a Universal Unlisten Command.)

8-121. Since the Talk or Listen Clock is generated while the Address enable signal is active, the associated register is clocked to the set state to enable the talk or listen function when the data bus is subsequently set to the data mode. Resetting of the register to terminate the function occurs when the Power Meter is unaddressed to talk or listen, or when the Remote Interface Controller activates the Interface Clear (IFC) line to clear the HP Interface Bus of all talkers and listeners.

8-122. The Power Meter can also be configured as a talker by setting the TALK ONLY/NORMAL switch to the TALK ONLY position. When the switch is in this position, the set input of the Talk Register is tied to ground to hold the register in the set state. Since there can only be one talker at a time on the HP Interface Bus, this function is normally selected only when there is no Remote Interface Controller connected to the system (e.g., when the Power Meter is interconnected with an HP 5150A Recorder) as the Power Meter has no provision for generating programming commands necessary to control the operation of other instruments on the HP Interface Bus.

8-123. Remote Enable. Remote operation of the Power Meter is enabled when the HREM and Remote Enable (LREM) outputs of the Remote Enable Logic are true (refer to Table 8-6 and to the Data Mode Programming paragraph). These outputs are provided by a gated flip-flop which is set only when the Listen Clock and Address Enable signals are active while the Remote Enable (REN) input is true (low). Thus, to select remote operation of the Power Meter, it is necessary to address the Power Meter to listen after the Remote Enable (REN) line is set true. The Remote Enable Logic will then remain set until the Remote Enable (REN) line is set false to terminate remote operation of all instruments on the HP Interface Bus.

NOTE

When the Power Meter is addressed to talk, it will output data after each measurement regardless of whether it is configured for local or remote operation. Refer to Figure 8-15, Sheet 14.

8-124. The remaining input to the Remote Enable Logic is the LPU signal generated by the Controller when the Power Meter is first turned on, and by the Device Clear Generator when a Device Clear Command is detected. This input is applied to the Remote Enable Logic in a "WIRED OR" configuration, and an RC network is used to discriminate between the signal sources. When the Power Meter is first turned on, the LPU output of the Controller is maintained for approximately 500 ms, thereby allowing the RC network to discharge to 0V and reset the Remote Enable Logic. When a Device Clear Command is detected, the LPU output of the Device Clear Generator is equal in width to the HCLK input and does not discharge the RC network. Thus, when the Power Meter is first turned on, it is automatically configured for local operation. If remote operation is subsequently selected, the Power Meter will remain configured for remote operation until the Remote Enable (REN) input is set false to terminate remote operation of all instruments on the HP Interface Bus.

8-125. Device Clear. When a Device Clear Code is placed on the HP-IB data lines, the Device Clear Generator is enabled and provides an LPU output in response to the HCLK input. As shown on the block diagram, this output is tied to the LPU

CIRCUIT DESCRIPTIONS

Service Sheet 4 (cont'd)

output of the Controller in a "WIRED-OR" configuration. The pulse width of the Device Clear Decoder output, however, is much narrower than the Controller LPU output so it does not discharge the RC networks installed at the inputs to the Reset Generator and the Remote Enable Logic. Thus, the function of the Device Clear Decoder LPU output is limited to reinitializing the operating program to starting address 000₈ (refer to Table 8-6) and to selecting a predetermined operating mode and range for the Power Meter when remote operation is enabled (refer to the Data Mode Programming paragraph).

8-126. Interface Clear. When the Interface Clear (IFC) input is true (low) the Reset Generator is enabled and provides a Reset output to the Talk and Listen Registers. Thus if the Power Meter was addressed to talk or listen previously, the talk or listen function is cleared. Similarly, when power is first turned on to the Power Meter, the pulse width of the Controller LPU output is of sufficient duration to discharge the Reset Generator RC network and thereby cause a Reset output to be applied to the Talk and Listen Registers.

8-127. Talker Unaddressing. When the TALK ONLY/NORMAL switch is set to the NORMAL position, the Remote Interface Controller can unaddress the Power Meter to talk by setting the Interface Clear (IFC) line true (refer to previous description), by addressing some other instrument on the HP Interface Bus to talk, or by generating a Universal Untalk Command. In Table 2-2, it is shown that data bits 6 and 7 are coded the same for all valid HP-IB talk addresses and for the Universal Unlisten Command. When any of these codes are placed on the HP-IB data lines, the Talk Decoder is enabled and provides a Talk Clock output in response to the HCLK input. For any address but that selected by the factory installed jumpers, however, data bits 1 through 5 are coded such that the Address Decoder is disabled. Thus, the absence of the Address Enable signal causes the Talk Register to be clocked to the reset state by the Talk Clock.

8-128. Listener Unaddressing. The Remote Interface Controller can unaddress the Power Meter to listen by setting the Interface Clear (IFC) line true (refer to previous description), or by generating a

Universal Unlisten Command. The Universal Unlisten Command is coded such that data bits 1 through 5 disable the Address Decoder and enable the Unlisten output of the Listen/Unlisten Decoder. Data bits 6 and 7 are coded the same as for any valid HP-IB listen address, so they enable the Listen/Unlisten Decoder to also provide a Listen Clock output in response to the HCLK input. With the Unlisten Signal Active and the Address Enable Signal Inactive, the Listen Register is clocked to the reset state by the Listen Clock.

8-129. The method of unaddressing the Power Meter to listen described previously prevents the Power Meter from being unaddressed to listen when other instruments on the HP-IB are designated as listeners. (There can only be one talker on the HP-IB at a time, but there can be up to five listeners.) If any other listen address than that assigned to the Power Meter is placed on the HP-IB, data bits 1 through 5 disable both the Address Decoder and the Unlisten output of the Listen/Unlisten Decoder. Thus, even though data bits 6 and 7 enable the Listen Clock output of the Listen/Unlisten decoder, the absence of the Address Enable and Unlisten inputs inhibits the Listen Register from changing state.

8-130. Data Mode Operation.

8-131. The HP-IB circuits are placed in the data mode when the Remote Interface Controller sets the Command Mode Enable (ATN) line to high. In this mode, the HP-IB circuits can function either as a talker or a listener. If remote operation of the Power Meter is enabled and the circuits were previously addressed to listen, they accept and decode programming inputs received over the HP-IB and store the data to control Power Meter operation. If remote operation of the Power Meter is enabled and the circuits were previously addressed to talk, they provide measurement and status outputs in a bit-parallel, word-serial format during the operating program Display and Remote Talk Subroutine.

8-132. Listen Handshake Timing. When the HP-IB is in the data mode and the HP-IB circuits are addressed to listen, the handshake timing outputs necessary to complete each Remote Interface Controller-initiated data transfer cycle are generated as described above for the command mode.

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)**8-133. General Programming Command Decoding.**

When the HP-IB is in the data mode and the Power Meter is addressed to listen, the high LATN and H Listen signals enable the Function Decoder. The Function Decoder then processes the data bit 4 through 7 inputs each time that the LCLK is generated to indicate that valid data is present on the HP-IB. In Table 2-2 it is shown that either data bit 6 or 7 is true (0V) for each of the programming codes assigned to the Power Meter. With either of these data bit inputs low for the conditions described (LATN - high, LCLK - low, H Listen - high), the Function Decoder is gated on and decodes the HI04, HI05, and HI06 inputs to generate a Clock output which enables the appropriate logic circuit to respond to the programming command. The specific Clock output generated for each programming command is listed in Table 8-8, and the resulting logic circuit operation is summarized in Table 8-9.

8-134. When the HP-IB is not in the data mode, the Function Decoder is disabled by the low LATN input. Similarly, when the Power Meter is not addressed to listen, the low H Listen input disables the Function Decoder. While the Function Decoder is disabled, it does not respond to the data bit inputs and so no Clock outputs are provided to the Programming Command Logic Circuits. Thus, the Programming Command Logic Circuits are inhibited from responding to any data inputs except programming commands specifically intended for the Power Meter.

8-135. Mode Programming Command Processing.

The Mode Clock output of the Function Decoder resets the Auto Zero Enable Logic and clocks the LI01 and HI02 data bit inputs into the flip-flops in the Mode Select Logic. The outputs of the flip-flops are then gated with the HREM input to select the operating mode for the Power Meter when remote operation is enabled (HREM-high) and to allow front-panel "WIRED OR" selection of this function when local operation is enabled (refer to Service Sheet 3, Block Diagram Description, Mode Selection).

8-136. After a Mode Programming Command is loaded into the Mode Select Logic flip-flops, the flip-flops are inhibited from changing state until a new Mode Programming Command or an LPU

input is received. When a new Mode Programming Command is received, the outputs of the flip-flops change to reflect the new mode encoded in the command. When an LPU input is received, the flip-flops are reset to select WATT Mode operation of the Power Meter.

8-137. Range Programming Command Processing.

The Range Clock output of the Function Decoder resets the Auto-Range Qualifier output of the Range Select Logic to disable Auto-Ranging, and also clocks the HI01, LI02, and LI03 data bit inputs into flip-flops in the Range Select Logic. The inverted outputs of the flip-flop are then continuously applied to the Controller as YRR1, YRR2, and YRR3 Range Select inputs. Since the Auto-Range Qualifier is reset, the Controller loads these inputs into the Range Counter at the start of each program cycle (when remote operation is enabled) to select the operating range for the Power Meter.

8-138. After a Range Select Command is loaded into the Range Select Logic flip-flops, the flip-flops are inhibited from changing state until a new Range Programming Command or an LPU input is received. When a new Range Programming Command is received, the outputs of the flip-flops change to reflect the new range encoded in the command. When an LPU input is received, the Range flip-flops are reset and the Auto-Range flip-flop is reset to select Auto-Ranging when remote operation of the Power Meter is enabled (refer to the paragraph on Auto-Range Programming Command Processing).

8-139. Auto-Range Programming Command Processing.

The LPU input and the Auto-Range Enable output of the Function Decoder set a flip-flop in the Range Select Logic. The output of the flip-flop is then gated with the HREM input to select Auto-Ranging when remote operation is enabled (HREM-high) and to allow front-panel "WIRED OR" range control of this function when local operation is enabled. (When remote operation is enabled and the Auto-Range Qualifier is true, the Range Select outputs are not loaded into the Range Counter at the start of each program cycle. Instead, the Range Counter is counted up or down during each cycle as required to obtain an in-range measurement.) Resetting of the Auto-Range flip-flop occurs when the Function Decoder provides a Range Clock output (refer to previous description).

Table 8-8. Function Decoder Clock Selection

PROGRAMMING COMMAND	DATA BIT CODING			CLOCK SELECTED
	HI04	HI05	HI06	
Range (1, 2, 3, 4, 5)	L	H	H	Range clock
Auto Range Select (9)	H	H	H	Auto Range Clock
Mode (A, B, C, D)	L	L	L	Mode Clock
Sensor Auto Zero Enable (Z)	H	H	C	Auto Zero Clock
Cal Factor Enable/Disable (+/-)	H	L	H	Cal Factor
Measurement Rate (H, I)	H	L	L	Rate Clock 1
Measurement Rate (R, T, V)	L	H	L	Rate Clock 2

Table 8-9. Programming Command Logic Operating Summary (1 of 2)

PROGRAMMING COMMAND	DATA BIT CODING						LOGIC CIRCUIT OUTPUT
	LI01	HI01	LI02	HI02	LI03	HI03	
Range 1	X	H	H	X	H	X	YRR1 - high; YRR2 and YRR3 - low
Range 2	X	L	L	X	H	X	YRR2 - high; YRR1 and YRR3 - low
Range 3	X	H	L	X	H	X	YRR1 and YRR2 - high; YRR3 - low
Range 4	X	L	H	X	L	X	YRR3 - high; YRR1 and YRR2 - low
Range 5	X	H	H	X	L	X	YRR1 and YRR3 - high; YRR2 - low
Auto-Range Select (9)	X	X	X	X	X	X	Auto-Range qualifier set true (low) by Auto-Range Clock output of Function Decoder
Watt Mode (A)	L	X	X	L	X	X	IYM1 - low; IYM2 - high
dB Rel Mode (B)	H	X	X	H	X	X	IYM1 - high; IYM2 - low
dB Ref Mode (C)	L	X	X	H	X	X	IYM1 - low; IYM2 - low
dBm Mode (D)	H	X	X	L	X	X	IYM1 - high; IYM2 - high
Sensor Auto Zero Enable (Z)	X	X	X	X	X	X	Auto-Zero Enable (NZR) output set true (low) by Auto-Zero Clock output of Function Decoder
Cal Factor Disable (+)	X	X	X	X	H	X	Cal Factor Disable - high
Cal Factor Enable (-)	X	X	X	X	L	X	Cal Factor Disable - open collector ($\approx -15V$)

NOTE: X Indicates Don't Care

Table 8-9. Programming Command Logic Operating Summary (2 of 2)

PROGRAMMING COMMAND	DATA BIT CODING						LOGIC CIRCUIT OUTPUT
	LI01	HI01	LI02	HI02	LI03	HI04	
Hold (H)	H	X	X	L	H	H	LRUN and LSLOW - high
Trigger with setting time (T)	H	X	X	L	L	L	LRUN - set low by programming command; reset by LTC instruction generated as start of display and remote talk subroutine LSLOW - low
Trigger immediate (I)	L	X	X	L	H	H	LRUN - set low by programming command; reset by LTC instruction generated at start of display and remote talk subroutine
Free run at maximum rate (R)	H	X	X	H	H	L	LRUN - low; LSLOW - high
Free run with settling time (V)	H	X	X	H	L	L	LRUN - low; LSLOW - low
NOTE: X Indicates Don't Care.							

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)

8-140. Sensor Auto-Zero Programming Command Processing. The Auto-Zero Clock output of the Function Decoder sets a flip-flop in the Auto Zero Enable Logic. The output of the flip-flop is then gated with the HREM input to select Sensor Auto-Zeroing when remote operation is enabled (refer to Service Sheet 3, Block Diagram Description, Mode Selection), and to allow front-panel "WIRED OR" control of this function when local operation is enabled. Resetting of the flip-flop occurs when the Function Decoder provides a Mode Clock output (refer to previous description) or when the Controller or the Device Clear Decoder generates an LPU output.

8-141. Cal Factor Programming Command Processing. The Auto-Zero Clock output of the Function Decoder clocks the LI03 data bit input into a flip-flop in the Cal Factor Disable Logic. The output of the flip-flop is then gated with the HREM input. When the HREM input is low, indicating that local operation is enabled, the Cal Factor Disable line is set false to enable the CAL FACTOR % switch (refer to Service Sheet 2). When the HREM input is high, indicating that remote operation is enabled, the state of the stored

LI03 bit controls the Cal Factor Disable output. For a Cal Factor Enable (—) Programming Command, the stored bit is low and sets the Cal Factor Disable output false to enable the front-panel CAL FACTOR % switch. For a Cal Factor Disable (+) Programming Command, the stored bit is high and sets the Cal Factor Disable output true to disable the CAL FACTOR % switch. Disabling the switch is the same as setting it to the 100% position.

8-142. After a Cal Factor Programming Command is loaded into the Cal Factor Disable Logic flip-flop, the flip-flop is inhibited from changing state until a new Cal Factor Programming Command or an LPU input is received. When a new Cal Factor Programming Command is received, the flip-flop changes state to reflect the new state of the LI03 data bit. When an LPU input is received, the flip-flop is preset to set the Cal Factor Disable output true, disabling the front-panel switch.

8-143. Measurement Rate Programming Command Processing. The Rate Clock 1 and 2 outputs of the Function Decoder are ORed together so that either clock causes the Measurement Rate Select Logic to process the LI01, HI02, LI03, and HI04 data bit inputs. The LI03 bit selects the measurement rate

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)

(delayed or immediate) and the remaining three bits select hold, triggered, or free-run operation of the Power Meter.

8-144. The LI03 bit is processed separately from the remaining data bit inputs to the Measurement Rate Select Logic. When the Function Generator provides a Rate Clock output, this bit is clocked into a flip-flop. If the LI03 bit is high, the flip-flop is clocked to the set state to select delayed measurements; if the LI03 bit is low, the flip-flop is clocked to the reset state to select immediate measurements. The output of the flip-flop is then continuously applied to the Remote Qualifier Multiplexer so that it can be accessed by the operating program. This output is then maintained until either a new Measurement Rate Programming Command or an LPU input is received. When a new Measurement Rate Programming Command is received, the output of the flip-flop changes to reflect the current state of the LI03 data bit. When an LPU input is received, the flip-flop is reset along with the Hold and Trigger flip-flops and the Power Meter is placed in a hold condition.

8-145. The LI02, HI02, and HI04 data bit inputs are processed together to select hold, free run, or triggered operation of the Power Meter. When the Function Decoder provides a Rate Clock output, the HI02 bit is clocked directly into a flip-flop and the LI01 and HI04 bits are NANDed together with the resultant output clocked into a second flip-flop. For purposes of definition, the flip-flop which accepts the HI02 bit is called the Hold Flip-Flop, and the flip-flop which accepts the gated input is called the Trigger Flip-Flop. When the HI02 bit is high, the Hold Flip-Flop is clocked to the set state to enable free run operation of the Power Meter. When the HI02 bit is low, the Hold Flip-Flop is clocked to the reset state to enable hold or triggered operation of the Power Meter. The way this is accomplished is by ORing the outputs of the Hold and Trigger Flip-Flops. When the Hold Flip-Flop is set, the OR gate is continuously enabled and provides a low H HOLD output to the Remote Multiplexer. When the Hold Flip-Flop is reset, the state of the Trigger Flip-Flop controls the H HOLD output of the OR gate. Operation of the Trigger Flip-Flop for a Hold or Triggered Measurement Programming Command is described in the following paragraphs.

a. When both the LI01 and HI04 data bits are high for a Hold Programming Command, the Trigger Flip-Flop is reset by the Rate Clock output of the Function Decoder. Since the Hold Flip-Flop is also reset, the OR gate is disabled and a high H HOLD output is provided to the Remote Multiplexer to inhibit the Power Meter from taking measurements (see Figure 8-15, Sheets 4 and 14).

b. When either the LI01 or HI04 data bit is low for a Triggered Measurement Programming Command, the Trigger Flip-Flop is set by the Rate Clock output of the Function Decoder, then reset by the LTC instruction generated at the start of the operating program Display and Remote Talk Subroutine. While the Flip-Flop is set, the OR gate is enabled and provides a low H HOLD output to the Remote Multiplexer to initiate a Power Meter measurement. After the measurement is completed and the flip-flop is reset, the OR gate is disabled by the low outputs of the Hold and Trigger Flip-Flops. Thus, the gate provides a high H HOLD output to inhibit further measurements until a Free Run or Triggered Measurement Programming Command is received.

8-146. The output of the Trigger Flip-Flop is also gated with the LTLK output of the Talk Register to provide a Talk Qualifier (HTLK; 032g) input to the Remote Multiplexer. When the Power Meter is not addressed to Talk, the LTLK signal is high and a low HTLK input is applied to the Remote Multiplexer to inhibit the operating program from initiating an Output Data Transfer. When the Power Meter is addressed to Talk, the LTLK input is low and the HTLK output of the gate is controlled by the Trigger Flip-Flop as described in the following paragraphs.

a. When the Trigger Flip-Flop is reset by a Hold Programming Command, a continuously high HTLK qualifier is applied to the Remote Multiplexer to enable the operating program to initiate an Output Data Transfer after completing the measurement in progress (refer to Figure 8-15, Sheet 14). Following the Output Data Transfer, the operating program then detects the hold condition in the Local/Remote Branch Subroutine (H HOLD high) and enters an idle state while awaiting a Free-Run or Triggered Measurement Programming Command to initiate the next measurement.

b. When the Trigger Flip-Flop is set by a Free-Run or Triggered Measurement Programming

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)

Command, a low HTLK qualifier is applied to the Remote Multiplexer until the flip-flop is reset by the LTC instruction generated at the start of the Display and Remote Talk Subroutine. Since this instruction is generated before the operating program checks whether Remote Talk is enabled, the resulting HTLK qualifier enables the operating program to initiate an Output Data Transfer during the Display and Remote Talk Subroutine. If the Trigger Flip-Flop was set by a Free-Run Programming Command, the H HOLD qualifier will be low and the operating program will continue to take measurements and output data after each measurement until a new Measurement Rate Programming Command is received or the Power Meter is unaddressed to talk. If the Trigger Flip-Flop was set by a Triggered Measurement Programming Command, the H HOLD qualifier will be high after the LTC instruction and the operating program will enter an idle state during the Local/Remote Branch Subroutine while awaiting a Free-Run or Triggered Measurement Programming Command to initiate the next measurement. The reason that an Output Data Transfer is synced to the LTC instruction for a Triggered Measurement Programming Command is to ensure that valid measurement is taken before the Power Meter outputs data after being addressed to Talk.

8-147. The remaining input to the Hold and Trigger Flip-Flops is the LPU output of the Controller and the Device Clear Decoder. When this input is active, both registers are reset and a high H HOLD qualifier is applied to the Remote Multiplexer to place the Power Meter in a hold condition.

8-148. Remote Qualifier/Program Interface.

When remote operation is enabled, each of the qualifier inputs to the Remote Qualifier Multiplexer is accessed at some point in the operating program cycle. The purpose and function of each qualifier is provided in Table 8-2, along with a listing of the subroutines in which the qualifier is accessed. The manner in which the qualifier is accessed by the operating program is covered on Service Sheet 3, Block Diagram Description.

NOTE

The Remote Qualifier Multiplexer inverts the qualifier inputs. Thus, a "true" quali-

fier input will be in the opposite state to that shown on the Operating Program Flow Chart.

8-149. Talk Cycle. During the Display and Remote Talk Subroutine of each program cycle, the operating program checks whether the Power Meter is addressed to Talk. If the Power Meter is addressed to Talk, the LTLK input to the Remote Qualifier Multiplexer will be low and an Output Data Transfer will be enabled as shown on Sheet 14 of Figure 8-15. Operation of the HP-IB circuits when the Power Meter is addressed to talk is described in the following paragraphs.

a. **Talk Transfer Control Gates.** The Talk Transfer Control Gates are enabled by the low LTLK and HATN inputs when the Power Meter is addressed to Talk and the HP-IB is in the data mode. While the gates are enabled, they provide high HOE 1 and high HOE 2 outputs to enable the Data Valid Status Generator and the Output Gates.

NOTE

As shown on Sheet 14 of Figure 8-15, the operating program will initiate an Output Data Transfer whenever the LTLK qualifier is low. If the HP-IB is not in the data mode, however, the Talk Transfer Control Gates will be disabled by the high HATN input and the resulting low HOE 2 output will set the HRFD qualifier output of the Data Valid Status Generator low. Similarly, if there is no listener on the HP-IB, the low NRFD input also sets the HRFD qualifier low. With this qualifier low, the operating program will enter a hold loop until the Power Meter is unaddressed to Talk.

b. **Data Valid Status Generator.** The Data Valid Status Generator functions in conjunction with the operating program to generate the timing signals necessary to complete a Power Meter initiated data transfer. A timing diagram of Data Valid Status Generator operation is provided in Figure 8-20. As shown in the figure, the JK flip-flop is initially reset by the LPU input and cannot change state until the Power Meter is addressed to Talk and all listeners on the HP-IB indicate that they are ready to accept data. When this occurs, both the

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)

HOE 2 and the NRFD inputs will be high and the Data Valid Status Generator will provide a high HRFDq qualifier input to the Remote Multiplexer. If the HP-IB is connected properly, the HDACq qualifier will be low at this time and the operating program will generate an LSDAV instruction to set the JK flip-flop.

NOTE

The HRFDq and the HDACq qualifier outputs of the Data Valid Status Generator are delayed slightly to allow settling time for the HP-IB listeners.

When the JK flip-flop is set, the combination of the high HIDAV and HOE 2 signals cause the output gates to set the DAV line low, thereby indicating that valid data is available on the HP-IB. (Word Counter, ROM, and Output Gate operation is described in the following paragraph.) After all of the listeners on the HP-IB accept the data, the DAC input to the Data Valid Status Generator goes high, causing the Status Generator to provide a high HDACq qualifier output to the Remote Qualifier Multiplexer. The operating program, in turn, detects the change in state of the HDACq qualifier and generates a second LSDAV instruction to reset the JK flip-flop. The low HIDAV output then disables the DAV output of the Output Gates and the negative-to-positive transition of the LIDAV signal clocks the Word Counter to the next ROM address. As shown on Sheet 14 of Figure 8-15 this cycle is then repeated until all 14 of the output data words are sent over the HP-IB. Note that the JK flip-flop is reset after each word is transferred. Thus, the JK flip-flop will be reset by the last LSDAV instruction of the Output Data Transfer and will remain reset until the operating program initiates the next Output Data Transfer.

8-150. Word Counter, ROM, Line Selector, Multiplexer Gate, and Output Gate Operation. All of these circuits function together to sequentially output data words 0 through 13 each time that the operating program enables an Output Data Transfer during the Display and Remote Talk Subroutine. Each word consists of seven data bits which are ASCII coded to select a status character as indicated in Table 8-10. Coding of data bits 7, 6, and 5 is accomplished by buffering the Y6, Y5, and Y4 outputs of the ROM. Coding of the

remaining data bits is controlled by the Y7 output of the ROM. When this bit is low, the Line Selectors are enabled and they route the status inputs selected by the Y0 through Y3 outputs of the ROM to the Output Gates. When the Y7 bit is high, the Line Selectors are disabled and the Y0 through Y3 outputs of the ROM are buffered by the Multiplexer Gates to select the coding for data bits 1 through 4.

8-151. The output of the ROM, in turn, is selected by the address input from the Word Counter. This address is set to 0 at the start of each program cycle by the HLLD reset input to the Word Counter. While the ROM is at address 0, its output causes the Line Selectors to route the HOR, HUR, and YM3 status inputs to the Output Gates to form a Word 0 ASCII character as indicated in Table 8-10.

8-152. When the Power Meter is addressed to Talk, the Output Gates are enabled by the high HOE 1 and HOE 2 inputs and continually route data to the HP-IB. The HP-IB does not accept the data, however, until the Data Valid Status Generator provides a high HIDAV output to set the Data Valid (DAV) output true. When this occurs, each of the listeners accept the data and set the DAC line high to complete the data word transfer.

8-153. After all of the listeners have accepted the data, the Word Counter is clocked to the next address on the positive-going edge of the LIDAV output of the Data Valid Status Generator. For addresses 0 through 13 either the Y0 or the Y7 output of the ROM is high, so a low HMDT qualifier is applied to the Remote Multiplexer to enable each word to be sequentially transferred over the HP-IB. After word 13 is transferred, both the Y0 and Y7 outputs of the ROM go low and a high HMDT qualifier is applied to the Remote Multiplexer to terminate the data transfer cycle. The HMDT qualifier is then held high until the Word Counter is reset to 0 by the HLLD instruction generated at the start of the next program cycle.

8-154. The remaining address input to the ROM is the LQT signal. When this input is low, the outputs of the Word Counter select ROM addresses 00g through 15g; when this input is high, the outputs of the Word Counter select ROM addresses 20g

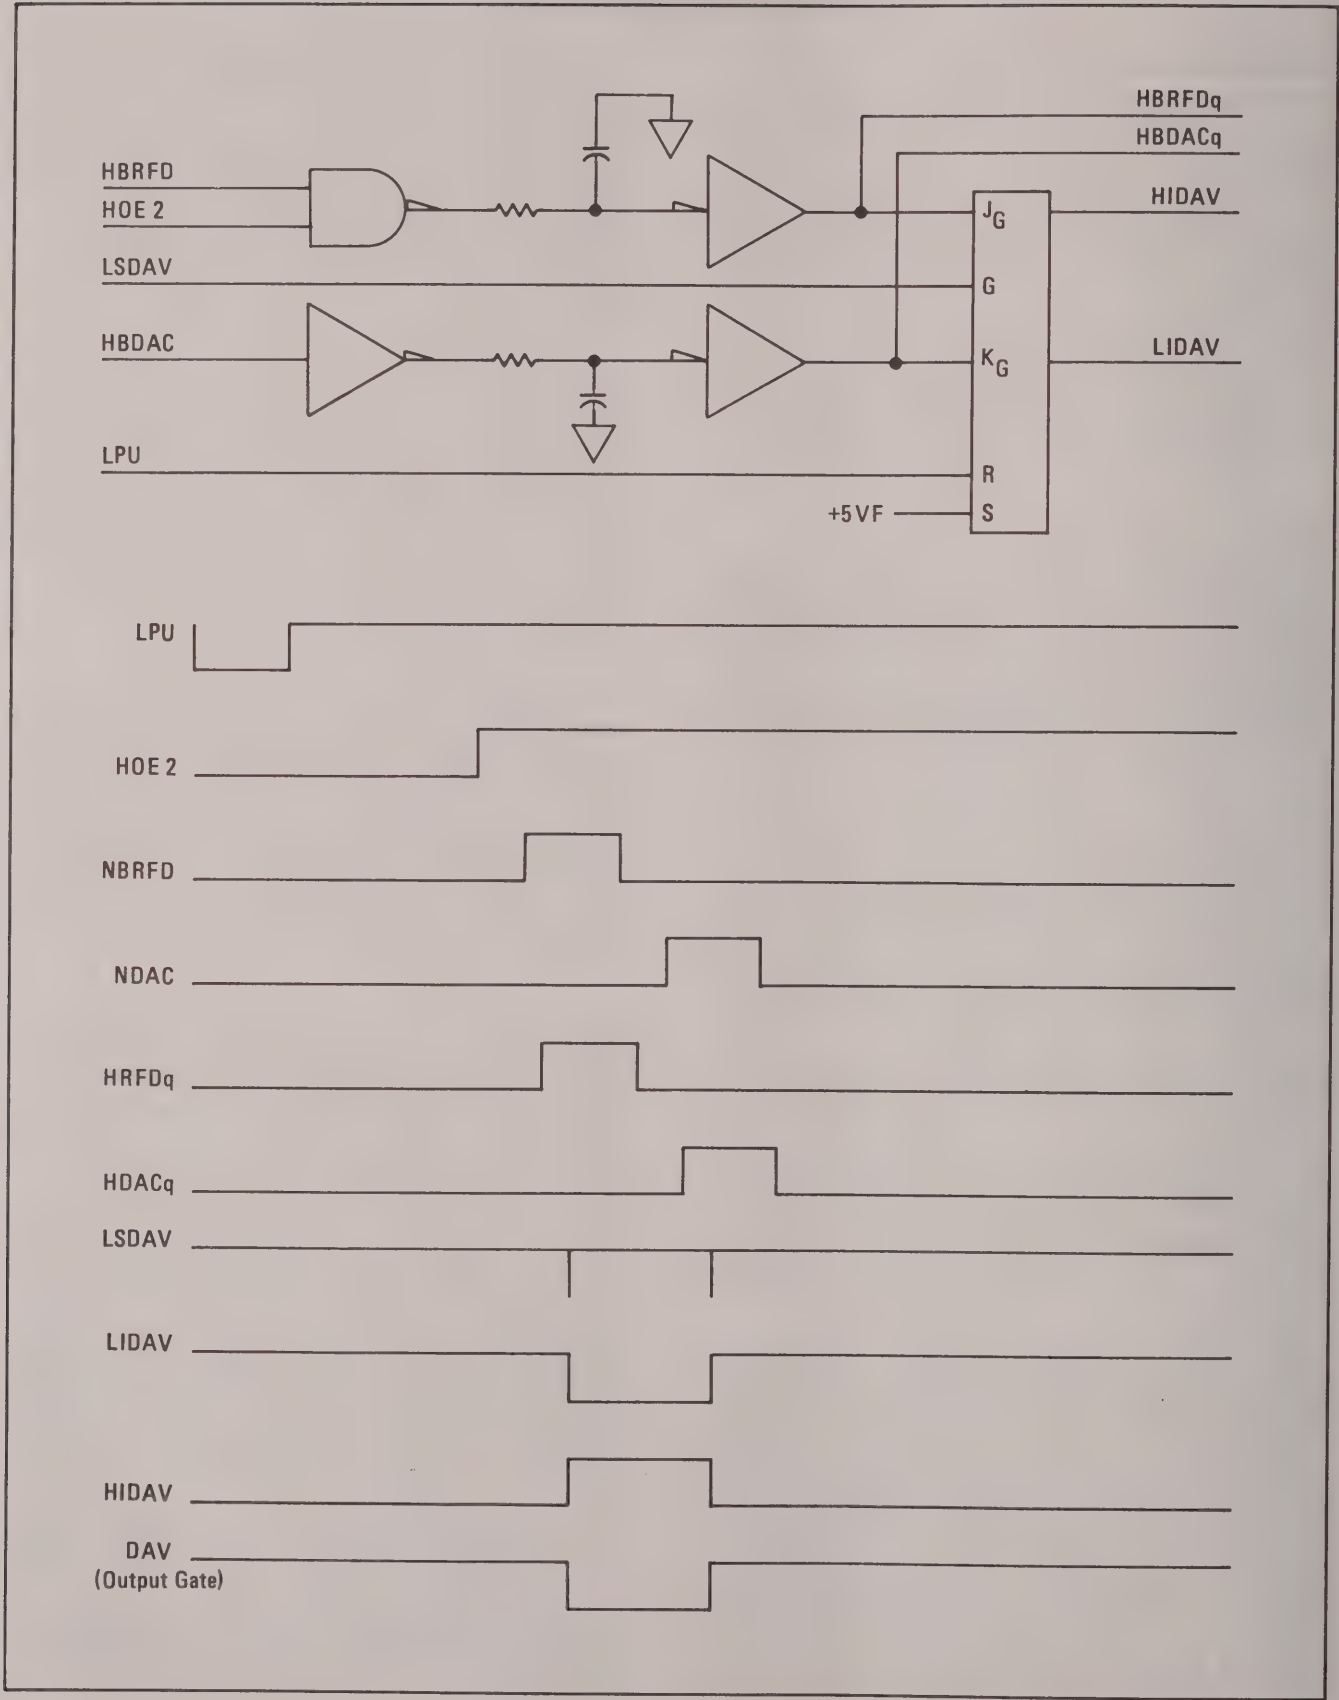


Figure 8-20. Data Valid Status Generator Timing

Table 8-10. Power Meter Talk HP-IB Output Data Format (1 of 3)

Word	Character	ROM Output – Y								Data Output – LD10							Notes
		7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	
0 Status	P (In-Range)	L	H	L	H	L	L	L	H	L	H	L	H	H	H	H	1. ROM address 20g. 2. Data output selected by HOR, HUR, & YM3 inputs to Line Selectors.
	Q (Under Range, Watts)									L	H	L	H	H	H	L	
	R (Over Range)									L	H	L	H	H	L	H	
	S (Under Range, Log)									L	H	L	H	H	L	L	
	T (Auto Zeroing, Range 1)									L	H	L	H	L	H	H	
	U (Auto Zeroing, Not Range 1)									L	H	L	H	L	H	L	
1 Range	I (Range 1)	L	H	L	L	L	L	H	H	L	H	H	L	H	H	L	1. ROM address 01g or 21g. 2. Data output selected by YR1, YR2, & YR3 inputs to Line Selectors.
	J (Range 2)									L	H	H	L	H	L	H	
	K (Range 3)									L	H	H	L	H	L	L	
	L (Range 4)									L	H	H	L	L	H	H	
	M (Range 5)									L	H	H	L	L	H	L	
2 Mode	A (Watt)	L	H	L	L	L	H	L	H	L	H	H	H	H	H	L	1. ROM address 02g. 2. Data output selected by NM1 and NM2 inputs to Line Selectors
	B (dB Rel)									L	H	H	H	H	L	H	
	C (dB Ref)									L	H	H	H	H	L	L	
	D (dBm)									L	H	H	H	L	H	H	
3 Sign	SP (plus)	H	L	H	L	H	H	H	H	H	L	H	L	H	L	L	1. ROM address 23g. 2. Data output selected by ROM.
	-- (minus)	H	L	H	L	L	L	H	L	H	L	H	L	L	H	L	
4 YK Digit	0	L	L	H	H	L	H	H	H	H	L	L	H	H	H	H	1. ROM address 24g. (cont'd)
	1									H	L	L	H	H	H	L	

Table 8-10. Power Meter Talk HP-IB Output Data Format (2 of 3)

Word	Character	ROM Output – Y								Data Output – LDIO							Notes
		7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	
4 YK Digit (cont'd)	2									H	L	L	H	H	L	H	2. Data output selected by YK1–YK4 inputs to Line Selectors.
	3									H	L	L	H	H	L	L	
	4									H	L	L	H	L	H	H	
	5									H	L	L	H	L	H	L	
	6									H	L	L	H	L	L	H	
	7									H	L	L	H	L	L	L	
	8									H	L	L	L	H	H	H	
	9									H	L	L	L	H	H	L	
5 YH Digit	0–9	L	L	H	H	H	L	L	H								1. ROM address 05g or 25g. 2. Data output selected by YH1–YH4 inputs to Line Selectors.
6 YD Digit	0–9	L	L	H	H	H	L	H	H								1. ROM address 026g. 2. Data output selected by YD1–YD4 inputs to Line Selectors.
7 YU Digit	0–9	L	L	H	H	H	H	L	H								1. ROM address 07g or 27g. 2. Data output selected by YU1–YU4 inputs to Line Selectors.
8 Exponent	E	H	H	L	L	H	L	H	L								1. ROM address 10g or 30g. 2. Data output selected by ROM.
9	– (E “–”)	H	L	H	L	L	L	H	L	H	L	H	H	H	L	H	1. ROM address 11g or 31g. 2. Data output selected by ROM.
10 HEX 4 Digit	E “0” X	H	L	H	H	H	H	H	L	H	L	L	H	H	H	H	1. ROM address 12g. 2. Data output selected by ROM.
	E “1” X	H	L	H	H	H	H	H	H	H	L	L	H	H	H	L	1. ROM address 32g. 2. Data output selected by ROM.

Table 8-10. Power Meter Talk HP-IB Output Data Format (3 of 3)

Word	Character	ROM Output – Y								Data Output – LD10							Notes
		7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	
11 HEX 1-3 Digit	0–9 (E ⁻ X“X”)	L	L	H	H	H	H	H	H								1. ROM address 13g or 33g 2. Data output se- lected by HEX0- HEX3 inputs to Line Selectors.
12	“CR” (Carriage Return)	H	L	L	L	L	L	H	L	H	H	H	L	L	H	L	1. ROM address 14g or 34g. 2. Data output se- lected by ROM.
13	“LF” (Line Feed)	H	L	L	L	L	H	L	H	H	H	H	L	H	L	H	1. ROM address 15g or 35g.

CIRCUIT DESCRIPTIONS

Data Mode Operation (cont'd)

through 35g. For all words except 3 and 10, the ROM is programmed redundantly to provide the same outputs for either a OX or 2X address input (refer to Table 8-10). For Word 3, the ROM outputs an ASCII space code when the LQT input is set high by a low NSPL input (positive sign) and an ASCII minus sign code when the LQT input is set low by a high NSPL input (negative sign). For Word 10, the ROM provides an ASCII one code when the LQT input is set low by a high HEX 4 input and an ASCII zero code when the LQT input is set high by a low HEX 4 input.

Paragraphs 8-155 through 8-163 were deleted.

SERVICE SHEET 1**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 1 are covered in paragraphs 8-71 through 8-74, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.

SERVICE SHEET 1**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 1 are covered in paragraphs 8-71 through 8-74, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.

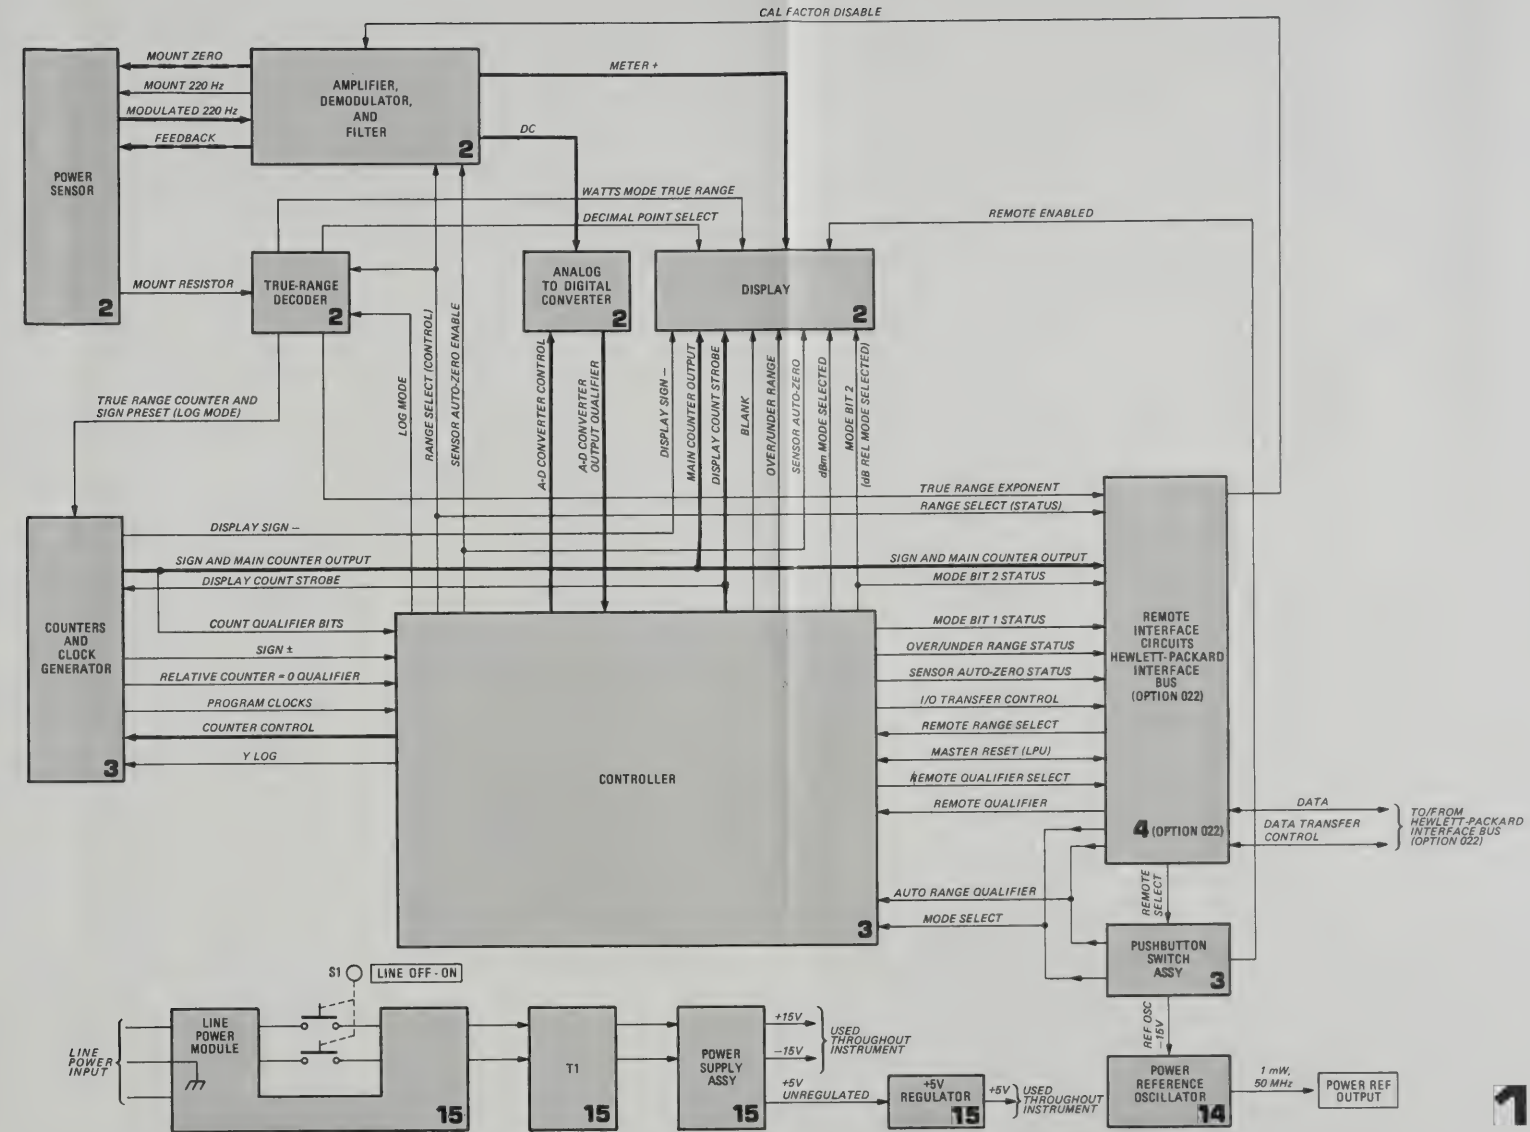


Figure 8-21. Overall Block Diagram

SERVICE SHEET 2**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 2 are covered in paragraphs 8-75 through 8-86, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.

SERVICE SHEET 2**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 2 are covered in paragraphs 8-75 through 8-86, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.



SERVICE SHEET 3**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 3 are covered in paragraphs 8-87 through 8-113, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.

SERVICE SHEET 3**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 3 are covered in paragraphs 8-87 through 8-113, Troubleshooting in paragraphs 8-55 through 8-62, and Standard Instrument Checkout in Table 8-3.



8-163

SERVICE SHEET 4**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 4 are covered in paragraphs 8-115 through 8-154, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, HP-IB Verification Programs in Figures 8-16 and 8-17, and Troubleshooting in Table 8-4.

SERVICE SHEET 4**BLOCK DIAGRAM CIRCUIT DESCRIPTIONS**

The Block Diagram Circuit Descriptions for Service Sheet 4 are covered in paragraphs 8-115 through 8-154, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, HP-IB Verification Programs in Figures 8-16 and 8-17, and Troubleshooting in Table 8-4.

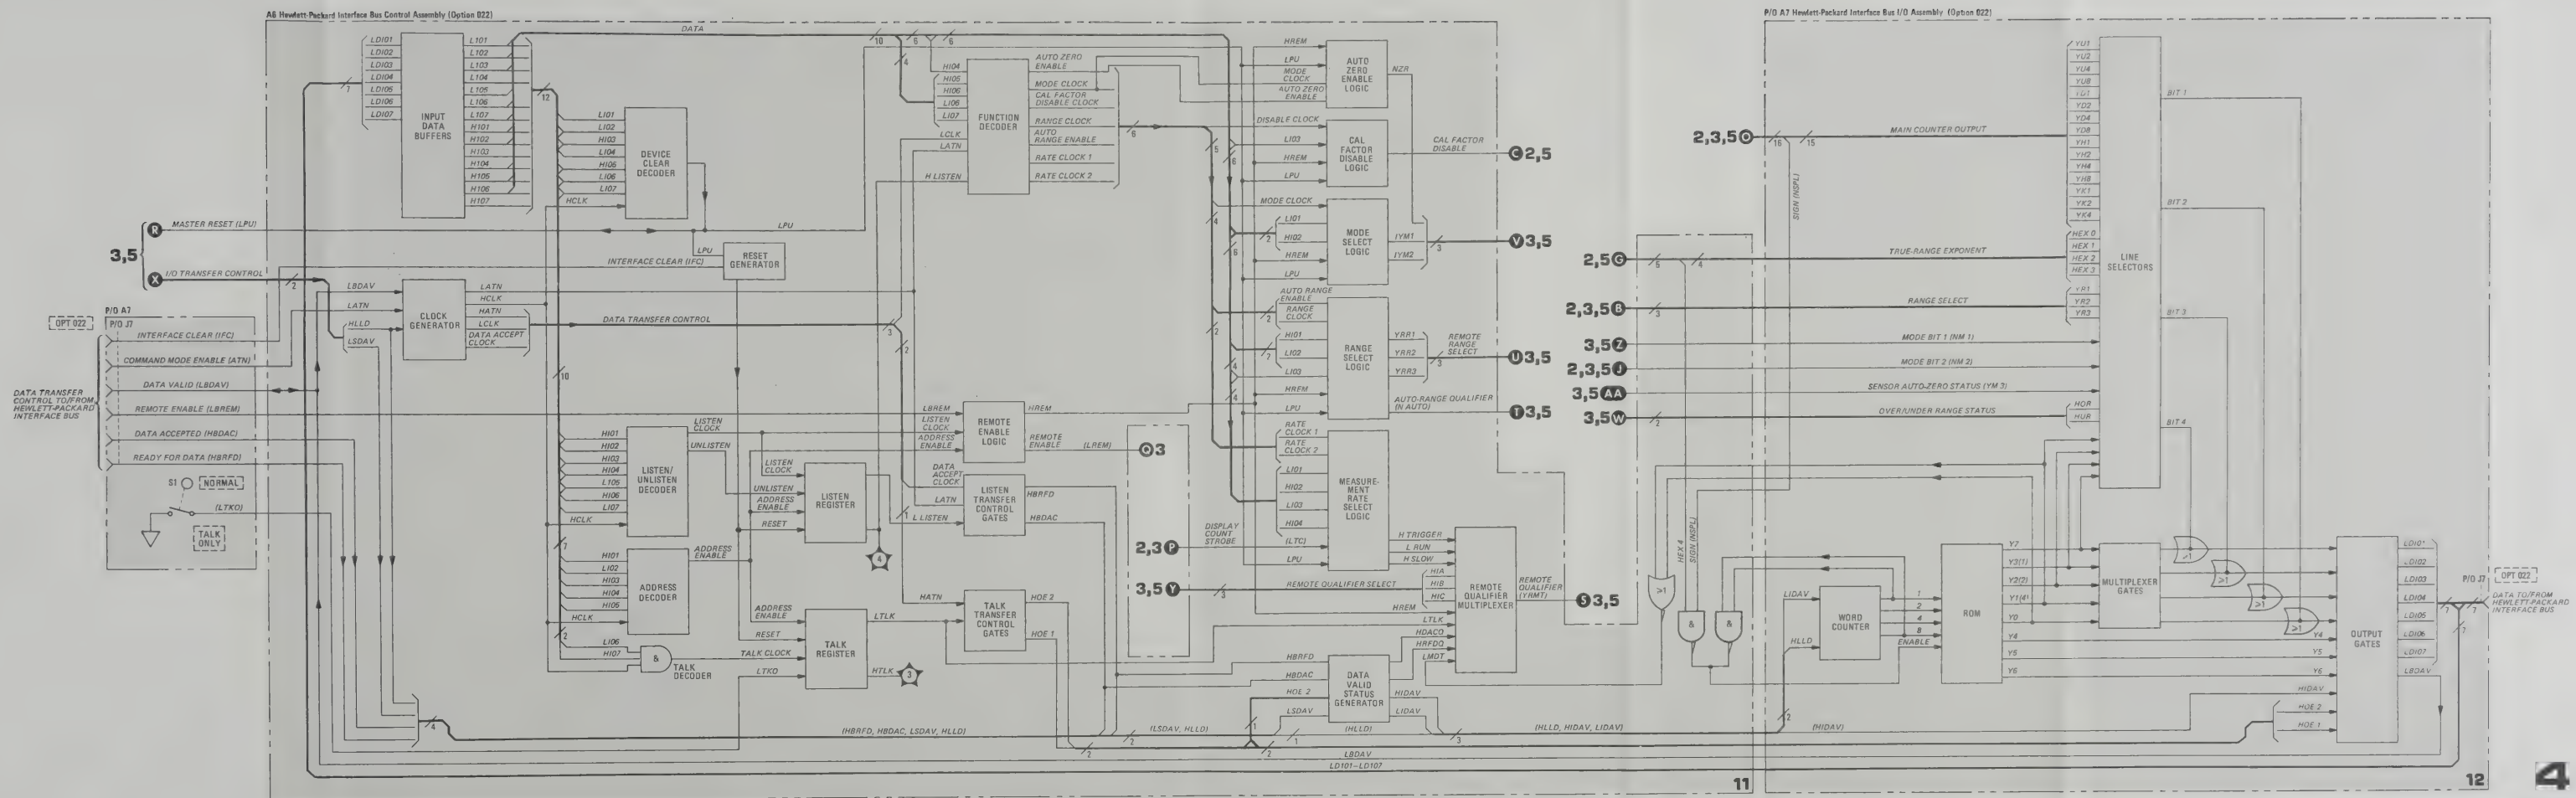


Figure 8-24. HP-IB (Option 022) Circuit Block Diagram

SERVICE SHEET 5 HAS BEEN DELETED


HP-IB (Option 022) Circuit Block Diagram
(A6, A7)

◆ SERVICE SHEET 4


SERVICE SHEET 5 HAS BEEN DELETED

SERVICE SHEET 6**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 6 are covered on Service Sheets 1 and 2 and Troubleshooting in paragraphs 8-55 through 8-62.

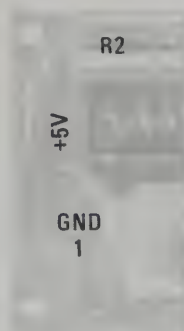

NOTE:
M1 IS PART OF TI
HIGHER (A1) ASS

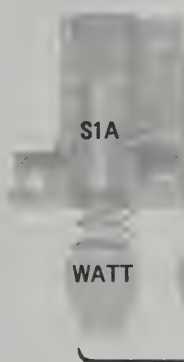

SERVICE SHEET 7 (cont'd)

on non-inverting inputs to U4A, B, C, and D is determined by the voltage divider composed of A2R13 and the Sensor Resistor (see tables below). When the Sensor Resistor is 0 ohms (GND), the outputs of U4 are approximately 0 volts.

For a 10W maximum input to the Power Sensor, the Sensor Resistor is approximately 3.46k ohms and the voltage level at the non-inverting inputs of U4 is approximately +2.8 volts. The output of U4C changes to approximately +15 volts. This change was caused by the non-inverting input going more positive than the inverting input level which is approximately +2 volts. The inverting input level is determined by the voltage divider composed of A2R29, R30, and R31. A2R29 is in parallel with R31 to ground. When the output of U4C changes to +15 volts, the inverting input to U4D changes to approximately +4 volts because now R36 and R40 are in parallel with the +15 volts applied and R32 and R41 are in parallel to ground, thus forming a series parallel network between ground and +15 volts. The table below gives the complete list of U4 inputs and outputs for each Sensor Resistor and the logic input codes to U7.

SERVICE SHEET 6**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 6 are covered on Service Sheets 1 and 2 and Troubleshooting in paragraphs 8-55 through 8-62.

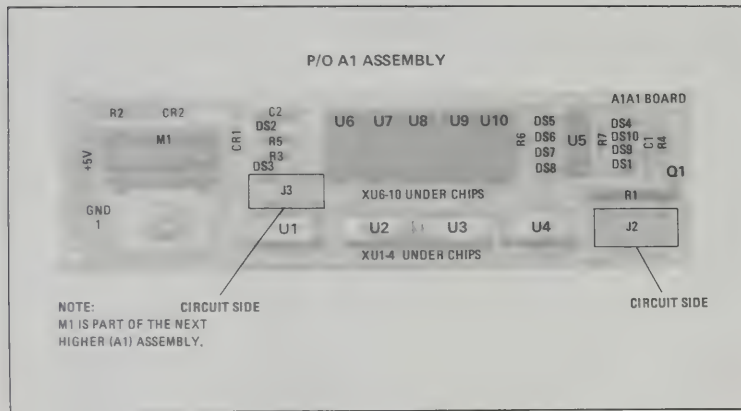


Figure 8-26. A1A1 Display Assembly Component Locations


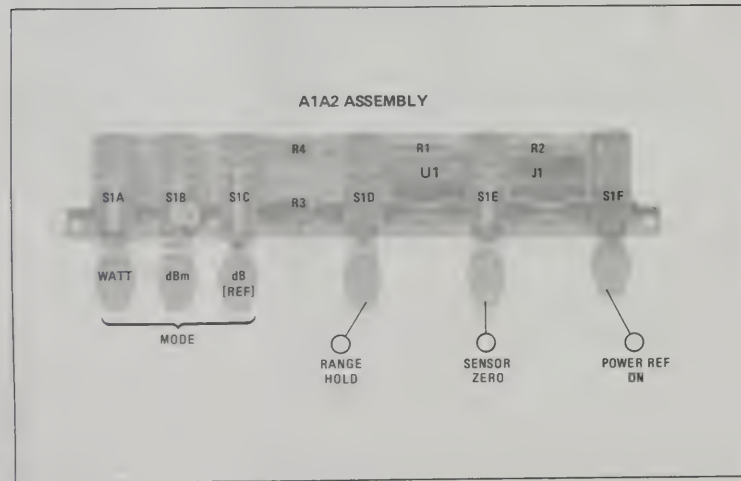


Figure 8-27. A1A2 Pushbutton Assembly Component Locations

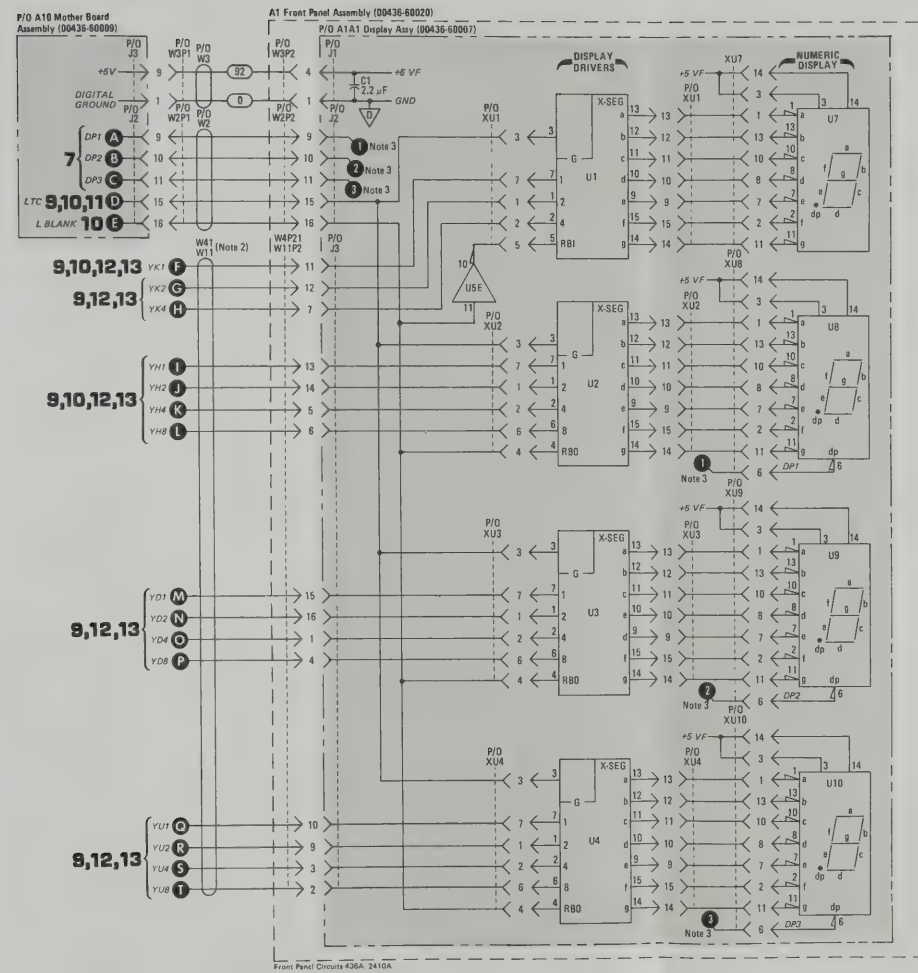

NOTES

- 1 Unless otherwise indicated
- 2 Unless otherwise indicated
- 3 Resistance in ohms
- 4 Capacitance in picofarads
- 5 W4 (ferrited option 022)
- 6 W11 (options 022)
- 7 1, 2, 3 and 4 are on page connections

REFERENCE DESIGNATIONS	
NO PREFIX	A1A1 ASSY
W1-3, A11	C1, 2
W1P1, W1P2	CR1, 2
W2P1, W2P2	DS1-10
W3P1, W3P2	J1-3
W4W11P2	Q1
U1-10	R1-7
XU1-4, 6-10	U11-10

TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS	
REFERENCE DESIGNATIONS	PART NUMBER
A1A101	1853-0020
A1A1U1-4	1820-1361
A1A1U5	1820-0174
A1A1U6-10	1850-0490
A1A1U1	1820-0175

INTEGRATED CIRCUIT VOLTAGE AND GROUND CONNECTIONS	
REFERENCE DESIGNATIONS	PIN NUMBER
J1	+5 V F - 16
S1-4	- 8
U1	+5 V F - 3, 14
A10 ASSY	+5 V F - 14
A1A1U6-10	+5 V F - 14
A1A1U5	+5 V F - 14
A1A2U1	- 7

Figure 8-28. Front Panel Assembly Schematic Diagram

Sensitivity Detector Logic

Maximum Range F.S.	U4B			U4A			U4C			U4D			U7			
	5	6	7	1	2	3	8	9	10	12	13	14	14	27	3	26
10 μ W	6.1	11.9	0.0	13.7	5.4	6.1	0.7	8.5	6.1	6.1	7.1	0.0	0	1	0	0
100 μ W	7.6	11.9	0.0	13.7	5.4	7.6	0.7	8.5	7.6	7.6	7.1	13.8	0	1	0	1
1 mW	9.0	11.8	0.0	13.7	5.4	9.0	13.8	8.5	9.0	9.0	10.1	0.0	0	1	1	0
10 mW	10.6	11.8	0.0	13.7	5.4	10.6	13.8	8.5	10.6	10.6	10.1	13.8	0	1	1	1
100 mW	0.0	11.8	0.0	.6	5.4	0.0	0.1	2.2	0.0	0.0	0.6	0.0	0	0	0	0
1W	1.5	11.8	0.0	.6	5.4	1.5	0.1	2.2	1.5	1.5	0.6	13.8	0	0	0	1
10W	2.9	11.8	0.0	.7	5.4	2.9	13.7	2.2	2.9	2.9	3.7	0.0	0	0	1	0
100W	4.5	11.8	0.0	.7	5.4	4.5	13.7	2.2	4.5	4.5	3.7	13.8	0	0	1	1
(Open) Error	15.1	11.8	13.8	13.7	5.4	15.1	13.8	8.5	15.1	15.1	10.1	13.8	1	1	1	1
All voltages shown are ± 0.1 Vdc.																

Power Sensor Maximum and Minimum F. S. Ranges and Resistor Values

Power Sensor	Maximum Power Range F.S.	Minimum Power Range F.S.	Power Sensor Resistor Value
8484A	10 μ W (−20 dBm)	1 nW (−60 dBm)	10.0k Ω
	100 μ W (−10 dBm)	10 nW (−50 dBm)	14.7k Ω
	1 mW (0 dBm)	100 nW (−40 dBm)	21.5k Ω
	10 mW (+10 dBm)	1 μ W (−30 dBm)	34.8k Ω
8481A/8482A/8483A	100 mW (+20 dBm)	10 μ W (−20 dBm)	0 Ω (Gnd)
	1 W (+30 dBm)	100 μ W (−10 dBm)	1.62k Ω
8481H/8482H	10 W (+40 dBm)	1 mW (0 dBm)	3.46k Ω
8481B/ 8482B	100 W (+50 dBm)	10 mW (+10 dBm)	6.19k Ω

Input and Output Code for A2U6 ROM

Input & Pin No.	Range				
	1	2	3	4	5
YR1 10	1	0	1	0	1
YR2 11	0	1	1	0	0
YR3 12	0	0	0	1	1
1 = 5V; 0 \leq 0.3V					

Range					Output Pin No.
1	2	3	4	5	
0	0	0	1	1	9
1	1	1	0	0	7
0	1	1	1	1	6
1	0	1	0	1	5
1	1	0	1	0	4
0	1	1	1	1	3
1	0	0	0	0	2
1	0	1	1	1	1
1 = 0.6V; 0 = 0.1V					

SERVICE SHEET 8 (cont'd)

YPLS (A3TP3) output of A3U2 at approximately +2.0 Vdc. This value is valid for only Auto-Zero operations. Loss of the LAZO signal opens the feedback path and releases the low on pin 2 of A3U1.

The DC Input Enable (LRIN) causes FET A3Q13 to conduct, applying the dc input voltage from the DC Amplifier to the inverting input of A3U1 pin 2. Transistor A3Q17 and zener diode A3VR2 produce a negative voltage reference source, -VR. A3U5B, A3R40, and A3R43 form an inverting amplifier with a gain of -1. Thus, producing the positive voltage reference source at the output of A3U5B pin 7 (+VR). The Enable Positive Ramp (LRP) causes FET A3Q16 (+RAMP) to conduct and apply a negative input to A3U1 from the -VR source. A3R37 LIN (Linearity) control is adjusted for a specific digital readout (see Section V, Adjustments). Capacitor A3C12 is charged up to approximately -7 times the dc input voltage when the DC Input Enable is terminated. A3C12 discharges at a rate of approximately 3.5 mV/clock pulse. The output level at pin 6 of A3U1 should reduce to approximately 0 Vdc. The output of A3U1 is applied to the inverting input of A3U2 producing a high output if the threshold was below the dc input level, or a low if it was above the input level.

The Enable Negative Ramp (LRM) causes FET A3Q15 (-RAMP) to conduct, applying a positive input to A3U1 from the +VR source. The Enable Log Ramp (LRL) and the Log Enable Reference (LLGR) cause FET's A3Q18 and A3Q19 to conduct. A3Q19 completes a path to apply a negative threshold voltage to pin 3 of A3U2. This is the Log Reference voltage. As the output of A3U1 discharges to the threshold level, the output of the Comparator remains constant. When the voltage at pin 2 of A3U2 reaches the threshold level, the output of the Comparator switches to the opposite polarity.

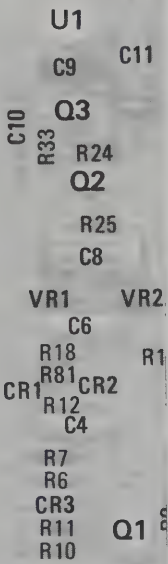


Figure 1

SERVICE SHEET 7

CIRCUIT DESCRIPTIONS

General


The RF input power applied to the Power Sensor is dissipated by the load impedance of the power sensing device. The dc output of the power sensing device is converted to a 220 Hz ac signal by a sampling gate (chopper) circuit. The ac signal, which is proportional to the RF input, is amplified by tuned ac amplifier stages in the Power Sensor and Power Meter. The Phase Detector converts the amplified 220 Hz ac signal back to a dc level which is proportional to the RF input power level.

The Attenuator reduces the ac signal for high power inputs. This allows equal measurement resolution for high and low power levels. The Phase Detector and a sampling gate circuit (in the Power Sensor) are driven in phase by the 220 Hz Multivibrator's outputs.

A2U5B is connected as a voltage follower between the Mount Return line and Analog Ground. This circuit ensures that a minimum voltage difference exists between the grounds thereby eliminating the possibility of unreliable readings. High current flow, through the ground return of cables which are greater than 1.52 meters (5 feet) long, causes the voltage difference.

First Amplifier

The First Amplifier of the Power Meter and the Power Sensor's output amplifier stage form a low-noise high-gain hybrid operational amplifier (refer to the figure below). The ac gain is approximately 600; dc bias is set by A2R1, R2, R5, R6, and R7.

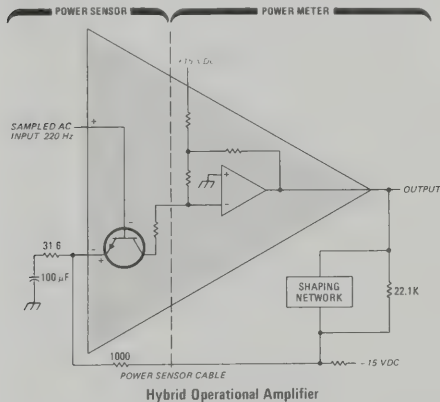

SERVICE SHEET 7 (cont'd)

Diodes A2CR1, CR2, VR1, and VR2 and their associated components are part of a shaping network which compensates for the non-linear output of the Power Sensor's sensing device. At RF inputs near the maximum power input (100 mW for Model 8481A) the power sensing device is slightly more efficient and the hybrid amplifier's gain is reduced slightly to provide a linear overall response.

The combination of A2C5, R10, and R11 is one of three RC networks in the ac amplifiers which determine the high frequency cutoff (240 Hz) of the 220 ± 20 Hz bandpass. A2C3, C4, and C6 are line noise filters.

Attenuator and Second Amplifier Assemblies

The Attenuator Networks and associated components on the A2 assembly form two separate attenuators and a variable low pass filter.

With high power RF inputs, relatively high voltages are coupled to the attenuator inputs. The higher the voltage the more it is attenuated, thus allowing for greater sensitivity needed for low power measurements while providing the needed resolution for each range. The various levels of attenuation permit five usable ranges whose values are determined by the Power Sensor being used. The following table shows the individual and combined effects of the attenuators on the ac signal. The attenuation resistors, therefore the value of attenuation, is selected by the outputs from the ROM A2U6 applied to the transistors A2Q21 through A2Q25.

RANGE	Attenuation		
	Network #1 (A2R24 & R25)	Network #2 (A2R37, R38, and R39)	Total
1	$\div 1$	$\div 1$	$\div 1$
2	$\div 1$	$\div 10$	$\div 10$
3	$\div 1$	$\div 100$	$\div 10^2$
4	$\div 100$	$\div 10$	$\div 10^1$
5	$\div 100$	$\div 100$	$\div 10^2$

The bandpass of the ac amplifiers in the Power Meter is approximately 220 ± 20 Hz. The lower cutoff frequency (200 Hz) is fixed by the combination of A2C8 with A2R24 and R25; also A2C11 with A2R37, R38, and R39.

Second Amplifier

A2U1 and its associated components form an operational amplifier stage with variable voltage gain from 5 to 18. The front panel CAL ADJ gain control is set to compensate for differences in sensitivity of individual Power Sensors. The gain is

SERVICE SHEET 7 (cont'd)

determined by A2R28, R33, and the CAL ADJ control R16.

Third Amplifier

A2U2A and B and associated components are operational amplifiers with voltage gains of about 20 each. Gain for A2U2A is determined by A2R52 and R53; for A2U2B by A2R48 and R49. Bias current is provided for A2U2A by A2R50.

The tuned amplifiers upper bandpass limit (240 Hz) is set by the parallel RC network of A2C12 and R48; A2C14 and R52; also in conjunction with a parallel RC network in the First Amplifier.

Phase Detector

The Phase Detector, like the sampling gate circuit in the Power Sensor, is driven by the 220 Hz Multivibrator drive signal. The 220 Hz switching signal (0 to -10 Vdc) is applied through the voltage divider A2R61 and R67 to the base of A2Q14 at a level of 0 to -0.6 Vdc. This signal turns Q14 on and off and causes the collector voltage to vary from 0 to -15 Vdc. The collector voltage from Q14 is applied to the base of A2Q13 through the voltage divider A2R60 and R62. This signal turns Q13 off and on causing the collector voltage to vary from 0 to -15 Vdc at a 220 Hz rate. The collector voltage from Q13 is applied to the gate of the n-channel FET Q12. This gate drive causes Q12 to turn on and off. When Q12 turns off, U8 operates as an amplifier with a gain of 1. When Q12 turns on, the non-inverting input to U8 is grounded causing U8 to operate as an inverting amplifier with a gain of -1. Any phase difference between the 220 Hz input signal to U8 and the 220 Hz switching signal from Q12 will cause the output of U8, pin 6 to be offset from the zero dc baseline. The output of the Phase Detector is applied to the A3 A-D Converter Assembly.

Sensor Sensitivity Detector and True Range Decoder

The Sensor Sensitivity Detector circuit consists of U4A, B, C, D and associated components. The True Range Decoder consists of U7 and U3.

The Sensor Sensitivity Detector, U4A, B, C, and D, provides inputs to the True Range Decoder, U7 along with the Range Counter (YR1, YR2, and YR3) in Local Mode, the programmed range inputs (YRR1, YRR2, and YRR3) when in Remote Mode, and YRLR input to give the correct range indication and decimal point location for the RF input power level being measured by the Power Sensor.

The Sensor Sensitivity Detector provides one input code to the True Range Decoder determined by the Power Sensor being used. When the non-inverting inputs to U4A, B, C, and D are the less positive inputs, the outputs are at approximately 0 volts (ground). When the non-inverting inputs are the more positive inputs, the outputs are approximately +15 volts (see tables below). The level

SERVICE SHEET 7 (cont'd)

on non-inverting inputs to U4A, B, C, and D is determined by the voltage divider composed of A2R13 and the Sensor Resistor (see tables below). When the Sensor Resistor is 0 ohms (GND), the outputs of U4 are approximately 0 volts.

For a 10W mampum input to the Power Sensor, the Sensor Resistor is approximately 3.46k ohms and the voltage level at the non-inverting inputs of U4 is approximately +2.8 volts. The output of U4C changes to approximately +15 volts. This change was caused by the non-inverting input going more positive than the inverting input level which is approximately +2 volts. The inverting input level is determined by the voltage divider composed of A2R29, R30, and R31. A2R29 is in parallel with R31 to ground. When the output of U4C changes to +15 volts, the inverting input to U4D changes to approximately +4 volts because now R36 and R40 are in parallel with the +15 volts applied and R32 and R41 are in parallel to ground, thus forming a series parallel network between ground and +15 volts. The table below gives the complete list of U4 inputs and outputs for each Sensor Resistor and the logic input codes to U7.

Maximum Range F.S.	U48			U4A			U4C			U4D			U7			
	5	6	7	1	2	3	8	9	10	12	13	14	14	27	3	26
10 μ W	6.1	11.9	0.0	13.7	5.4	6.1	0.7	8.5	6.1	6.1	7.1	0.0	0	1	0	0
100 μ W	7.6	11.9	0.0	13.7	5.4	7.6	0.7	8.5	7.6	7.6	7.1	13.8	0	1	0	1
1 mW	9.0	11.8	0.0	13.7	5.4	9.0	13.8	8.5	9.0	9.0	10.1	0.0	0	1	1	0
10 mW	10.6	11.8	0.0	13.7	5.4	10.6	13.8	8.5	10.6	10.6	10.1	13.8	0	1	1	1
100 mW	0.0	11.8	0.0	.6	5.4	0.0	0.1	2.2	0.0	0.0	0.6	0.0	0	0	0	0
1W	1.5	11.8	0.0	6	5.4	1.5	0.1	2.2	1.5	1.5	0.6	13.8	0	0	0	1
10W	2.9	11.8	0.0	7	5.4	2.9	13.7	2.2	2.9	2.9	3.7	0.0	0	0	1	0
100W	4.5	11.8	0.0	.7	5.4	4.5	13.7	2.2	4.5	4.5	3.7	13.8	0	0	1	1
(Open)																
Error	15.1	11.8	13.8	13.7	5.4	15.1	13.8	8.5	15.1	15.1	10.1	13.8	1	1	1	1

All voltages shown are ± 0.1 Vdc.

Power Sensor Maximum and Minimum F. S. Ranges and Resistor Values

Power Sensor	Maximum Power Range F.S.	Minimum Power Range F.S.	Power Sensor Resistor Value
8484A	10 μ W (–20 dBm)	1 mW (–60 dBm)	10.0k Ω
	100 μ W (–10 dBm)	10 nW (–50 dBm)	14.7k Ω
	1 mW (0 dBm)	100 nW (–40 dBm)	21.5k Ω
	10 mW (+10 dBm)	1 μ W (–30 dBm)	34.8k Ω
8481A/8482A/8483A	100 mW (+20 dBm)	10 μ W (–20 dBm)	0 Ω (Gnd)
	1 W (+30 dBm)	100 μ W (–10 dBm)	1.62k Ω
8481H/8482H	10 W (+40 dBm)	1 mW (0 dBm)	3.48k Ω
8481B/ 8482B	100 W (+50 dBm)	10 mW (+10 dBm)	6.19k Ω

Input and Output Code for A2U6 ROM

Input & Pin No.	Range				
	1	2	3	4	5
YR1 10	1	0	1	0	1
YR2 11	0	1	1	0	0
YR3 12	0	0	0	1	1
1 = 5V; 0 ≤ 0.3V					

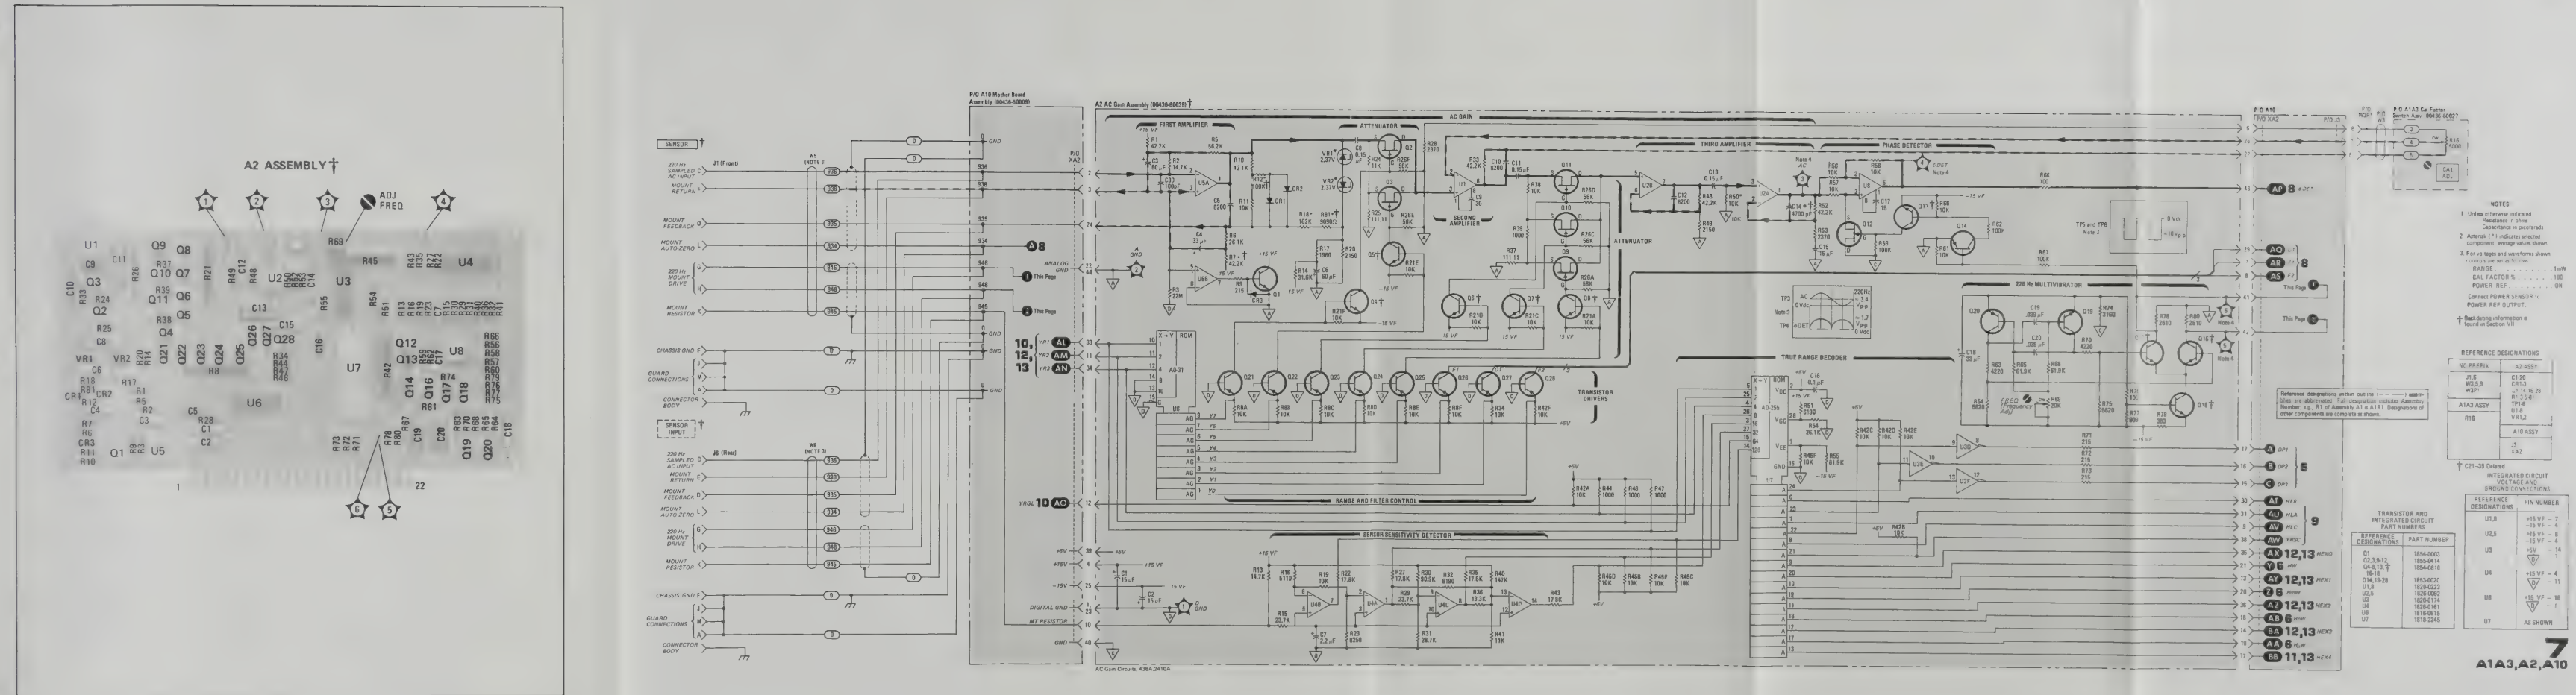


Figure 8-29. A2 AC Gain Assembly Component, Test Point, and Adjustment Location

Figure 8-30. AC Gain Assembly Schematic Diagram

SERVICE SHEET 8 (cont'd)

TROUBLESHOOTING

General

Before attempting to troubleshoot these circuits, verify that the power supply is operating properly. The voltages should be +5 Vdc, +15 Vdc, and -15 Vdc.

If the dc offset controls A3R2, A3R47, or A3R65 are incorrectly adjusted, the Auto-Zero circuits may not respond properly. Refer to the adjustment procedures in Section V.

Noise problems may be due to defective components in the Variable Low Pass Filter (especially in the two most sensitive ranges) or the Lead/Lag Amplifier which is an active low pass filter. A noise problem in the Lead/Lag Amplifier will be evident only during the zeroing sequence.

DC Amplifier, Lead/Lag Amplifier, and Servo Amplifier

Measure the dc input and output voltages. Verify that the amplifier outputs respond properly to the inputs. For troubleshooting operational amplifiers refer to Linear Integrated Circuits in Section VIII. A Servo Amplifier problem will be evident only during the Sensor-Zero sequence.

Auto Zero Assembly

The normal value range of the offset error voltage at A3A1, pin 5 is about -14 to +14 mVdc. The power sensing device normally exhibits a slight positive output due to ambient temperature, therefore the normal correction voltage is slightly negative, hence -4 mVdc.

The voltage measured at A3TP6 will provide an indication of how long the charge is retained on A3A1C_A. The voltage should remain virtually unchanged (± 1 mVdc) for 24 hours.

If any component in the A3A1 assembly is found to be defective, the entire assembly must be replaced.

A-D Converter Circuit

Set Power Meter to Watt Mode and apply a 1.0 mW input signal to Power Sensor. Check that Power Meter is on range 3 and A3TP4 (DC) should be approximately +1.0 Vdc. Check A3TP2 (RMP) for a 0 to -7.0 volt ramp with a time of approximately 33.3 ms. If ramp does not reach -7.0 volts with 1.0 Vdc at A3TP4 (DC), check that LRIN instruction on XA3 pin 24 is pulsed low for 33.3 ms to turn transistors A3Q11 and A3Q12 off and FET A3Q13 on. Check that ramp at A3TP2 decreases from -7 volts to 0 volts at a linear rate. Check -VR at collector of A3Q17, approximately -6.2 Vdc and +VR at A3U5B pin 7, approximately +6.2 Vdc. The LRP instruction on XA3 pin 25 is pulsed low in the Watt Mode to turn transistors A3Q1 and A3Q6 off and FET A3Q16 on causing a positive linear ramp to be generated. The LRM instruction on XA3 pin 26 is pulsed low in the Watt Mode to turn transistors A3Q2 and A3Q7 off and FET A3Q15 on causing a negative linear ramp to be generated. LRM and LRP instructions remain high when dBm, dB [REF], or dB (REL) Modes are selected.

Set Power Meter to dBm Mode and apply a 1.0 mW input signal to Power Sensor. Check that ramp at A3TP3 decreases from -7.0 volts to threshold (reference) level at a log rate. Check that LLGR and LRL instructions on XA3 pins 3 and 4 respectively are pulsed low in dBm, dB [REF], and dB (REL) Modes. The LRL instruction turns transistors A3Q4 and A3Q9 off and FET A3Q19 on applying the LOG REF (Threshold) signal to A3U2 pin 3. The output of A3U1 pin 6 must discharge past this level before the voltage at A3TP3 (YPLS) can switch to 0 volts. LLGR and LRL instructions remain high in the Watt Mode.

Check that the LAZO instruction at XA3 pin 2 is pulsed low. This turns transistors A3Q5 and A3Q10 off and turns FETs A3Q14 and A3Q20 on causing A3TP3 (YPLS) to be +2.0 volts dc during the A-D Converter's Auto-Zero cycle.

A3TP3 (YPLS) is at +5 volts while the ramps are discharging, at 0 Vdc when the Comparator, A3U2, switches from high to low, and at +2 Vdc during the A-D Auto-Zero cycle.

The time that each instruction remains low is determined by the program.



Fi

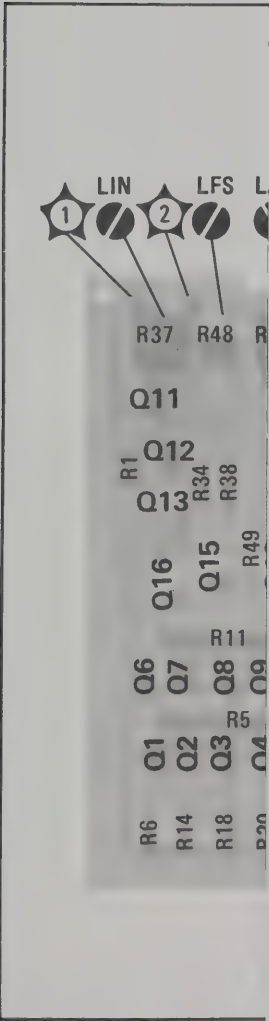


Figure 8-

CIRCUIT DESCRIPTIONS


General

The Phase Detector's output signal is applied to the Meter Amplifier and Limiter circuits. The input signal passes through the Limiter and Variable Low-Frequency Filter circuits before being amplified by the DC Amplifier. The gain of the DC Amplifier is controlled by the setting of the CAL FACTOR % switch, A1S2. The output of the DC Amplifier is applied to the Cal Factor Select circuit, Lead/Lag Amplifier, RECORDER OUTPUT connector, and the A-D Converter. The Meter Amplifier provides the necessary drive for the front panel meter (M1). It also provides an unfiltered signal for the rear panel RECORDER OUTPUT connector if the standard connection of A3R69 is not desired. The Lead/Lag Amplifier maintains the phase-gain response of the feedback loop in a stable mode. The Servo Amplifier has an integrator in its feedback loop (C16 and R54) which also shapes the overall phase-gain response of the Auto-Zero feedback path. The Servo Amplifier generates an error voltage if the DC Amplifier's output is not near zero volts. Without an RF input applied to the Power Sensor, the DC Amplifier's output is very close to 0 Vdc. When the SENSOR ZERO switch is depressed, or the Sensor-Zero Remote command is enabled (NAZR), causing the ZERO lamp to light, the relay in A3A1 to close its contacts, and the Servo Amplifier's output to produce an error offset voltage. This error voltage is applied to the Auto-Zero Assembly (A3A1) from where it is processed and summed with the output from the Power Sensor's sensing element. This composite voltage provides a correction signal of equal dc level but opposite polarity to the output of the sensing element with no RF input signal applied. With the corrected input voltage, the DC Amplifier's output is exactly 0 Vdc. When the SENSOR ZERO switch is released, or the NAZR signal is disabled, the Servo Amplifier's output voltage level is stored within the Auto-Zero Assembly and the correction voltage remains coupled across the sensing element until another Auto-Zero correction is needed.

The Transistor Drivers provide buffering and signal level conversion for the A-D Converter's control signals. The A-D Converter provides either a negative or positive linear or exponential ramp to the Comparator. The Comparator's output (YPLS) at A3TP3 is either high or low, if the A-D Converter's threshold is above or below the dc input signal level and is midway between high and low during the A-D Converter's Auto-Zero cycle.

Limiter and Variable Low-Pass Filter Circuits

The Limiter circuit clips over-range outputs from the Phase Detector to reduce the time for the Variable Low-Pass Filter to recover from a greater than full-scale change in the input signal level. The response time of the Filter varies with the bandpass selected by the ROM's outputs (D1, F1, and F2). For ranges 5, 4, and 3, the bandpass is 17 Hz. For ranges 2 and 1, the bandpass is

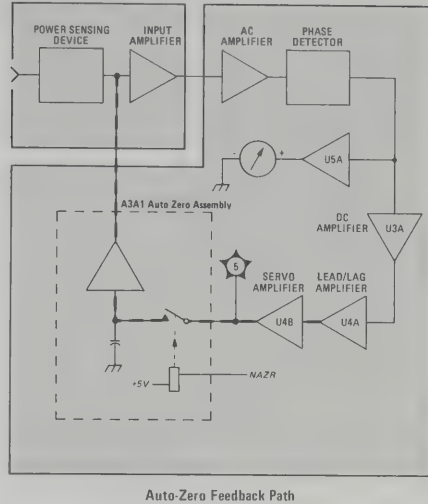

Auto-Zero Feedback Path

reduced by factors of 10 to 1.7 and 0.17 Hz, respectively. The bandpass values represent the optimum tradeoff between filter response time and signal-to-noise ratio. On the higher ranges (3, 4, and 5), the gain of the Power Meter is relatively low and the 17 Hz bandpass enables the Filter to respond to a full-scale change in input level in 0.1 second (see Figure 3-7). On the lower ranges (1 and 2), the gain of the Power Meter increases and a higher noise level is present at the output of the Phase Detector. Thus, a narrower bandpass is required to maintain the desired signal-to-noise ratio at the input of the A-D Converter. The time required for the Filter to respond to a full-scale change in input level is one second on range 2 and ten seconds on range 1. Resistors A3R16, R22, R26, and R30 modify the Power Meter's Sensor-Zero feedback loop phase-gain response to maintain stability in the loop.

DC Amplifier

The output from the Variable Low-Pass Filter is applied to the input of the DC Amplifier. The DC OFF (DC Offset) control is adjusted to eliminate any dc offset voltage introduced by the DC Amplifier. The gain of the DC Amplifier is one when the CAL FACTOR % switch is set to the 100 position. The gain increases by approximately 1% for each lower-numbered switch

position. The output of the DC Amplifier is applied to the A-D Converter, the RECORDER OUTPUT connector, and the Lead/Lag Amplifier circuits.

Lead/Lag Amplifier and Servo Amplifiers

The output signal from the DC Amplifier is applied to the non-inverting input of U4A. The Lead/Lag Amplifier and Servo Amplifier are connected in series in the Sensor-Zero feedback loop and function only when the SENSOR ZERO switch is depressed or the Remote Interface produces a Sensor Zero command. R46 and C11 form a high frequency roll-off filter at the input to U4A. Capacitors C14 and C15 form a 0.5 μ F non-polarized capacitor for the feedback across U4A. The combination of C13, C14, C15, R52, R53, and R55 reduce the high frequency response of U4A, while increasing the low frequency response of U4A. The output from U4A is applied to the non-inverting input of U4B, Servo Amplifier. VR4 and VR5 act to prevent the output of U4B from going more than ± 8.25 V. The output from U4B is applied to the input of the Auto-Zero Assembly (A3A1). The source signal from the FET, A3A1 Q_A, is fed back to the inverting input of U4B through C16 and R54. The feedback path of U4B is an integrator that causes the high frequencies to be reduced. The output from the Auto-Zero Assembly is applied to the Power Sensor to develop a correction voltage that is input back to the DC Amplifier. This correction voltage is stored in capacitor A3A1C_A. When the SENSOR ZERO switch is released, this voltage holds the correction voltage constant at the Power Sensor. The special construction of the A3A1 assembly and the high gate impedance of A3A1Q_A reduces the leakage from A3A1C_A and therefore increases the storage time of the correction voltage. A3R65 BAL (Balance) control is provided to center the Auto-Zero circuit's output voltage range. (See Section V, Spike Balance Adjustment).

Transistor Drivers

The Transistor Driver circuits consist of transistors A3Q1 through A3Q12 and associated components. The Transistor Drivers provide buffering and signal level conversion for the control signals being applied to the A-D Converter from the Controller Assembly A5.

Transistors A3Q1 through A3Q12 are connected to provide a level transformation from TTL logic levels of 0 and +5 volts to 0 and -15 volts required to turn on and off the FET switches in the A-D Converter.

A-D (Analog-To-Digital) Converter

The A-D Converter Auto-Zero Enable (LAZO) signal causes FET's A3Q14 and A3Q20 to conduct. A3Q14's conduction holds the inverting input of A3U1 pin 2 low. A3Q20's conduction closes a feedback path from the output of the comparator (A3U2) through A3R66, A3R58, A3Q20, and A3R50 to the non-inverting input of A3U1 pin 3. This path allows A3C9 to charge up and hold the

YPLS (A3TP3) output of A3U2 at approximately +2.0 Vdc. This value is valid for only Auto-Zero operations. Loss of the LAZO signal opens the feedback path and releases the low on pin 2 of A3U1.

The DC Input Enable (LRIN) causes FET A3Q13 to conduct, applying the dc input voltage from the DC Amplifier to the inverting input of A3U1 pin 2. Transistor A3Q17 and zener diode A3VR2 produce a negative voltage reference source, -VR. A3U5B, A3R40, and A3R43 form an inverting amplifier with a gain of -1. Thus, producing the positive voltage reference source at the output of A3U5B pin 7 (+VR). The Enable Positive Ramp (LRP) causes FET A3Q16 (+RAMP) to conduct and apply a negative input to A3U1 from the -VR source. A3R37 LIN (Linearity) control is adjusted for a specific digital readout (see Section V, Adjustments). Capacitor A3C12 is charged up to approximately -7 times the dc input voltage when the DC Input Enable is terminated. A3C12 discharges at a rate of approximately 3.5 mV/clock pulse. The output level at pin 6 of A3U1 should reduce to approximately 0 Vdc. The output of A3U1 is applied to the inverting input of A3U2 producing a high output if the threshold was below the dc input level, or a low if it was above the input level.

The Enable Negative Ramp (LRM) causes FET A3Q15 (-RAMP) to conduct, applying a positive input to A3U1 from the +VR source. The Enable Log Ramp (LRL) and the Log Enable Reference (LLGR) cause FET's A3Q18 and A3Q19 to conduct. A3Q19 completes a path to apply a negative threshold voltage to pin 3 of A3U2. This is the Log Reference voltage. As the output of A3U1 discharges to the threshold level, the output of the Comparator remains constant. When the voltage at pin 2 of A3U2 reaches the threshold level, the output of the Comparator switches to the opposite polarity.

SERVICE SHEET 8 (cont'd)

TROUBLESHOOTING

General

Before attempting to troubleshoot these circuits, verify that the power supply is operating properly. The voltages should be +5 Vdc, +15 Vdc, and -15 Vdc.

If the dc offset controls A3R2, A3R47, or A3R65 are incorrectly adjusted, the Auto-Zero circuits may not respond properly. Refer to the adjustment procedures in Section V.

Noise problems may be due to defective components in the Variable Low Pass Filter (especially in the two most sensitive ranges) or the Lead/Lag Amplifier which is an active low pass filter. A noise problem in the Lead/Lag Amplifier will be evident only during the zeroing sequence.

DC Amplifier, Lead/Lag Amplifier, and Servo Amplifier

Measure the dc input and output voltages. Verify that the amplifier outputs respond properly to the inputs. For troubleshooting operational amplifiers refer to Linear Integrated Circuits in Section VIII. A Servo Amplifier problem will be evident only during the Sensor-Zero sequence.

Auto Zero Assembly

The normal value range of the offset error voltage at A3A1 pin 5 is about -14 to +14 mVdc. The power sensing device normally exhibits a slight positive output due to ambient temperature, therefore the normal correction voltage is slightly negative, hence -4 mVdc.

The voltage measured at A3TP6 will provide an indication of how long the charge is retained on A3A1C_A. The voltage should remain virtually unchanged (± 1 mVdc) for 24 hours.

If any component in the A3A1 assembly is found to be defective, the entire assembly must be replaced.

A-D Converter Circuit

Set Power Meter to Watt Mode and apply a 1.0 mW input signal to Power Sensor. Check that Power Meter is on range 3 and A3TP4 (DC) should be approximately +1.0 Vdc. Check A3TP2 (RMP) for a 0 to -7.0 volt ramp with a time of approximately 33.3 ms. If ramp does not reach -7.0 volts with 1.0 Vdc at A3TP4 (DC), check that LRIN instruction on XA3 pin 24 is pulsed low for 33.3 ms to turn transistors A3Q11 and A3Q12 off and FET A3Q13 on. Check that ramp at A3TP2 decreases from -7 volts to 0 volts at a linear rate. Check -VR at collector of A3Q17, approximately -6.2 Vdc and +VR at A3U5B pin 7, approximately +6.2 Vdc. The LRP instruction on XA3 pin 25 is pulsed low in the Watt Mode to turn transistors A3Q1 and A3Q6 off and FET A3Q16 on causing a positive linear ramp to be generated. The LRM instruction on XA3 pin 26 is pulsed low in the Watt Mode to turn transistors A3Q2 and A3Q7 off and FET A3Q15 on causing a negative linear ramp to be generated. LRM and LRP instructions remain high when dBm, dB [REF], or dB (REL) Modes are selected.

Set Power Meter to dBm Mode and apply a 1.0 mW input signal to Power Sensor. Check that ramp at A3TP3 decreases from -7.0 volts to threshold (reference) level at a log rate. Check that LLGR and LRL instructions on XA3 pins 3 and 4 respectively are pulsed low in dBm, dB [REF], and dB (REL) Modes. The LRL instruction turns transistors A3Q4 and A3Q9 off and FET A3Q19 on applying the LOG REF (Threshold) signal to A3U2 pin 3. The output of A3U1 pin 6 must discharge past this level before the voltage at A3TP3 (YPLS) can switch to 0 volts. LLGR and LRL instructions remain high in the Watt Mode.

Check that the LAZO instruction at XA3 pin 2 is pulsed low. This turns transistors A3Q5 and A3Q10 off and turns FETs A3Q14 and A3Q20 on causing A3TP3 (YPLS) to be +2.0 volts dc during the A-D Converter's Auto-Zero cycle.

A3TP3 (YPLS) is at +5 volts while the ramps are discharging, at 0 Vdc when the Comparator, A3U2, switches from high to low, and at +2 Vdc during the A-D Auto-Zero cycle.

The time that each instruction remains low is determined by the program.

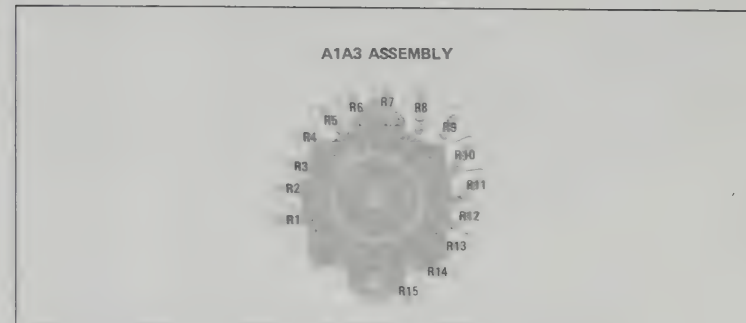


Figure 8-31. A1A3 CAL FACTOR % Switch Assembly Component Locations

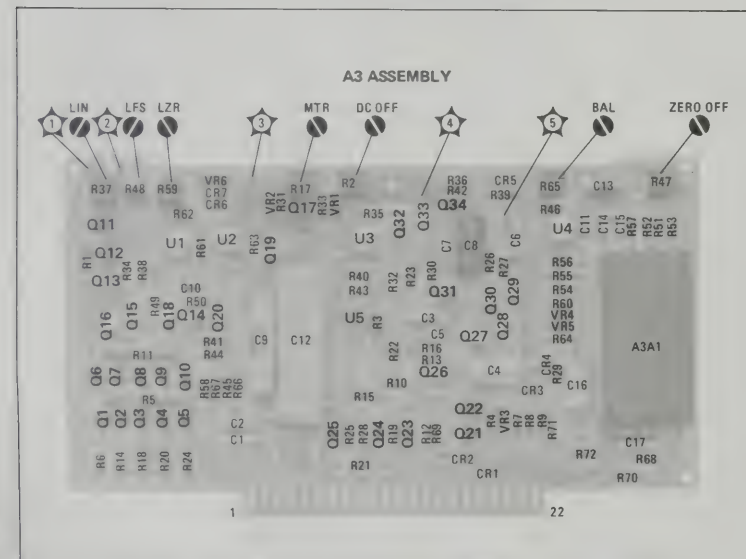


Figure 8-32. A3 A-D Converter Assembly Components, Test Point, and Adjustment Locations

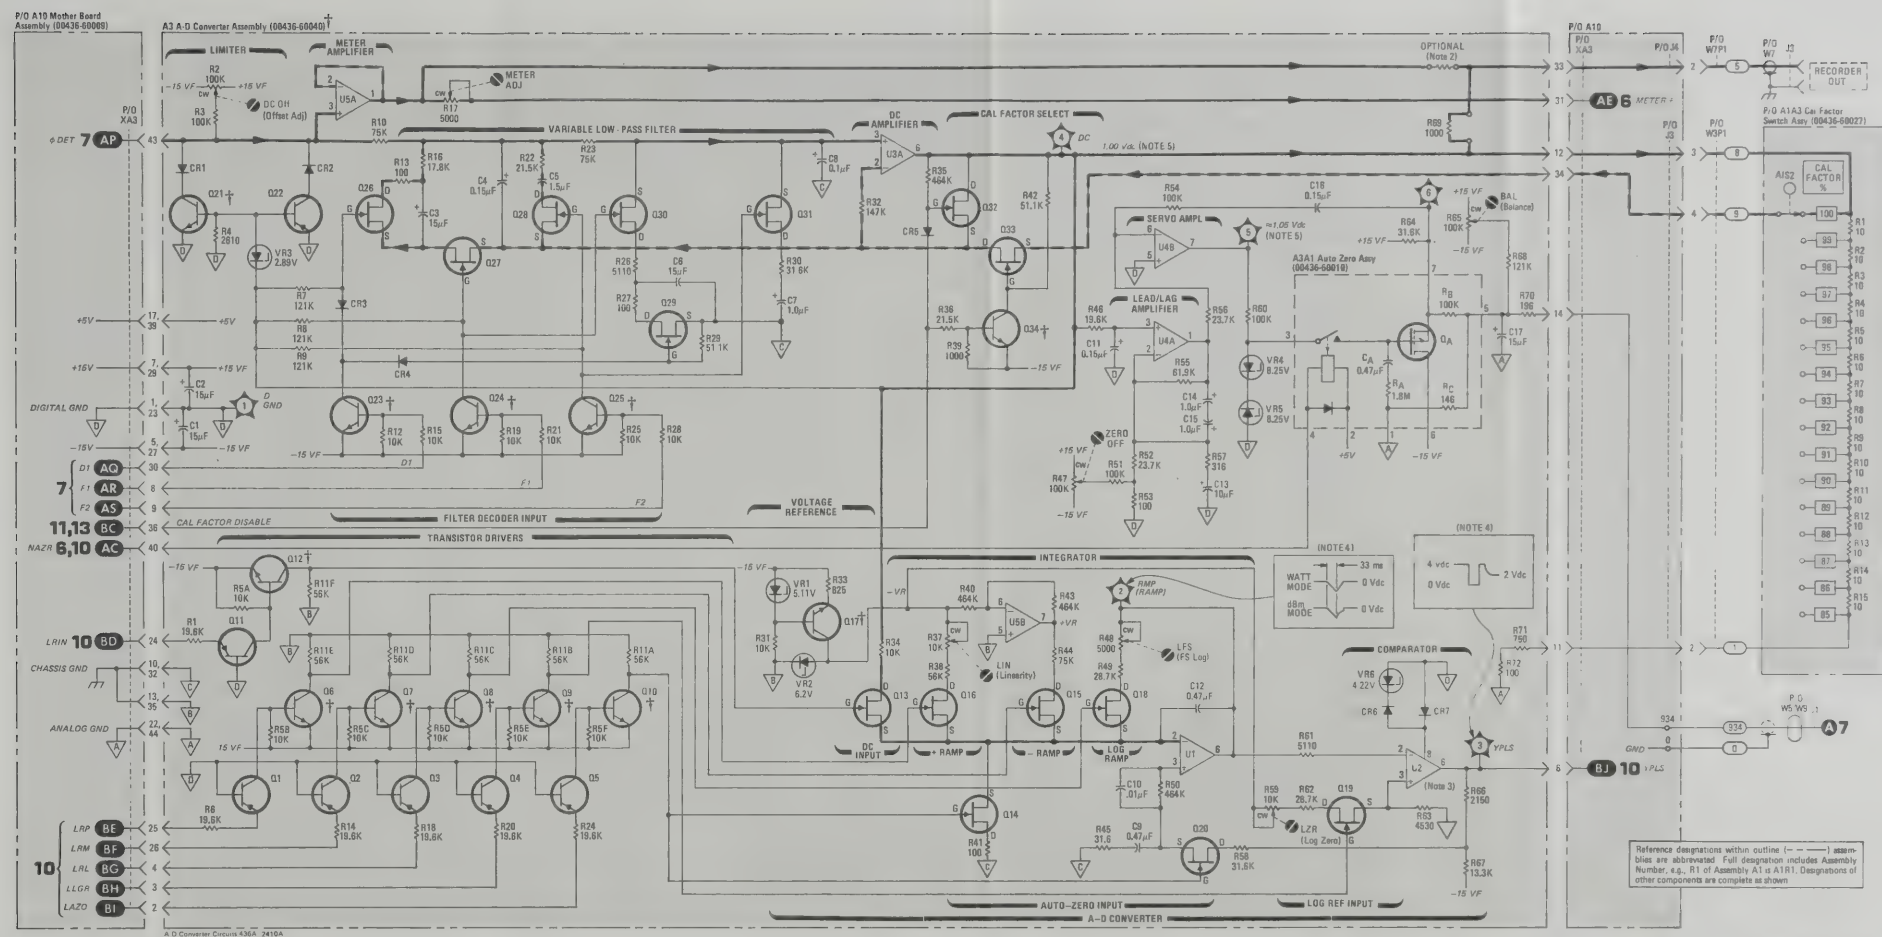


Figure 8-33. A-D Converter Assembly Schematic Diagram

- NOTES
1. Unless otherwise indicated, resistance in ohms.
 2. Standard connection shown for P/O A1A3 Cal Factor Switch Assy (00436-60027).
 3. Pins 1 and 5 cut off.
 4. For voltages and waveforms shown, controls are set as follows:
RANGE 1 mV
CAL FACTOR % 100
POWER REF ON
Connect POWER SENSOR to POWER REF OUTPUT

† Backdating information is found in Section VII.

REFERENCE DESIGNATIONS

NO.	PREFIX	A3 ASSY
1	W5	W5
2	W7	W7
3	W1	W1
4	W2	W2
5	W3	W3
6	W4	W4
7	W5	W5
8	W6	W6
9	W7	W7
10	W8	W8
11	W9	W9
12	W10	W10
13	W11	W11
14	W12	W12
15	W13	W13
16	W14	W14
17	W15	W15
18	W16	W16
19	W17	W17
20	W18	W18
21	W19	W19
22	W20	W20
23	W21	W21
24	W22	W22
25	W23	W23
26	W24	W24
27	W25	W25
28	W26	W26
29	W27	W27
30	W28	W28
31	W29	W29
32	W30	W30
33	W31	W31
34	W32	W32
35	W33	W33
36	W34	W34
37	W35	W35
38	W36	W36
39	W37	W37
40	W38	W38
41	W39	W39
42	W40	W40
43	W41	W41
44	W42	W42
45	W43	W43
46	W44	W44
47	W45	W45
48	W46	W46
49	W47	W47
50	W48	W48
51	W49	W49
52	W50	W50
53	W51	W51
54	W52	W52
55	W53	W53
56	W54	W54
57	W55	W55
58	W56	W56
59	W57	W57
60	W58	W58
61	W59	W59
62	W60	W60
63	W61	W61
64	W62	W62
65	W63	W63
66	W64	W64
67	W65	W65
68	W66	W66
69	W67	W67
70	W68	W68
71	W69	W69
72	W70	W70
73	W71	W71
74	W72	W72
75	W73	W73
76	W74	W74
77	W75	W75
78	W76	W76
79	W77	W77
80	W78	W78
81	W79	W79
82	W80	W80
83	W81	W81
84	W82	W82
85	W83	W83
86	W84	W84
87	W85	W85
88	W86	W86
89	W87	W87
90	W88	W88
91	W89	W89
92	W90	W90
93	W91	W91
94	W92	W92
95	W93	W93
96	W94	W94
97	W95	W95
98	W96	W96
99	W97	W97
100	W98	W98
101	W99	W99
102	W100	W100

TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS

REFERENCE DESIGNATION	PART NUMBER
Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10, Q11, Q12, Q13, Q14, Q15, Q16, Q17, Q18, Q19, Q20, Q21, Q22, Q23, Q24, Q25, Q26, Q27, Q28, Q29, Q30, Q31, Q32, Q33, Q34, Q35, Q36, Q37, Q38, Q39, Q40, Q41, Q42, Q43, Q44, Q45, Q46, Q47, Q48, Q49, Q50, Q51, Q52, Q53, Q54, Q55, Q56, Q57, Q58, Q59, Q60, Q61, Q62, Q63, Q64, Q65, Q66, Q67, Q68, Q69, Q70, Q71, Q72, Q73, Q74, Q75, Q76, Q77, Q78, Q79, Q80, Q81, Q82, Q83, Q84, Q85, Q86, Q87, Q88, Q89, Q90, Q91, Q92, Q93, Q94, Q95, Q96, Q97, Q98, Q99, Q100	1853-0020 1854-0010 1855-0414 1856-0414 1857-0414 1858-0414 1859-0414 1860-0414 1861-0414 1862-0414 1863-0414 1864-0414 1865-0414 1866-0414 1867-0414 1868-0414 1869-0414 1870-0414 1871-0414 1872-0414 1873-0414 1874-0414 1875-0414 1876-0414 1877-0414 1878-0414 1879-0414 1880-0414 1881-0414 1882-0414 1883-0414 1884-0414 1885-0414 1886-0414 1887-0414 1888-0414 1889-0414 1890-0414 1891-0414 1892-0414 1893-0414 1894-0414 1895-0414 1896-0414 1897-0414 1898-0414 1899-0414 1900-0414


INTEGRATED CIRCUITS

REFERENCE DESIGNATION	PIN NUMBER
U1, U2, U3, U4, U5, U6, U7, U8, U9, U10, U11, U12, U13, U14, U15, U16, U17, U18, U19, U20, U21, U22, U23, U24, U25, U26, U27, U28, U29, U30, U31, U32, U33, U34, U35, U36, U37, U38, U39, U40, U41, U42, U43, U44, U45, U46, U47, U48, U49, U50, U51, U52, U53, U54, U55, U56, U57, U58, U59, U60, U61, U62, U63, U64, U65, U66, U67, U68, U69, U70, U71, U72, U73, U74, U75, U76, U77, U78, U79, U80, U81, U82, U83, U84, U85, U86, U87, U88, U89, U90, U91, U92, U93, U94, U95, U96, U97, U98, U99, U100	-15 V - 4 +15 V - 7 -15 V - 4 +15 V - 8

8
A1A3, A3, A10

SERVICE SHEET 9**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 9 are covered on Service Sheets 1 and 3 and Troubleshooting in paragraphs 8-55 through 8-62.

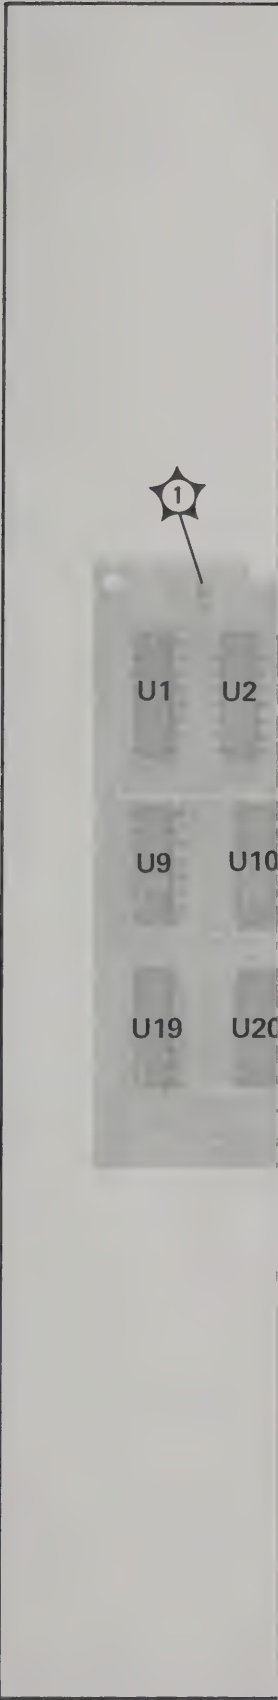

Figure

SERVICE SHEET 9**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 9 are covered on Service Sheets 1 and 3 and Troubleshooting in paragraphs 8-55 through 8-62.

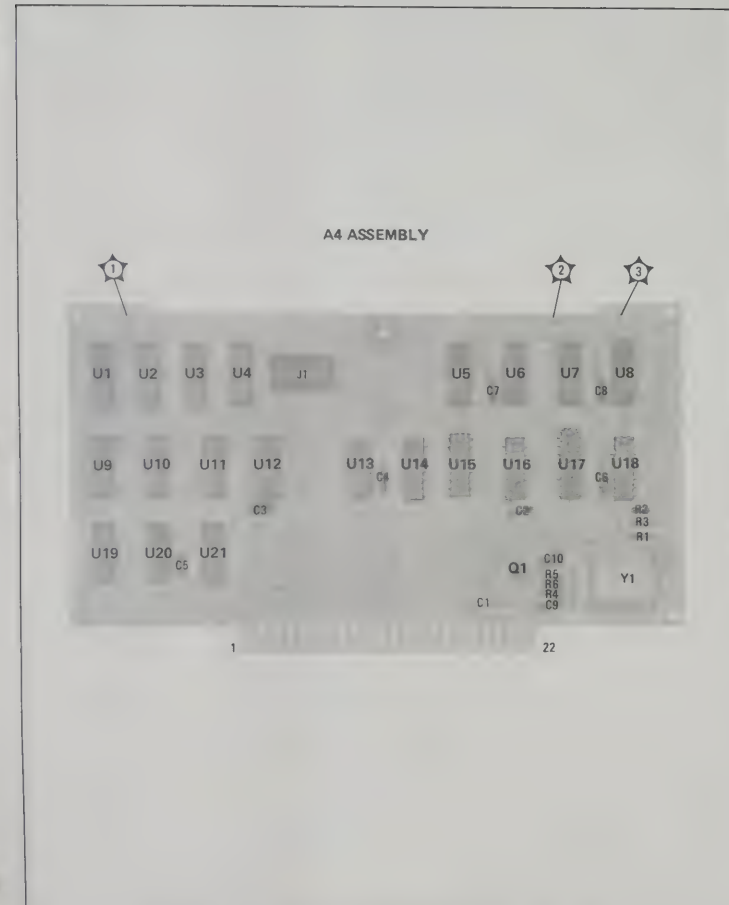


Figure 8-34. A4 Counter Relative Assembly Component and Test Point Locations

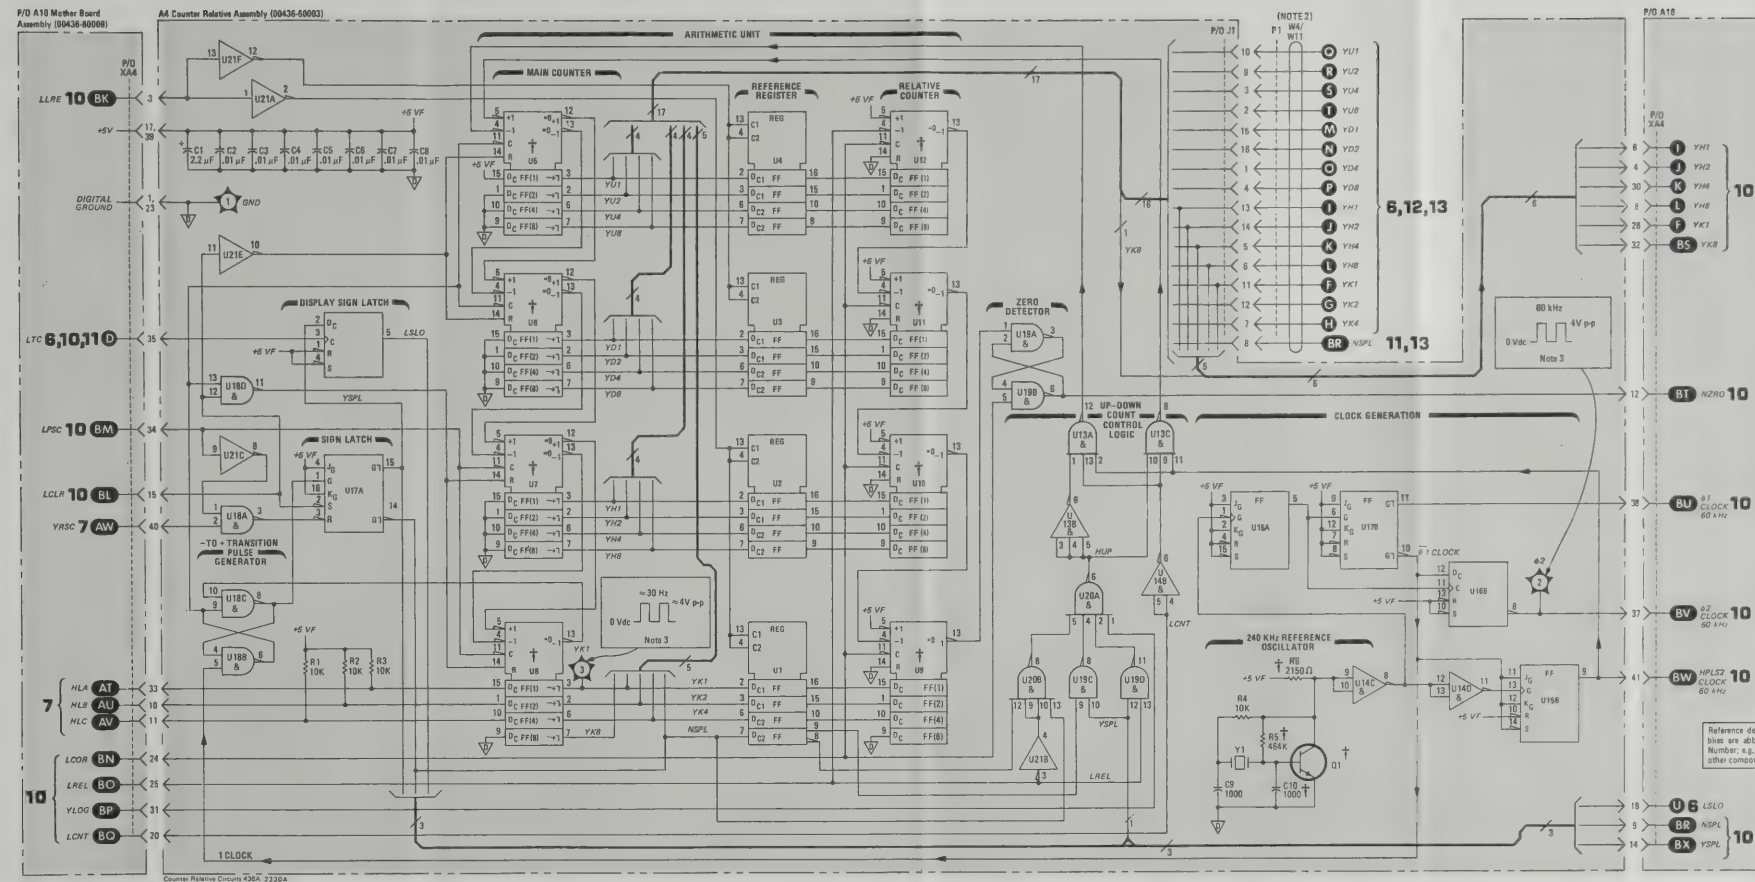


Figure 8-35. Counter Relative Assembly Schematic Diagram

- NOTES**
- Under otherwise indicated, Resistance in ohms Capacitance in picofarads.
 - W4 (limited on Options 22, 24) W11 (with Options 22, 24).
 - For voltages and waveforms shown, controls are set as follows:

RANGE 1 mV
CAL FACTOR % . . . 100%
POWER REF 0N

Connect POWER SENSOR to POWER REF OUTPUT

REFERENCE DESIGNATIONS	A4 ASSY	A10 ASSY
C1 - 10	X44	
J1		NO PREFIX
R1 - 6		
TP1 - 2		
U1 - 21		
Y1		

TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS

REFERENCE DESIGNATIONS	PART NUMBER
U1	1824-0810
U1-4	1825-1411
U5-12	1826-1272
U13	1825-1202
U14, 18, 19	1826-1197
U15	1825-1212
U16	1826-0077
U17	1826-0070
U20	1826-1204
U21	1826-1195


INTEGRATED CIRCUIT VOLTAGE AND GROUND CONNECTIONS

REFERENCE DESIGNATIONS	PIN NUMBER
U1-4	+5 VF -5
U5-12, 15	-12
U13, 14, 16	+5 VF -18
U17	-8
U17	+5 VF -14
U17	-7
U17	+5 VF -5
U17	-13

† See backdating information in section VII.


SERVICE SHEET 10**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 10 are covered on Service Sheets 1 and 3 and Troubleshooting in paragraphs 8-55 through 8-62.

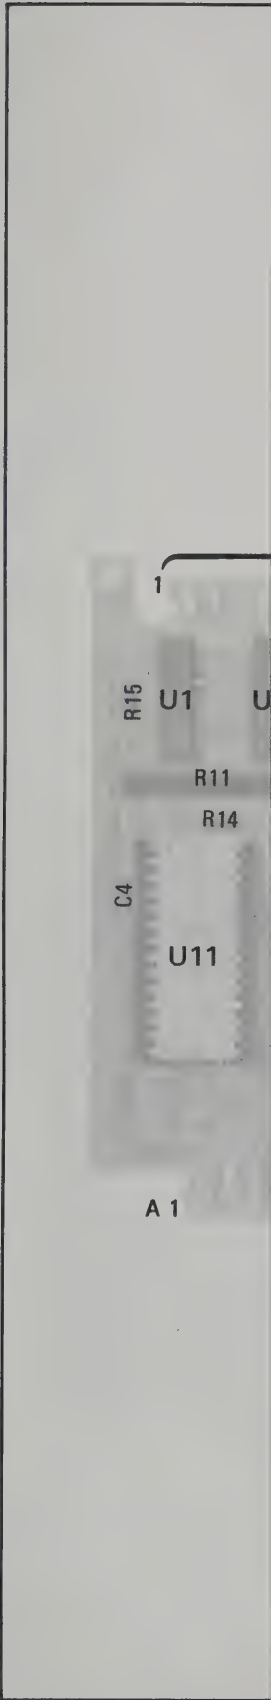

SERVICE SHEET 10**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 10 are covered on Service Sheets 1 and 3 and Troubleshooting in paragraphs 8-55 through 8-62.

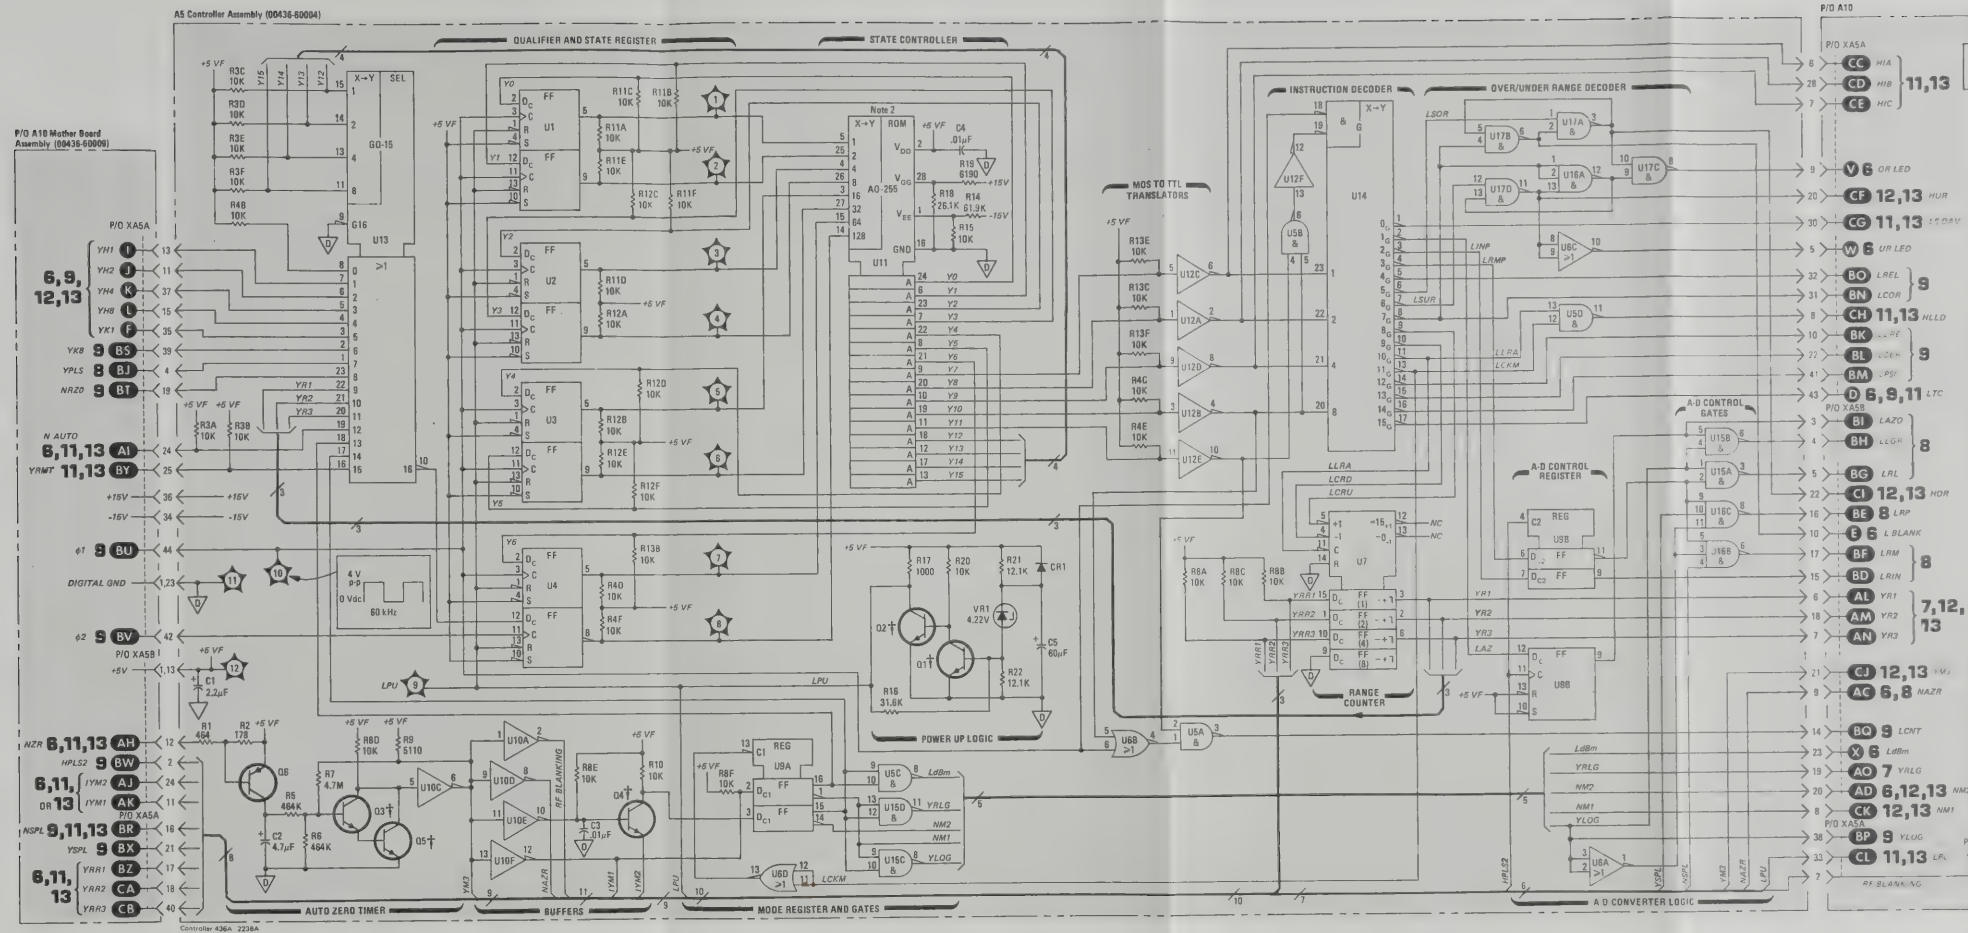

8-177

SERVICE SHEET 11

CIRCUIT DESCRIPTIONS

The circuits described in Service Sheet 11 are covered in paragraphs 8-114 through 8-161, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, Troubleshooting in Table 8-4, and HP-IB Verification Programs in Figures 8-16 and 8-17.

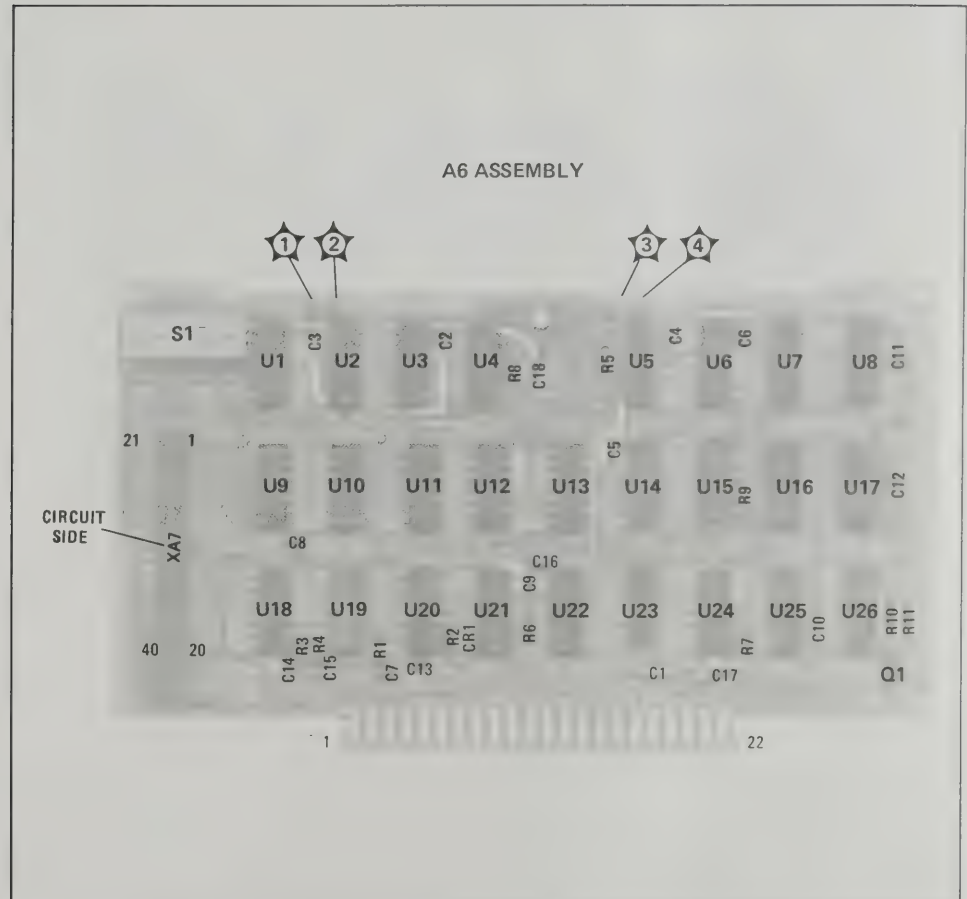


Figure 8-38. A6 HP-IB (Option 022) Control Assembly Component and Test Point Locations

Model 436A

The circuits described in Service Sheet 11 are covered in paragraphs 8-114 through 8-161, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, Troubleshooting in Table 8-4, and HP-IB Verification Programs in Figures 8-16 and 8-17.

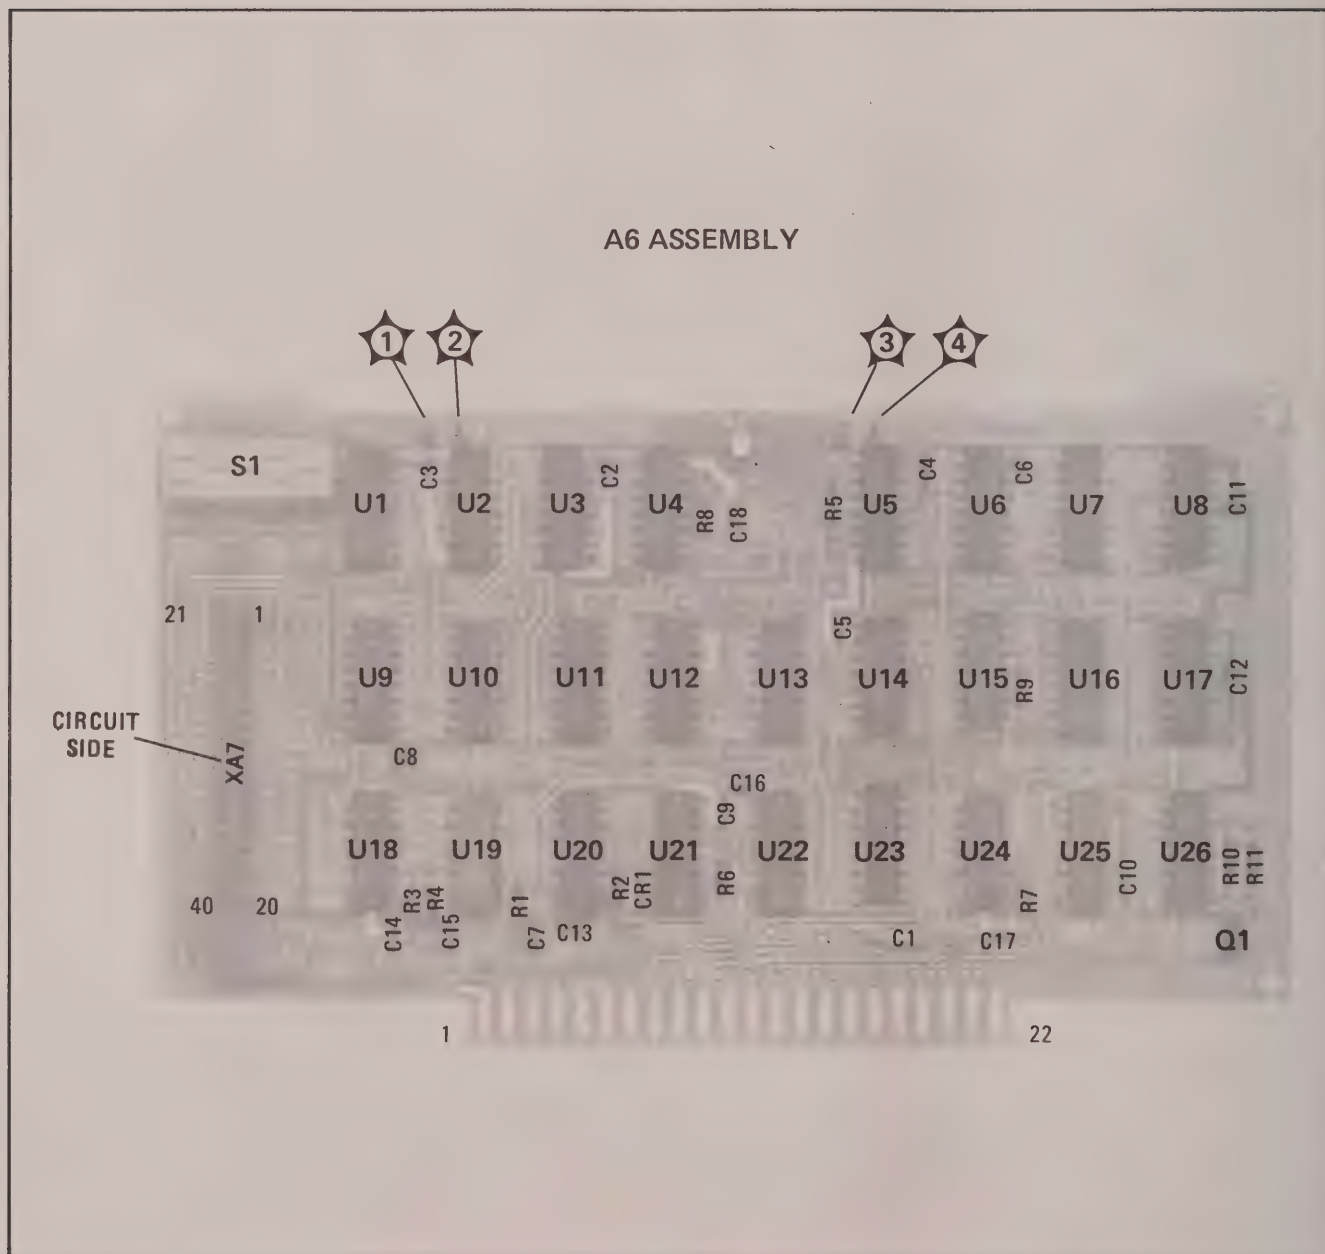


Figure 8-38. A6 HP-IB (Option 022) Control Assembly Component and Test Point Locations



SERVICE SHEET 12**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 12 are covered in paragraphs 8-111 through 8-154, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, Troubleshooting in Table 8-4, and HP-IB Verification Programs in Figures 8-16 and 8-17.




Figure 8-40.

SERVICE SHEET 12**CIRCUIT DESCRIPTIONS**

The circuits described in Service Sheet 12 are covered in paragraphs 8-111 through 8-154, HP-IB Instrument Checkout in paragraphs 8-63 through 8-66, Troubleshooting in Table 8-4, and HP-IB Verification Programs in Figures 8-16 and 8-17.



Figure 8-40. A7 HP-IB (Option 022) Input/Output Assembly Component and Test Point Locations

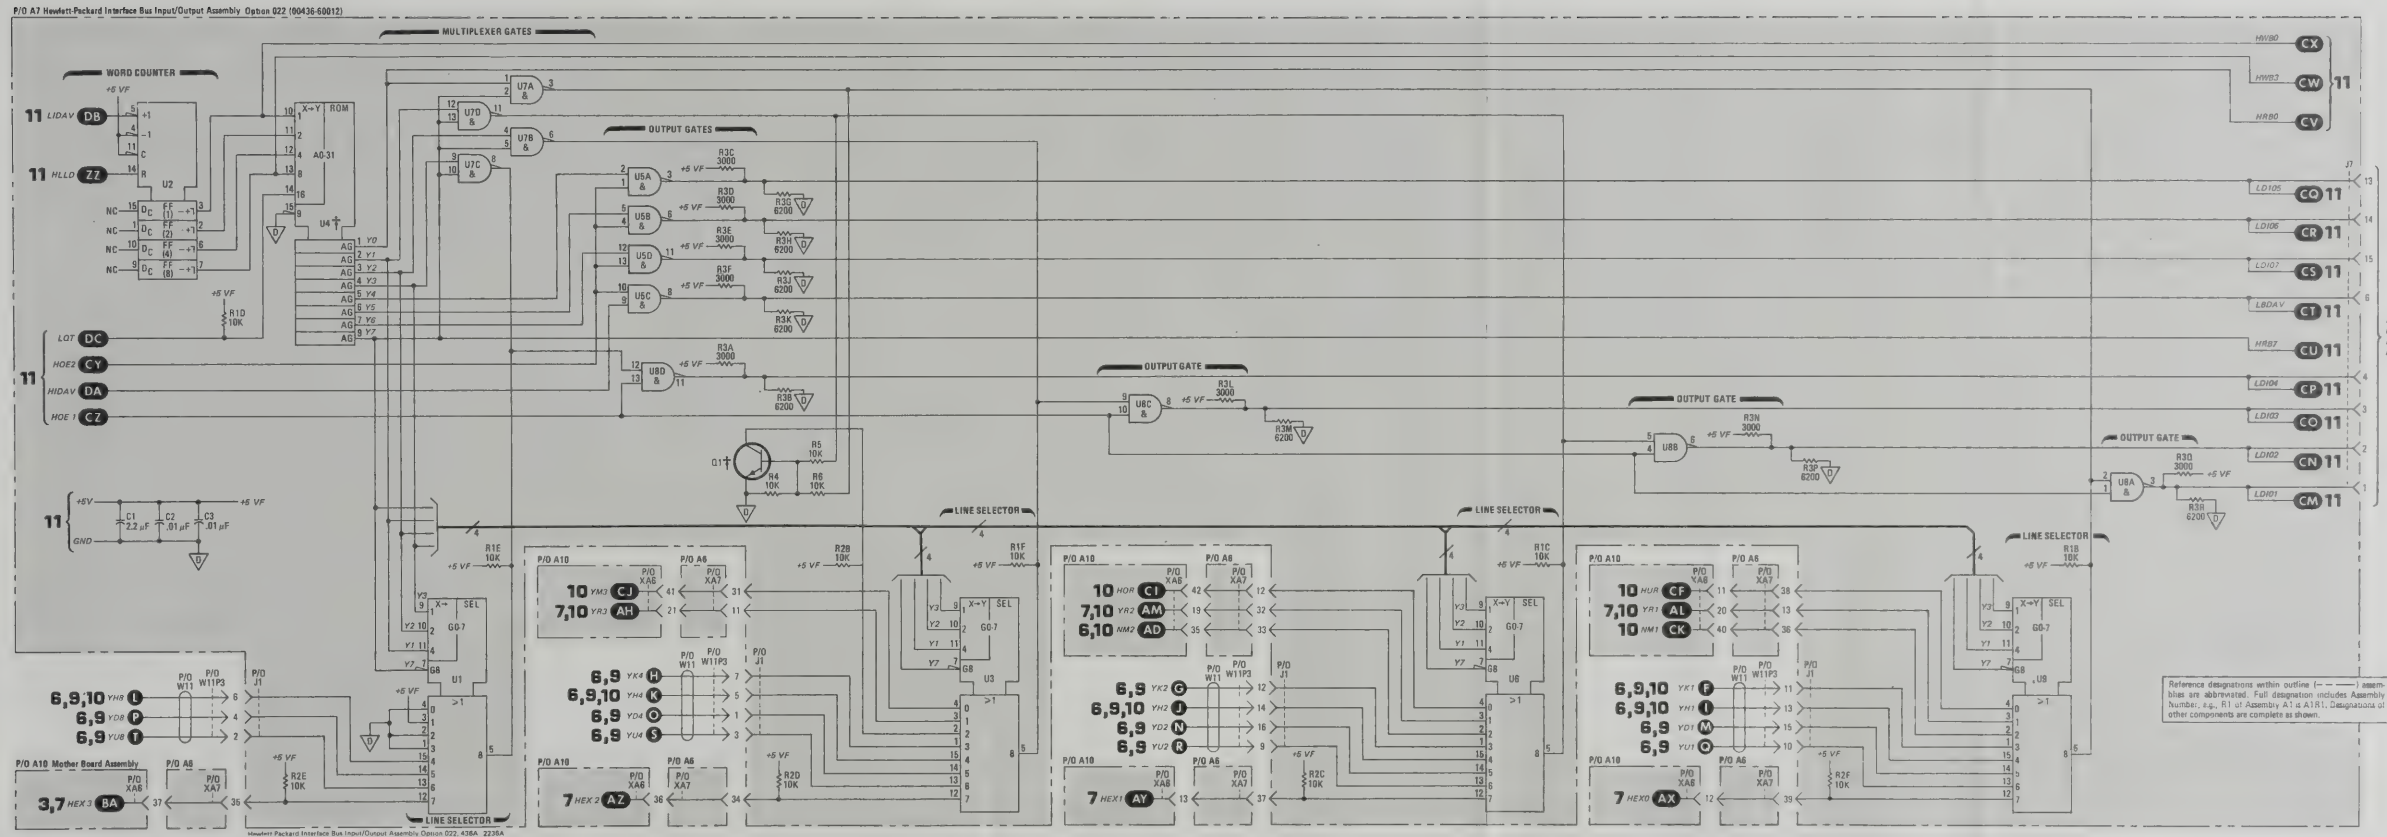

NOTE
1. Unless otherwise indicated
Resistance in ohms,
Capacitance in picofarads

HEWLETT-PACKARD
INTERFACE
BUS

† Backdating information is
found in Section VII

NO PREFIX	A7 ASSY
W11	C1-3
W1P3	J1-7
AB ASSY	R1-6
XA7	U1-8
	A10 ASSY
	XA6

REFERENCE DESIGNATIONS	PART NUMBER
U1	1954-0810
U2	1820-1298
U3	1820-1194
U4	00K35-00009
U5,8	1820-0621
U7	1820-1198

REFERENCE DESIGNATIONS	PIN NUMBER
U1-3,4,5,8	+5 V _F - 18
U2	- 7
U3	+5 V _F - 14
U5,7,8	- 7

12
A6, A7, A10

Figure 8-41. HP-IB (Option 022) Input/Output Assembly Schematic Diagram

SERVICE SHEET 13 HAS BEEN DELETED

SERVICE SHEET 14

General

The A8A1 assembly provides a 50 ± 5 MHz output at $1 \text{ mW} \pm 0.7\%$. The oscillator's output is held constant by an ALC loop made up of a peak detector CR2 and comparator U2. The comparator reference input is from a very stable +5V power supply composed of U1, VR2 and their associated components. The LEVEL control R4 sets the comparator reference which controls the oscillator feedback level and thereby controls the A8A1 assembly POWER REF OUTPUT level. The oscillator's frequency is set by adjusting the FREQ ADJ control L1.

50 MHz Oscillator

The oscillator circuit is made up of common-emitter amplifier Q1 and its associated components. Resistors R12, R13, R14, and R15 bias Q1 for an emitter current of approximately 5 mA. The π -network tuned circuit, C11, C13, C14, and L1 determines the operating frequency. The amplifier gain is set by the operating circuit impedance across the tuned circuit and the emitter resistor R14 (which is ac coupled to ground by C12). The positive feedback required to sustain oscillation is satisfied in this circuit. Phase shift of 180° is a characteristic of both common-emitter amplifiers and π -network tuned circuits. This feedback is coupled through C9 and C10, back to the base of Q1. The FREQ ADJ control L1 sets the oscillator's frequency.

ALC Loop

At the positive peak of each cycle, current momentarily flows from the feedback loop through peak detector diode CR2 to C7. The resultant stored charge is coupled, as a dc input voltage, to pin 3 of U2. The peak detector's output is compared to the very stable reference input by comparator U2. Any difference between the comparator's input voltages produces an error voltage at the dc output. The comparator's output is coupled to a reactance voltage divider, capacitor C9 and varactor CR3. As the error output voltage goes more positive, the capacitive reactance of CR3 decreases, which reduces the oscillator feedback. Conversely, a more negative output voltage will increase the feedback. For example, if the oscillator output were to suddenly increase, the peak detector's output would become more positive. The comparator's output would become more positive, a lower CR3 reactance would decrease the feedback to Q1 which forces the oscillator's output level back to its original level. If the R4 LEVEL control were adjusted for a more positive reference voltage, the comparator's output would go more negative, the feedback would increase, allowing the oscillator's output to increase. Therefore, the peak detector's output would increase until it equals the comparator's reference level input, thus establishing a higher leveled-output signal from the oscillator.

SERVICE SHEET 14 (cont'd)

Frequency shaping components R9, R10, R11, and C8 determine the upper limit of frequency response of the ALC loop which prevents spurious oscillations.

+5V Power Supply

A8A1VR2 provides a reference voltage of -6.2 Vdc to the power supply reference amplifier A8U1. The gain of the reference amplifier is set by R3, R4, and R5 and is approximately -0.8 with R3 centered. The very stable output is coupled through CR1 as the reference voltage input to comparator U2. Diode CR1 provides temperature compensation for CR2.

TROUBLESHOOTING**General**

Before trying to troubleshoot the A8A1 Assembly, verify the presence of $+15$ Vdc and -15 Vdc on the circuit board.

If a defect in the A8A1 Assembly is isolated and repaired, the correct output level ($1 \text{ mW} \pm 0.7\%$) must be set by a very accurate power measurement system. Hewlett-Packard employs a special system,

accurate to $\pm 0.5\%$ and traceable to the National Bureau of Standards. When setting the power level, a transfer error of $\pm 0.2\%$ is introduced making the total error $\pm 0.7\%$. If a system this accurate is available it may be used to set the proper output level. Otherwise, Hewlett-Packard recommends returning the Power Meter so it can be reset at the factory. Contact your nearest Hewlett-Packard office for more information.

50 MHz Oscillator

Malfunctions of the oscillator circuit will occur as a wrong output frequency or as an abnormal output level. The voltage at TP2 will indicate if the ALC loop is trying to compensate for an incorrect output level.

Modulation of the 50 MHz signal or spurious signals, which are part of the output, may be caused by defects in R9, R10, R11, or C8 in the ALC loop.

ALC Loop and Power Supply

Isolating problems in the ALC Loop and Power Supply circuits may be quickly isolated by measuring dc voltages at the inputs and outputs of the integrated circuits.

SERVICE SHEET 15**CIRCUIT DESCRIPTIONS****General**

The Power Line Module (A11), the Power Transformer (T1), the Power Supply Rectifier and Regulator Assembly (A9), and the +5V Regulator provide the +5 Vdc, +15 Vdc, and -15 Vdc voltages for the operation of the Power Meter.

Power Line Module and Transformer

The Power Meter requires a power source of 100, 120, 220, or 240 Vac, +5% -10%, 48 to 440 Hz, single phase. The Power Meter consumes about 20 watts of power. The line (mains) voltage selection is accomplished through the proper selection of A11TB1. (See paragraph on Line Voltage Selection in Section II of this manual.) The Power Transformer (T1) provides the proper voltages to the Power Supply Rectifier and Regulator Assembly (A9) and the +5V Regulator (U1) from the various line (mains) voltages.

Power Supply Rectifier and Regulator Assembly

Diodes A9CR3 through A9CR6 comprise a bridge rectifier circuit with capacitors A9C1 and C2 providing filtering for the rectified voltages. The filtered dc voltages are applied to the V_{in} inputs of A9U1 and A9U2 voltage regulators which provide regulated - and +15V.

Diodes A9CR1 and A9CR2 provide full-wave rectification of the 12 VAC secondary voltage.

+5V Regulator

The +5V Regulator (U1) is mounted on the rear panel for heat-sinking purposes. Capacitors C1 and C2 provide filtering for the input voltage to pin 1 of U1. The +5 Vdc output voltage of U1 is applied to a 6.2 volt zener diode (A10VR1) that provides over-voltage protection for the +5V supply. This protects the integrated circuits should the +5V supply go higher than 6.2 volts.

SERVICE SHEET 14 (cont'd)

Frequency shaping components R9, R10, R11, and C8 determine the upper limit of frequency response of the ALC loop which prevents spurious oscillations.

+5V Power Supply

A8A1VR2 provides a reference voltage of -6.2 Vdc to the power supply reference amplifier A8U1. The gain of the reference amplifier is set by R3, R4, and R5 and is approximately -0.8 with R3 centered. The very stable output is coupled through CR1 as the reference voltage input to comparator U2. Diode CR1 provides temperature compensation for CR2.

TROUBLESHOOTING**General**

Before trying to troubleshoot the A8A1 Assembly, verify the presence of $+15$ Vdc and -15 Vdc on the circuit board.

If a defect in the A8A1 Assembly is isolated and repaired, the correct output level ($1 \text{ mW} \pm 0.7\%$) must be set by a very accurate power measurement system. Hewlett-Packard employs a special system,

accurate to $\pm 0.5\%$ and traceable to the National Bureau of Standards. When setting the power level, a transfer error of $\pm 0.2\%$ is introduced making the total error $\pm 0.7\%$. If a system this accurate is available it may be used to set the proper output level. Otherwise, Hewlett-Packard recommends returning the Power Meter so it can be reset at the factory. Contact your nearest Hewlett-Packard office for more information.

50 MHz Oscillator

Malfunctions of the oscillator circuit will occur as a wrong output frequency or as an abnormal output level. The voltage at TP2 will indicate if the ALC loop is trying to compensate for an incorrect output level.

Modulation of the 50 MHz signal or spurious signals, which are part of the output, may be caused by defects in R9, R10, R11, or C8 in the ALC loop.

ALC Loop and Power Supply

Isolating problems in the ALC Loop and Power Supply circuits may be quickly isolated by measuring dc voltages at the inputs and outputs of the integrated circuits.

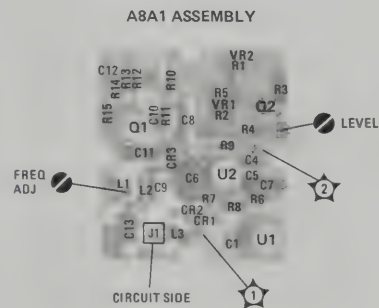


Figure 8-44. A8A1 Power Reference Oscillator Board Assembly Component, Test Point and Adjustment Locations

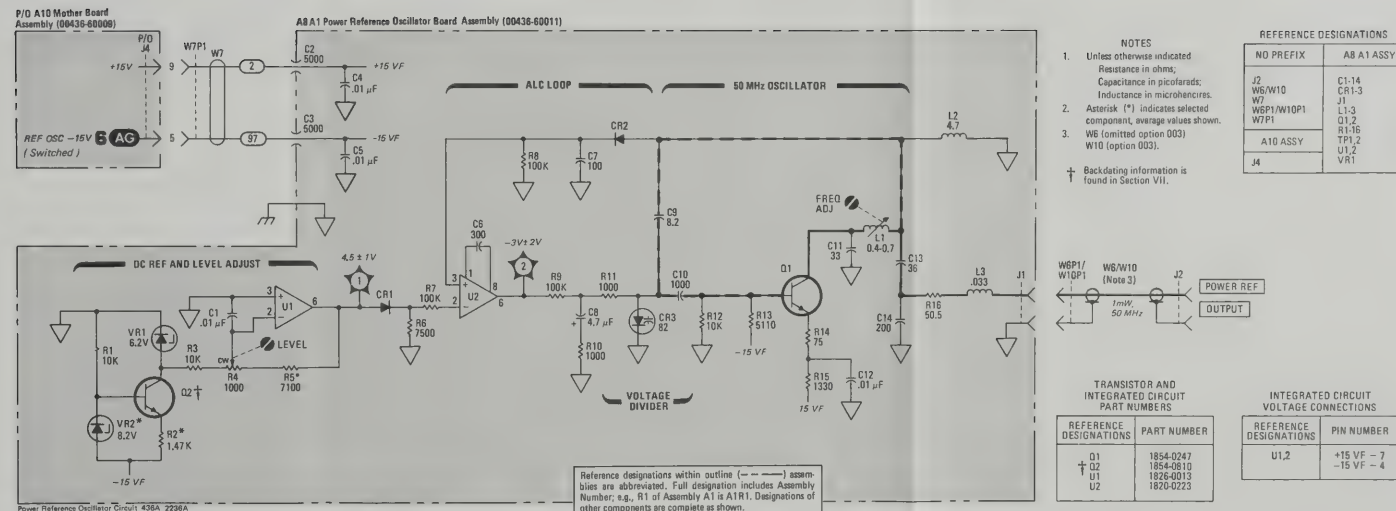


Figure 8-45. Power Reference Oscillator Assembly Schematic Diagram

TROUBLESHOOTING

WARNINGS

If this instrument is to be energized via an auto-transformer for voltage reduction, make sure the common terminal is connected to the earthed pole of the power source. **BEFORE SWITCHING ON THIS INSTRUMENT**, the protective earth terminals of this instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding).

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal is likely to make this instrument dangerous. Intentional interruption is prohibited.

Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

Whenever it is likely that the protection offered by fuses has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

Any adjustment, maintenance, and repair of the opened instrument under voltage

should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Adjustments and service described herein are performed with power supplied to the instrument while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

CAUTIONS

LINE VOLTAGE SELECTION

BEFORE SWITCHING ON THIS INSTRUMENT, make sure the instrument is set to the voltage of the power source.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

Set the LINE ON-OFF switch to OFF and remove the Line Power Cord (W8) from the Line Power Module (A11). Remove the red (2), violet (7), and white-red (92) wires from the feed-thru capacitors (C3, C4, and C5). Replace the Line Power Cord (W8) and set LINE ON-OFF to ON. If the supply voltages are now correct, the trouble is not in the Power Supply. If the +5V supply is still too low or too high, U1 or U2 is probably at fault. If either the +15V or -15V supplies are the source of trouble, the complete unit (U1 or U2) must be replaced. Any other problems can be solved with the aid of a VOM.


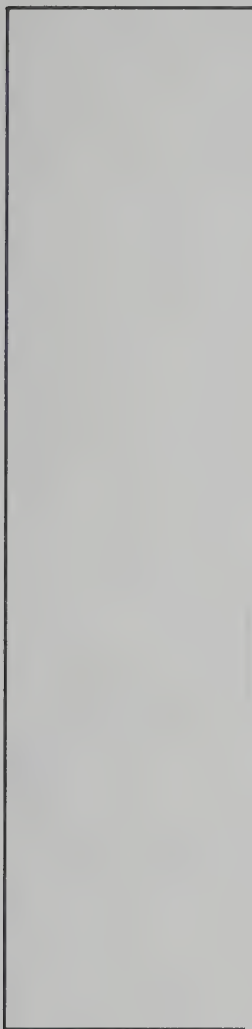


Figure 8-46.

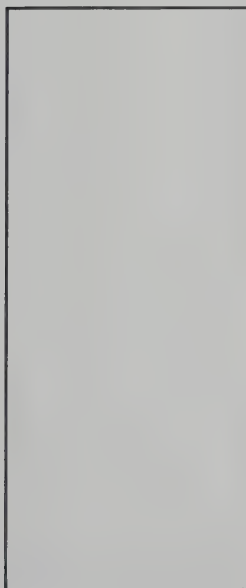

SERVICE SHEET 15

CIRCUIT DESCRIPTIONS

General

The Power Line Module (A11), the Power Transformer (T1), the Power Supply Rectifier and Regulator Assembly (A9), and the +5V Regulator provide the +5 Vdc, +15 Vdc, and -15 Vdc voltages for the operation of the Power Meter.

Power Line Module and Transformer

The Power Meter requires a power source of 100, 120, 220, or 240 Vac, +5% -10%, 48 to 440 Hz, single phase. The Power Meter consumes about 20 watts of power. The line (mains) voltage selection is accomplished through the proper selection of A11TB1. (See paragraph on Line Voltage Selection in Section II of this manual.) The Power Transformer (T1) provides the proper voltages to the Power Supply Rectifier and Regulator Assembly (A9) and the +5V Regulator (U1) from the various line (mains) voltages.

Power Supply Rectifier and Regulator Assembly

Diodes A9CR3 through A9CR6 comprise a bridge rectifier circuit with capacitors A9C1 and C2 providing filtering for the rectified voltages. The filtered dc voltages are applied to the V_{in} inputs of A9U1 and A9U2 voltage regulators which provide regulated - and +15V.

Diodes A9CR1 and A9CR2 provide full-wave rectification of the 12 VAC secondary voltage.

+5V Regulator

The +5V Regulator (U1) is mounted on the rear panel for heat-sinking purposes. Capacitors C1 and C2 provide filtering for the input voltage to pin 1 of U1. The +5 Vdc output voltage of U1 is applied to a 6.2 volt zener diode (A10VR1) that provides over-voltage protection for the +5V supply. This protects the integrated circuits should the +5V supply go higher than 6.2 volts.

TROUBLESHOOTING

WARNINGS

If this instrument is to be energized via an auto-transformer for voltage reduction, make sure the common terminal is connected to the earthed pole of the power source. BEFORE SWITCHING ON THIS INSTRUMENT, the protective earth terminals of this instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding).

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal is likely to make this instrument dangerous. Intentional interruption is prohibited.

Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

Whenever it is likely that the protection offered by fuses has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

Any adjustment, maintenance, and repair of the opened instrument under voltage

should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Adjustments and service described herein are performed with power supplied to the instrument while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

CAUTIONS

LINE VOLTAGE SELECTION

BEFORE SWITCHING ON THIS INSTRUMENT, make sure the instrument is set to the voltage of the power source.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

Set the LINE ON-OFF switch to OFF and remove the Line Power Cord (W8) from the Line Power Module (A11). Remove the red (2), violet (7), and white-red (92) wires from the feed-thru capacitors (C3, C4, and C5). Replace the Line Power Cord (W8) and set LINE ON-OFF to ON. If the supply voltages are now correct, the trouble is not in the Power Supply. If the +5V supply is still too low or too high, U1 or U2 is probably at fault. If either the +15V or -15V supplies are the source of trouble, the complete unit (U1 or U2) must be replaced. Any other problems can be solved with the aid of a VOM.

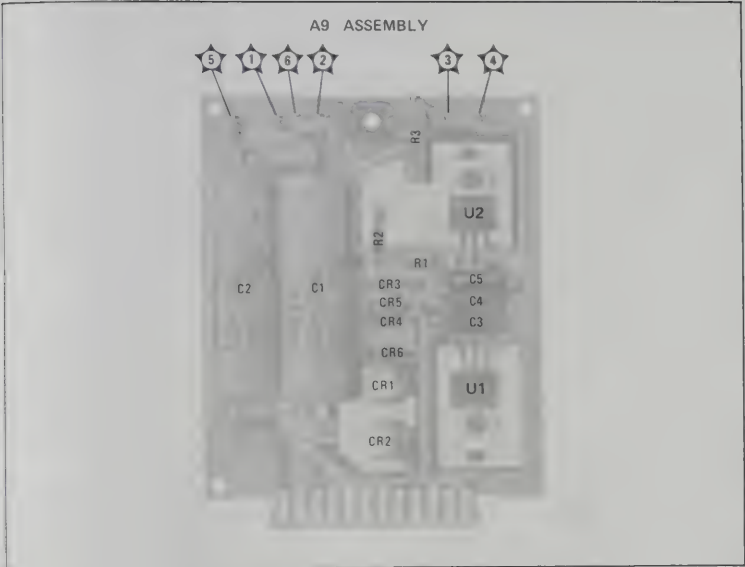


Figure 8-46. A9 Power Supply Rectifier and Regulator Assembly Component and Test Point Locations

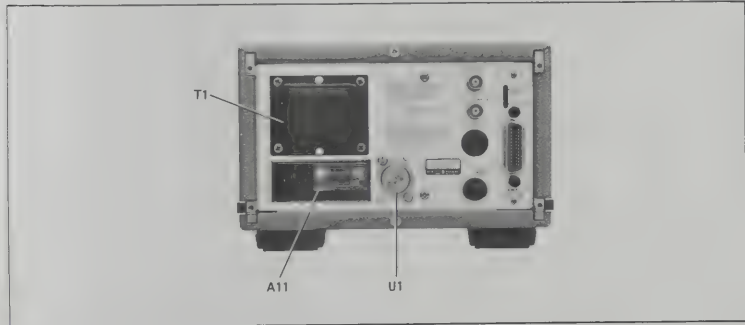


Figure 8-47. Rear Panel Mounted Power Supply Component Locations


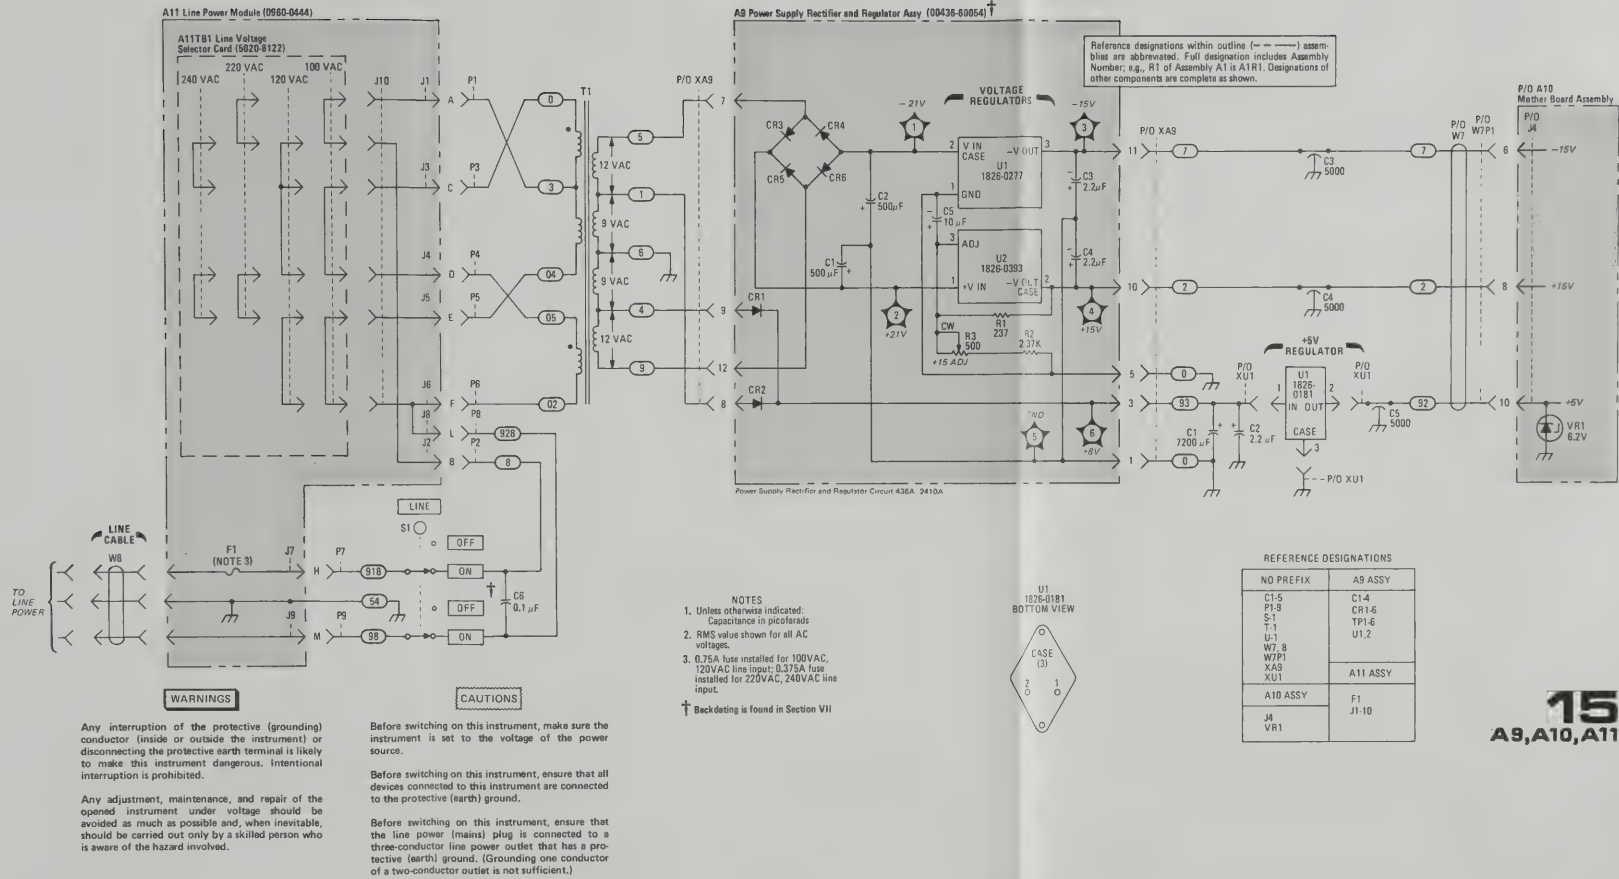


Figure 8-48. Power Supply Rectifier and Regulator Assembly Schematic Diagram

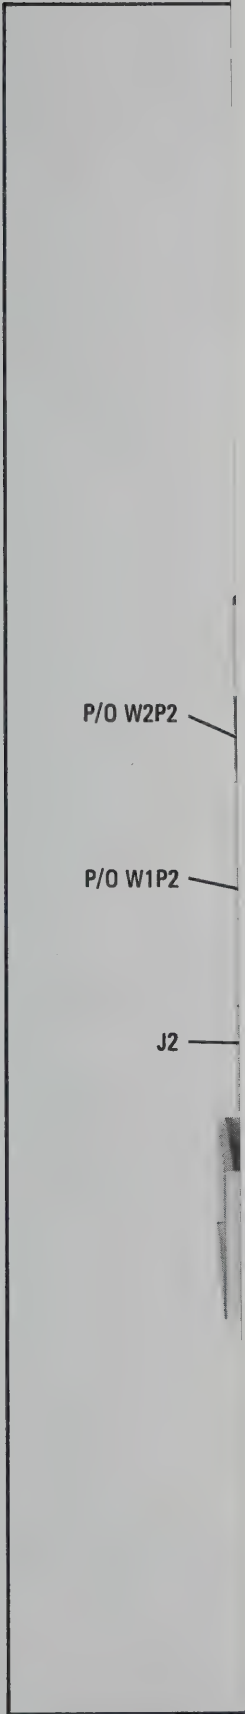

P/O W2P2

P/O W1P2

J2

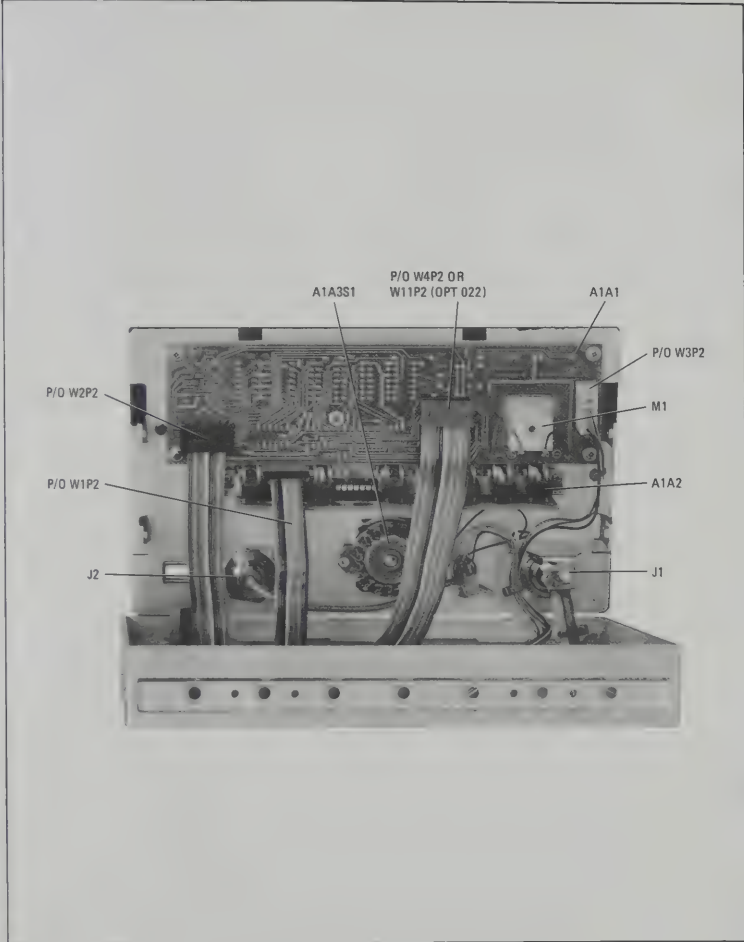


Figure 8-49 Rear View of Front Panel (Removed)

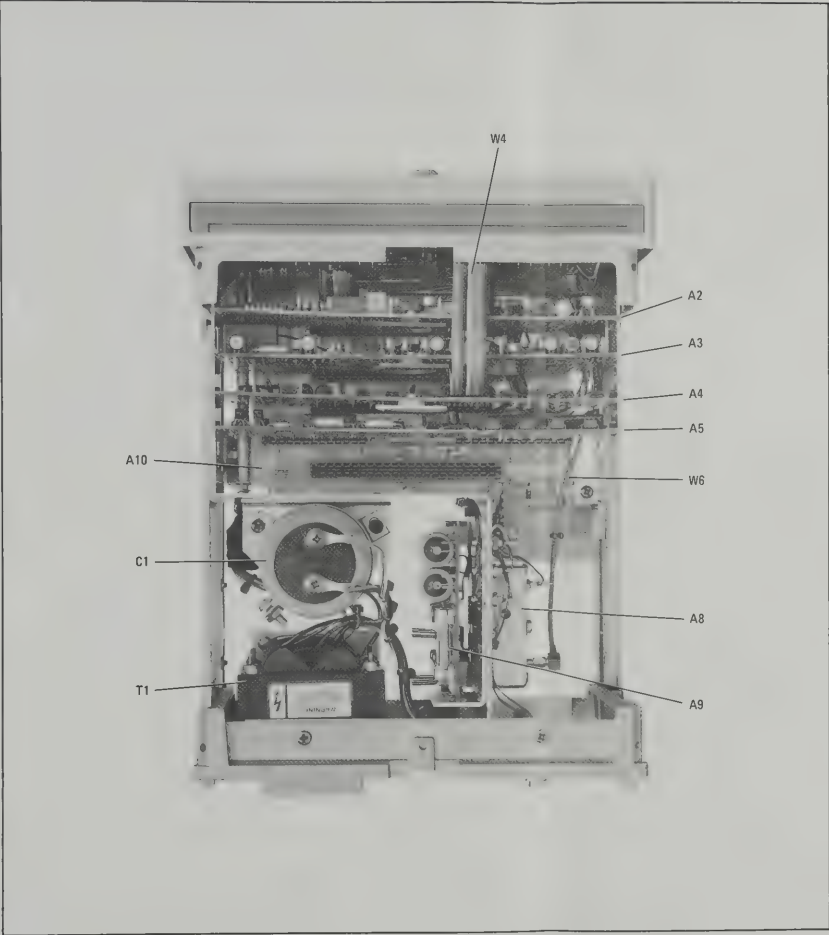


Figure 8-50 Top Internal View Standard Instrument


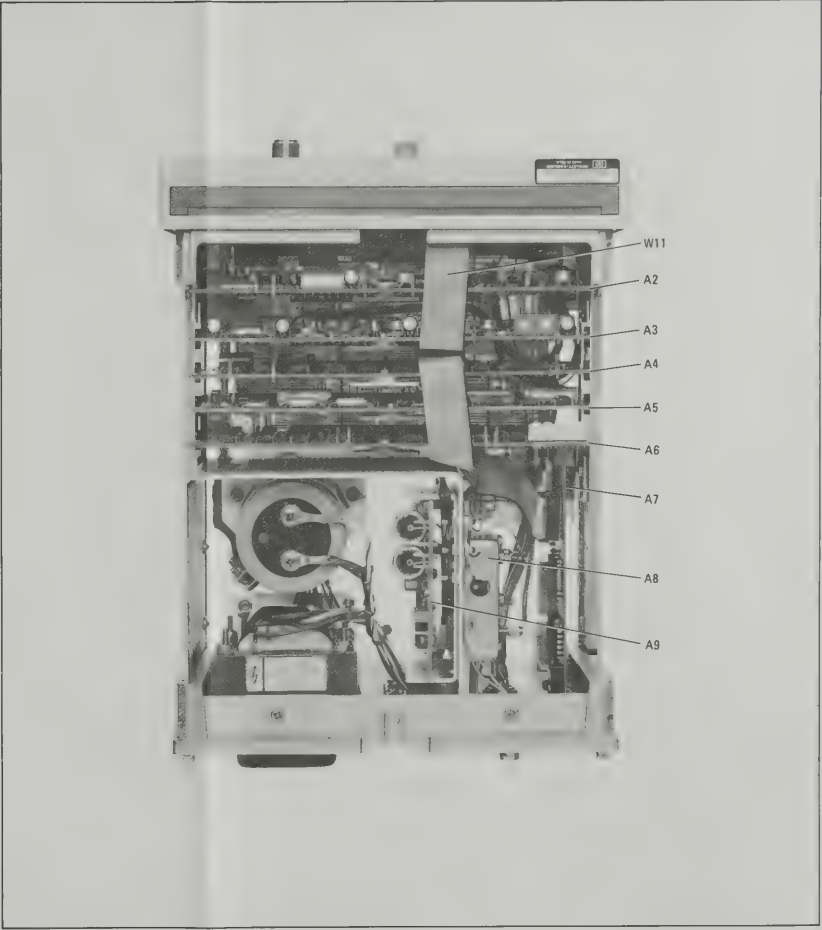


Figure 8-51 Top Internal View HP-1B

 

Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over



Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over



Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

 
P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over



Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over



Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over



Should one of your HP instruments need repair, the HP service organization is ready to serve you. However, you can help us serve you more effectively. When sending an instrument to HP for repair, please fill out this card and attach it to the product. Increased repair efficiency and reduced turn-around time should result.

COMPANY _____

ADDRESS _____

TECHNICAL CONTACT PERSON _____

PHONE NO. _____ EXT. _____

MODEL NO. _____ SERIAL NO. _____

MODEL NO. _____ SERIAL NO. _____

P.O. NO. _____ DATE _____

Accessories returned with unit

☐ NONE ☐ CABLE(S)

☐ POWER CABLE ☐ ADAPTER(S)

OTHER _____ over

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

Service needed

☐ CALIBRATION ONLY☐ REPAIR ☐ REPAIR & CAL

OTHER _____

Observed symptoms/problems

FAILURE MODE IS:

☐ CONSTANT ☐ INTERMITTENT

SENSITIVE TO:

☐ COLD ☐ HEAT ☐ VIBRATIONFAILURE SYMPTOMS/SPECIAL
CONTROL SETTINGS __________

_____If unit is part of system list model
number(s) of other interconnected in-
struments. _____

9320-3896

Printed in U.S.A.

REGIONAL SALES AND SERVICE OFFICES

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795

HONG KONG

Tel: 5-832 3211

After Jan. 1, 1984

47th Floor, China Resources Bldg.
26 Harbour Rd., Wanchai

HONG KONG

Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Paradissos-Amarousion, **ATHENS**
Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
P.O. Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

SOUTH EAST EUROPE

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable HEWPACKSA Geneve

OTHER EUROPE

Hewlett-Packard S.A.
P.O. Box
150, Rte du Nant-D'Avril
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 8111
Telex: 22486 hpsa
Cable: HEWPACKSA Geneve

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
P.O. Box 3919
LOS ANGELES, CA 91604
Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

